

WAGONR

OWNER'S MANUAL


For vehicle fitted with CNG fuel system, use WagonR CNG Supplementary Owner's Manual

Refer for vehicle usage at all times.

Contains Warranty policy and important information on Safety, Operation & Maintenance.

Part No. 99011M69R14-74W
March, 2026 (ENG.)

This Owner's Manual applies to WagonR models produced by
MARUTI SUZUKI INDIA LIMITED.

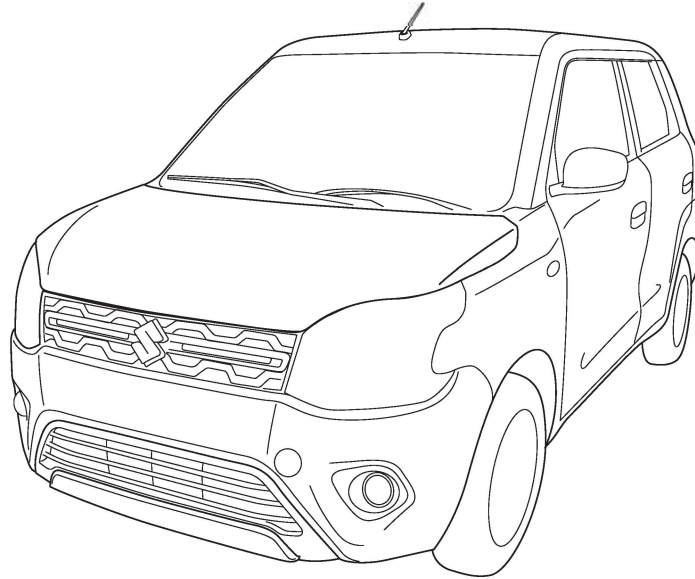

NOTE : The illustrated Models are one of the WagonR series
Accessories shown in the picture are not part of standard equipment

© Copyright 2026 **Maruti Suzuki India Limited.** All rights reserved.

No part of this manual can be reproduced in any manner whatsoever or transmitted
in any form or by any means without prior written consent of Maruti Suzuki India Limited.

FOREWORD

The digital Owner's Manual is an essential part of your vehicle a rich document which familiarizes you with the vehicle by providing information such as features, warnings, operations and equipment description etc. Please read this manual carefully before operating your new MARUTI SUZUKI vehicle and review the manual from time to time. It is recommended to download this manual (from the "Maruti Suzuki" mobile application with your registered mobile number) and save a soft copy of the same for easy access all times. Please visit MARUTI SUZUKI authorised workshop for availing any service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

▲ WARNING/ ▲ CAUTION/NOTICE/ NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

▲ WARNING

Indicates a potential hazard that could result in death or serious injury.

▲ CAUTION


Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

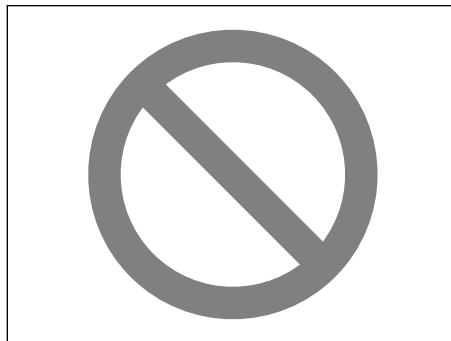

75F135

The circle with a slash in this manual means “Don’t do this” or “Don’t let this happen”.

NOTE:

- Words like *car*, *model/variant* are invariably used in this manual to denote the “Vehicle”.
- Pictorial representations used in this manual are for reference purposes only.

MODIFICATION WARNING

▲ WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen’s Band) radios may cause electronic interference with your vehicle’s ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorized workshop or qualified service technician for advice on installing such mobile communication equipment.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

“WARNING”



Vehicle may **break-down**, meet with an **accident** or **catch fire** due to

1. Installation of
 - High wattage bulbs
 - Non genuine lamps / horns
 - Modified suspension / wheels
 - Non genuine parts / accessories etc.
2. Retrofitment of LPG / CNG fuel systems/kits.
3. Usage of domestic LPG.
4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may **break-down** or engine may fail due to

1. Water entry into the engine (which may lead to hydrostatic lock).
2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.

NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

“CAUTION”

1. Retro-fitting of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
3. Usage of domestic LPG for running vehicles is prohibited as per law.
4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning. (reduced contact area between tire and road due to presence of water)
6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
9. Always wear seat belt at all the times.
10. Do not use mobile phone while driving.
11. Avoid Smoking in the car, live bud thrown in car may cause fire.
12. Do not put any body part under the vehicle when it is supported on a Jack.
13. Do not use non-genuine accessories in your vehicle.
14. Do not fit accessories from unauthorized workshops/sources.
15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
19. Do not check the engine room/ open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
20. Avoid driving when vehicle has met with an accident. Before driving, Please contact with authorized MSIL dealership.

To experience and use the Digital Owner's Manual, download Maruti Suzuki application



Maruti Suzuki application ensures a hassle free ownership experience. Get easy access to all the services and information you need by downloading the application



How to download Owners manual from Maruti Suzuki application

Step 1: Download the “Maruti Suzuki” mobile application from the Apple App Store or Google Play Store.

Step 2: Enter your registered mobile number and verify with the OTP received via SMS.

Step 3: Tap the “Offerings” icon on the bottom bar.

Step 4: Select “Owner’s Manual” to access your car’s digital manual.

Step 5: Tap on download icon at top right of the page to download the Owner's Manual.

Now, the Owner's Manual is available on your mobile phone for reference at all times.

(For assistance, contact Maruti Suzuki authorized workshop)

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorized dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorized dealer and set-up, and serviced by a Maruti Suzuki authorized workshop.

(2) Term:

The term of this warranty shall be Thirty-Six (36) months or 1,00,000 kilometers (whichever occurs first) from the date of invoice to the first owner, except for the following parts for which the term is as under:

NOTE:

Maruti Suzuki offers warranty for the below parts in vehicle, if equipped, as follows:

- *Lithium-ion battery, Integrated Starter Generator (ISG), Hybrid ECU, Inverter / Converter Unit, Power Management ECU- Sixty (60) months or 1,00,000 kilometers (whichever occurs first).*
- *Hybrid Electric Vehicle (HEV) Battery- Ninety six (96) months or 1,60,000 kilometers (whichever occurs first).*
- *Lead acid battery – Twenty four (24) months or 40,000 kilometers (whichever occurs first).*

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labor, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer.)
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.

-
- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding - not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
 - (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
 - (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
 - (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGGA, Non-MSGP) have been used.
 - (i) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual.
 - (j) Any vehicle which has not received the service inspections prescribed in this Owner's Manual.
 - (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorized workshop.
 - (l) Any vehicle which has been used for purposes other than what it was designed for.
 - (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
 - (n) Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
 - (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
 - (p) Installation and usage of domestic LPG gas/LPG Cylinder.
 - (q) V-belts, hoses and gas leaks.
 - (r) Any vehicle retrofitted with LPG/CNG kits.
 - (s) Repainting including patchwork, bodywork and mouldings and interior trims.
 - (t) Corrosion, rusting of body parts and/ or components.
 - (u) Any vehicle on which odometer has been changed unauthorisedly or odometer reading has been modified/ tampered with/ or not matching the service records.
 - (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
 - (w) Any damage(s) caused to vehicle including battery/ tyre due to improper maintenance or prolonged parking of the vehicle in idle condition for long duration.
 - (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
 - (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorized to extend or enlarge this warranty and no dealer or its or his agent or employee is authorized to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorized workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Obligations:

NOTICE
The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorized workshop all the service inspections specified in the Owner's Manual described in "INSPECTION AND MAINTENANCE" section.
- Should you resell the vehicle, please guide the new users/owners to download this manual (from the "Maruti Suzuki" mobile application with your registered mobile number). Also the soft copy of the manual must be passed on to new users/owners when resold or otherwise transferred.

If the Owner's Manual is lost due to any reason, the owner or user may download a soft copy of the same (from the "Maruti Suzuki" mobile application with the mobile number) and save it for easy access at any point of time".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.


NOTE:

Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.

TABLE OF CONTENTS

FOR SAFE DRIVING	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
INSPECTION AND MAINTENANCE	6
EMERGENCY SERVICE	7
APPEARANCE CARE	8
SPECIFICATIONS	9
SERVICE NETWORK	10


FOR SAFE DRIVING

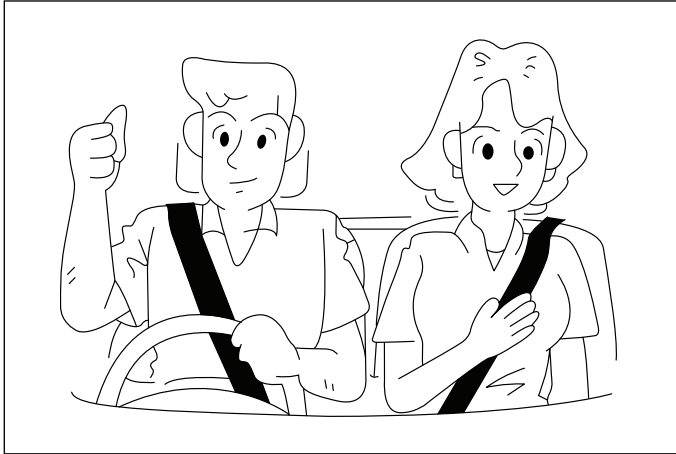

52D078S

Floor mats (if equipped)	1-1
Front seats	1-1
Rear seats	1-2
Seat belts and child restraint systems	1-4
Supplemental restraint system (airbags)	1-19
Exhaust gas warning	1-36

Floor mats (if equipped)

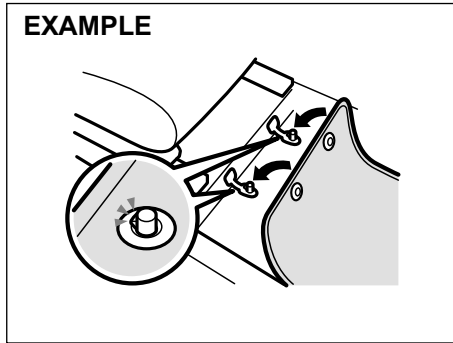

72M10201

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, MARUTI SUZUKI genuine floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend to use MARUTI SUZUKI genuine floor mats for proper fitting.

⚠ WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Check that the floor mat grommets are hooked to the fasteners.
- Never stack floor mats.
- Never use a floor mat which does not fit the floor contours.
- Never use a floor mat which does not fit the floor as the same may cause hindrance/damage in vehicle and its functioning
- Never use damaged floor mats.

Front seats

Precaution for front passenger seat

For seat with seat belt reminder, refer to the NOTICE in the "Front passenger's seat belt reminder" section.

Seat adjustment

⚠ WARNING

- Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Check that the driver's seat and seatback are properly adjusted before you start driving.
- To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

(Continued)


⚠ WARNING

(Continued)

- Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.

⚠ CAUTION

Do not place any object under the front seat. If an object gets stuck under the front seat, the seat shall not be latched properly and may cause injury.

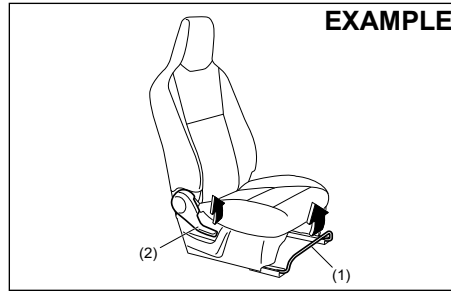

69RH195

Seat position adjustment lever (1)

Pull the lever up and slide the seat.

Seatback angle adjustment lever (2)

Pull the lever up and move the seatback.

After adjustment, move the seat and seatback forward and backward to check that it is securely latched.

NOTE:

To operate the seat back smoothly, pull the seat back adjustment lever (2) in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.


Rear seats

Folding rear seats

The rear seat(s) of your vehicle can be folded forward to provide additional cargo space.


To fold the rear seat(s) forward:

- 1) Hook the webbing of the outboard lap shoulder belts in the belt hangers or belt guides.

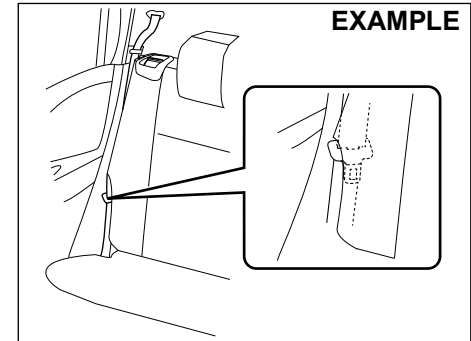

69RM01008

FOR SAFE DRIVING

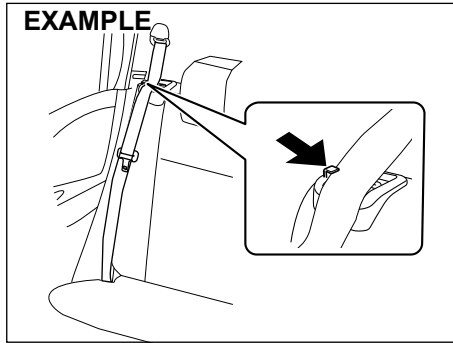


⚠ WARNING

When you move a seatback, make sure the belt webbing is hooked in the seat belt guides so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

NOTICE

Make sure the belt webbing is not twisted.

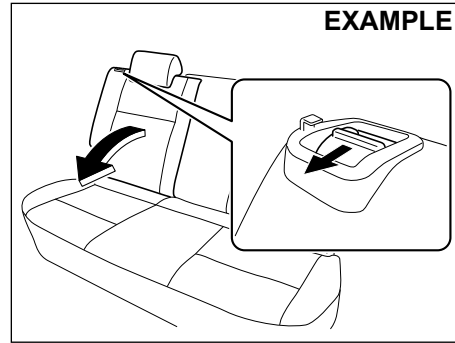

- 2) For the split seat, pull the release lever on the top of each split seat, and fold the seatbacks forward. For the bench seat, pull the both release levers on the top of the bench seat together, and fold the seatback forward.

NOTICE

After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

⚠ WARNING

If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.

To return the seat to the normal position, follow the procedure below.

⚠ CAUTION

When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.


NOTICE

- When returning the rear seatback to the normal position, check that there is nothing around the striker. Any foreign materials prevent the seatback from being locked securely.

⚠ WARNING

When you move a seatback, make sure the belt webbing is hooked in the seat belt guides so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

EXAMPLE

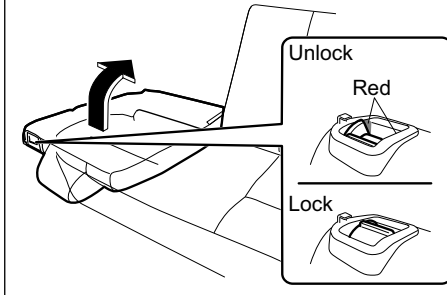

69RM01011

Raise the seatback until it locks into place.

After returning the seat, move the seatback forward and backward to check that it is securely latched.

⚠ CAUTION

Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.

⚠ CAUTION

After securing the rear seatback, check that it is locked securely. If it is not, red will appear in the release lever.

NOTICE


- When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.
- When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.
- As the lock is designed exclusively for securing the rear seatback, do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback from being locked securely.

NOTE:

After returning the rear seatback, check that the seat belts are not twisted or caught in the rear seatback.

Seat belts and child restraint systems

EXAMPLE

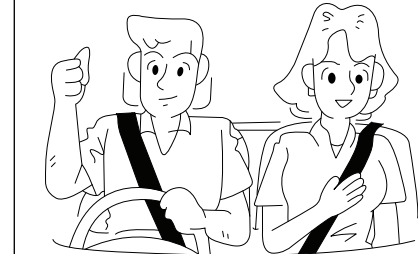

52D078S

⚠ WARNING

- Wear your seat belts at all times.
- An airbag supplements or adds to the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.


(Continued)

FOR SAFE DRIVING

⚠ WARNING

(Continued)

- Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision.
- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs.

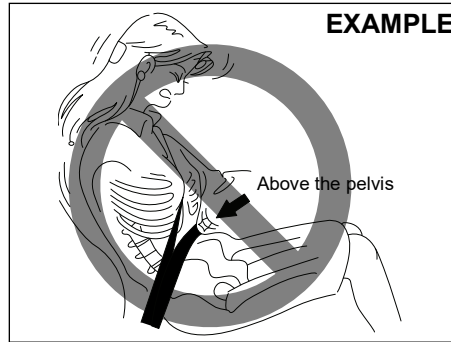


65D606

⚠ WARNING

- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.

(Continued)

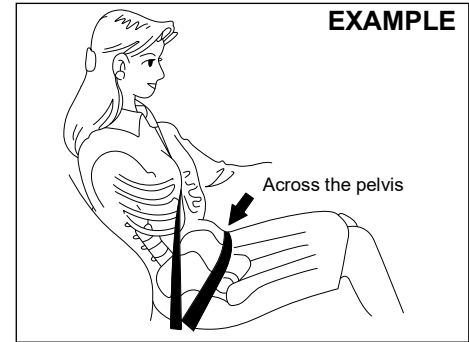


65D201A

⚠ WARNING

(Continued)

- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats. It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

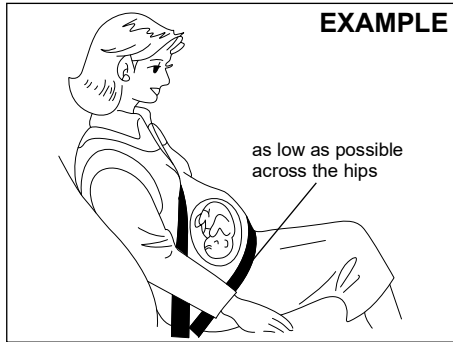

65D199A

⚠ WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.
- Do not wear seat belts over hard, fragile, or sharp items such as pens, keys, eyeglasses, etc. in pockets or on clothing. The pressure from seat belt on such items can cause injury in case of an accident.

(Continued)

⚠ WARNING

(Continued)

- Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children aged 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Check that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.

(Continued)

⚠ WARNING

(Continued)

- For child, if the seat belt irritates the neck or face, use a child restraint system appropriately for the child. The seat belts of your vehicle are principally designed for persons of adult size.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins and clips into the seat belt buckles and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


FOR SAFE DRIVING

Lap-shoulder belt


Emergency locking retractor (ELR)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder

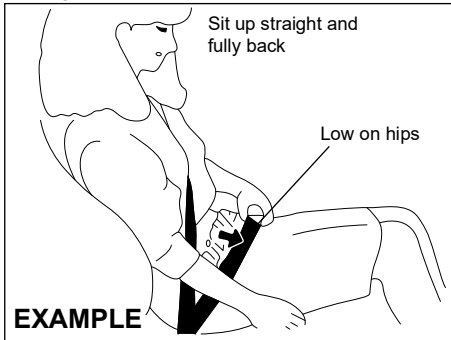


60A038A

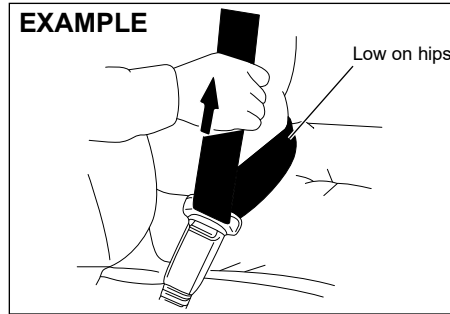

60A040

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

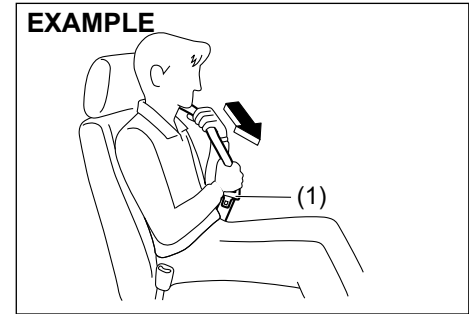


83SH02080

Holding the tongue plate (1) and the seat belt, pull out the seat belt slowly to straighten the twisted seat belt.


NOTE:

When the seat belt is locked and you cannot pull it out, release it once and then pull it out again. If you still cannot pull it out, pull the seat belt strongly, release it and then pull it out again slowly.

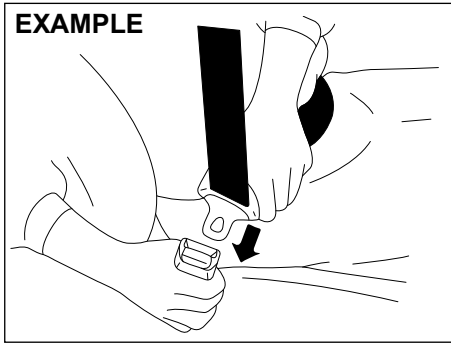

60A036


To fasten the seat belt, sit up straight and far back into the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a click. After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

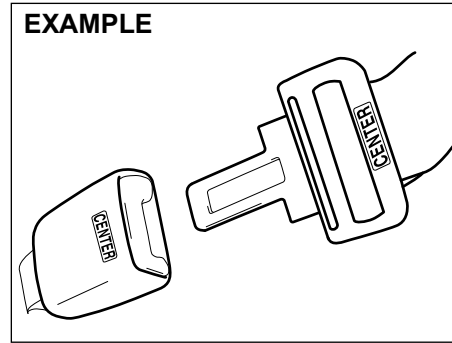

69RM01003

NOTE:

The word "CENTER" is marked on the buckle for the rear center belt. The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

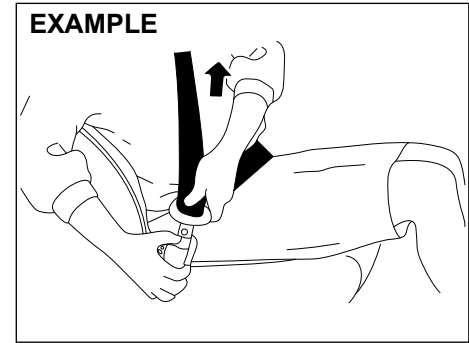

60A039

To unfasten the seat belt, push the red "PRESS" button on the buckle and retract the belt slowly while holding the belt or/and the latch plate.

NOTE:

If the seat belt cannot be pulled from its fully retracted position, firmly pull the belt and release it. Then smoothly pull the belt out of the retractor.

FOR SAFE DRIVING

Adjustment of seat belt length

The seat belt does not require length adjustment. The seat belt extends and retracts according to the movement of the body. If the seat belt gets a strong impact, the belt locks its tension automatically, in order to secure the body.


Correct use of seat belt

⚠ WARNING


- Use the seat belt correctly. Otherwise, in a sudden braking or a collision, the body may not be restrained, resulting in severe injury. Observe the following points.
- If the seat belt is twisted or contains excessive slack, there is danger of heavy pressure focused on certain body areas.
- If the seat belt rests on the abdomen, this area may sustain heavy pressure when you get a strong impact.
- If the seat belt does not rest firmly over the shoulder, you may be thrown forward when you get a strong impact.

Seat belt reminder

With tachometer

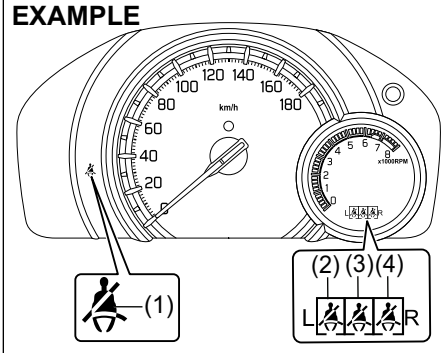

Without tachometer

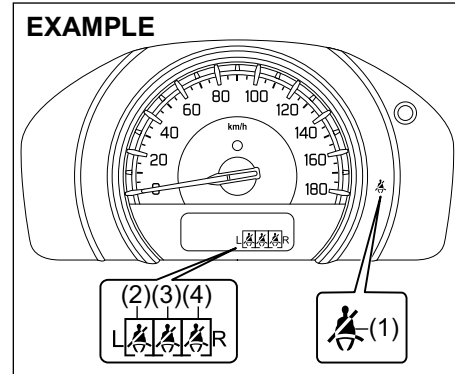

- 1) Driver's seat belt reminder light / front passenger's seat belt reminder light
- 2) Rear passenger's seat belt reminder light (rear left)
- 3) Rear passenger's seat belt reminder light (rear center)
- 4) Rear passenger's seat belt reminder light (rear right)

For more details, refer to the explanation below.

⚠ WARNING

It is absolutely essential that the driver, front passenger and rear passenger* fasten their seat belts at all times. Persons who are not fastening seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

NOTE:

- Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for un-restrained driver and/or front passenger.
- The driver's seat belt reminder light / front passenger's seat belt reminder light is for both the driver and front passenger.

Driver's seat belt reminder

If the driver's seat belt remains unbuckled when the ignition switch is turned to "ON" position the reminder works as follows:


- 1) The driver's seat belt reminder light will come on. The front passenger's seat belt reminder light will also come on if a front passenger does not fasten his/her seat belt.
- 2) After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) The reminder light will remain on until the driver's seat belt is buckled.

If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned to "LOCK" position.

Front passenger's seat belt reminder

If there is a person sitting on the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned "ON", the front passenger's seat belt reminder will activate.

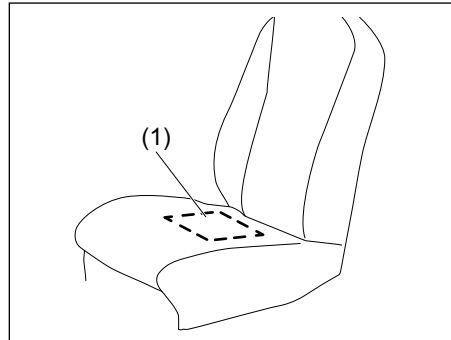

69RM01012

- 1) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (1) detects whether a person is sitting on the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

NOTICE

- The sensor of the front passenger's seat belt reminder is located in the bottom seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.
- Depending on the variety of seat cover, operation of the sensor may be adversely affected. MARUTI SUZUKI highly recommends that you use MARUTI SUZUKI genuine seat cover exclusively for this vehicle. If a seat cover is installed, consult with a authorised Maruti Suzuki Workshop.
- If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.

(Continued)

FOR SAFE DRIVING

NOTICE

(Continued)

- **When sitting on the front passenger's seat, it is very important that the passenger sits upright, leaning against the seat backrest and centered on the seat cushion in order for the seatbelt reminder system to function effectively. An occupant sitting improperly (slouches, turns sideways, sits forward or sideways) may hamper the functioning of this system as it may not detect the occupant.**

NOTE:

- *If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.*
- *If a child or a small sized person sits on the front passenger's seat or the cushion is put on the front passenger's seat, the weight may not be sensed by the sensor and the interior buzzer may not beep.*

Rear passenger's seat belt reminder


Reminder light in speedometer for rear passengers to fasten their seat belts. Whether or not a passenger is seated, the rear seat belt reminder system works as follows, when ignition mode is turned ON:

- 1) Reminder light will turn ON for the non-buckled seats and continue for vehicle speed below 15km/h.
- 2) When vehicle speed is above 15km/h, reminder light will remain ON for the non-buckled seats for about 65 seconds and then turn OFF.
- 3) Further, when a buckled seat belt is unbuckled, the corresponding reminder light will turn ON. Above 15km/h, the reminder light will blink (about 65 seconds) along with a buzzer sound (about 35 seconds). The reminder light will remain ON until the seat belt is buckled.

If any of the rear doors or passenger door or back door is opened in vehicle stationary condition with ignition ON, the reminder system will reset and restart from point 1.

The reminder will be automatically canceled when all the rear seat belts are buckled or the ignition mode to LOCK (OFF).

Seat belt hanger

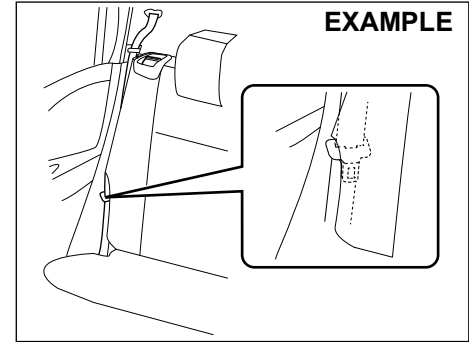


69RM01008

NOTICE

- **When you move a seatback, make sure the latch plate is inserted into the slit (1) securely so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.**
- **Make sure the belt webbing is not twisted.**

Seat belt inspection

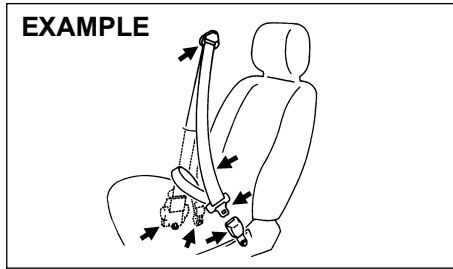


65D209S

Periodically check if the seat belts work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages and guide loops. Replace any seat belts which do not work properly or are damaged.

▲ WARNING

Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners activated. The pretensioners and the load limiter only functions once. In case they did not activate, consult with a authorised Maruti Suzuki Workshop.


Child restraint systems

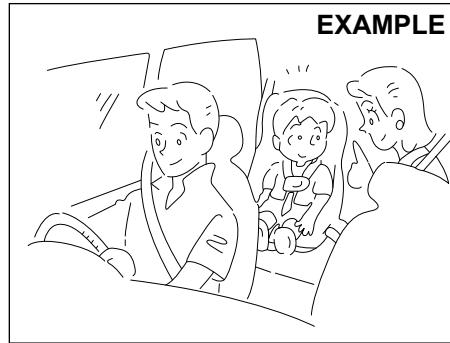

60G332


The following types of child restraint systems are available generally.

Infant restraint – rear seat only

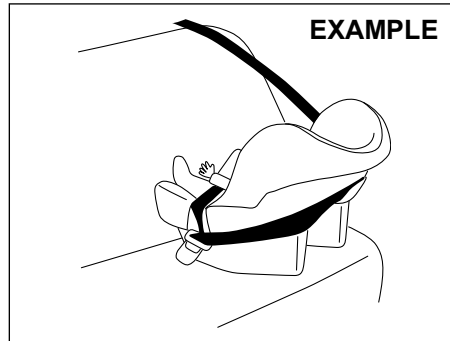


80JC007

Child restraint

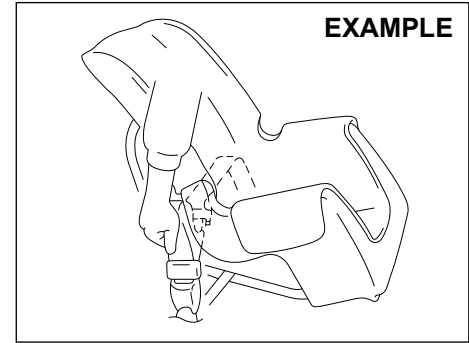

80JC016

Booster seat

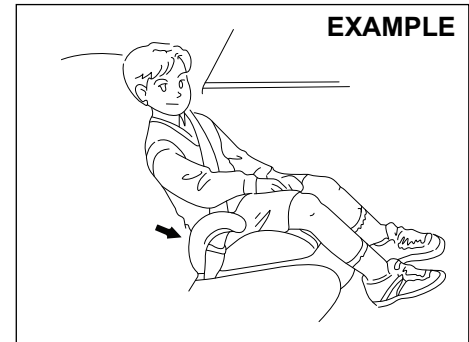

80JC008

MARUTI SUZUKI highly recommends that you use a child restraint system to restrain infants and small children. Many different

FOR SAFE DRIVING

types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.


All child restraint systems are designed to be secured in vehicle seats by seat belts (the lap portion of lap-shoulder belts).

NOTE:

Observe any statutory regulation about child restraints.

Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory child seat.

EXAMPLE

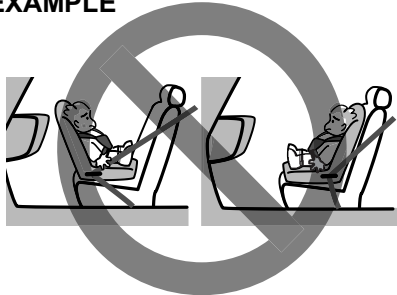

61M0241

⚠ WARNING


- Do not install a child restraint system on the front passenger's seat since a child restraint system cannot be installed appropriately.
- If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not touch the front seatback. This will help avoid injury to the child in the event of an accident.
- When installing a child restraint system to the rear seat, touching the child's foot or the child restraint system to the seatback of the front seat can cause serious injury to the child in the event of an accident. Adjust the front seat so that it does not touch the child or the child restraint system.
- If child restraint systems are not installed properly, children or other occupants could be seriously injured in the event of an accident. Secure the child restraint system firmly according to both this manual and the instruction provided by child restraint system's manufacturer.
- If the child is not secured properly in the child restraint system, it could cause serious injury to the child in the event of an accident.

(Continued)

⚠ WARNING

(Continued)

Use the child restraint system correctly following the instruction provided by child restraint system's manufacturer.

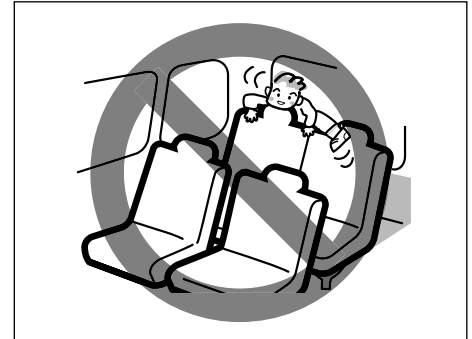


69RHS165

⚠ WARNING


The luggage areas do not feature a structure that can accommodate people. Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.

EXAMPLE

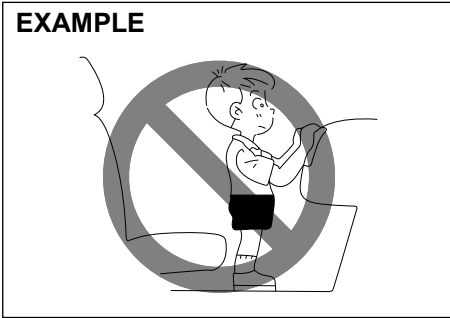

65D608

EXAMPLE

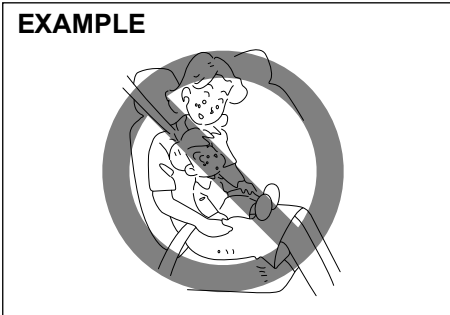

65D609


⚠ WARNING

Do not hold a child on a passenger's lap when the vehicle is in motion. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child. Children could be endangered in a collision if their child restraint systems are not properly secured in the vehicle. When installing a child restraint system, follow the instructions below. Secure the child in the restraint system according to the manufacturer's instructions.

Installation with lap-shoulder seat belts

ELR type belt

EXAMPLE

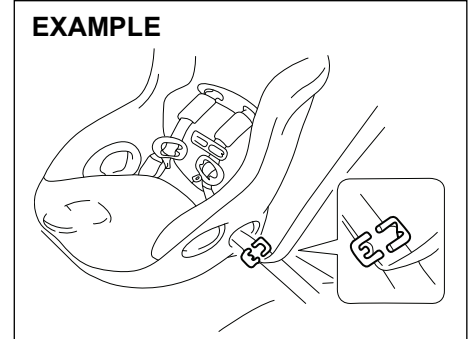

80JC021

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Check that the seat belt is securely latched. Move the child restraint system in all directions to check that it is securely installed. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

FOR SAFE DRIVING

Child restraint system

Child restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072 or UN R44*1 or UN R129*1 the standard for child restraints, referring to the table.

*1: UN R44/R129 means the international regulation for the child restraint system.

Child Restraint Systems Installation Suitability for Each Seat Position

MASS GROUP#		Seating position (or other site)				
		Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center
Group 0	Up to 10 kg	X	U	X	N.A.	N.A.
Group 0+	Up to 13 kg	X	U	X	N.A.	N.A.
Group I	9 to 18 kg	X	U	X	N.A.	N.A.
Group II	15 to 25 kg	X	U	X	N.A.	N.A.
Group III	22 to 36 kg	X	U	X	N.A.	N.A.

Key letters in the above table indicates the following:

U = Suitable for 'universal' category restraints approved for use in this mass group

X = Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE:

- 'universal' is the category as per AIS 072.
- 'Outboard' indicates window side seat.
- # Mass Groups are classification of child restraint systems which conform to AIS 072 or UN R44.

Installation suitability of MARUTI SUZUKI recommendation child restraint systems for India

Body size	Direction of Child restraint system	Recommendation of Child restraint system (#A)	Seating position		
			Front Passenger	Rear Outboard	Rear Center
40 - 83 cm ≤ 13 kg	Rearward facing	BRITAX RÖMER BABY-SAFE 3 i-SIZE	NO	YES (#1)	NO
76 - 105 cm and exceed 15 months ≤ 20 kg	Forward facing	BRITAX RÖMER KING PRO	NO	YES (#1)	NO


Key letters in the above table indicates the following:
 YES =It is suitable for this seating position
 NO = It is not suitable for this seating position

#1: Only belted.

#A:These child restraint systems are MARUTI SUZUKI Genuine Accessory which comply with the UN R129, refer to the genuine accessories catalog.

FOR SAFE DRIVING

Seat belt pretensioner system

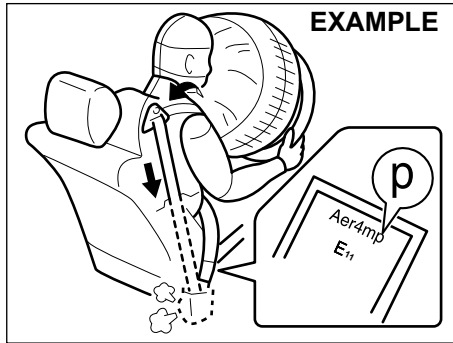

55T020521

▲ WARNING

This section describes your MARUTI SUZUKI vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, check the label on the seat belt at the bottom part. If the letter "p" appear as illustrated, your vehicle is equipped with the seat belt pretensioner system.

You can use the pretensioner seat belts in the same manner as ordinary seat belts. Read this section and "Supplemental restraint system (airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (airbags). The collision sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental restraint system (airbags)" section in addition to this "Seat belt pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat adjustment" section and the instructions and precautions about the seat belts in this "Seat belts and child restraint systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by a authorised Maruti Suzuki Workshop as soon as possible.

The pretensioner system or the airbag system may not work properly if any of the following conditions occurs.

- If the air bag light on the instrument cluster does not come on briefly, when the ignition switch is turned to the “ON” position or the engine switch is pressed to change the ignition mode to “ON”.
- If the air bag light comes on and stays on for more than 10 seconds, when the ignition switch is turned to the “ON” position or the engine switch is pressed to change the ignition mode to “ON”.
- If the air bag light comes on while driving.

Have both systems inspected by a authorised Maruti Suzuki Workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by a authorised Maruti Suzuki Workshop who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the battery is disconnected and the ignition switch has been in “LOCK” position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your MARUTI SUZUKI vehicle, ask a authorised Maruti Suzuki Workshop, body repair shop, or scrap yard for assistance.

FOR SAFE DRIVING


Supplemental restraint system (airbags)

⚠ WARNING

This section describes the protection provided by your MARUTI SUZUKI vehicle's supplemental restraint system (airbags). Read and follow all instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a supplemental restraint system consisting of the following components in addition to a lap-shoulder belt at each seating position.


- (1) Side curtain airbag module
- (2) Side crash sensor
- (3) Front passenger's front airbag module
- (4) Driver's front airbag module
- (5) Forward crash sensor
- (6) Front seat belt pretensioner
- (7) Airbag controller
- (8) Side airbag module

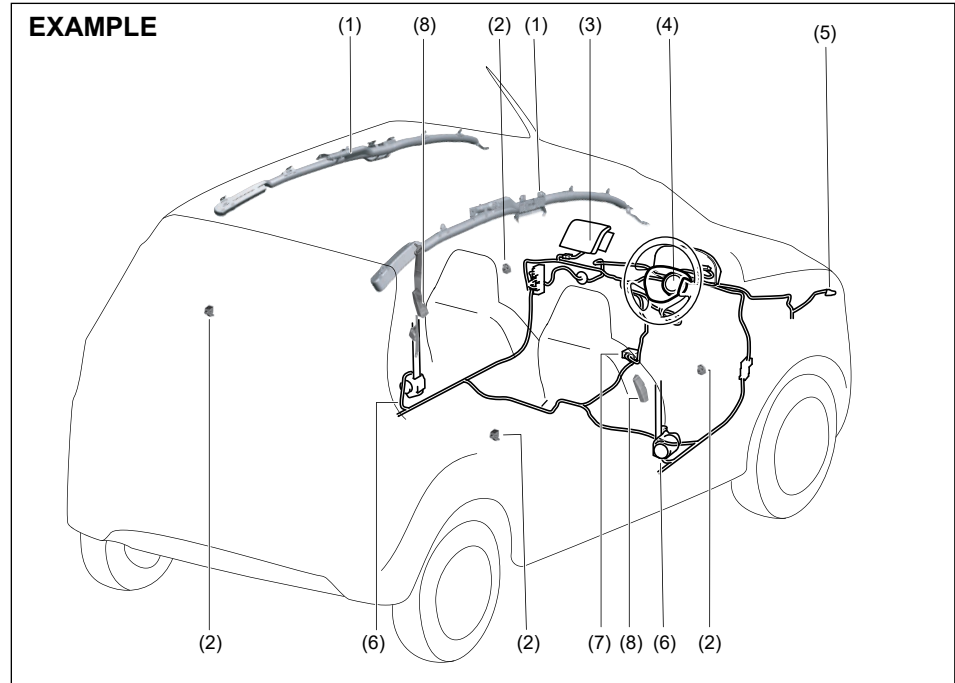

69RM01017

What is SRS airbag system?

SRS stands for “Supplemental Restraint System”. This system aims to restrain passengers in their seats for safety.

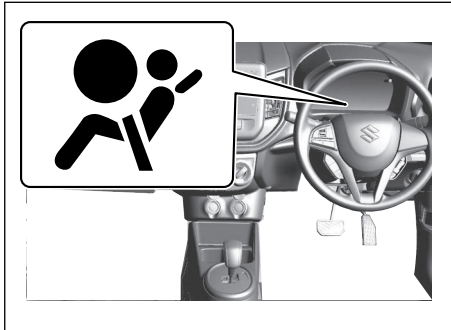

69RM01013

If airbag warning light on the instrument cluster does not blink or come on when the ignition switch is first turned to “ON” position, or the ignition mode is first changed to ON, or airbag warning light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by a MARUTI SUZUKI authorized workshop as soon as possible.

⚠ WARNING


- **SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time. If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision. Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.**
- **If the seat belts are not fastened properly, airbags may not provide the best performance. This may cause severe injury in a sudden braking and a collision. Make sure that the driver and all the passengers fasten the seat belts properly in a correct posture.**

NOTE:

Via the event data recorder (EDR) system, this vehicle records and accumulates data when the airbag is deployed.

Front airbags

EXAMPLE

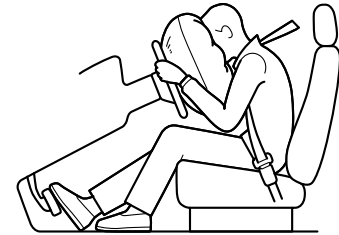

63J113

Front airbags are designed to inflate in severe frontal collisions when the ignition switch is in “ON” position.

NOTE:


In a frontal angle collision, the side airbags and side curtain airbags may inflate.

Front airbags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

FOR SAFE DRIVING

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Side airbags and side curtain airbags

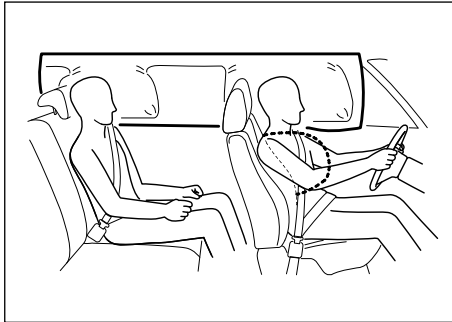

Side airbags and side curtain airbags are designed to inflate in severe side impact collisions when the ignition switch is in "ON" position or the ignition mode is ON.

Side airbags and side curtain airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag and side curtain airbag on the side of the vehicle that is struck will inflate.

However, in a frontal angle collision, the side airbags and side curtain airbags may

inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident. Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

When driving the vehicle with SRS airbag system

Make Sure to Fasten Seat Belt




65J106

⚠ WARNING


SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time. If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision. Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.

Correct sitting posture

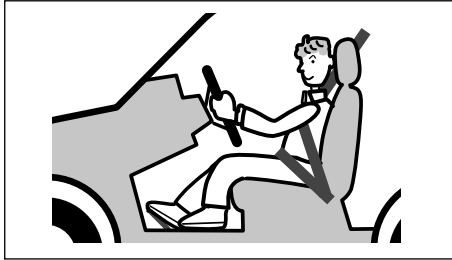

80J014

There is a possibility of major impact from the front airbags when the airbags activate and deploy instantaneously, the driver and the passenger should sit deeply into their seats and touch their backs lightly to the seatback. In addition, the seat should be positioned so that it is not too far forward.

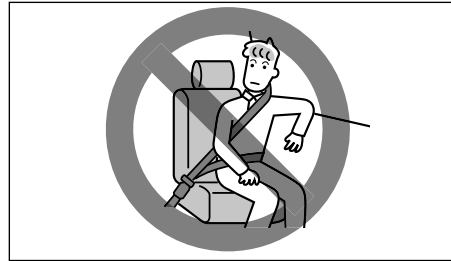


59RN02190

⚠ WARNING

- Do not position your face, chest, etc., close to the steering wheel or instrument cluster, and do not rest your feet up into this area. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.
- If side airbags or side curtain airbags activate, you may get strong impact, resulting in severe injury. Do not put hands out of the window or lean on the door. Also, when sitting in the rear seat, do not hug the seatback of the front seat.

For proper SRS airbag system operation

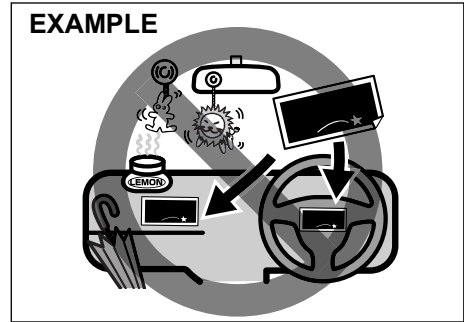


69RHS169

⚠ WARNING

- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it.
- Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.
- Do not attach accessories (except for MARUTI SUZUKI genuine products), etc., to the windshield or the inside rearview mirror.

FOR SAFE DRIVING

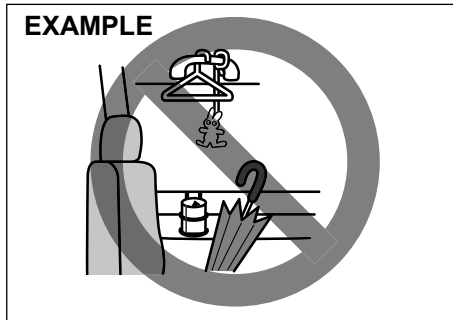

59RN02200

▲ WARNING

For the vehicle with side airbags or side curtain airbags, do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.

Warning label of SRS airbag for front passenger's seat



72M00150

You may find this label on the sun visor.

▲ WARNING


NEVER use a rearward facing child restraint on a seat protected by an **ACTIVE AIRBAG** in front of it, **DEATH** or **SERIOUS INJURY** to the **CHILD** can occur.

Description of warning label

Symbol	Symbol meaning
	Do not install a rear-facing child restraint system to the front passenger's seat equipped with an airbag.
	If the front passenger's seat airbag were to be deployed, a major impact could be applied to a rear-facing child restraint system and the child.
	For more details, read this owner's manual.


“SRS AIRBAG” mark and location

Driver’s front airbag

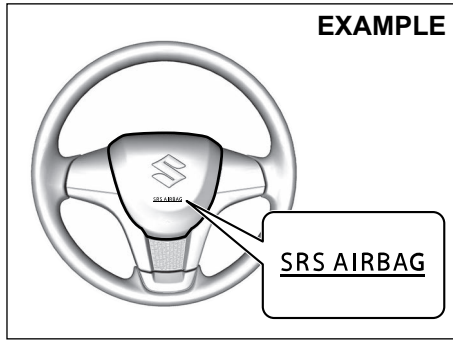

69RH165

Front passenger’s front airbag

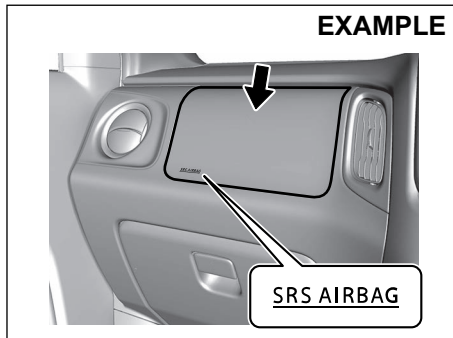

69RH055

Side airbags



69RM01014

Side curtain airbags



69RM01015

The driver’s front airbag is located behind the center pad of the steering wheel and the front passenger’s front airbag is located behind the passenger’s side of the dashboard.

The words “SRS AIRBAG” are molded into the airbag covers to identify the location of the airbags.

⚠ WARNING

- If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a authorised Maruti Suzuki Workshop.
- If you smash the airbag stored place or apply a strong impact to it, the airbag may not work properly or may inflate unexpectedly, resulting in serious injury. Do not smash the airbag stored place or apply a strong impact to it.

Installation of child restraint system



Refer to "Child restraint systems" in this section for details on securing your child.

Handling for airbags

For proper SRS airbag system operation

If objects are positioned within the range where the airbag deploys, such objects might be impacted and blown off or the airbag may not deploy properly.

⚠ WARNING

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not modify the suspension. If the vehicle height or the stiffness of the suspension were to change, airbag malfunction may result.
 - When installing a grille guard, etc., on the front of the vehicle, consult a MARUTI SUZUKI authorized workshop. If you modify the front part of the vehicle, the airbag system may not work properly.
 - When installing radio equipment, etc., consult a MARUTI SUZUKI authorized workshop. Radio waves, etc., from a radio may adversely affect the computer module used in the airbag system.

(Continued)

⚠ WARNING

(Continued)

- Even though your vehicle is moderately damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by a MARUTI SUZUKI authorized workshop to ensure that it works properly. If the original function of airbag system is damaged, airbag may not function effectively and fully in case of an emergency.
- If the airbag-related parts are replaced or repaired, which has an impact on the airbag functions, the airbag may activate unnecessarily or may not activate when necessary. The following situations may give a negative impact to the airbag system. In these cases, consult a MARUTI SUZUKI authorized workshop beforehand.
 - Removing the steering wheel, repairing the areas around the steering wheel, etc.

(Continued)


⚠ WARNING

(Continued)

- Center console repair, repairs around the instrument cluster, repairs under the front seat, and repairs of electrical wiring
- Installation of audio equipment, etc.
- Sheet metal painting and repairs around the dashboard
- Replacement of the front seat and repairs around the seat
- Repairs around the front pillar, the back pillar or the roof side
- Repairs around the center pillar

Driver's front airbag precautions

EXAMPLE

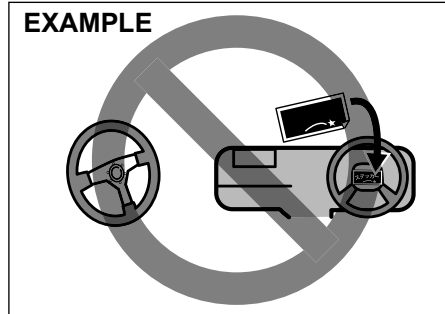


69RHS022

⚠ WARNING

- Do not position your hands, face, chest, etc., close to airbag unit area or lean on the steering wheel. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.
- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it. Otherwise, the airbag may not deploy normally in case of emergency, resulting in severe injury.

Front passenger's front airbag precautions

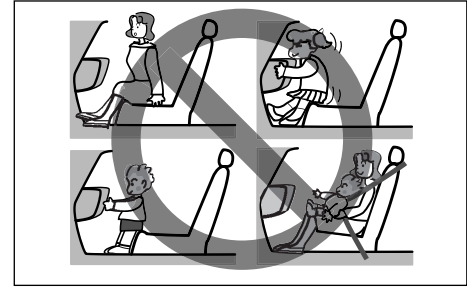

69RHS170

⚠ WARNING

- When riding in the front passenger's seat or when allowing a child to ride in this seat, be sure to observe the following points. Failure to do so may result in serious injury due to major impact if the airbag is deployed.
 - Do not position your hands or feet on the airbag unit area, and do not position your face, chest, etc., close to this area.
 - Do not allow a child to stand in front of the airbag unit area or sit on a passenger's lap in the front passenger's seat. Have a child ride in the rear seat wearing a seat belt.

(Continued)


FOR SAFE DRIVING

⚠ WARNING

(Continued)

For a child that is not yet big enough to wear a seat belt properly, be sure to use a child restraint system on the rear seat.

EXAMPLE

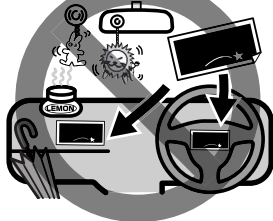

69RHS169

⚠ WARNING

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.
 - Do not attach accessories (except for MARUTI SUZUKI genuine products), etc., to the windshield or the inside rearview mirror.

Side airbags and side curtain airbags precautions

EXAMPLE



59RN02200

⚠ WARNING

If you attach accessories such as cup holders or hangers near the door, or if you lean umbrellas against the door, when side airbags or side curtain airbags activate, these objects may be thrown out and may not inflate properly, resulting in severe injury.


Do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.

Function of airbags


How the system works

In a frontal collision, the collision sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.


A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to "Seat adjustment" section and "Seat belts and child restraint systems" section in this section for details on proper seat and seat belt adjustments.

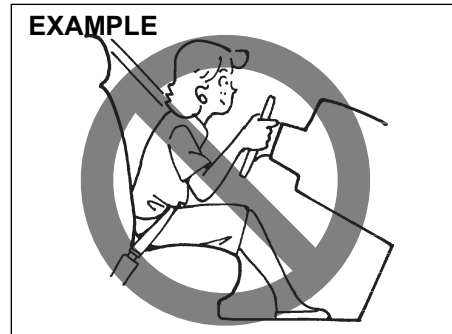

65D610

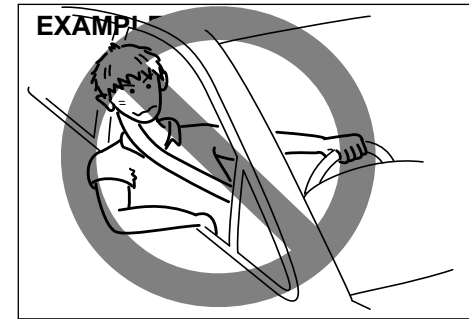

59RN04670

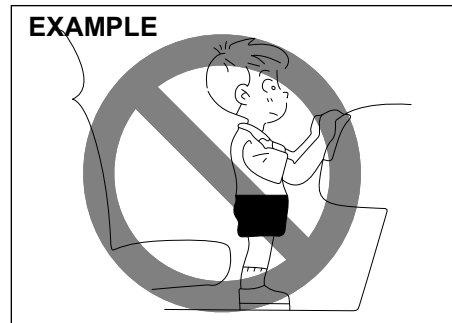

65D608

⚠ WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front air bag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side air bags and side curtain air bag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.

(Continued)

WARNING

(Continued)

- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each condition, it may cause severe injury.
- Do not use non-genuine seat covers on the front seats, because non genuine seat covers may obstruct the inflation of side airbags. MARUTI SUZUKI highly recommends MARUTI SUZUKI-genuine seat covers to be used when covering the front seats of such vehicles with side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella, as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.

(Continued)

WARNING

(Continued)

- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the airbags to malfunction.
- Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by a MARUTI SUZUKI authorized workshop to ensure that it works properly. If the original function of air bag system is damaged, air bag may not function effectively and fully in case of an emergency.

CAUTION

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation. This may cause burn injury.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, and which sensors activated the deployment.

Servicing the airbag system


If the airbags inflate, have the airbags and related components replaced by a Maruti Suzuki authorised Workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If this happens, ask a Maruti Suzuki authorised Workshop to check the airbag system as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only a Maruti Suzuki authorised Workshop should be allowed to service or replace your airbags. Remind anyone who services your MARUTI SUZUKI vehicle that it has airbags.


Service on or around airbag components or wiring must be performed only by a Maruti Suzuki authorised Workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the airbag system, check that the battery is disconnected and the ignition switch has been in "LOCK" position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch airbag system components or wires. The wires are wrapped

 CAUTION
<p>If you do not handle the airbags properly, they may inflate unexpectedly, resulting in personal injury.</p> <p>When scrapping the airbags or the vehicle that has the airbags, consult a Maruti Suzuki authorised Workshop.</p>


Front airbag deployment conditions

Front airbags deploy (inflation)

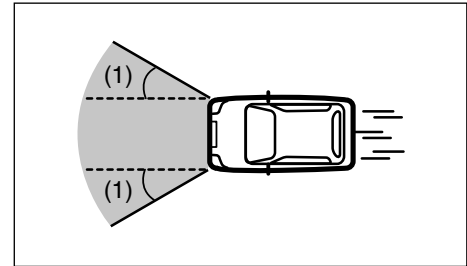

80J098E

- Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

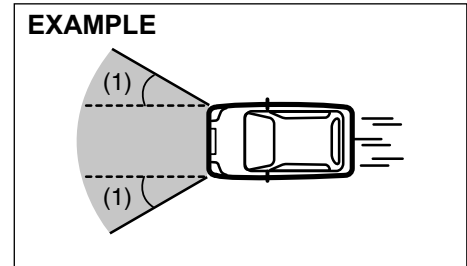


80J098E

- Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle

FOR SAFE DRIVING


Front airbags may inflate

Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.

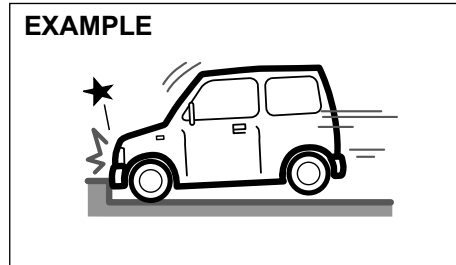

80J099


- Hitting a curb or medial strip

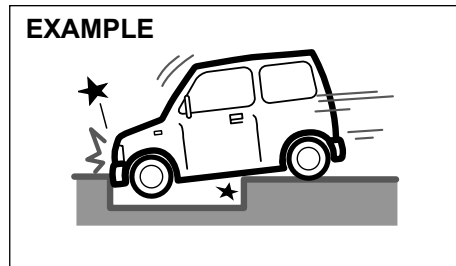

80J100E

- Falling into a deep hole or ditch

EXAMPLE

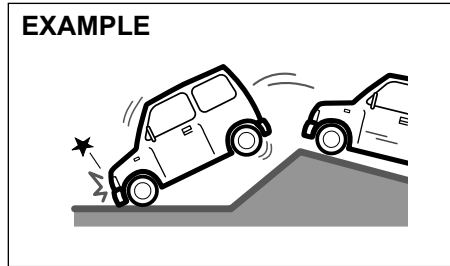

80J101

- Landing hard or falling


Front airbags may not inflate

The front airbags may not inflate when a strong impact has not occurred since the collision object (including living being like animals) was easy to be deformed or moved, or the collided portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle.

Also, in certain collisions at low speed, the air bags may not inflate.

EXAMPLE

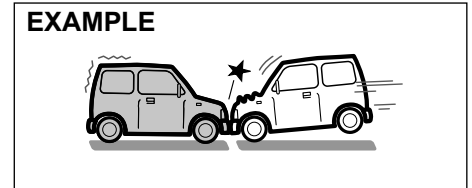


80J102


- Frontal collision to a stopped vehicle at less than about 50 km/h

Front airbags do not inflate


Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.

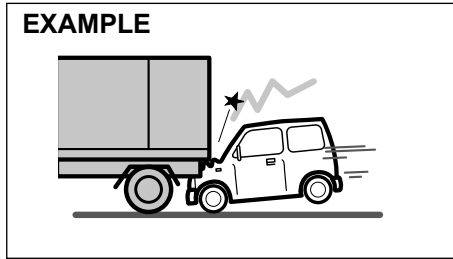


- Collision that the front of your vehicle goes under the bed of a truck etc.

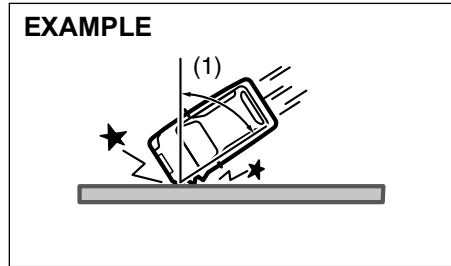


- Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

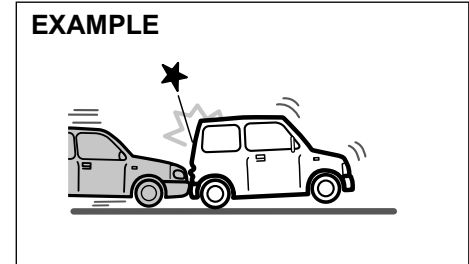


- Impact from the rear

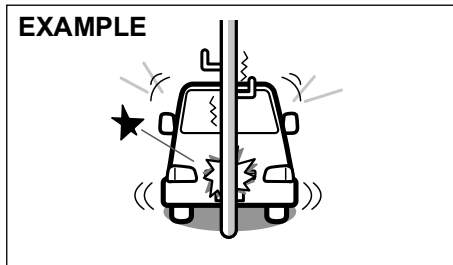

- Collision with a utility pole or stumpage

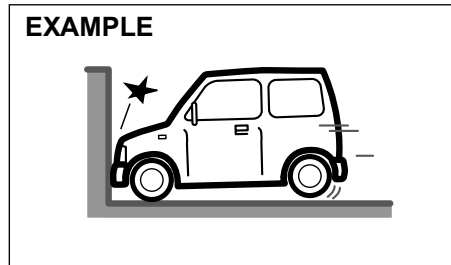

- Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h

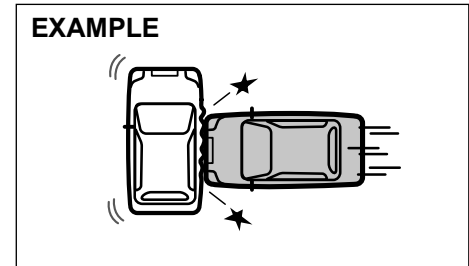

- Impact from the side

FOR SAFE DRIVING

EXAMPLE




80J110

- Vehicle rollover

Side airbags and side curtain airbags deployment conditions

Side airbags and side curtain airbags deploy (inflation)

EXAMPLE

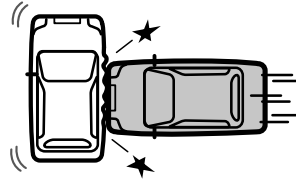

80J119

- Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h or in a greater impact


Side airbags and side curtain airbags may inflate in a strong impact

Side airbags and side curtain airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.



80J102


- Frontal collision

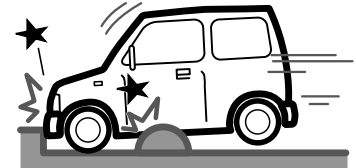

80J099

- Hitting a curb or bump


EXAMPLE

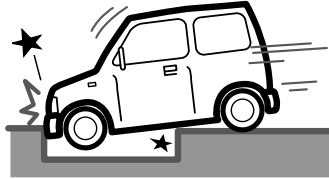


80J100E

- Falling into a deep hole or ditch

Side airbags and side curtain airbags may not inflate

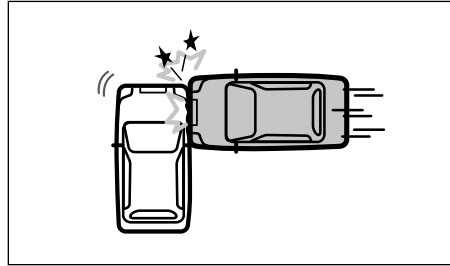


80J121

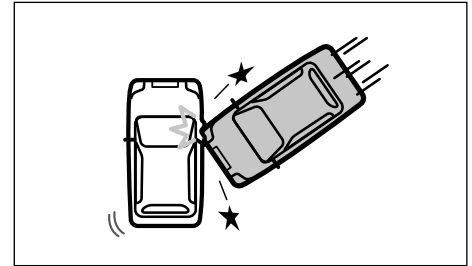

80J123


- Impact from the side at an oblique angle

EXAMPLE

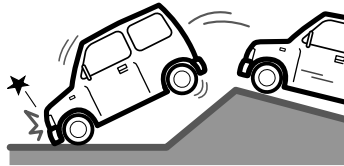


80J101

- Landing hard or falling

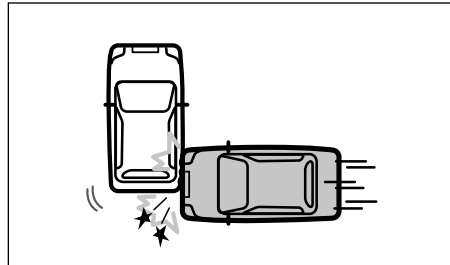

80J122


- Impact from the side to the vehicle body other than the passenger compartment

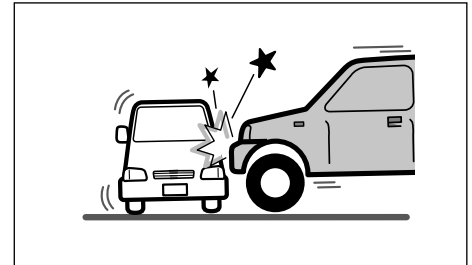

80J124

- Impact from the side by a high hood vehicle


FOR SAFE DRIVING

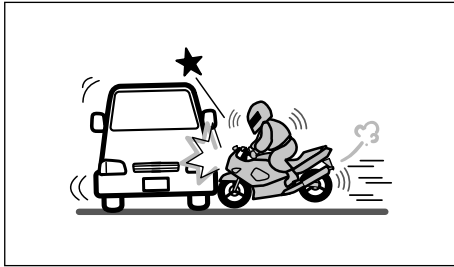


80J125

- Impact from the rear

Side airbags and side curtain airbags do not inflate

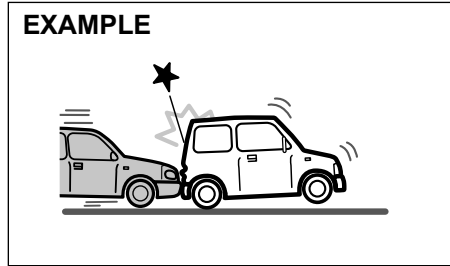


80J120

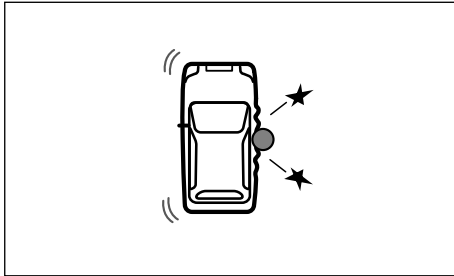

80J126

- Vehicle rollover

Impact from the rear

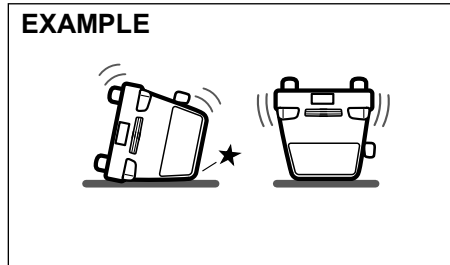


80J110

Vehicle rollover

Exhaust gas warning

EXAMPLE

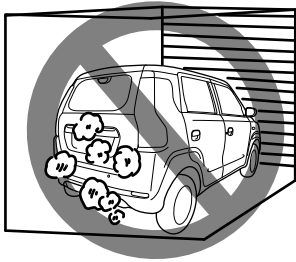

69RM01001

⚠ WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, take the following precautions to help prevent carbon monoxide from entering your vehicle.

- Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problems and lead to death.

(Continued)

⚠ WARNING

(Continued)


- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, check that the air intake selector is set to FRESH AIR and the blower is at high speed.
- Avoid operating the vehicle with the tailgate open. If it is necessary to do so, check that the all windows are closed, and the blower is at high speed with the air intake selector set to FRESH AIR.
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grill in front of the windshield clear of snow, leaves or other obstructions at all times.

(Continued)

⚠ WARNING

(Continued)

- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leakage. Any damage or leakage should be repaired immediately.

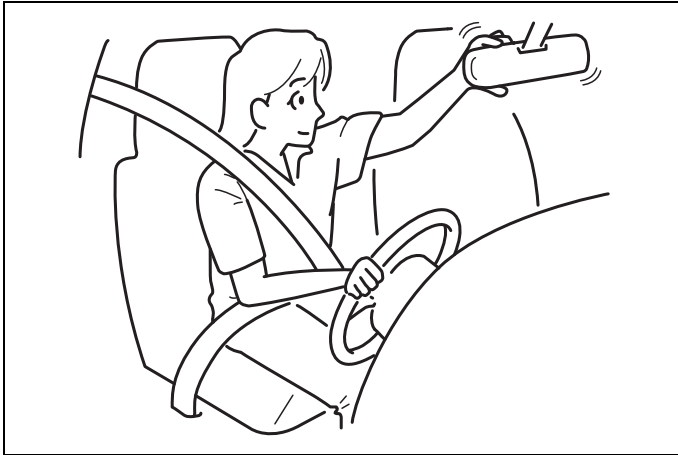


60G404

BEFORE DRIVING

Keys	2-1
Door locks	2-2
Keyless entry system transmitter (if equipped)	2-5
Security system (if equipped)	2-7
Theft deterrent light (if equipped)	2-9
Windows	2-10
Mirrors	2-12
Instrument cluster	2-15
Speedometer	2-16
Tachometer (if equipped)	2-16
Fuel gauge	2-16
Brightness control	2-17
Information display	2-18
Warning and indicator lights	2-26
Lighting control lever	2-33
Front fog light switch (if equipped)	2-34
Headlight leveling switch	2-35
Turn signal control lever	2-35
Hazard warning switch	2-36
Windshield wiper and washer lever	2-37
Tilt steering lock lever (if equipped)	2-39
Horn	2-39
Heated rear window switch (if equipped)	2-40
Vehicle loading	2-40
Trailer towing	2-41

BEFORE DRIVING

Keys

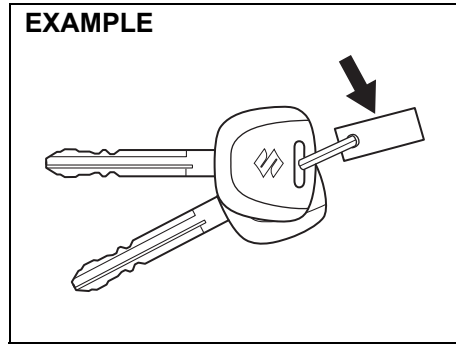

Your vehicle comes with a pair of keys. The key(s) may or may not be equipped with a transmitter depending on model variant. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer system

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key, which has an electronic identification code programmed into it. The key communicates the identification code to the vehicle when the ignition switch is turned to "ON" position. If you need to make spare keys, see a authorised Maruti Suzuki workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.



If the immobilizer system warning light blinks when the ignition switch is in "ON" position, the engine will not start.

If this light blinks, turn the ignition switch to "LOCK" position, and then turn it back to "ON" position.

If the light still blinks after the ignition switch is turned back to "ON" position, there may be something wrong with your key or with the immobilizer system. Ask a

authorised Maruti Suzuki workshop to have the system inspected.

NOTE:

- If you lose your immobilizer ignition key, ask a authorised Maruti Suzuki workshop as soon as possible to deactivate the lost one, and to make a new key.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch when using your MARUTI SUZUKI vehicle. Otherwise, the engine may not be started because they may interfere with your MARUTI SUZUKI vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key, it may not start the engine.
- This immobilizer system is maintenance-free.

NOTICE

The immobilizer key is sensitive electronic instrument. To avoid damaging it:


- **Do not expose it to impacts, moisture or high temperature such as on the dashboard under direct sunlight.**
- **Keep it away from magnetic objects.**

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

Door locks

Side door locks

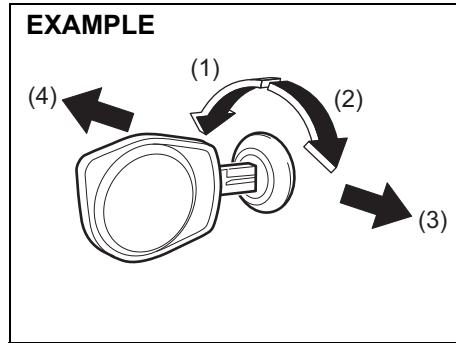


- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock a driver's door from the outside of the vehicle:

- Insert a key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a driver's door from the outside of the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

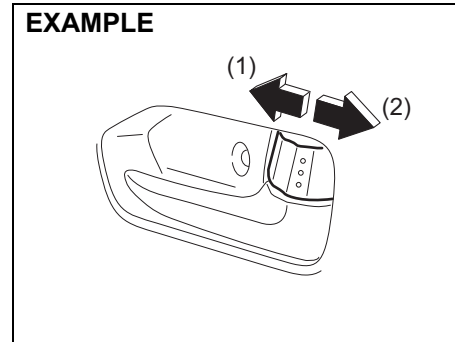

- (1) LOCK
- (2) UNLOCK


To lock a door from the inside of the vehicle, turn the lock knob forward. Turn the lock knob backward to unlock the door.

To lock a rear door from the outside of the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Hold the door handle when you close a locked front door, or the door will not remain locked.

Central door locking system

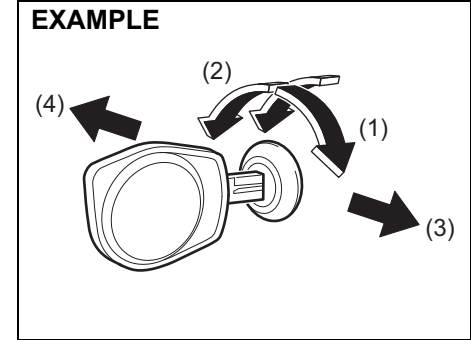

- (1) LOCK
- (2) UNLOCK
- (3) Front
- (4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.


To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

BEFORE DRIVING

NOTE:

You can switch the function that unlocks all doors from requiring two turns to requiring one turn, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

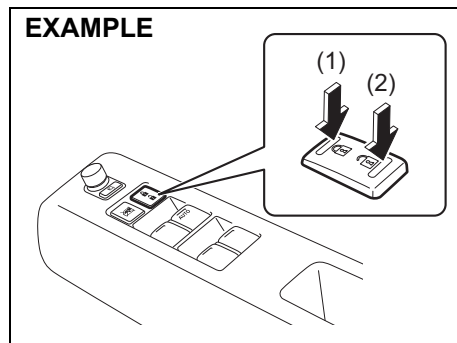

69RH003

- (1) LOCK
- (2) UNLOCK

You can also lock or unlock all doors by pressing the front or rear of the switch, respectively.


NOTE:

If your vehicle is equipped with the keyless entry system, you can also lock or unlock all doors by operating the transmitter. Refer to "Keyless entry system transmitter" in this section.

NOTE:

- All doors are automatically unlocked when you turn the ignition switch to the "LOCK" position and pull out the key.
- If your vehicle is equipped with keyless entry system transmitter, all doors are automatically locked for safety when the vehicle speed reaches 15 km/h.
- You can change the automatic locking or unlocking function mentioned above via the setting mode of the information display. For details on how to use the information display, refer to "Information display" in this section.

Child-proof locks (rear door)

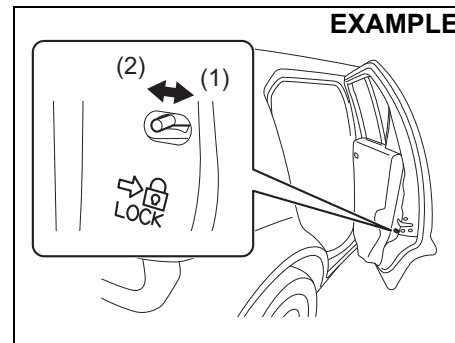

69RH033

- (1) LOCK
- (2) UNLOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in LOCK position (1), the rear door can only be opened from outside. When the lock lever is in UNLOCK position (2), the rear door can be opened from inside or outside.

⚠ WARNING


Place the child-proof lock in LOCK position whenever children are seated in the rear.

Tailgate

⚠ WARNING

Always check that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

Type A

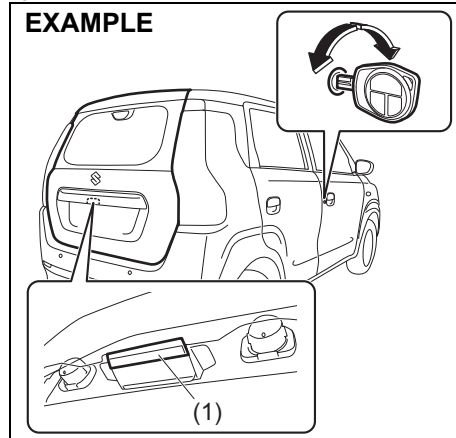


You can lock and unlock the tailgate by using the key in the driver's door lock.


To open the tailgate, pull up the tailgate handle (1) and lift the tailgate.

If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

1) Remove the luggage compartment cover (if equipped) and fold the rear seat forward for easier access. Refer to "Folding rear seats" section for details on how to fold the rear seat forward.

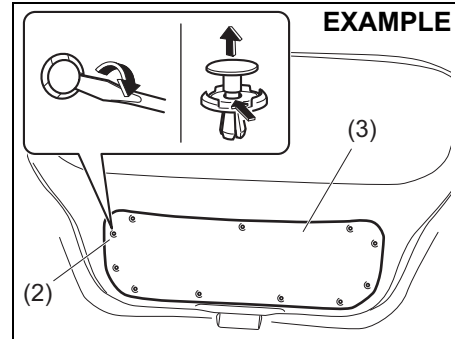

- 2) Remove the clips (2) by prying it off with a flat-bladed screwdriver as shown in the illustration.
- 3) Remove the trim (3) of the tailgate.

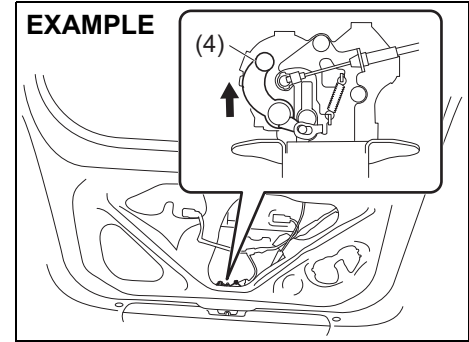


- 4) To unlock the tailgate lock, pull the lock plate (4) up.
- 5) From outside the vehicle, pull up the tailgate handle (1) and lift the tailgate.

If the tailgate cannot be unlocked, have the vehicle inspected by a authorised Maruti Suzuki workshop.


BEFORE DRIVING

Type B

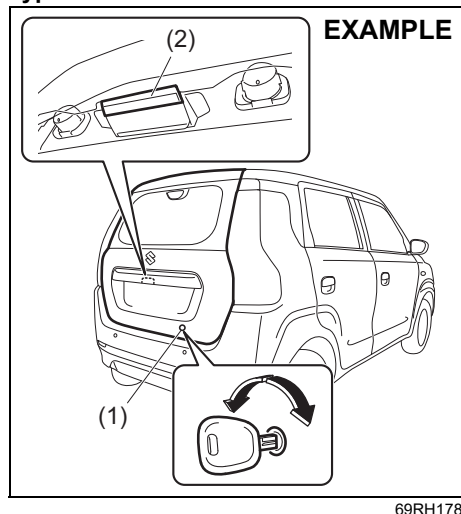

You can lock or unlock the tailgate by using the key in the tailgate lock (1). To open the tailgate, pull up the tailgate handle (2) and lift the tailgate.

Keyless entry system transmitter (if equipped)

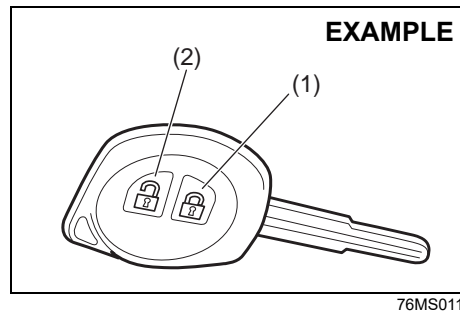

- (1) LOCK button
(2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

NOTE:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on

how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

NOTE:

If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.

NOTE:

- If you lock the doors using the transmitter when the engine hood is open, the siren will sound 3 times to remind you.
- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the LOCK button (1) and UNLOCK button (2), then you

push one of the buttons within 5 seconds, the siren will not sound. However, if you push one of the buttons 5 seconds later, the siren will sound.

NOTE:

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can only be unlocked with the transmitter, and the turn signal light will not flash.
- If you lose one of the transmitters, ask a authorised Maruti Suzuki workshop as soon as possible for a replacement. Have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Car locator function

This function is to get the attention of others. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds.

The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time. To cancel the car locator function, press any button (LOCK or UNLOCK). You can also cancel the car locator function by turning the ignition switch to "ON" position.


NOTE:

The car locator function will not activate when the key is in the ignition switch.

Battery replacement


If the transmitter becomes unreliable, replace the battery.

To replace the battery of the transmitter:

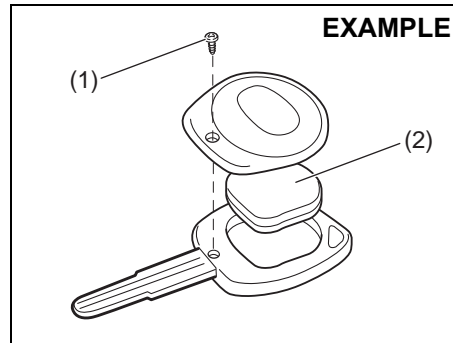

68LM248

- 1) Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).

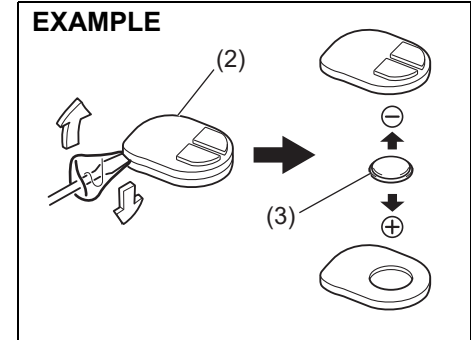

73R0197

- (3) Lithium disc type battery: CR1616 or equivalent

- 3) Put the edge of a flat-bladed screwdriver covered with a soft cloth in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) so its + terminal faces "+" mark of the transmitter.
- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- 7) Check that the door locks can be operated with the transmitter.
- 8) Dispose of the used battery properly according to applicable rules or regula-

BEFORE DRIVING

tions. Do not dispose of lithium batteries with ordinary household trash.

WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- **The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.**
- **When replacing the battery by yourself, the transmitter could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.**

Security system (if equipped)

NOTE:

For the theft deterrent light (for vehicles without keyless entry system), refer to "Theft deterrent light" in this section.

The security system is armed after you lock all doors (including the engine hood and tailgate) by using the keyless entry system transmitter.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless entry system transmitter, or open the engine hood, will cause the alarm to be triggered.

* These means include the following:

- The key
- The lock knob on a door
- The central door locking switch
- The tailgate handle

Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the alarm will be triggered if there is any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask a authorised Maruti Suzuki workshop or use the setting mode of the information display.

NOTE:

- *The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Information display" in this section.*
- *authorised Maruti Suzuki workshop may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult a authorised Maruti Suzuki workshop for further information.*

NOTE:


- *The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into the vehicle.*
- *Always use the keyless entry system transmitter to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.*
- *If a person who does not know the security system is going to drive the vehicle, we recommend you explain the system and its operation to the person. Mistakenly triggering the alarm may cause a nuisance to others.*
- *Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or things of value in the vehicle.*

How to arm the security system

Lock all doors (including the engine hood and tailgate) using the keyless entry system transmitter.


While the system is being armed, the indicator continues to blink at intervals of approximately 2 seconds.

With tachometer

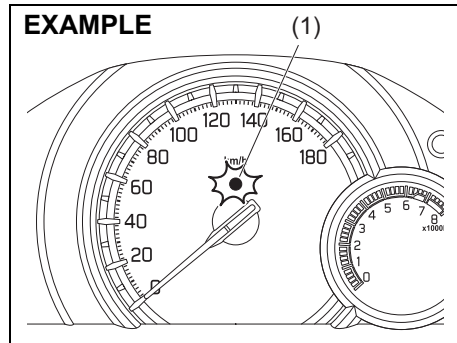

69RH037

Without tachometer

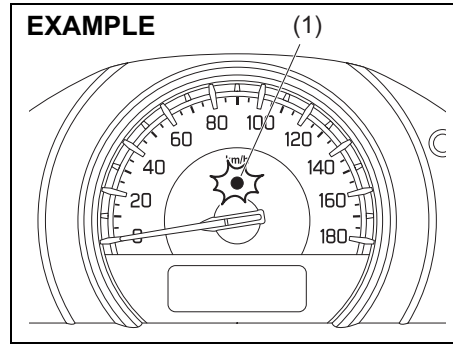

69RH038

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or swings the vehicle (if the shock sensor is in the enabled state).
- The security system is not armed when all doors are locked using the key from outside, using the door lock knobs or the central door locking switch from inside.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, the doors are automatically locked again. When the doors are locked, the security system will be armed.

- If the security system indicator (1) blinks when the ignition switch is in "ON" position, there may be something wrong with the security system. Ask a authorised Maruti Suzuki workshop to inspect the system.

How to disarm the security system

Simply unlock the doors using the keyless entry system transmitter. The security system indicator will go out, indicating that the security system is disarmed.

How to stop the alarm

Should the alarm be triggered accidentally, the alarm will stop by the following operations.

- Turn the ignition switch to "ON" position.
- Unlock the doors using the keyless entry system transmitter.

NOTE:

- Even after the alarm has stopped, if you lock the doors using the keyless entry system transmitter, the security system will be rearmed.
- If you disconnect the battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be re-triggered when the battery is then reconnected.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, or the vehicle feels a shock (if the shock-

BEFORE DRIVING

sensor is in the enabled state), without disarming the security system.

Checking whether the alarm has been triggered during parking

If the alarm was triggered and you then turn the ignition switch to "ON" position, the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether the vehicle has been broken into while you were away from it.

Security system indication


- If any of the doors or tailgate are opened without unlocking by the keyless entry system transmitter, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time. (If the shock sensor is in the enabled state)
- If the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, the siren sounds for about 5 seconds (full blast warning). The security system indicator continues to blink during this time.

NOTE:

If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.

Theft deterrent light (if equipped)

EXAMPLE

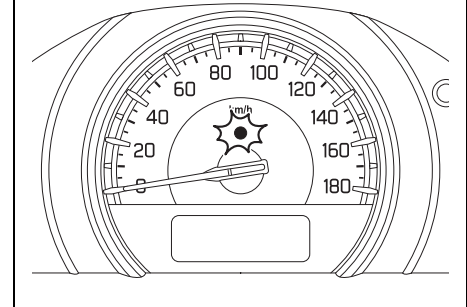

69RH111


This light will blink with the ignition switch in "LOCK" or "ACC" position. The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

NOTE:

For the security system (for vehicles with keyless entry system), refer to "Security system" in this section.

Windows

**Manual window control
(if equipped)**

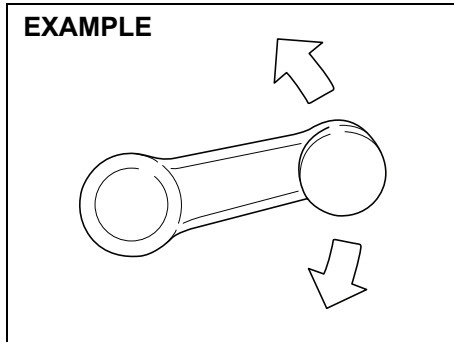


Raise or lower the door windows by turning the handle located on the door panel.


Power window controls

The power windows can only be operated when the ignition switch is in "ON" position.

Driver's side (Type A)

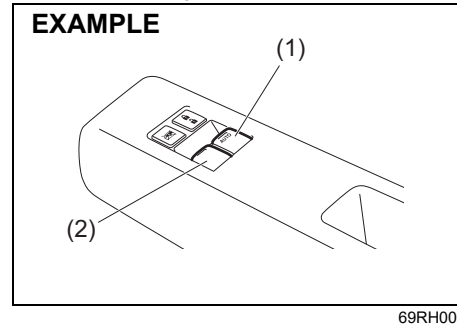


Driver's side (Type B)

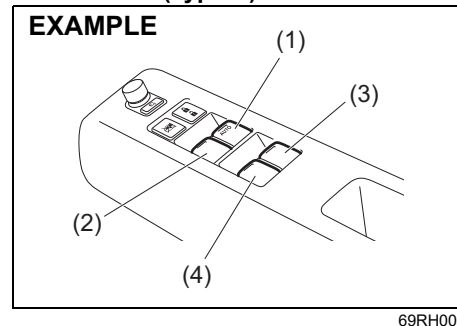


The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or

there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

Passenger's door

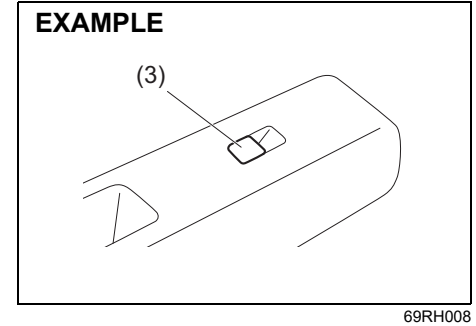

The passenger's door has a switch (5) to operate the passenger's window.

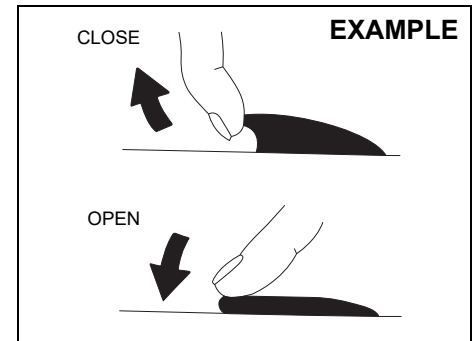


BEFORE DRIVING

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

The driver's window has AUTO-DOWN feature for greater convenience (at toll booths or drive-through restaurants, for example). This means the driver can open the window without holding the window switch in DOWN position. Press down the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN position, pull up the switch briefly.

Lock switch (Type A)


EXAMPLE

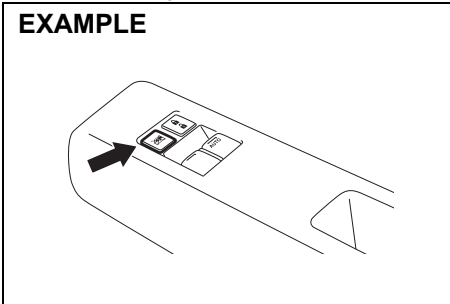

69RH009

Lock switch (Type B)

EXAMPLE

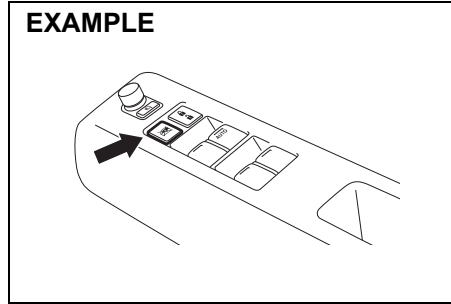

69RH010

The driver's door also has a lock switch for the passenger's window(s). When you push in the lock switch, the passenger's window(s) cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing it again.

WARNING

- You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the power windows when closing them.
- Always remove the ignition key with you when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the power window switches and get trapped by the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Mirrors

⚠ WARNING

Failure to observe following point may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.

- Do not adjust the mirrors while driving.
- Always unfold all the outside rear view mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

Inside rearview mirror

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror.

Type A


EXAMPLE



74LHT0235


Type B

EXAMPLE



68LMT0205

EXAMPLE

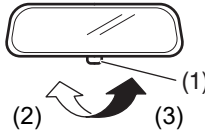

68LMT0206

- (2) Day driving
(3) Night driving

To adjust the mirror, set the selector tab (1) to the day position, and then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

⚠ WARNING

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

⚠ CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.


BEFORE DRIVING

Outside rearview mirrors

⚠ WARNING


Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

Type A

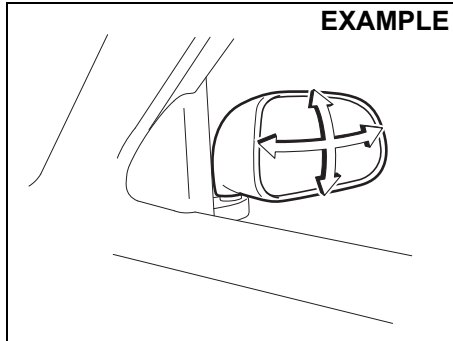

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

Type B

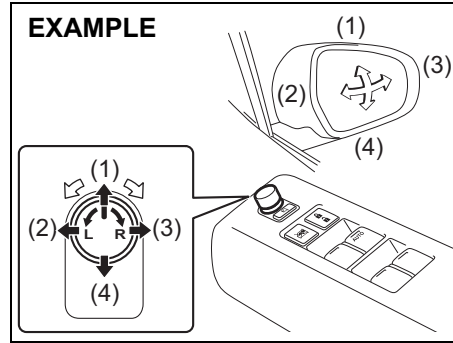

The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position. To adjust the mirrors:


- 1) Move the selector switch to the left or right to select the mirror you wish to adjust.
- 2) Push the switch in the direction that corresponds to the direction in which you wish to move the mirror.
- 3) Return the selector switch to the center position to help prevent unintended adjustment.

NOTICE

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation, as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.
- Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.

BEFORE DRIVING

Outside rearview mirror folding switch (if equipped)

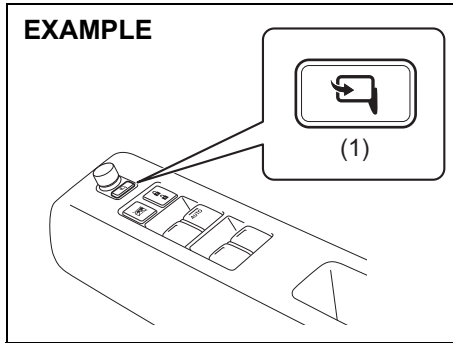

69RH012

You can fold the mirrors when you park the vehicle in a narrow space. When the ignition switch is in “ACC” or “ON” position, push the folding switch (1) to fold and unfold the mirrors. Check that the mirrors are completely unfolded before you start driving.

CAUTION

Moving mirrors can pinch and injure a hand. Do not allow anyone’s hand to get near the mirrors when folding and unfolding the mirrors.

NOTE:


- If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the outside rearview mirrors may get stuck during that moment. In such a situation, to open the outside rearview mirrors completely, again press the folding switch after starting the engine.
- Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.

BEFORE DRIVING

Instrument cluster


- 1. Speedometer
- 2. Tachometer (if equipped)
- 3. Information display
- 4. Warning and indicator lights

With tachometer

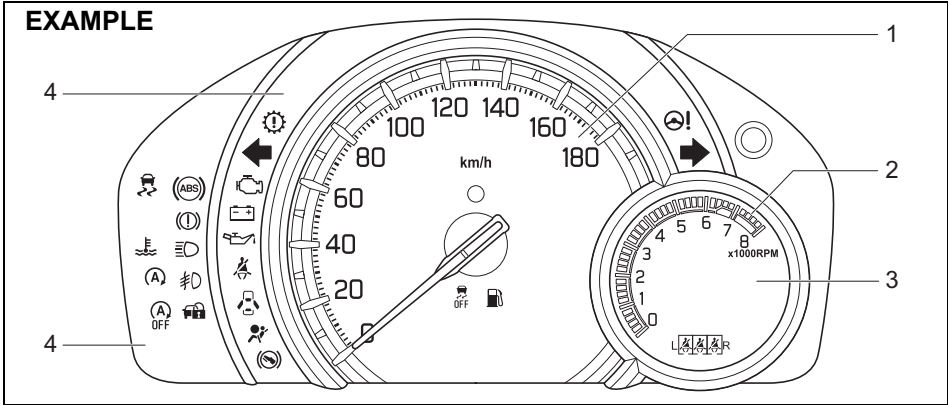

69RH020012

Without tachometer

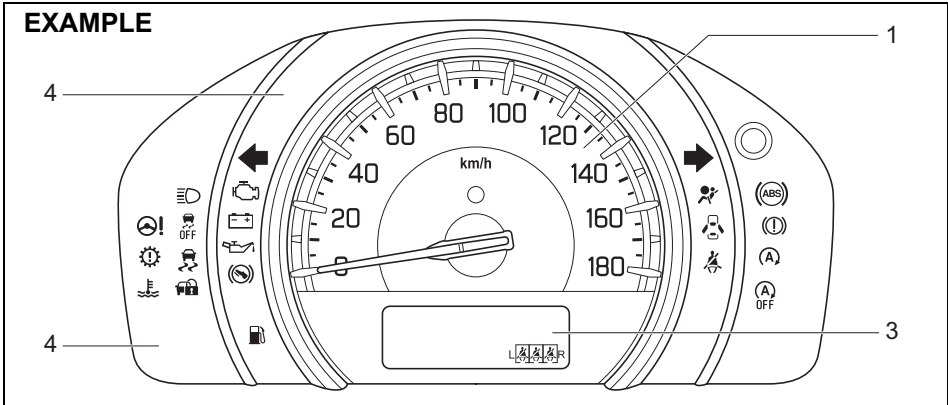

69RH020022

Speedometer

The speedometer indicates vehicle speed.

Speed alert system

The speed alert system gives audible warning for alert of over-speed to driver. When vehicle speed exceeds about 80 km/h, primary level warning with two beeps will sound every minute. When the vehicle speed exceeds about 120 km/h, secondary level warning with continuous beeps will sound.

If the vehicle speed is slowed down to about 118 km/h, primary warning will resume. If the vehicle is slowed down to about 78 km/h, speed alert warning will stop. This buzzer does not indicate any malfunction in vehicle.

Tachometer (if equipped)


The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to “Downshifting maximum allowable speeds” in the “OPERATING YOUR VEHICLE” section.


Fuel gauge

With tachometer

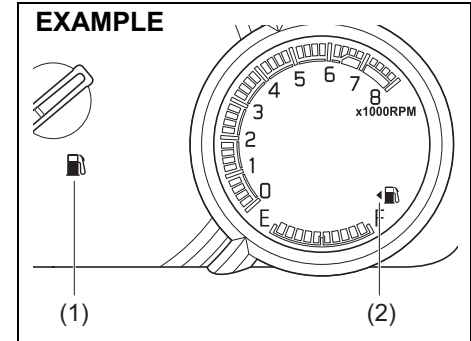

69RH027

Without tachometer

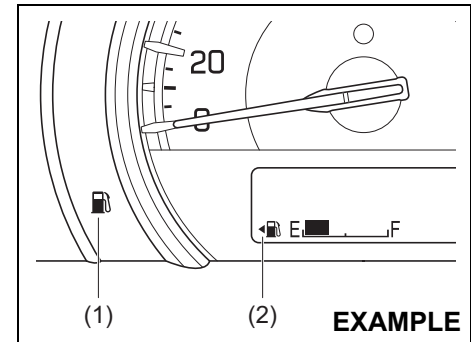

69RH028

BEFORE DRIVING

When the ignition switch is in “ON” position, this gauge gives an approximate indication of the amount of fuel in the fuel tank. “F” stands for full and “E” stands for empty.

- If the indicator shows only one segment to “E”, refill the tank as soon as possible. If the last segment blinks, it means that the fuel is almost empty.

NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

If the low fuel warning light (1) comes on, fill the fuel tank immediately. Refer to “Low fuel warning light” in “Warning and indicator lights” in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

Brightness control

When the position lights and/or headlights are on, the instrument cluster lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument cluster lights when the position lights or headlights are on.


When the position lights and/or headlights are on, you can control the meter illumination intensity.

⚠ WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

With tachometer


EXAMPLE

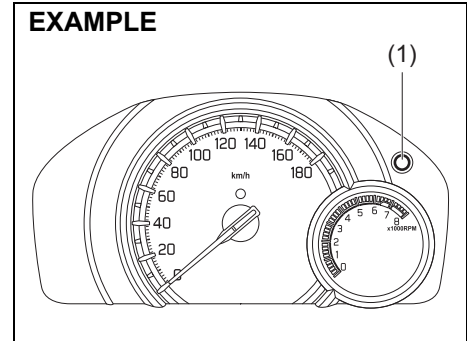

69RH045


Without tachometer

EXAMPLE

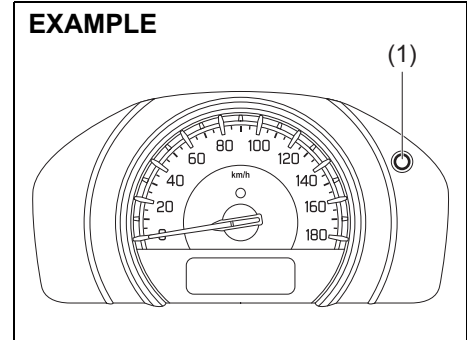

69RH046

(1) Indicator selector knob

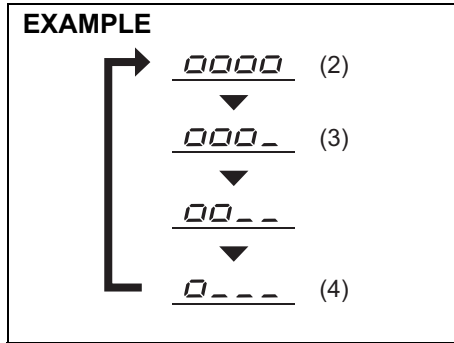

69RH126

- (2) Brightest
- (3) Initial setting
- (4) Dimmest

To switch the display indication to the brightness control, select the indication as shown in the illustration to push the indicator selector knob (1) when the position lights and/or headlights are on.

To change the brightness of the instrument cluster lights, continue to hold in the indicator selector knob (1). The indication will change as shown in the illustration. The illumination gets dimmer then returns to the brightest condition after it reaches the dimmest.

NOTE:

- If you do not push the indicator selector knob (1) within several seconds of activating the brightness control, the brightness control display will be canceled automatically.


NOTE:

If you select the maximum brightness level when the position lights or headlights are on, the following functions will be canceled.

- The function which automatically dims the brightness of instrument cluster lights
- The function which operates with the brightness control, except maximum brightness level

Information display


With tachometer

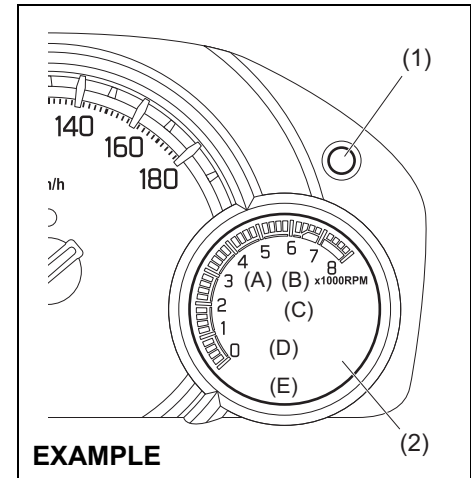

69RM02002

BEFORE DRIVING

Without tachometer

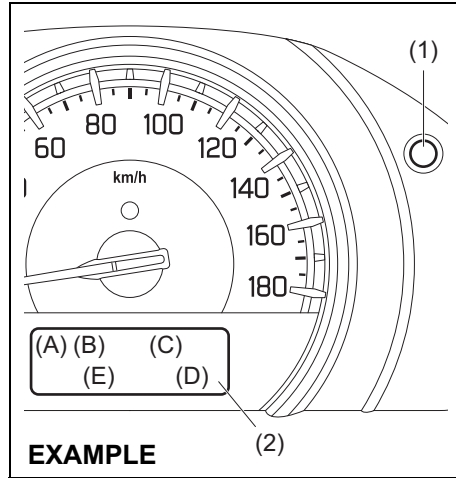

69RH048

- (1) Indicator selector knob
- (2) Information display

When the ignition switch is in "ON" position, the information display shows the following information.

Display (A)

Gearshift indicator (if equipped)

Display (B)

Gear position indicator (for Auto Gear Shift models)

Display (C)

Odometer / Trip meter / Fuel consumption / Driving range

Display (D)


Clock / Seat belt reminder

Display (E)

Fuel gauge

Gearshift indicator (if equipped)

The display (A) shows the gearshift indicator.

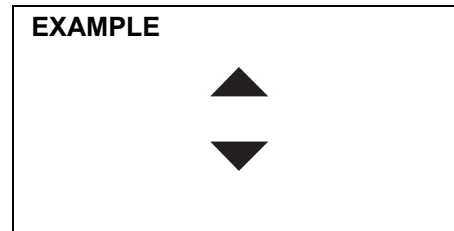


56RH00272

Refer to "Gearshift indicator" in the "OPERATING YOUR VEHICLE" section.

Gear position indicator (for Auto Gear Shift models)

The display (B) shows some of the following indications.

EXAMPLE

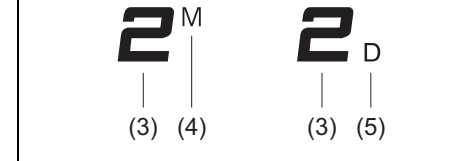

69RM02003

- (3) Gear position
- (4) Manual mode indicator
- (5) Drive mode indicator

NOTE:

For Auto Gear Shift models, when the gearshift lever position and the gear position indication in the information display are unmatched, the indication will blink and the interior buzzer will sound. Refer to "Auto Gear Shift" in the "OPERATING YOUR VEHICLE" section for details.

Manual mode indicator

When you are using the manual mode, the display shows the manual mode indicator (4).

NOTE:

The manual mode indicator will only appear when the gearshift lever is in "M" position.

Drive mode indicator


When the gearshift lever is in "D", the display shows the drive mode indicator (5).

For details on how to use the transmission, refer to "Using transmission" in the "OPERATING YOUR VEHICLE" section.


Odometer / Trip meter / Fuel consumption / Driving range

The display (C) shows one of the following indications, odometer, trip meter A, trip meter B, instantaneous fuel consumption, average fuel consumption or driving range.

To switch the display indication (C), push the indicator selector knob (1) quickly.

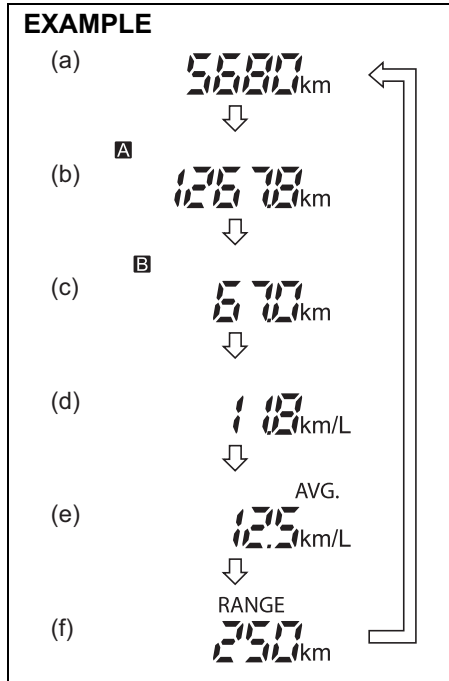

69RM02004



- (a) Odometer
- (b) Trip meter A
- (c) Trip meter B
- (d) Instantaneous fuel consumption
- (e) Average fuel consumption
- (f) Driving range

⚠ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle. Do not attempt to adjust the display while driving.

NOTE:

- Indications will change when you push and release a knob.
- The display shows estimated values. Indications may not be the same as actual values.

Odometer

The odometer records the total distance the vehicle has been driven.

NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

BEFORE DRIVING

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use the trip meter A or trip meter B independently.

To reset the trip meter to zero, push and hold the indicator selector knob (1) for a while when the display shows the trip meter.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Instantaneous fuel consumption

The display shows the value of instantaneous fuel consumption only when the vehicle is moving.

NOTE:

- *The display does not show the value unless the vehicle is moving.*
- *Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km or km/L.*
- *The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.*

– *For L/100km setting: 30*

– *For km/L setting: 50*

- *The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.*
- *The display shows estimated values. Indications may not be the same as actual values.*
- *For "L/100km" or "km/L" setting, you can change the units that instantaneous fuel consumption is displayed in. Refer to "Setting mode" in this section.*

Average fuel consumption

If you previously selected average fuel consumption setting, the display shows average fuel consumption from the last reset to the present when the ignition switch is turned to "ON" position.

To reset the average fuel consumption to zero, push and hold the indicator selector knob (1) for a while when the display shows the average fuel consumption.

NOTE:

- *For "L/100km" or "km/L" setting, you can change the units that average fuel consumption is displayed in. Refer to "Setting mode" in this section.*
- *When you reset the indication or reconnect the negative (–) terminal to the battery, the value of average fuel consumption will be shown after driving for a while.*

Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "----" for a few seconds and then indicates the current driving range when the ignition switch is turned to "ON" position.

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display "----" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

As the driving range after refueling is calculated based on the most recent driving condition, the value is different each time you refuel.

NOTE:

- *If you refuel when the ignition switch is in "ON" position, the driving range may not indicate the correct value.*
- *When you reconnect the negative (–) terminal to the battery, the value of driving range will be shown after driving for a while.*
- *If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly.*

Clock

The display (D) shows the time.

To set the clock, follow “Setting mode” instructions in this section.

⚠ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

NOTE:

When you disconnect either of the terminals to the battery and keep it for a minute, the clock indication will be initialized.

Change the indication again to your preference after the reconnection.

Fuel gauge

The display (E) shows the fuel gauge.

Refer to “Fuel gauge” in this section.

BEFORE DRIVING

Setting mode

In the setting mode, you can set up the following functions.

Indication		Functions
<p>door</p>	→ d1	Central door locking system "d1"
	↓ d2	Automatic door locking function "d2"
	↓ d3	Automatic door unlocking function "d3"
	↓ d5	Door locking and unlocking siren "d5"
<p>LIGHT</p>	→ L2	Additional flashes of the turn signal "L2"
<p>SECURITY</p>	→ S2	Shock sensor "S2"
	↓ S3	Pre-warning sensitivity of the shock sensor "S3"
	↓ S4	Full blast warning sensitivity of the shock sensor "S4"

Indication		Functions
↓ FUEL	→	FU- H7 ←
		↓ FU- L ←
↓ CLoCK	→	CL-Adj
↓ dEFAULT	→	dE- on
↓ End		Exit the setting mode "End"


↓	Push the indicator selector knob (1).
→	Push and hold the indicator selector knob (1).

NOTE:
Depending on vehicle's specifications, some items may not be displayed.

BEFORE DRIVING

How to operate the setting mode:

- 1) When the ignition switch is in "ON" position and the vehicle is stationary, push the indicator selector knob (1) to switch the information display indication (C) to the odometer.
- 2) Push and hold the indicator selector knob (1) until the setting mode is appeared on the information display.
- 3) Push and/or hold the indicator selector knob (1) to select a function that you want to set up according to the above chart.
- 4) Push and/or hold the indicator selector knob (1) to register settings of the following functions.

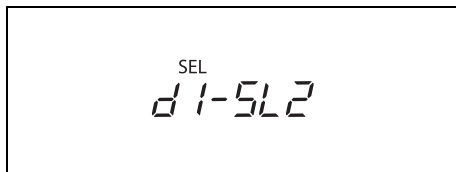

75RM229

NOTE:

- As shown in the above illustration, "SEL" indicates on the display of currently setting item.
- To go back to the higher level display during operation, push the indicator selector knob (1) to display "BRCH" or "-BRCH" and then push and hold the indicator selector knob (1).

Central door locking system "d1"

- *d1-SL1*: Unlock all doors by turning the key once or operating the keyless entry system transmitter once
- *d1-SL2*: Unlock all doors by turning the key or operating the keyless entry system transmitter twice (default setting)

Automatic door locking function "d2"

- *d2-SL1*: Disable the automatic door locking function
- *d2-SL2*: Lock all doors when the vehicle speed reaches 15 km/h (default setting)

Automatic door unlocking function "d3"

- *d3-SL1*: Disable the automatic door unlocking function
- *d3-SL2*: Unlock all doors when the key is pulled out from the ignition switch (default setting)

Door locking and unlocking siren "d5"

- *d5-SL1*: Siren sounds when the doors (including the tailgate) are locked or unlocked by using the keyless entry system transmitter (default setting)
- *d5-SL2*: Siren does not sound when the doors (including the tailgate) are locked or unlocked by using the keyless entry system transmitter

Additional flashes of the turn signal "L2"

- *L2-SL1*: Turn signal flashes three times after the turn signal lever is returned (default setting)
- *L2-SL2*: Disable the additional flashes of turn signal

Shock sensor "S2"

- *S2-SL1*: Enable the shock sensor
- *S2-SL2*: Disable the shock sensor (default setting)

Pre-warning sensitivity of the shock sensor "S3"

- *S3-L00*: Disable the pre-warning
- *S3-L01 to L15*:
Adjust the pre-warning sensitivity of shock sensor (Lowest sensitivity level is L01 and highest is L15, and default setting is L14)

Full blast warning sensitivity of the shock sensor "S4"

- *S4-L00*: Disable the full blast warning
- *S4-L01 to L15*:
Adjust the full blast warning sensitivity of shock sensor (Lowest sensitivity level is L01 and highest is L15, and default setting is L09)

Fuel consumption unit setting

- *FU- H7*: Change the unit of instantaneous and average fuel consumption to “km/L”. (default setting)
- *FU- L*: Change the unit of instantaneous and average fuel consumption to “L/100km”.

Clock setting “*CL-Adj*”

- To change the hour indication, push the indicator selector knob (1) repeatedly when the hour indication blinks.

To change the hour indication quickly, push and hold the indicator selector knob (1).

To set the hour indication, wait for a while without pushing the indicator selector knob (1) and the minute indication will blink.

- To change the minute indication, push the indicator selector knob (1) repeatedly when the minute indication blinks.

To change the minute indication quickly, push and hold the indicator selector knob (1).

To set the minute indication, wait for a while without pushing the indicator selector knob (1).


Initialization setting “*dE- on*”

- *dE- on*: Initialize all settings

- 5) To exit the setting mode, switch the display to show “*End*” and then push and hold the indicator selector knob (1).

Warning and indicator lights

Brake system warning light (red color)

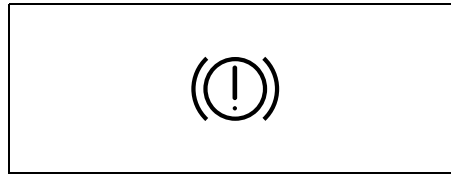

82K170

Three different types of operations exist depending on the vehicle’s specification.

- The light comes on briefly when the ignition switch is turned to “ON” position.
- The light comes on when the parking brake is engaged with the ignition switch in “ON” position.
- The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle’s brake system.
If this happens:

- 1) Pull off the road and stop carefully.

⚠ WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- 2) Test the brakes by carefully starting and stopping the vehicle on the shoulder of the road.
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest a authorised Maruti Suzuki workshop for repairs or tow the vehicle to the nearest a authorised Maruti Suzuki workshop for repairs.

⚠ WARNING

If any of the following conditions occur, you should immediately ask a authorised Maruti Suzuki workshop to inspect the brake system.

- **If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.**

(Continued)

BEFORE DRIVING

⚠ WARNING

(Continued)

- If the brake system warning light does not come on when the ignition switch is turned to “ON” position.
- If the brake system warning light comes on at any time during vehicle operation.


NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

*Parking brake reminder buzzer
A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.*

Anti-lock brake system (ABS) warning light

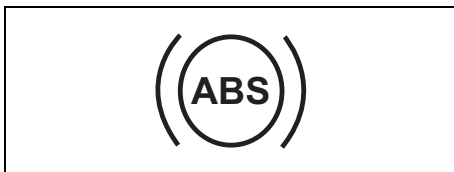

65D529

When the ignition switch is turned to “ON” position, this light comes on briefly so you can check that the light is working. If the light stays on or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to “LOCK” position and then start the engine again.

If the warning light comes on briefly and then turns off, the system is normal. If the warning light still stays on, something is wrong with the system.


If the light and the brake system warning light stay on or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and the anti-lock function of the ABS system.

If one of the above occurs, have the system inspected by a authorised Maruti Suzuki workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to “Anti-lock brake system (ABS)” in the “OPERATING YOUR VEHICLE” section.

Engine oil pressure warning light

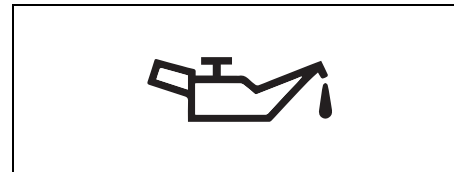


50G051

When the ignition switch is turned to “ON” position, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine. Check the engine oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a authorised Maruti Suzuki workshop before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the engine oil pressure warning light to indicate the need to add oil. Periodically check the engine oil level.

Charge warning light

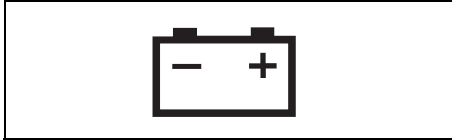

50G052

When the ignition switch is turned to “ON” position, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a authorised Maruti Suzuki workshop.

Front seat belt reminder light



60G049

When the driver and/or front passenger do(does) not buckle his or her seat belt, this light will come on and/or blink. For details about the seat belt reminder, refer to “Seat Belt Reminder” in “FOR SAFE DRIVING” section.

NOTE:

Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.

Rear passenger’s seat belt reminder light



81RM02048

Reminder light for rear passengers to fasten their seat belts. For details of the seat belt reminder, refer to “Seat Belt Reminder” in “FOR SAFE DRIVING” section.

AIRBAG warning light



63J030

When the ignition switch is turned to “ON” position, this light comes on for several seconds so you can check that the light is working.


The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

⚠ WARNING

If AIRBAG warning light does not blink or come on briefly when the ignition switch is turned to “ON” position, stays on for more than 10 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a collision. Have both systems inspected by a authorised Maruti Suzuki workshop.

BEFORE DRIVING

Malfunction indicator light

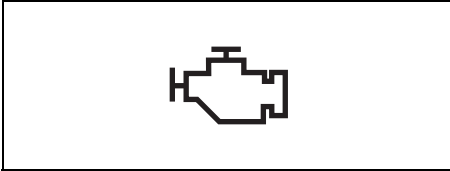

65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. When the ignition switch is turned to "ON" position, this light comes on. When the engine is started, the light goes out.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a authorised Maruti Suzuki workshop to have the damage fixed.

Also, if this light comes on when the engine is running, there is a problem with the Auto Gear Shift system. Ask a authorised Maruti Suzuki workshop to have the system inspected.

CAUTION

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- **Do not drive or stop over such as withered grasses.**
- **Drive slowly if required to move the vehicle.**

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transmission warning light (for Auto Gear Shift)



80J219

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on for several seconds so you can check that the light is working.

If this light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, there is a problem with the Auto Gear Shift system.

If this light comes on or blinks, stop the vehicle in a safe place and contact a authorised Maruti Suzuki workshop. If the light comes on or blinks again after the light goes out, have the system inspected by a authorised Maruti Suzuki workshop.

If the light comes on, it may become followings:

- The transmission gear will not change even if you shift the gearshift lever.
- The transmission gear will change to "N" automatically when the vehicle speed becomes less than 10 km/h (6 mph), also the "N" indicator in the instrument cluster will blink and the interior buzzer will sound.
- The engine will stall automatically when the vehicle stops.
- The engine will not start.

If the above occurs, have the system inspected by a authorised Maruti Suzuki workshop.

NOTE:

If the Auto Gear Shift clutch temperature becomes too high, this light will blink. Stop the vehicle in a safe place and let the system cool down.


Immobilizer system warning light



65D239

When the ignition switch is turned to the “ON” position, this light comes on to let you know the light is working. If this light blinks with the ignition switch turned to “ON”, there may be something wrong with the immobilizer system. Ask a authorised Maruti Suzuki workshop to have the system inspected.

Open door warning light

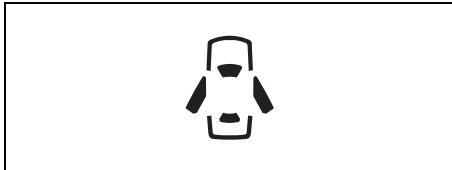

54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low fuel warning light



65G343

If this light comes on, fill the fuel tank immediately.

When this light comes on, a ding sounds once to remind you to fill the fuel. If you do not fill the fuel, a ding sounds every time when the ignition switch is turned to “ON” position.

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

Electric power steering light



79J039

When the ignition switch is turned to “ON” position, this light comes on. When the engine is started, the light goes out.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by a authorised Maruti Suzuki workshop.

NOTE:

The following steering wheel operations may gradually take more effort while parking or driving at a very low speed. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent it from overheating.

- *The steering wheel is operated very often.*
- *The steering wheel is kept in a fully turned position for a long while.*

When the power steering control system cools down, the power steering system will return to its original condition.

However, repeating these operations could cause damage to the power steering system.

NOTE:


If the power steering system does not work properly, it will require greater effort to steer, but you still will be able to steer.

NOTE:

If the steering is operated, you may hear noise caused by electric power steering operation. This is normal and indicates that the power steering system works properly.

BEFORE DRIVING

High engine coolant temperature warning light

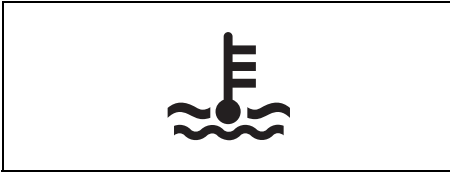

69RH179

When the ignition switch is turned to “ON” position, this light comes on briefly so you can check that the light is working. If this light blinks while driving, it means the engine is running hot. Avoid driving conditions that may lead to actual overheating. If the light stays on without blinking, then the engine is overheating. Follow the instructions in “Engine trouble: Overheating” in the “EMERGENCY SERVICE” section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.


Front fog light indicator light (if equipped)



82PH045

The front fog light indicator light comes on when the front fog light operates.

Turn signal indicators

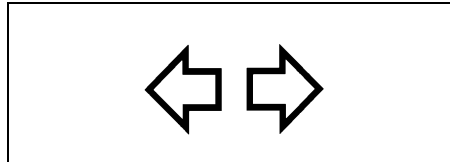


50G055

When you turn on the left or right turn signals, the corresponding green arrow on the instrument cluster will flash along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will flash along with all of the turn signal lights.

NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be malfunction in the turn signal system. Ask your Maruti Suzuki authorized workshop to inspect the system.


Main beam (high beam) indicator light

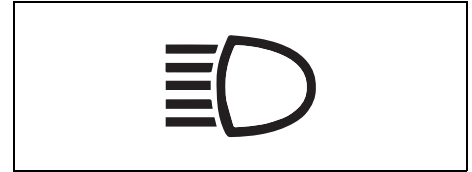

50G056

This indicator comes on when headlight main beams (high beams) are turned on.

Security system indicator (if equipped)

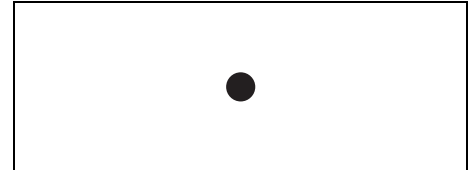

82K269

For details about the security system, refer to “Security system” in this section.

NOTE:

If the security system indicator blinks when the ignition switch is in the “ON” position, there may be something wrong with the system. Ask a authorised Maruti Suzuki workshop to inspect the system.


**Depress brake pedal indicator
(for Auto Gear Shift)**



76MH0A047

Refer to “Auto Gear Shift” in the “OPERATING YOUR VEHICLE” section for details.

ENG A-STOP Indicator Light

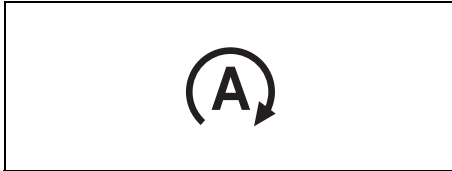


72M00032

When the ignition switch is turned to “ON” position, this light comes on briefly if the system works properly.

When the engine is stopped by the “ENG A-STOP” system, this light comes on.

For details, refer to “ENG A-STOP System (Engine Auto Stop Start System)” in “OPERATING YOUR VEHICLE” section.

ENG A-STOP OFF Light

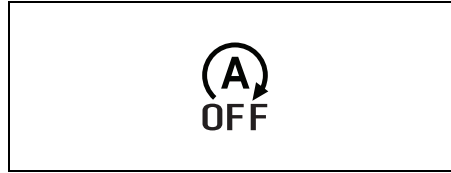

56RM02036


When the ignition switch is turned to “ON” position, this light comes on briefly if the system works properly.

When you push the ENG A-STOP OFF switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG A-STOP system.

You should have the system inspected by a authorised Maruti Suzuki workshop.

**Brake System Warning Light
(amber color) (if equipped)**

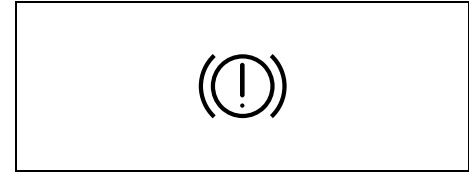

82K170

When the ignition switch is turned to “ON” position, this light comes on briefly so you can check that the light is working.

If this light comes on, there may be a problem with the hill hold control system. Have your vehicle inspected by a authorised Maruti Suzuki workshop.

For details, refer to “Hill Hold Control System” in the “OPERATING YOUR VEHICLE” section.

BEFORE DRIVING

ESP® Warning Light (if equipped)



56RM02033

ESP® is a registered trademark of Daimler AG.

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system

If this light blinks, drive carefully.

When the ignition is pushed to “ON” mode, the light comes on briefly so you can check that the light is working. If the light stays on or comes on when driving, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by a Maruti Suzuki authorised workshop.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®) (if equipped)” in “OPERATING YOUR VEHICLE” section.

WARNING

The ESP® systems cannot prevent accidents. Always drive carefully.

ESP® OFF Indicator Light (if equipped)



56RM02034


When the ignition is pushed to “ON” mode, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®) (if equipped)” in “OPERATING YOUR VEHICLE” section.

Lighting control lever

EXAMPLE

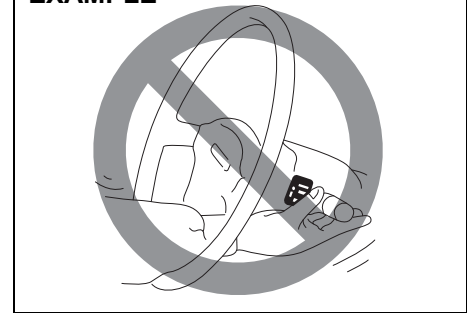


65D611

WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.


Lighting operation

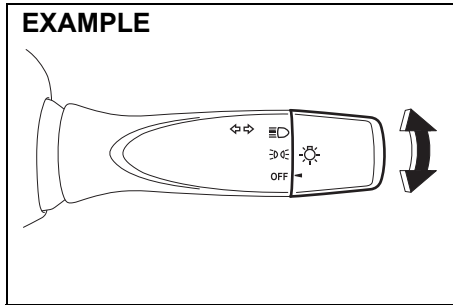


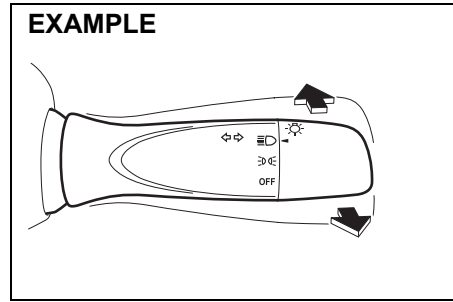
66RH032

To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF
All lights are off.

 Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

 Front position lights, tail lights, license plate light, instrument lights and headlights are on.



66RH033

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on, to momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.


Light reminder buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:

The headlights and/or position lights are on even after the ignition switch is turned to "LOCK" position.

The buzzer stops sounding when you turn off the headlights and position lights.

Front fog light switch (if equipped)

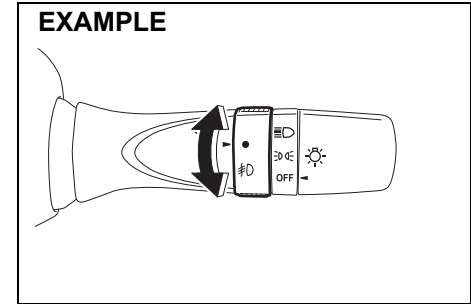


66RH034

To turn the front fog light on, twist the knob as shown in the illustration with the position lights, tail lights and/or the headlights are on. When the front fog light is on, an indicator light on the instrument cluster will come on.

BEFORE DRIVING

Headlight leveling switch

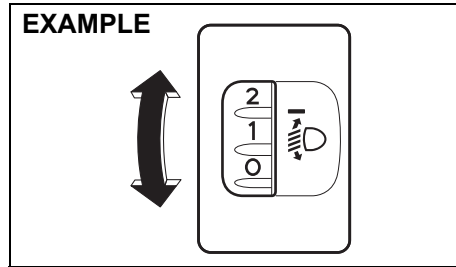

75RM008

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart below shows the appropriate switch position for different vehicle load conditions.

For petrol model

Vehicle Load Condition	Switch Position
Driver only	0
Driver + 1 passenger (in front seat)	0
Driver + 4 passengers, no cargo	1.5
Driver + 4 passengers, cargo added	2.5
Driver + full cargo	3.5


For CNG model

Vehicle Load Condition	Tire size	
	155/80R13	165/70R14
Driver only	0	0
Driver + 1 passenger (in front seat)	0	0
Driver + 4 passengers, no cargo	1	1.5
Driver + 4 passengers, cargo added*	NA	NA
Driver + full cargo*	NA	NA

NA = Not applicable

*: In case of CNG, luggage cannot be placed in boot.

Turn signal control lever

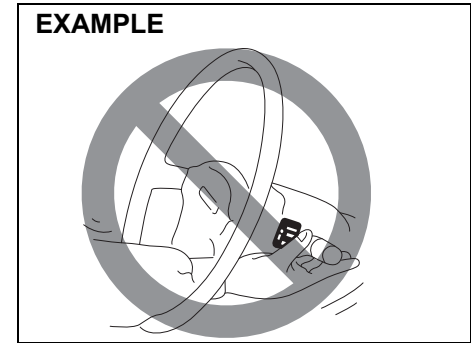

65D611


⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Turn signal operation

With the ignition switch in "ON" position, move the lever upward or downward to activate the right or left turn signals.


Normal turn signal

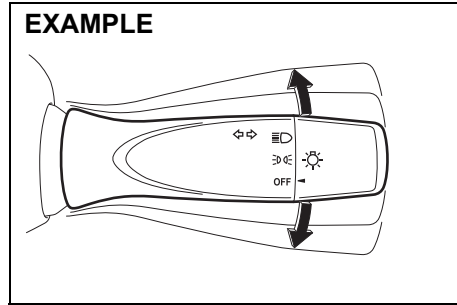

66RH035

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

Lane change signal

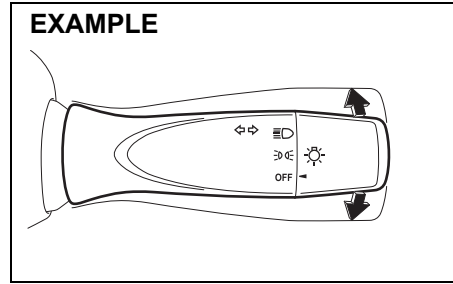

66RH036

Move the lever partway upward or downward to turn right or left and hold the lever in the moved position.

- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you return the lever immediately after moving it.


NOTE:

The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information display" in this section.

NOTE:

You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times). Please ask a authorised Maruti Suzuki workshop for the customization.

Hazard warning switch

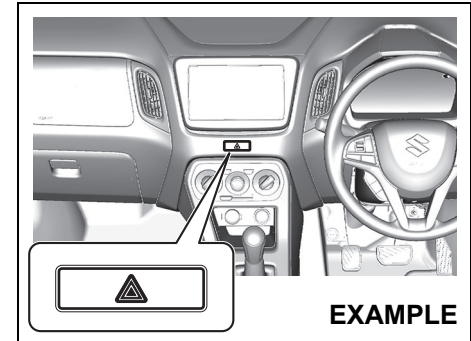


69RH060

Push in the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again. Use the hazard warning lights to warn other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

BEFORE DRIVING

Windshield wiper and washer lever

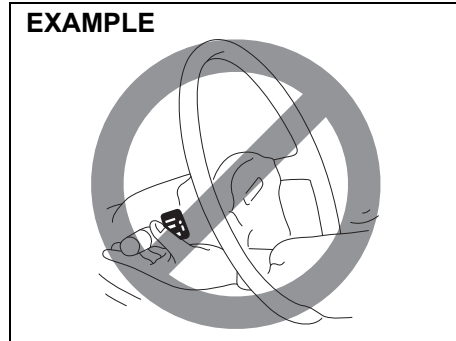

57L21128

⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and washer operation

When the ignition switch is in "ON" position, you can use the wiper/washer lever.


When the wipers are under heavy load such as covered by snow, the breaker will be activated and the wipers will stop operating to protect the wiper motor from overheating.

If the wiper stops during operation, do the following methods.

- 1) Stop the vehicle in a safe place, and turn the engine off.
- 2) Move the wiper lever to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and the wipers will be able to use.

If you cannot use the wipers after a while, there may be another problem. Ask a authorised Maruti Suzuki workshop to have the wipers inspected.

Windshield wipers

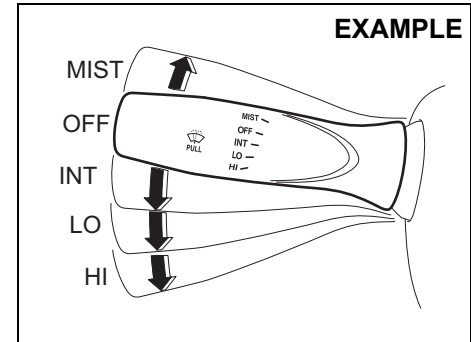


69RM02006

To turn the windshield wipers on, move the lever down to one of the three operating positions. In "INT" position, the wipers operate intermittently. The "INT" position is very convenient for driving in mist or light rain. In "LO" position, the wipers operate at a steady low speed. In "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to "OFF" position.

Move the lever up and hold it to "MIST" position, the windshield wipers will turn on continuously at low speed.

Windshield washer

EXAMPLE

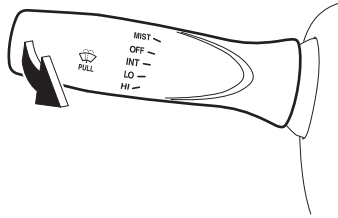

69RM02005

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and your vehicle is equipped with “INT” position.

▲ WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle’s paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Fill a reservoir 3/4 full with washer fluid to for its expansion, if temperature falls low enough to freeze the fluid.

Rear window wiper/washer switch (if equipped)

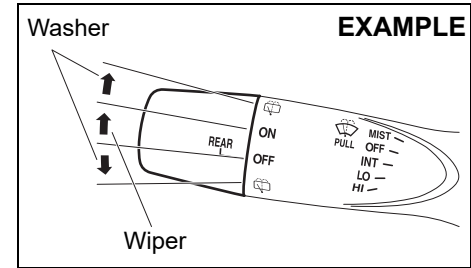

69RH171

To turn the rear wiper on, twist the rear wiper switch on the end of the lever forward to “ON” position. To turn the rear wiper off, twist the switch rearward to “OFF” position.

With the rear wiper in “OFF” position, twist the switch rearward and hold it there to spray window washer fluid.


With the rear wiper in “ON” position, turn the switch forward and hold it there to spray window washer fluid.

NOTICE

Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

BEFORE DRIVING

Tilt steering lock lever (if equipped)

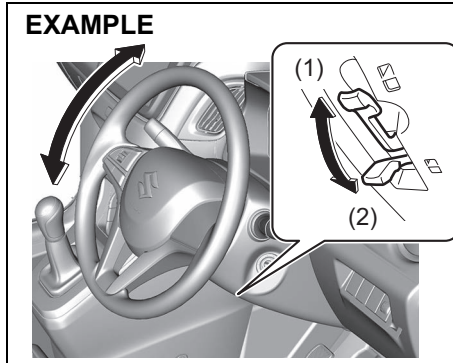

69RH127

- (1) LOCK
- (2) UNLOCK

The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- 2) Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- 3) Try moving the steering wheel up and down to check that it is securely locked in position.

WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.

Horn


EXAMPLE



69RH172

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.

Heated rear window switch (if equipped)

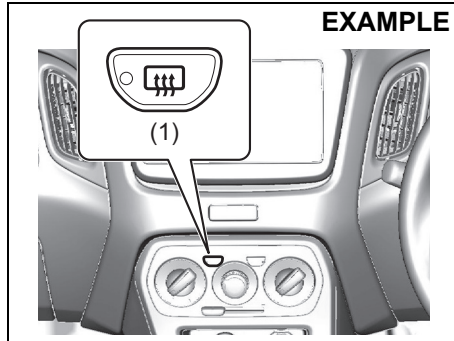

69RH068

When the rear window is misted, push this switch (1) to clear the window.

An indicator light will be lit when the defogger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.

NOTICE

The heated rear window uses a large amount of electricity. Turn off the switch after the window has become clear.

NOTE:

- *The defogger will work only when the engine is running.*
- *The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the battery.*

Vehicle loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW (front and rear) – Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

BEFORE DRIVING


WARNING

- **Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).**
- **Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.**

Trailer towing

Your vehicle was originally designed to carry people and a normal amount of cargo, not to tow a trailer.

OPERATING YOUR VEHICLE

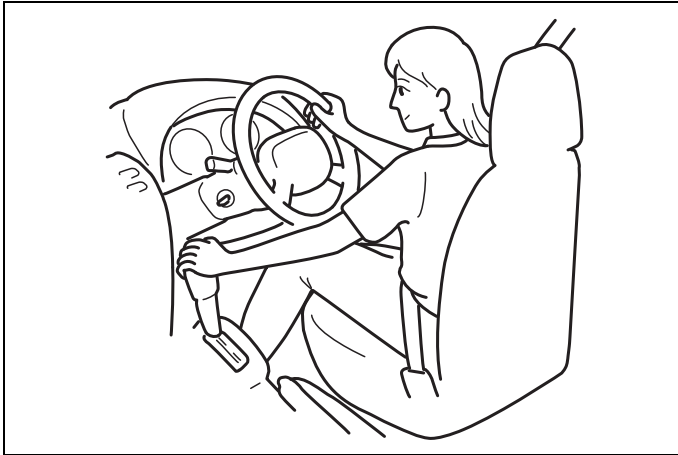


60G408

Daily inspection checklist	3-1
Engine oil consumption	3-2
Ignition switch	3-2
Parking brake lever	3-4
Pedal	3-6
Starting engine	3-7
Using transmission	3-8
Gearshift indicator (if equipped)	3-19
ENG A-STOP System	
(Engine Auto Stop Start System)	3-20
Parking sensors	3-26
Braking	3-29
Electronic Stability Program (ESP®) (if equipped)	3-32

OPERATING YOUR VEHICLE

Daily inspection checklist

Before driving

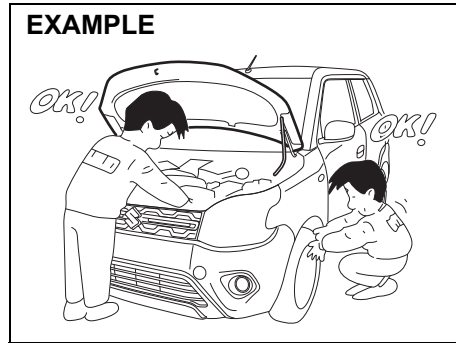

69RM03001

- 1) Check that windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tires for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.

Refer to “Tires” in the “INSPECTION AND MAINTENANCE” section for details.

- 3) Look for fluid and oil leakage.

NOTE:

It is normal for water to drip from the air conditioning system after use.

- 4) Check that the hood is fully closed and latched.
- 5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint (if equipped).
- 7) Check the brake pedal feeling and the adjustment condition for the parking brake lever or pedal. Refer to “Brakes” in “INSPECTION AND MAINTENANCE” section for details.
- 8) Adjust the mirrors.
- 9) Check that you and all passengers have properly fastened your seat belts.
- 10) Check that all warning lights come on as the ignition switch is turned to “ON” position.
- 11) Check all gauges.
- 12) Check that the brake system warning light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery fluid (acid) level
- 5) Windshield washer fluid level
- 6) Hood latch operation

Pull the hood release handle inside the vehicle. Check that you cannot open the hood all the way without releasing the secondary latch. Close the hood securely after checking for proper latch operation. See the item “All latches, hinges and locks” of “Chassis, body and others” in “Maintenance schedule” in the “INSPECTION AND MAINTENANCE” section for lubrication schedule.

⚠ WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tire pressure using a tire pressure gauge. Also check the tire pressure of the spare tire.

Engine oil consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumption depends on viscosity and quality of the oil and your driving conditions.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km driving.

Oil consumption:

Max. 1.0 L per 1000 km

When judging the amount of oil consumption, note that the oil may become diluted and it is difficult to judge the accurate oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil gradually becomes diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle

is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

Ignition switch

EXAMPLE




65D611

WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

OPERATING YOUR VEHICLE

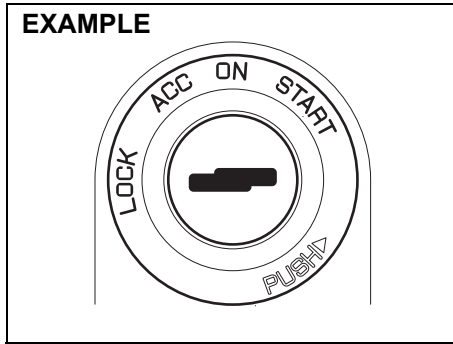


68PH00310

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

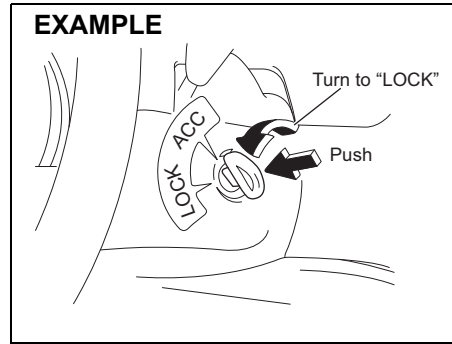

60G033

You must push in the key to turn it to "LOCK" position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON

This is the normal operating position. All electrical systems are on.


START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

EXAMPLE

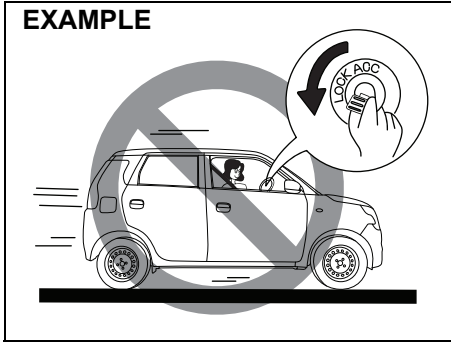

69RM03002

⚠ WARNING

- Never return the ignition switch to "LOCK" position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.

(Continued)

⚠ WARNING

(Continued)


- Always return the ignition switch to "LOCK" position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle or could tamper with power windows or power sunroof. They also could suffer from heat stroke in warm or hot weather. These could result in severe injury or even death.

NOTICE

Do not leave the ignition switch in "ON" position if the engine is not running as the lead-acid battery will discharge.

Parking brake lever

EXAMPLE

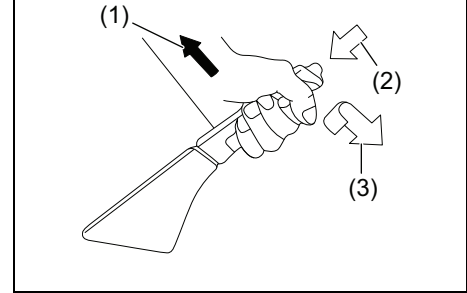

54G039

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the seats. To set the parking brake, hold the brake pedal down and pull the parking brake lever all the way up. To release the parking brake, hold the brake pedal down, pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

OPERATING YOUR VEHICLE

WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by a authorised Maruti Suzuki workshop.
- When parking on an uphill, turn the steering wheel so that the front wheels point to the center of the road.
- When parking on a downhill, turn the steering wheel so that the front wheels point to the curb.

(Continued)

WARNING

(Continued)

- Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, check that the gearshift lever is in one of the following positions;
 - 1st gear or “R” (Reverse) for manual transmission vehicles.
 - “D”, “M” or “R” for Auto Gear Shift vehicles. Also, check the instrument cluster to make sure that the transmission is engaged in “1” or “R” position.Remember, even though the transmission is in gear, you must set the parking brake fully.

WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake.
- 2) Manual transmission – turn off the engine, then shift into reverse or first gear.
Auto Gear Shift – shift into “D”, “M” or “R” and check the gear position indicator in the instrument cluster to make sure that the transmission is engaged in “1” or “R” position, then turn off the engine.
- 3) Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake.
When you return to your vehicle, first set the parking brake, and then remove the wheel chocks.

CAUTION

The hill hold control system (if equipped) will not activate while the parking brake is engaged.

NOTE:

(For Auto Gear Shift models)

For details on how to use the gearshift lever to park the vehicle, refer to “Parking” in “Auto Gear Shift” in this section.

⚠ WARNING

Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:

- Gas may leak from a cigarette lighter or spray can and may lead to a fire.
- The glasses, plastic cards or CD cases, etc. may deform or crack.
- Soft drink cans may fracture.


Parking brake reminder buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.

Pedal

Manual transmission


EXAMPLE

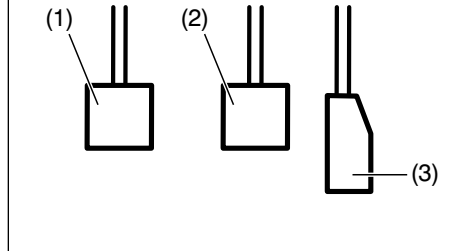

80J2121

Auto Gear Shift

EXAMPLE

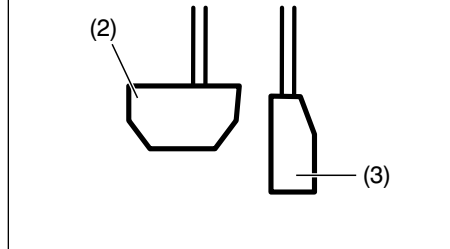

80J2122

Clutch pedal (1)

A clutch pedal is used to disengage the drive to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

⚠ WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake pedal (2)

Your MARUTI SUZUKI vehicle is equipped with front disc brakes and rear drum brakes. Depressing a brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc.

NOTE:

Auto Gear Shift - You may hear occasional sound when you release brake pedal while vehicle is in "D" (Drive) mode and about to move. This is a normal phenomenon.

OPERATING YOUR VEHICLE

▲ WARNING

- If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by authorised Maruti Suzuki workshop.
- Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator pedal (3)


An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

NOTE:

Your vehicle is equipped with Brake Override System. If you depress both the accelerator pedal and the brake pedal simultaneously, the engine power output may be suppressed.

Starting engine

Before starting engine

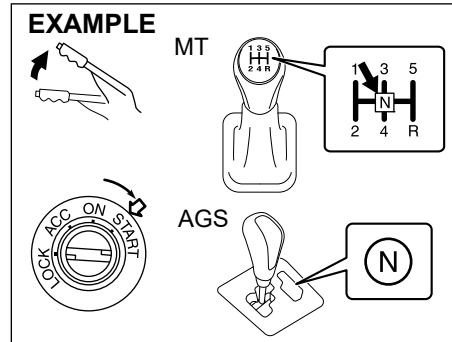

- 1) Check that the parking brake is set fully.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- 3) Manual transmission – Shift into “N” (Neutral). Hold the clutch pedal and brake pedal fully depressed. Auto Gear Shift – Shift into “N” (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine.
- 4) With your foot taken off accelerator pedal, crank the engine by turning the ignition key to “START”. Release the key immediately after the engine has started.

NOTICE

- Release the key immediately after the engine has started or the starter system can be damaged.
- For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to “START” for more than 12 seconds at a time. If the engine does not start, turn the key to “LOCK” position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult a authorised Maruti Suzuki workshop.

NOTE:


For Auto Gear Shift vehicles, if the engine cannot be started, make sure the gearshift lever is in “N” before restarting the engine.

Using transmission

⚠ WARNING

Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

Manual transmission

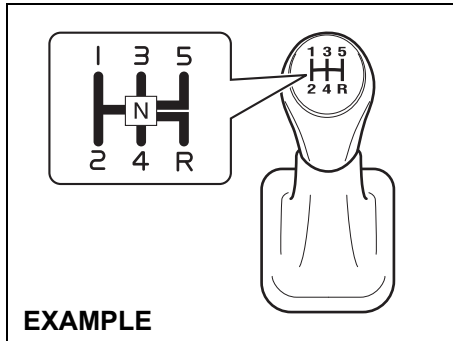

69RH016

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized and provide quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed from rising into the red zone of the tachometer (if equipped).

Downshifting maximum allowable speeds

K10C engine model

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	75
4th to 3rd	115
5th to 4th	160*

K12N engine model

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	85
4th to 3rd	130
5th to 4th	175*

*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

OPERATING YOUR VEHICLE

WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

NOTICE

Before engaging reverse gear “R”, check that the vehicle is completely stationary and gear lever is in neutral “N” position. After depressing clutch pedal fully, shift to “R”.

NOTE:

If it is difficult to engage reverse gear “R”, follow below procedure:

- 1) Put gear lever in neutral “N”.
- 2) Release the clutch pedal once.
- 3) Again depress the clutch pedal, and shift from “N” to “R”.

NOTICE

- Check that the vehicle is completely stationary before you shift into reverse.
- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

Auto Gear Shift

Auto Gear Shift is a 5-speed forward/reverse transmission.

Auto Gear Shift has the basic features of conventional manual transmission, but clutch operation and transmission gear shifting are controlled electronically.


NOTICE

Do not depress both the brake pedal and accelerator pedal simultaneously. This can cause damage or overheating to the clutch.


NOTE:

When you open the driver’s door, the Auto Gear Shift systems run automatically and you may hear an operating noise. This sound does not indicate malfunction.

The features are as follows:

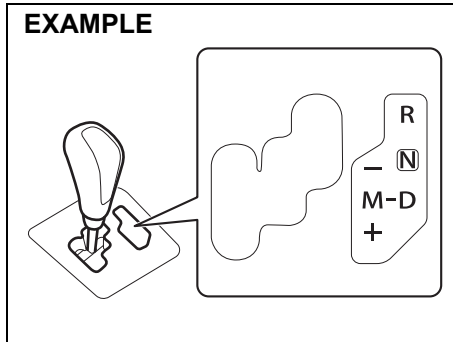


69RH017

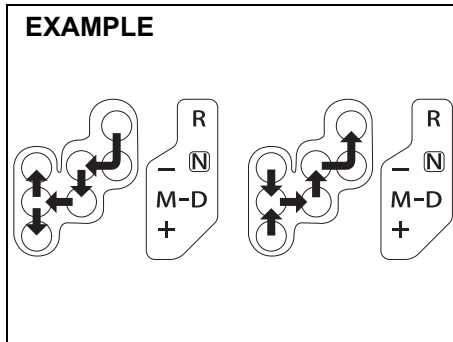

69RH018

Depress brake pedal indicator

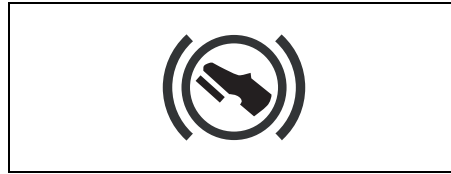

76MH0A047

This light will come on if you do not depress the brake pedal in the following situations.

- When starting the engine.
- When the engine is on and the gearshift lever is shifted from “N” position to “D”, “M” or “R” position.
- When the ignition switch is in the “ON” position, and the engine is off, the gearshift lever is shifted into any position.

This light will also come on if one of the gears cannot be engaged and the system is unable to re-try shifting when you shift the gearshift lever from “N” position to “D”, “M” or “R” position.

Starting the engine

When starting the engine, always place the gearshift lever in the “N” position and depress the brake pedal firmly. The engine cannot be started unless the gearshift lever is in the “N” position and the brake pedal is depressed.

If you parked vehicle with gear engaged on last time (if you can see “1” or “R”), shift into “N” (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine. You can hear buzzer in short time.

NOTE:

- If you start the engine without the gearshift lever in the “N” position, the gear position indicator in the instrument cluster will blink.
- For vehicles with ENG A-STOP system, if the engine restarts automatically, the gear position indicator in instrument cluster may display “N” temporarily. This is a normal phenomenon.

Clutch operation

You can select either the Drive (D) mode, the Manual (M) mode or the Reverse (R) mode. Since this vehicle controls clutch operation electronically in either mode, you do not need to operate the clutch.

OPERATING YOUR VEHICLE

Creeping function

This vehicle has a creeping function that helps the vehicle to start smoothly by engaging the clutch. When the gearshift lever is in any of the positions “D”, “M” or “R”, and you release your foot from the brake pedal, the vehicle starts slowly without depressing the accelerator pedal. However, creep is not possible in manual (M) mode with 2nd gear engaged. The creeping function is disabled if you depress the brake pedal or pull up the parking brake lever.

NOTE:

If the driver's door is opened and/or the parking brake lever is engaged with the gear in the “M”, “D” or “R” position, the creeping function will not operate.

Parking and Stopping the vehicle

Auto Gear Shift does not have a parking position. Park the vehicle with a gear engaged. Make sure that the gearshift lever is “D”, “M”, or “R”.

Also, check the instrument cluster to make sure that the transmission is engaged in “1” or “R” position.

NOTICE

A buzzer will sound continuously if the vehicle is operated with the gearshift lever in-between of each shift positions. The vehicle will become inoperative if you continue to operate the vehicle with the gearshift lever in-between shift positions.

Drive (D) mode

When the Drive (D) mode is activated, the most appropriate gear position is automatically selected upon operation of the accelerator pedal and variation of vehicle speed.

Normal driving:

- 1) Start the engine as instructed in “Starting the engine” in this section.
- 2) With your foot on the brake pedal, shift the gearshift lever to the “D” position. When the gearshift lever is shifted to the “D” position, the gear will be shifted to 1st.

NOTE:

- *If 1st gear cannot be engaged even though the gearshift lever has been shifted from the “N” to the “D” position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate malfunction.*
- *The “N” indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;*
 - *If you shift the gearshift lever from the “N” to the “D” position without depressing the brake pedal*
 - *If the system is unable to re-try shifting*

You should depress the brake pedal and shift the gearshift lever to “N” position, then shift to “D” again.

- 3) Release the parking brake and brake pedal.
- 4) Depress the accelerator pedal slowly.

WARNING

- While driving the vehicle, do not shift the gearshift lever to the “N” position. The engine brake may not work and you may get involved in an accident. If you return the gearshift lever from “N” to “D” because of unintended shifting, the gear position will be shifted according to the current vehicle speed.
- Always keep your foot on the brake pedal while stopped with the engine running. This operation prevents the vehicle from moving due to unintended activation of the creeping function.

NOTICE

- If the gearshift lever cannot shift into any position, or the gear is changed to “N” position automatically when the vehicle speed becomes less than 10 km/h, there may be a systematic malfunction. In this case, ask a authorised Maruti Suzuki workshop to inspect the Auto Gear Shift system as soon as possible.
- Do not operate the system as described below. The life cycle of the clutch may be reduced.
 - Using the accelerator pedal to hold the vehicle on an uphill slope with the gearshift lever in the “D” or “M” position. If you perform this operation for a certain period of time, a warning buzzer will sound.
 - Shifting the gearshift lever to the “D”, “M” or “R” position while racing the engine.
 - Driving at low speed using a high gear.
 - Holding the vehicle on an uphill slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.

Starting off on an uphill/downhill:

CAUTION

The hill hold control system (if equipped) will not activate while the parking brake is engaged.

Uphill

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- 2) Shift the gearshift lever to the “D” position while depressing the brake pedal. Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
- 3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

OPERATING YOUR VEHICLE

Downhill

- 1) Depress the brake pedal and shift the gearshift lever to the “D” position. Make sure that the gear is in 1st by checking the gear position indicator.
- 2) Release the brake pedal and depress the accelerator pedal slowly. Even if the accelerator pedal is not depressed, the clutch will be engaged when the vehicle speed increases.

Using engine braking:

When driving on a downhill slope, downshifting is recommended. So you can use engine braking.


By placing the gearshift lever in the “M” position, the Manual (M) mode is selected, and you can shift to a lower gear manually. For details of downshift operation, refer to “Upshift and downshift” in the “Manual (M) mode”.

Manual (M) mode


The gears are not shifted automatically. To shift the transmission, the driver must operate the gearshift lever to the “+” or “-” direction. As for conventional manual transmission vehicles, releasing the accelerator pedal a little may help the transmission to shift smoothly.

Upshift and downshift:


Upshifting

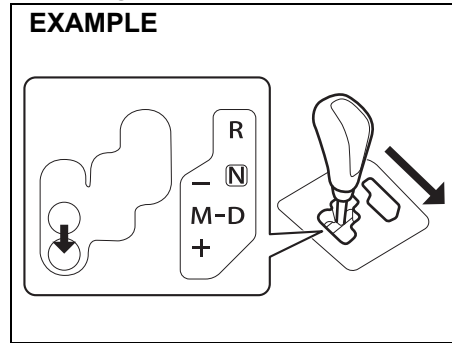


Pull the gearshift lever to the “+” direction and release it. Every time the lever is operated, the transmission is upshifting 1 step in the order of 1st → 2nd → 3rd → 4th → 5th gear.

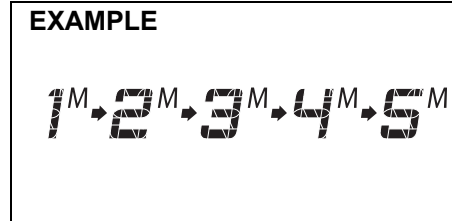

Downshifting

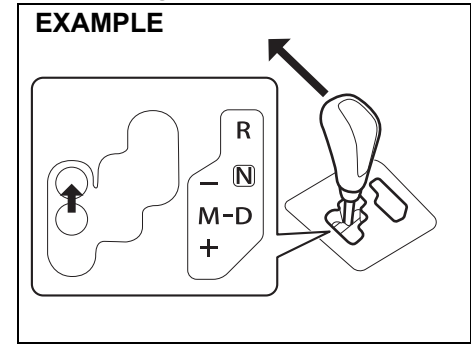

Push the gearshift lever to the “-” direction and release it. Every time the lever is operated, the transmission is downshifting in the order 5th → 4th → 3rd → 2nd → 1st gear.

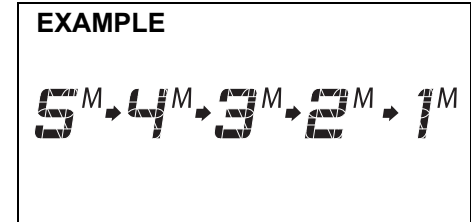

The gear position is displayed on the gear position indicator. The gear position indicator shows the transmission gear position. Before starting off, always check the gear

position indicator to make sure that the transmission is engaged in 1st or reverse, then depress the accelerator pedal. It is possible to start vehicle in 2nd gear using manual mode, from stop condition.

NOTE:

- *Always use 1st gear while starting off on an uphill slope otherwise you can damage the clutch.*
- *To downshift smoothly, the engine runs fast in some cases. This is done intentionally by the system and is not malfunction.*
- *When driving down a hill, downshift and use the engine braking appropriately. If necessary, continuous downshifting is possible. However, if downshifting more than 3 steps, gear shifting will take more time.*
- *When the gear is shifting, a noise can be heard in some case. This is not malfunction.*

⚠ WARNING

- **Be careful when accelerating, upshifting, downshifting or braking on a slippery surface. Sudden acceleration or engine braking could cause the vehicle to spin or skid. While starting off on a slippery or snowy roads, please use 2nd gear.**
- **To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and fail.**
- **While driving the vehicle, do not shift the gearshift lever to “N” position. The engine brake may not work and you may get involved in an accident. If you return the gearshift lever from “N” to “M” because of unintended shifting, the gear position will be shifted according to the current vehicle speed.**
- **Do not apply the parking brake while driving. Otherwise, it could cause a skid and you may get involved in an accident.**

NOTICE

- **If the gearshift lever cannot shift into any position, or the gear is changed to “N” position automatically when the vehicle speed becomes less than 10 km/h, there may be a systematic malfunction. In this case, ask a authorised Maruti Suzuki workshop to inspect the Auto Gear Shift system as soon as possible.**
- **The manual (M) mode does not upshift even if the engine speed reaches the rev-limit.**
- **The system will not allow shifting up or down to a gear that would cause engine over-revving or under-revving.**
- **If frequently driving at low speed using a high gear position, the life cycle of the clutch may be reduced.**
- **Frequent downshifting (more than 3 positions consecutively) causes the reduction of transmission life.**

OPERATING YOUR VEHICLE

Starting off:

- 1) Start the engine as instructed in “Starting the engine” in this section.
- 2) With your foot on the brake pedal, shift the gearshift lever to the “M” position. When the gearshift lever is shifted to the “M” position, the gear will be shifted to 1st. Before starting off, always make sure that the intended gear is engaged by checking the gear position indicator, then depress the accelerator pedal.

NOTE:

- If 1st gear cannot be engaged even though the gearshift lever has been shifted from the “N” to the “M” position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate malfunction.
- The “N” indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;
 - If you shift the gearshift lever from the “N” to the “M” position without depressing the brake pedal
 - If the system is unable to re-try shifting
You should depress the brake pedal and shift the gearshift lever to “N” position, then shift to “M” position again a few seconds later.

- 3) Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.

WARNING

Always keep your foot on the brake pedal while stopped with the engine running. These operations prevent the vehicle from starting due to unintended activation of the creeping function.

NOTICE

Do not operate the system as described below. The life cycle of the clutch may be reduced.

- Using the accelerator pedal to hold the vehicle on an uphill slope operation with the gearshift lever in the “M” or “D” position. If you perform this operation for a certain period of time, a warning buzzer will sound.
- Shifting the gearshift lever to the “M”, “D” or “R” position while racing the engine.
- Driving at low speed using a high gear.
- Stopping on a slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.

Starting off on an uphill/downhill slope:

Uphill

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- 2) Shift the gearshift lever to the “M” position while depressing the brake pedal. Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
- 3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch. In case the warning buzzer is on, shifting to 2nd gear will not be possible in manual mode. Always use 1st gear while starting off on a uphill slope. Otherwise you may damage the clutch.

Downhill

- 1) Depress the brake pedal and shift the gearshift lever to the “M” position. Check the gear position indicator to make sure that the gear is in 1st.
- 2) Release the brake pedal and depress the accelerator pedal slowly. Even though the accelerator pedal is not depressed, the clutch will be engaged when the vehicle speed increases.

Backing up

After the vehicle has stopped completely, depress the brake pedal and shift the gearshift lever to the “R” position. Depress the accelerator pedal slowly as when starting off in 1st gear. Before backing up, make sure that reverse gear is selected by checking the gear position indicator.

NOTE:

- *If reverse gear cannot be engaged even though the gearshift lever has been shifted from the “N” to the “R” position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate malfunction.*
- *The “N” indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;*

- *If you shift the gearshift lever from the “N” to the “R” position without depressing the brake pedal*
- *If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to “N” position, then shift to “R” position again a few seconds later.*
- *The system will not allow shifting to the “R” position if the vehicle speed is over about 3 km/h. If the gearshift lever is operated under this condition, the “N” indicator in the instrument cluster will blink. However, when the vehicle speed drops below about 3 km/h, the gear will be shifted to reverse. Make sure that the vehicle has stopped completely before shifting to the “R” position.*

NOTICE
<p>On a downhill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.</p>

Stopping

The vehicle can be stopped by depressing the brake pedal regardless of the gear position. This is because the clutch is automatically disengaged to prevent the engine from stopping.

- *If the gearshift lever is in the “D” position, the gear will be downshifted to 1st when the vehicle stops.*
- *If the gearshift lever is in the “M” position, the gear will be downshifted to 1st when the vehicle stops.*

⚠ WARNING
<ul style="list-style-type: none"> • When stopping, for example, at a traffic light, be sure to depress the brake pedal firmly. For your safety, apply the parking brake, too, when stopping on a hill. • When racing the engine, make sure that the gear is in the “N” position by checking the gear position indicator. If the accelerator is operated with the gear in any other position, the vehicle may move resulting in an accident. • Do not leave your vehicle unattended while the engine is running. <p style="text-align: right;">(Continued)</p>

OPERATING YOUR VEHICLE

WARNING

(Continued)

- **When leaving the vehicle, stop the engine and park the vehicle with a gear engaged. If you need to leave the vehicle with the engine running, apply the parking brakes firmly, and shift the gearshift lever to the “N” position. Otherwise, the vehicle may move unexpectedly and may cause an accident.**

NOTICE

- **On a slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.**
- **If the gearshift lever is operated more than necessary, the system may not allow operation of the gearshift for a certain period of time, and the gear may not be shifted appropriately. Therefore, do not operate the gearshift lever if not necessary.**

Parking

Unlike an automatic transmission, Auto Gear Shift does not have a parking position. The vehicle can be parked with the gearshift lever at “D” or “R” position. Remember, even though the transmission is in gear, you must set the parking brake firmly. Park the vehicle with a gear engaged.

- 1) Apply the parking brake firmly.
- 2) While depressing the brake pedal, shift the gearshift lever to the “R” position on a downhill slope, and to the 1st position in the drive (D) mode or the “M” position in the manual (M) mode on an uphill slope and confirm the gear position by checking the gear position indicator.
- 3) Stop the engine.
- 4) In the case of uphill/downhill slope, release the parking brake and brake pedal slowly in order to check the gear is engaged.
- 5) After check the vehicle stopped by the gear engaged, Apply the parking brake and the brake pedal firmly again.
- 6) Get out of the vehicle and put chocks under the wheels.

When you return to your vehicle, you must remember to remove the wheel chocks.

NOTE:

- *After the engine is stopped, the gear in the transmission does not change even if you shift the gearshift lever in any position. Always shift the gearshift lever before stopping the engine.*

- *Check the transmission gear position by looking at the gear position indicator, then turn the ignition switch to “LOCK” position, to stop the engine. Release the brake pedal after a few seconds.*

WARNING

- **If the gear is not engaged properly and completely before the ignition switch is turned to “LOCK” position, the vehicle may not be parked with the gear engaged. Always confirm the gear position by checking the gear position indicator when parking.**
- **On a downhill slope, the gear should be put in reverse, and in 1st gear on an uphill slope. In case of uphill/downhill slope, after checking the vehicle stopped by the gear engaged, put the chocks under the wheels. Otherwise, the vehicle may move, and cause an accident. If the gear is left in the “N” position, the vehicle cannot be parked with a gear engaged.**

Parking cancel

Depress the brake pedal, turn the ignition switch to "ON" position, and shift the gearshift lever to the "N" position. The gear will be disengaged.

Warning functions

A warning buzzer will sound or the indicator will blink under the following conditions.

Warning buzzer

- The clutch is heated due to excessive load.
- The creeping function is being activated for a long period of time.

NOTICE

In the above cases, pull over to the side of the road and stop the engine, and then ask a authorised Maruti Suzuki workshop to inspect your vehicle. Otherwise, the clutch disc may be damaged.

- The ignition switch is turned to the "LOCK" position with the gear in 2nd, 3rd, 4th or 5th. In this case, turn the ignition switch to "ON" position, and shift the gearshift lever in the "N" position, shift it to the "D" or "M" or "R" position, then turn the ignition switch to "LOCK" position.
- During a stop, the driver's door is opened with the gearshift lever in the "R", "D" or "M" position while the engine is running.

"N" indicator blinking

When the gear indicator lamp blinks "N", you should depress the brake pedal and shift the gearshift lever to "N" position.

"1" indicator blinking


When the gear indicator lamp blinks "1st", you should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "D" or "M" position again a few seconds later.

"R" indicator blinking

When the gear indicator lamp blinks "R", you should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "R" position again a few seconds later.

OPERATING YOUR VEHICLE

Gearshift indicator (if equipped)



69RH050

When the gearshift lever is in a position other than “N” (Neutral), the gearshift indicator is indicated on the information display when the ignition switch is in “ON” position.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated on the display while driving, we recommend you to shift up or down the gear. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to “Using transmission” in this section.



WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator. To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:

- The gearshift indicator is not indicated when the gear position is in “N” (Neutral).
- If you depress the clutch pedal while UP/DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.

Example of the gearshift indicator

Indication	Description
	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended.
	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended.

ENG A-STOP System (Engine Auto Stop Start System)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the engine switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

CAUTION

- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
 - Manual transmission vehicle – If the driver's seat belt is unfastened and the driver's door is opened, the engine will stall.
 - Auto Gear Shift vehicle – If the driver's seat belt is unfastened, even if the brake pedal is pressed down, or the driver's door is opened, the engine will be restarted to warn you that the engine was stopped automatically by the ENG A-STOP system.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, turn the ignition key to "START" to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.

NOTICE

The vehicle equipped with this system uses a dedicated high-performance battery that supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the battery may die prematurely.


- When replacing the battery, use a MARUTI SUZUKI genuine battery specified in the Specification.
- Do not draw power from the battery terminals for electrical products.

OPERATING YOUR VEHICLE

Automatic Stopping/Restarting of the Engine

Manual transmission vehicle

- 1) With the brake pedal depressed, decelerate the vehicle.

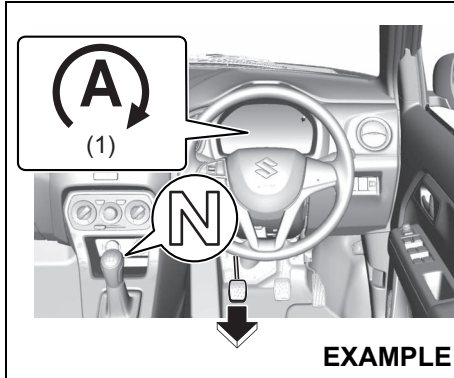

69RH030020

- 2) After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to “N”, and then release the clutch pedal, the engine will stop automatically.

The ENG A-STOP indicator light (green) (1) will come on.

- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to the section, “Automatic engine stop conditions”.

- During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

For details, refer to the section, “Points to note during the automatic engine stop”.

NOTICE

The engine will not restart if the following operations are performed during the automatic engine stop.

- Do not shift the gearshift lever to a position other than “N” without depressing the clutch pedal. If the gear shift lever is in a position other than “N”, the engine will not restart automatically even if the clutch pedal is depressed.
- If the driver unfastens the seat belt, the engine does not restart automatically even if the clutch pedal is depressed. Also a buzzer will sound to alert the driver. In this case, fasten the seat belt.


NOTE:

During the automatic engine stop, electric equipment will be in the following condition:

- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.

NOTE:

For manual transmission vehicles, if the engine stalled by a rapid clutch operation, the engine will restart with the gear positioned “N” (neutral) and the clutch pedal depressed.

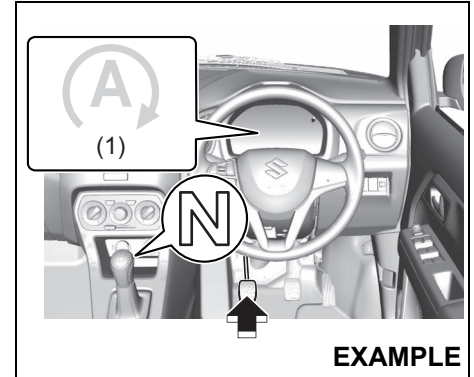

69RH030030

- 3) Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) (1) will go off.


While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

- Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.

For details, refer to the section, “Automatic engine restart conditions”.

Auto Gear Shift vehicle

- 1) With the brake pedal depressed, stop the vehicle.

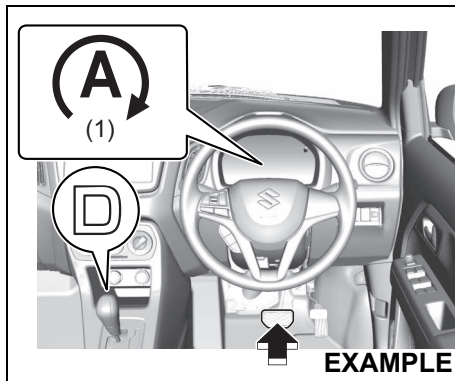

- 2) While depressing the brake pedal, place the gearshift lever in “D” position. “ENG A-STOP” indicator light (green)

(1) in the instrument cluster will illuminate and the engine will stop automatically.


- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to the section, “Automatic engine stop conditions”.
- During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

For details, refer to the section, “Points to note during the automatic engine stop”.

NOTE:

During the automatic engine stop, electric equipment will be in the following condition:

- *The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.*

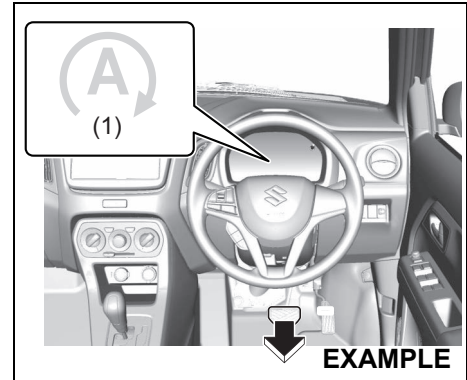

- 3) Remove your foot from the brake pedal. “ENG A-STOP” indicator light (green) (1) in the instrument cluster will be turned off and the engine will restart automatically.

When restarting the engine, keeping brake force temporarily prevents the vehicle from moving forward by the creeping function. Also, this prevents the vehicle from rolling downward on a hill. For details, refer to the section “Hill hold control system (if equipped)”.

NOTE:

When the engine is restarted automatically, the following conditions may be found as the hill hold control system (if equipped) is activated, but this is not a malfunction.

OPERATING YOUR VEHICLE

- You may hear a sound from the engine room.
- As brake pedal becomes heavy, it may be difficult for you to depress it.

NOTE:

When the engine does not restart automatically when the brake pedal is released, an interior buzzer will sound and the engine will come out of the automatic engine stop mode and shut down. The ENG A-STOP indicator light (green) will go off.

Points to note during the automatic engine stop

When the following operations are performed during the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

- When the hood is opened, an interior buzzer will sound intermittently and the engine will come out of the automatic engine stop mode and shut down. The ENG A-STOP indicator light (green) will go off.
- For manual transmission vehicle, when the driver releases the seat belt and opens the driver's door, the buzzer sounds for 5 times and the ENG A-STOP indicator light (green) turns off and then the engine will stall.
- For Auto Gear Shift vehicle, if the engine does not start 2 seconds after the brake is released, the buzzer will sound, the

ENG A-STOP light will go off, and the engine will stall.

NOTE:

The power steering warning light, oil pressure warning light and charge warning light on the meter panel do not come on during the automatic engine stop, but they will come on once the engine shuts down.

When the engine stalls, restart the engine by usual operation.

Refer to "Starting engine" in this section for details.

NOTICE

The ENG A-STOP system will not operate and engine does not restart automatically or the engine stalls with warning buzzer under the following conditions:

- Engine hood is open.

For manual transmission vehicle

- Driver's seat belt is not fastened and driver's door is open.
- The gearshift lever is moved to a position other than "N" (Neutral) position without depressing the clutch pedal.

When the engine stalls, restart the engine by usual operation.

Refer to "Starting the engine" in this section for details.

NOTE:


For manual transmission vehicles, if the engine stalled by a rapid clutch operation, the engine will restart with the gear positioned "N" (neutral) and the clutch pedal depressed.

Actuation conditions for ENG A-STOP system

Standby conditions

When all of the following conditions are met while the vehicle is traveling, ENG A-STOP system will be permitted:

- The engine is started with the hood completely closed.
- The hood is completely closed.
- The ENG A-STOP OFF switch has not been pressed to deactivate the ENG A-STOP system.
- The battery is fully charged and the temperature inside the battery is within the specified range (#1).
- The engine has warmed up and the engine coolant temperature is within the specified range.
- The driver is wearing seat belts.
- The driver's door is completely closed.
- No electronically controlled system besides the ENG A-STOP system is issuing a signal to inhibit stopping of the engine (#2).
- The negative pressure of the brake booster is normal.

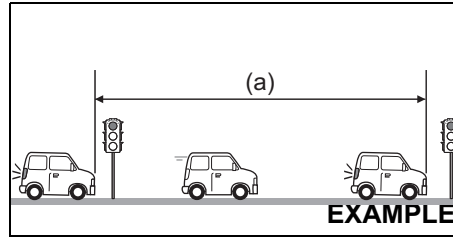

55RH03001

- The ABS system has not been activated during one driving cycle (a) from the engine start to the vehicle start and stop.
- The gearshift lever is in "D" or "N" (for Auto Gear Shift vehicle).

#1: If the vehicle has not been in use for an extended period of time or the audio or other electrical component was used for an extended period of time while the engine was stopped, the battery may have discharged and it may take some time before the standby mode is achieved.

#2: If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

Automatic engine stop conditions

When all of the following conditions are met under the standby conditions, the engine will stop automatically after the vehicle has stopped:

- The gearshift lever is in "N" (Neutral) position (for manual transmission vehicle).
- The clutch pedal is released (for manual transmission vehicle).
- The vehicle has stopped.
- The accelerator pedal is not depressed.
- The vehicle is not stopped on a steep hill (for auto gear shift vehicle).
- The gearshift lever is in "D" or "N" position. (for Auto Gear Shift vehicle).
- The brake pedal is depressed appropriately. (for Auto Gear Shift vehicle).

NOTICE

For Auto Gear Shift vehicle, the ENG A-STOP system will not operate, if the brake pedal is depressed weakly or very strongly.

Automatic engine restart conditions

If one of the following operations is performed or the vehicle enters one of the following modes during the automatic engine stop, the engine will restart automatically and the ENG A-STOP indicator light (green) will go off:

- The clutch pedal is depressed (for manual transmission vehicle).

OPERATING YOUR VEHICLE

- When the brake pedal is released (for Auto Gear Shift vehicle).
 - The ENG A-STOP OFF switch is pressed to deactivate the ENG A-STOP system.
 - The battery has discharged substantially (#).
 - A malfunction of the system is detected (#).
 - The negative pressure of the brake booster has dropped (#).
 - The accelerator pedal depressed (for Auto Gear Shift vehicle).
 - The gearshift lever is put in "R" or in "M" position (for auto gear shift vehicle).
 - After the gearshift lever is shifted to "N", it is returned to "D" (for auto gear shift vehicle).
 - The driver releases the seat belt (for Auto Gear Shift vehicle) (#).
 - The driver's door is opened (for Auto Gear Shift vehicle) (#).
 - The vehicle starts to move on a slope, etc. (#).
 - Some time (2 minutes or so) has elapsed after the start of the automatic engine stop (#).
- # The ENG A-STOP indicator light (green) will blink and then go off.

NOTICE


For manual transmission vehicle, if driver's seat belt is not fastened or the gear shift lever is in a position other than "N", the engine will not restarted automatically.

ENG A-STOP OFF Switch

The ENG A-STOP system can be deactivated.

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.


Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

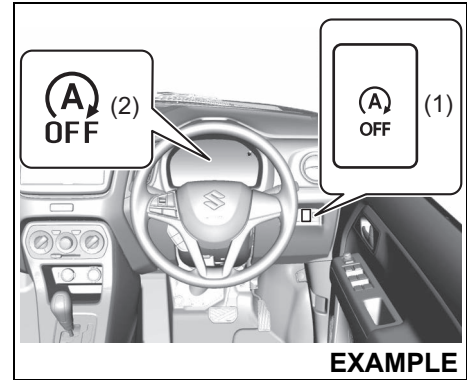

69RH030050

NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.

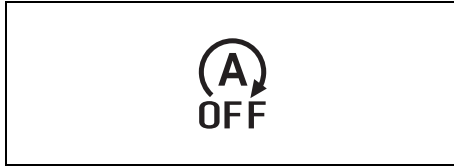ENG A-STOP OFF Light

56RM03012

When the ignition switch is turned to “ON” position, this light comes on briefly if the system works properly.

When you push the ENG A-STOP OFF switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG A-STOP system. You should have the system inspected by a authorised Maruti Suzuki workshop.

Parking sensors

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumper. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obstacle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle’s position.
- The parking sensor function can be used when you turn the ignition switch to “ON” position and the gearshift lever is in the “R” position. This function is helpful in the following cases: pulling over to the curb; parallel parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

⚠ WARNING

- **The parking sensor warns you of obstacles with buzzers. However, you still have to drive with particular care.**
- **The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.**

NOTE:

When the gearshift lever is shifted to the “R” position, a buzzer will sound once.


NOTICE

Parking sensors are only for driver’s assistance.

OPERATING YOUR VEHICLE

Sensor locations

On rear bumper

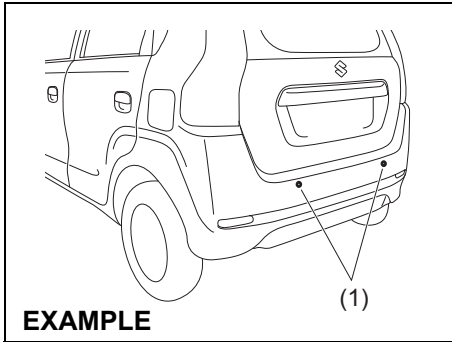

(1) Rear sensors (2 places)

NOTICE

- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a authorised Maruti Suzuki workshop.


Working sensors

The sensors work depending on the gearshift lever position as follows:

Gearshift lever position	Manual transmission		Auto Gear Shift	
	R	N, 1st – 5th	R	N, D, M
Rear sensors	On	Off	On	Off

Approximate areas where obstacles can be detected

EXAMPLE

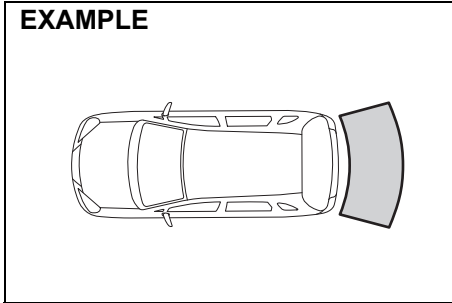

60MK070

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect an obstacle up to about 1.5 m (5 ft) from the rear of vehicle.

⚠ WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
 - Sensors are covered with mud, ice or other materials. (Such materials must be removed for normal operation.)
 - Sensors are wet from water splashes or heavy rain.
 - Sensors are covered by a hand, sticker, accessory, etc.
 - There is an accessory or other object attached within the sensor's sensing area.
 - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
 - The height of the bumper is changed due to alteration to the suspension or other causes.
 - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
 - The vehicle is on a rough surface, slope, gravel road or grass field.
 - The vehicle is at a steep angle.

(Continued)

⚠ WARNING

(Continued)

- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material such as wire netting and ropes
 - Square-shaped curbstones or other objects with sharp edges
 - Tall objects with a large upper part such as a road sign
 - Low-profile objects such as curbstones
 - Sound-absorbing objects such as cotton and snow

OPERATING YOUR VEHICLE

NOTE:

- *Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.*
- *The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.*

Obstacle indication by parking sensor

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound.

- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.
- Warnings when obstacles are detected by sensors

Distance (approx.)	Buzzer
100 – 150 cm (39 – 59 in)	Short beeps at short intervals
60 – 100 cm (24 – 39 in)	Short beeps at very short intervals
Less than 60 cm (24 in)	Continuous beep


Warning and indicator messages

If there is a problem or warning regarding the parking sensor system, a buzzer informs it. Follow its instruction.

- The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the parking sensor system. Have your vehicle inspected by a authorised Maruti Suzuki workshop.

Braking

EXAMPLE

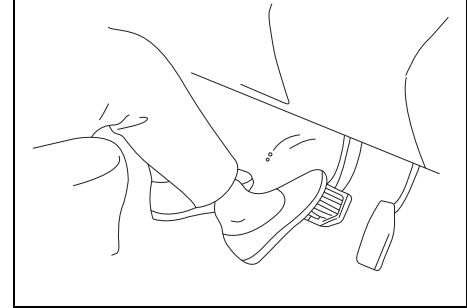

60G165S

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

⚠ WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

NOTE:

While braking you may hear operational noise due to friction between brake disc/drum and brake lining. This is a normal phenomenon and does not indicate any abnormality or affect normal functioning of the vehicle.

Power-assisted brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

⚠ WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

NOTE:

During brake pedal application & release, you may hear some operational noise owing to activation and functioning of components in the brake system. This is a normal phenomenon and does not indicate any abnormality or malfunction. Also, it does not affect the brake function.

Brake assist system

When you slam the brakes on, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear clicking sound by the brake assist system operation. This is normal and indicates that the brake assist system is activated properly.

Anti-lock brake system (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal move a little while the ABS is operating.


NOTE:

- The ABS will not work if vehicle speed is under about 9 km/h.
- If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

OPERATING YOUR VEHICLE

WARNING

- On some types of loose surfaces (such as gravel, snow-covered roads, etc.), the stopping distance required for a vehicle with ABS may be slightly greater than the one required for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tires are able to plow the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.
- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.
- In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive too fast.

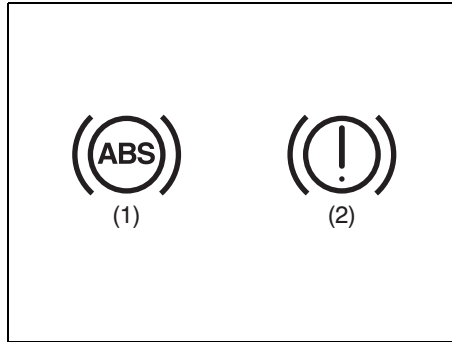

54MN069

- (1) ABS warning light
- (2) Brake system warning light

WARNING

- If the ABS warning light (1) on the instrument cluster comes on and stays on while driving, there may be a problem with the ABS system. Ask a authorised Maruti Suzuki workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the brake system warning light (2) on the instrument cluster simultaneously stay on or come on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask a authorised Maruti Suzuki workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

How ABS works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself.

▲ WARNING

The ABS may not work properly if tires or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tires or wheels, use only the size and type specified in this owner's manual.

Electronic stability program (ESP®) (if equipped)

ESP® is a registered trademark of Daimler AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

▲ WARNING

The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents. The capabilities of an ESP®-equipped vehicle must never be used as a substitute for careful driving.

The ESP® has the following systems:

Anti-lock Brake System (ABS)

Refer to "Anti-lock Brake System (ABS)" in this section.

Brake Assist System

Refer to "Brake Assist System" in this section.

Traction Control System

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

NOTE:

You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

Stability control system

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

OPERATING YOUR VEHICLE

WARNING

Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ESP® has limits and ESP® may not function properly depending on the surrounding conditions.

CAUTION

- Observe the following points. Otherwise, ESP® may not operate properly or it may result in a malfunction.
 - Adjust the tyre pressure as specified.
 - When replacing tyres, use the same tyres with the size, type, and tread patterns.
 - Do not use the tyres which have excessively worn conditions.
 - Do not modify the suspension or the brake and do not change vehicle height or suspension hardness.
 - Do not drive the vehicle with suspension or brake excessively deteriorated.
 - Do not modify the engine or the muffler.

(Continued)

CAUTION

(Continued)

- Do not install LSD (limited slip differential).
- When you install the snow chains, ESP® may not operate properly.

NOTE:

- If you perform the following operations, you may hear an operation sound or a clicking sound. This means that the ESP® system is in the self-check mode and this does not indicate a malfunction.
 - When ignition switch is turned to the “ON” position or pressing the engine switch to change the ignition mode to “ON”
 - When releasing your foot from the brake pedal, after the ignition switch is in “ON” position or the ignition mode is “ON” with the brake pedal depressed
 - When starting the engine
 - When starting the vehicle after starting the engine
 - When engine revolutions is high and ESP® operates, you may feel the change of engine revolutions or vibration of vehicle body. However, this is normal.

ESP® warning light (if equipped)



56RM03011

- If there is a problem in the ESP® system with the ignition switch in “ON” position or the engine switch in ON mode, this light will come on. While this light comes on, the following situations will occur. In this case, ask a Maruti Suzuki authorised workshop for inspection.
 - The following functions will not work:
 - Traction control system
 - Stability control system
 - ENG A-STOP system (if equipped)
 - Hill hold control system (if equipped) may not work.
 - ABS will work.
 - Depending on the malfunction condition, brake assist system may not work.
- If any of the following situations occurs, this light will blink at very short intervals of 0.2 seconds.
 - Traction control system is activated when starting or accelerating the vehicle.
 - Stability control system is activated when making a sharp turn or whirling round.

- If the system is in normal condition, when you turn the ignition switch to “ON” position or press the engine switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

CAUTION

If this light blinks at very short intervals, there is high possibility that the vehicle will be stuck or skid on a slippery road surface. In this case, drive the vehicle very carefully.

NOTE:

While this light comes on, traction control system and stability control system will not be activated. However, you can use ABS.

ESP® OFF indicator light (if equipped)




56RM03010

- If you press and hold the ESP® OFF switch with the ignition switch is in “ON” position or the ignition mode is “ON”, this light will come on.
 - While this light comes on, traction control system and stability control system will not work.

If the system is in normal condition, when you turn the ignition switch to “ON” position or press the engine switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

ESP® OFF switch (if equipped)

EXAMPLE

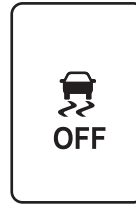

(1)

56RM03009

(1) ESP® OFF switch

- In the following situation, keep pressing the ESP® OFF switch until the ESP® OFF indicator light in the instrument cluster comes on. Traction control system and stability control system will not work.
 - When placing the vehicle on the tester for automobile inspection, traction control system and stability control system needs to be deactivated.
 - If your vehicle is stuck and you try to get out of the stuck condition, traction control system may not be suitable.

- If you perform the following operations, the ESP® OFF indicator light will come off. Also, traction control system and stability control system will return to be in the activated condition.
 - Pressing the ESP® OFF switch again
 - Stopping the engine and then restarting the engine
- If you would like to perform normal driving after escaping from the stuck condition, press the ESP® OFF switch again. This will allow the ESP® OFF indicator light to come off and the vehicle will return to the original condition. Traction control system and stability control system will not be activated automatically. (except when stopping the engine and then restarting the engine)

NOTE:

For safety reasons, even if you press the ESP® OFF switch, ABS and brake assist system will not be deactivated.

ABS warning light / brake system warning light

Refer to “Braking” in this section.

Hill Hold Control System (if equipped)

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps to prevent the vehicle from rolling downward (for approximately 2

OPERATING YOUR VEHICLE

seconds) while you move your foot from the brake pedal to the accelerator pedal.

- The hill hold control system is not designed to stop the vehicle on a hill.



56RM03013

WARNING

- Always check the surrounding conditions and drive the vehicle in a safe manner by depressing the brake pedal as necessary, as controlling the vehicle by the hill hold control system has limits and the system may not function properly depending on the surrounding conditions.
- If you do not depress the brake pedal firmly enough, the hill hold control system may not work.

(Continued)

WARNING

(Continued)

- If you release your foot from the brake pedal for more than 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of a slope. Also, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage. After you release your foot from the brake pedal, accelerate the vehicle to move up immediately.

NOTE:

- If there is a problem with the hill hold control system, the ESP[®] warning light in the instrument cluster may come on and the hill hold control system may not work. Also, ENG A-STOP system (if equipped) may not work. In this case, consult a Maruti Suzuki authorised workshop.
- If you move up an excessively sharp slope, a frozen road or a mud track, or depending on laden weight, the vehicle may roll downward when you start the vehicle.

- If you move up an excessively sharp slope, a frozen road or a mud track and the hill hold control system activates, the tyres may be locked and the vehicle may not be controlled properly.

Activation conditions for the hill hold control system

The hill hold control system activates to prevent the vehicle from rolling downward for about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.


- The gearshift lever is in the forward gear or reverse position.
- The parking brake is released.
- The vehicle is on an upward slope.
- The brake pedal is depressed firmly.

For the vehicles with ENG A-STOP system (if equipped), the hill hold control system is activated when the engine is restarted after being stopped automatically, even if the previous conditions are not met.

NOTE:

When the hill hold control system is activated, you may hear a sound coming from the engine, or you may feel hardness of the brake pedal. These are normal and do not indicate a malfunction.

DRIVING TIPS

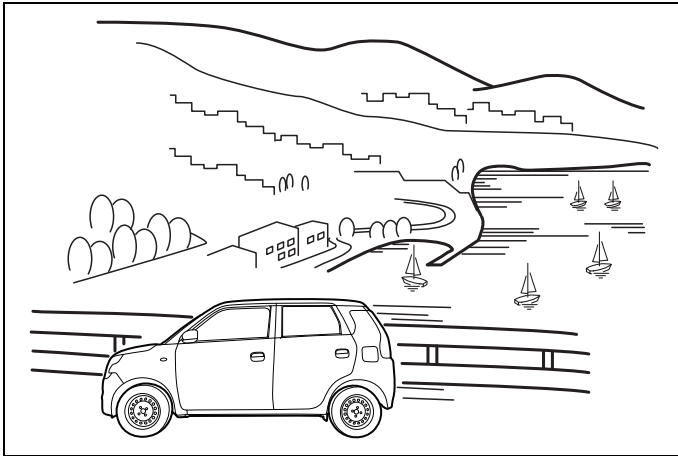


60G409A

Running-in	4-1
Catalytic converter	4-1
Improving fuel economy	4-2
Highway driving	4-3
Driving on hills	4-3
Driving on slippery roads	4-4
Off-road driving	4-6
When encountering a flooded area	4-6
Do's and Dont's for safe driving	4-7
Margin for safety	4-9

DRIVING TIPS

EXAMPLE

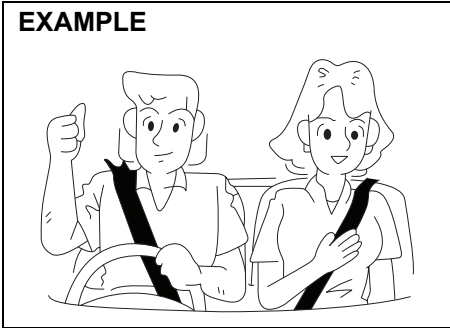

55RM04002

⚠ WARNING

- Wear your seat belts at all times. Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to “Seat belts and child restraint systems” section for instructions on proper use of the seat belts.
- Never drive under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated or under stress.

Running-in


NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km of driving.
- Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.

Catalytic converter

EXAMPLE

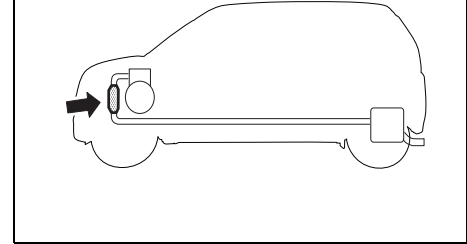

80G106


The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.

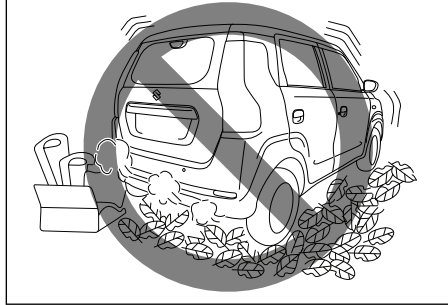EXAMPLE

69RM04009

⚠ WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

NOTE:

Non-usage of vehicle for long duration may cause gradual rusting of brake disc surface as it is made of cast iron. This may result in noise/vibration. The same has no bearing on functioning of the vehicle. Regular driving of vehicle may prevent/remove rust, thus reducing the noise and vibration.

Improving fuel economy**NOTE:**

Fuel economy (mileage) of the vehicle may vary due to several factors i.e., driving habits - gear change pattern, usage of A.C, Air pressure in the tires, wind speed, traffic conditions, fuel quality- non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you are to wait for more than a minute while you are parked, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

Avoid sudden acceleration

Sudden acceleration starting from rest or while driving will consume fuel unnecessarily and shorten engine life. Start off slowly.

Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a slow, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.


Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

DRIVING TIPS

Keep the air cleaner clean

EXAMPLE

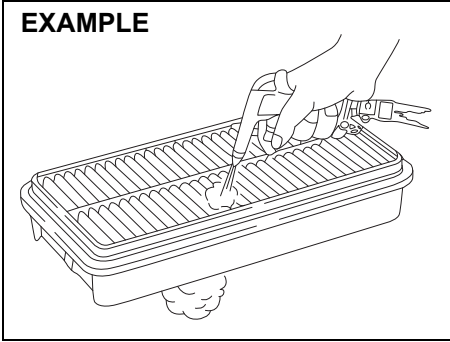

60A183S

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Keep tire pressures correct

Under-inflation of the tires can waste fuel due to increased running resistance of the tires. Keep your tires inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.

Highway driving


When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tires due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

Driving on hills

Manual transmission


EXAMPLE

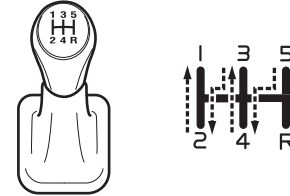

69RH021

Auto Gear Shift

EXAMPLE

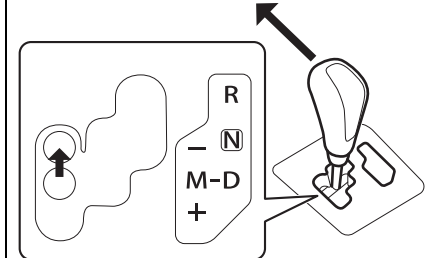

69RH020

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

While moving uphill/gradient from a stand still condition

(For manual transmission models)

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- 2) Depress the clutch pedal and shift the gearshift lever to 1st select position.
- 3) When ready to start, depress the accelerator pedal while at the same time releasing the clutch pedal slowly. When the vehicle starts to move, gradually release the parking brake.


(For Auto Gear Shift models)

Refer to “Using transmission” in the “OPERATING YOUR VEHICLE” section.

⚠ WARNING
Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE
When descending a downhill, Never turn the ignition key to “LOCK” position. Emission control system damage may result.

Driving on slippery roads

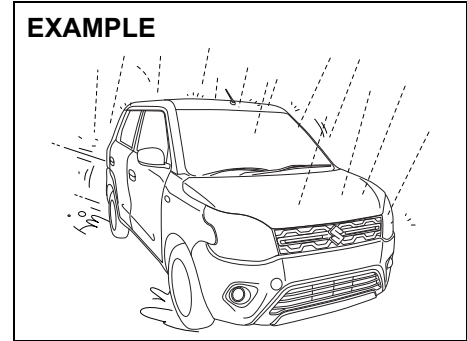

69RM04007

On wet roads, you should drive at a lower speed than you do on dry roads due to possible slippage of tires during braking. When driving on icy, snow-covered or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Snow chains

Snow chains should only be used if they are needed to increase traction or are required by law. Check that the chains you use are the correct size for your vehicle’s tires. Also check that there is enough clearance between the fenders and the chains as installed on the tires.

Install the chains on the front tires tightly, according to the chain manufacturer’s instructions. Retighten the chains after

DRIVING TIPS

driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

Stuck vehicle

If your vehicle gets stuck in snow, mud or sand, follow the directions below:

- 1) Shift the transmission back and forth between a forward range (or first gear for manual transmission) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting. Do not race the engine. Excessive wheel spin will cause the tires to dig deeper, making it more difficult to free the vehicle.
- 2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult a authorised Maruti Suzuki workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be

temporarily towed by a towing cable or chain secured to the towing eye either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame hooks" in the "OTHER CONTROLS AND EQUIPMENT" section.


⚠ WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transmission damage.

EXAMPLE

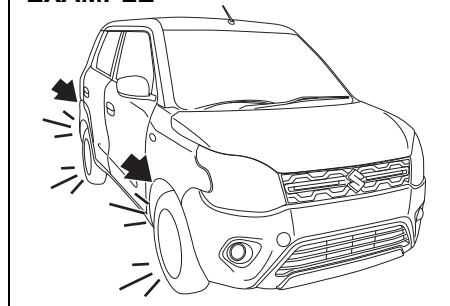

69RM04008

⚠ WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.

- Check that your tires are in good condition and always maintain the specified tire pressure. Refer to "Tires" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tires other than those specified by MARUTI SUZUKI. Never use different sizes or types of tires on the front and rear wheels. For information regarding the specified tires, refer to the tire information label located on the driver's door lock pillar.

(Continued)

⚠ WARNING

(Continued)

- **Never use oversized tires or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tires may also rub against the fender over bumps, causing vehicle damage or tire failure.**
- **After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.**

Off-road driving**Do not drive in the field covered with grown grass**

If you drive in the field covered with grass, it may cause accident or vehicle damage by getting caught in grown grass.

When encountering a flooded area**EXAMPLE**

69RM04001

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe and non flooded place while checking the brake effectiveness. Then, ask a authorised Maruti Suzuki workshop to check the following inspection items.

- Function of brake
- Function of electrical components
- Changes in oil level and quality for engine and transmission. In case that the oil is turbid whitish, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.

DRIVING TIPS

NOTICE

- Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine and transmission damages, etc.
- If the vehicle gets stuck in deep water do not start the engine.


Do's and Dont's for safe driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

Starting

- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.

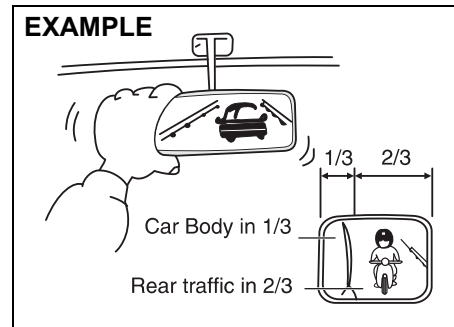

- 3) Before moving, look around your vehicle to confirm safety.
- 4) Don't accelerate suddenly, since it is dangerous and wastes fuel.

General Driving


- 1) Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
- 2) Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.

EXAMPLE



- 3) Turn on the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit.
- 4) Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.


- 5) When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.
- 6) Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
- 7) Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
- 8) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatigued.

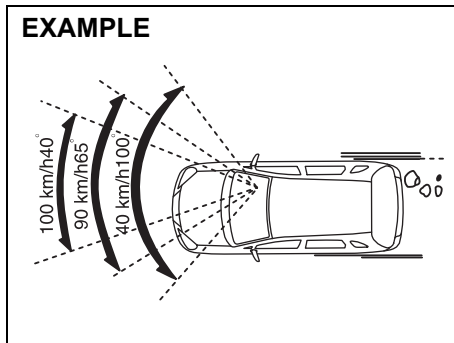

69RM04003


- 9) Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
- 10) When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

Braking

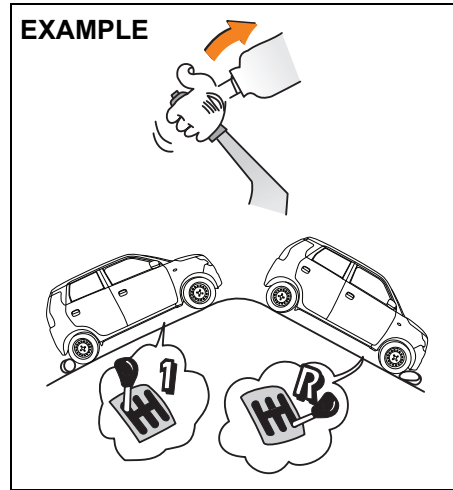

69RM04006

- 1) Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
- 2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tires are worn out as they skid more.

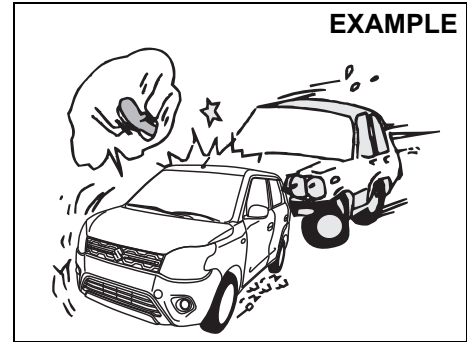

69RM04004

Use foot brake in three stages


1. Warn the vehicle behind you.
 2. Gradually apply the brake.
 3. Bring the vehicle to a halt.
- 3) When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.

Long Distance Driving


- 1) Be sure to perform safety checks before starting a trip.
- 2) Take rest at regular intervals to prevent accidents which may occur due to feeling sleepy or tired.

DRIVING TIPS

Night Time Driving

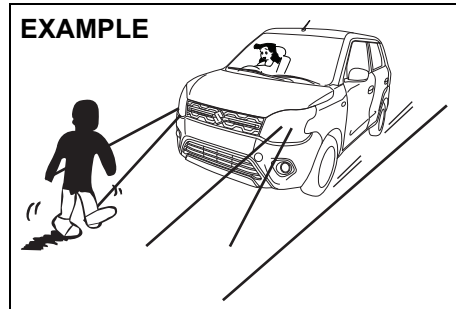

- 1) Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
- 2) Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicle-to-vehicle distance.

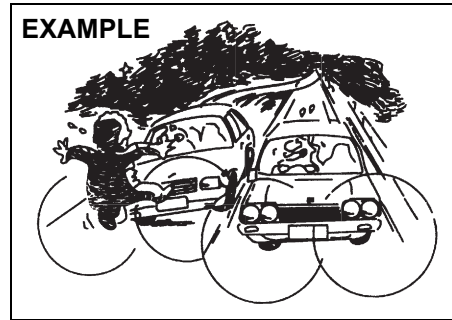

- 3) Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.
- 4) Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.

Margin for safety


It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- Observe traffic rules and regulations.

Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience. **Follow the do's and don't's listed, and driving will never be the same again.**

OTHER CONTROLS AND EQUIPMENT

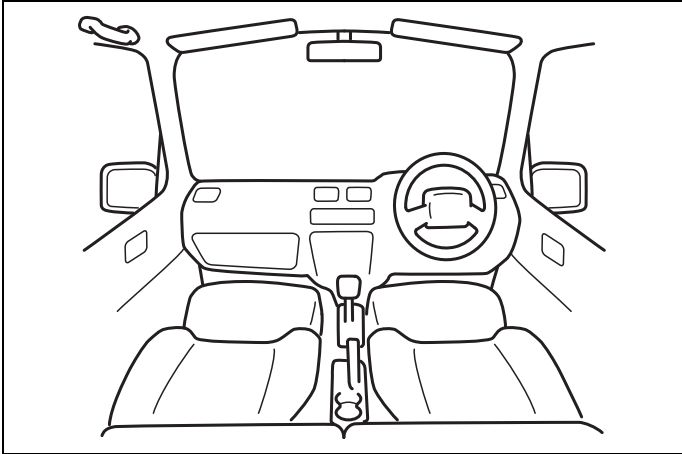


60G407

- Fuel filler cap 5-1
- Engine hood 5-2
- Sun visor 5-4
- Interior light 5-5
- Accessory socket 5-6
- AUX/USB socket (if equipped) 5-6
- Underseat tray (if equipped) 5-7
- Assist grips 5-7
- Glove box 5-8
- Cup holder and storage area 5-8
- Footrest 5-10
- Luggage compartment cover (if equipped) 5-10
- Frame hooks 5-10
- Heating and air conditioning system 5-13
- Manual heating and air conditioning system 5-14
- Radio antenna 5-18
- Installation of radio frequency transmitters 5-18
- Audio system (if equipped) 5-19

OTHER CONTROLS AND EQUIPMENT


Fuel filler cap

EXAMPLE

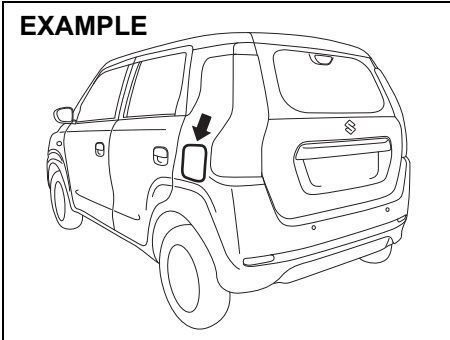

69RH053


EXAMPLE

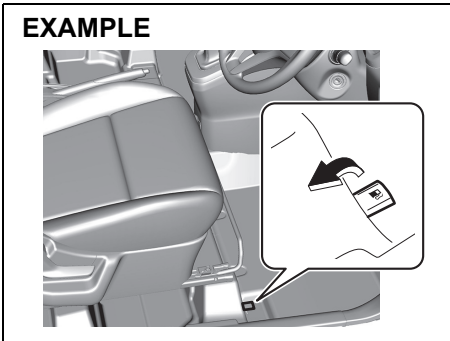

69RH128

A fuel filler cap is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard side of the driver's seat and locked by simply closing the door.

EXAMPLE

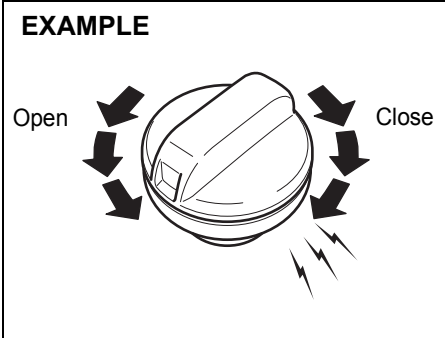

57L51093


To remove the fuel filler cap:

- 1) Open the fuel filler door.
- 2) Remove the cap by turning it counter-clockwise.

CAUTION


Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

EXAMPLE

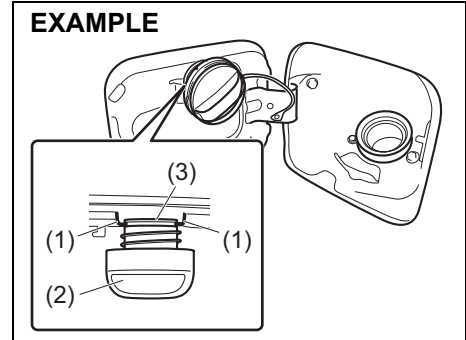

69RM05005

EXAMPLE

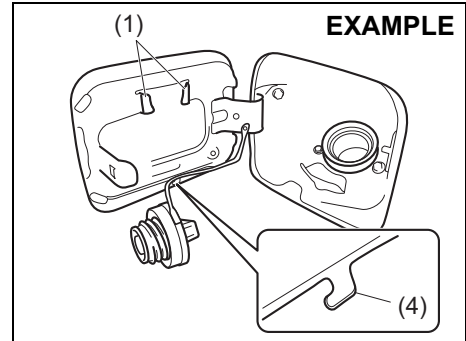

69RM05006

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3), or the hook (4) also holds the fuel filler cap when refueling.

To reinstall the fuel filler cap:


- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.

▲ WARNING

- Fuel is extremely flammable. Do not smoke when refueling, and check that there are no open flames or sparks in the area.
- If you need to replace the fuel cap, use a MARUTI SUZUKI genuine cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage in the event of an accident.

Engine hood

EXAMPLE

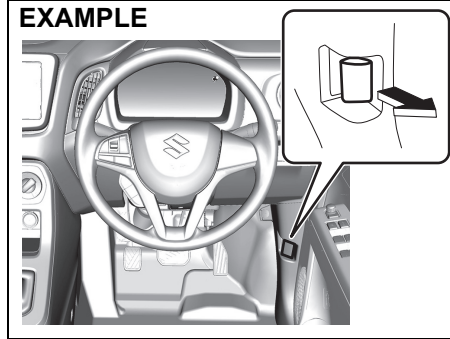


69RH058

To open the engine hood:

- 1) Pull the hood release handle located on the outboard side of the driver's side. This will disengage the engine hood lock halfway.

EXAMPLE

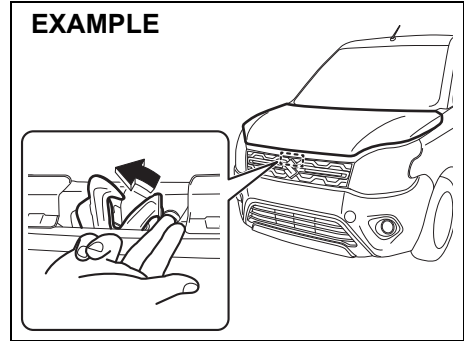

69RH065

- 2) Push the under-hood release lever sideways with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.


▲ CAUTION

The release lever can be hot enough to burn your finger right after driving. Touch the lever after it becomes cool enough.

NOTICE

Check that the wiper arms are not raised before you lift up the engine hood to avoid damaging the wiper arms and the engine hood.

OTHER CONTROLS AND EQUIPMENT

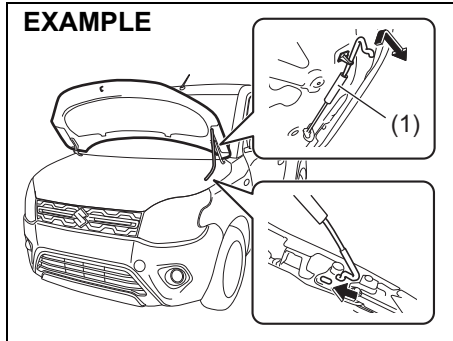


- 3) While holding the hood, pull the prop rod out from the holding clip, and then insert the end of the rod into the designated hole.

CAUTION

- The prop rod can be hot enough to burn your finger right after driving. Hold the prop rod by protector (1).
- Insert the end of the rod into the hole securely. If the rod slips out, you may get caught in the closing hood.
- The rod may slip out when the hood is blown by wind. Be careful on windy days.

To close the engine hood:

- 1) Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back into the holding clip.

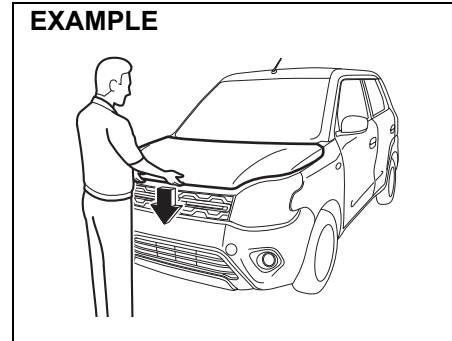

- 2) Lower the hood to about 20 cm above the hood latch, and then let it drop down. Check that the hood is securely latched after closing.

WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.


CAUTION

To avoid injury, check that no part of the occupant's body such as hands or head is in the path of the hood when closing it.

NOTICE

Pushing on the hood from the top may damage it.

Sun visor

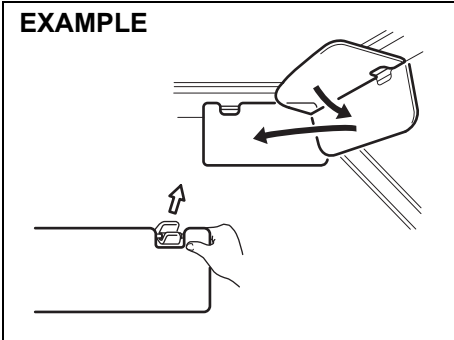


79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, handle it by the hard plastic parts or the sun visor can be damaged.

Card holder (if equipped)

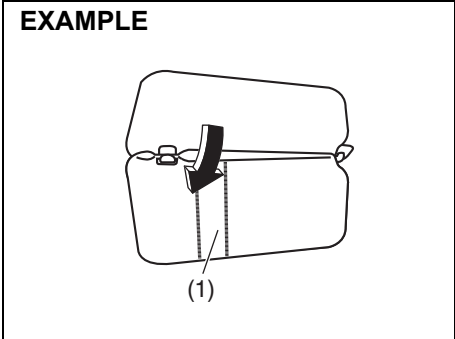

74LHT0516


(1) Card holder

You can put a card in the card holder (1) on the back of the sun visor.

NOTICE

When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

Vanity mirror (if equipped)

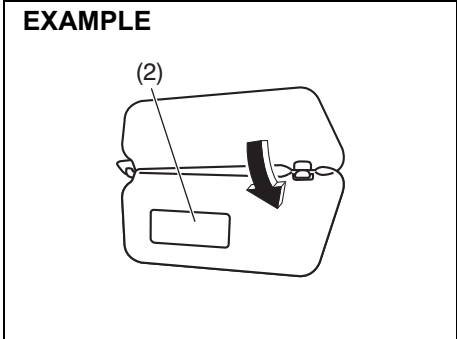

74LHT0532


(2) Vanity mirror

⚠ WARNING

- When using the vanity mirror, do not move too close to a front airbag location or lean against it. If the front airbag is accidentally inflated, it could hit you hard.
- Do not place any object on the location where an airbag is stored or come close to the location where airbag is stored, when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of airbag.

OTHER CONTROLS AND EQUIPMENT

Interior light

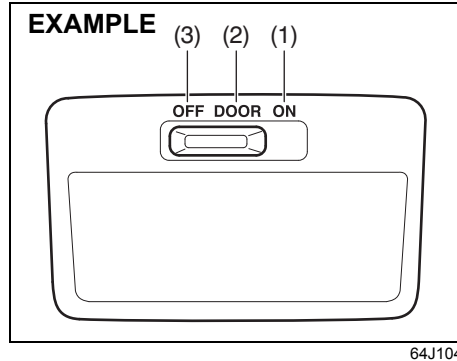

Interior light switch has three positions which function as described below:

ON (1)

- The light comes on and stays on regardless of whether the door is open or closed.
- If your vehicle is equipped with keyless entry system transmitter, the light will be automatically turned off to save the battery when the following conditions are simultaneously met.
 - The ignition switch is in “LOCK” position.
 - A period of 15 minutes has elapsed after the light comes on and other operations are not done.
 - The hazard warning lights, the position lights and the headlights are off.

DOOR (2)


- The light comes on while any of the doors (including the tailgate) is opened. For about 15 seconds after all doors are closed, the light will remain on and then fade out.
- If all doors are closed, the light comes on for about 15 seconds when the ignition key is pulled out from the ignition switch. After 15 seconds, the light will fade out.
- The light will be automatically turned off to save the battery when the following conditions are simultaneously met.
 - The ignition switch is in “LOCK” position.
 - A period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

If you perform any of the following procedures before the light fading out, the light will start to fade out immediately.

- Inserting the ignition key into the ignition switch
- Locking all doors by operating the key, keyless entry transmitter or power door locking switch

OFF (3)


The light remains off even when the door is opened.

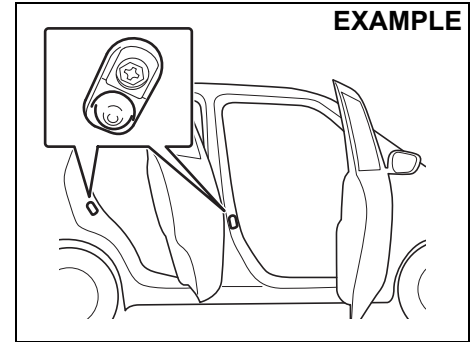

NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber protrusion) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber protrusion.

Accessory socket

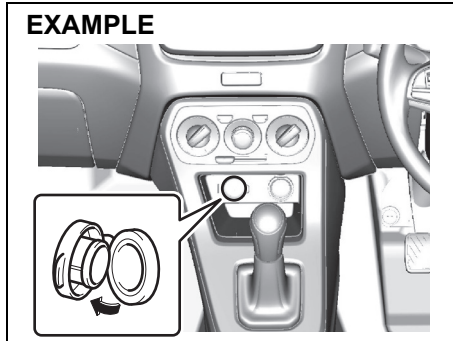

69RH129


The accessory socket will work when the ignition switch is in “ACC” or “ON” position. This can be used to provide 12 volt/120 watt/10 ampere power for electrical accessories.

NOTICE

- Use of inappropriate electrical accessories can cause damage to your vehicle’s electrical system. Make sure that any electrical accessories you use are designed to plug into this type of socket.
- When the accessory socket is not in use, close the rubber cap. If any foreign material enters the accessory socket, it may cause a malfunction or short circuit.
- When the ignition switch is in “LOCK” position while using the accessory socket, the following may occur;
 - the audio or navigation system does not turn off.
 - the keyless entry system does not work, etc.
 If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly. If the problem persists, ask a authorised Maruti Suzuki workshop to have the system inspected.


AUX/USB socket (if equipped)

Type A

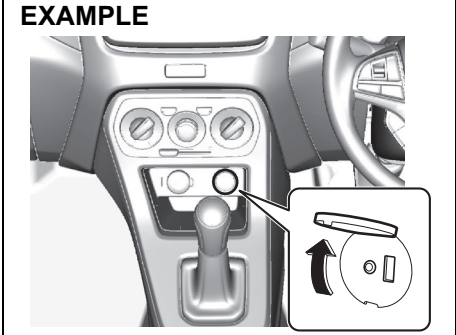

69RH130

Type B

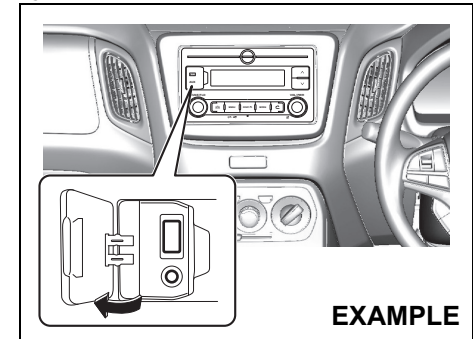

69RM05010

Connect your portable digital music player, etc. to this socket to enjoy music through

OTHER CONTROLS AND EQUIPMENT

the vehicle's audio system. Refer to "Audio system" in this section.

NOTICE


Always close the cap when not in use, since entry of foreign material, dust, water, conductive liquids may damage the audio system or USB device.

NOTICE

Do not charge your mobile device for a long period of time, while the engine is stopped. Otherwise, the lead-acid battery may run out.

Underseat tray (if equipped)

EXAMPLE

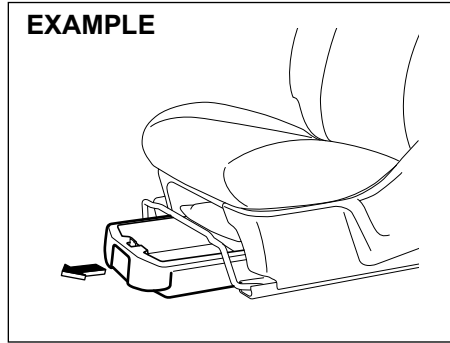

69RH131


The tray is located under the front passenger's seat. Pull the tray forward to use it. Be sure to push the tray back in before driving.

NOTICE

To avoid breaking the underseat tray, do not place items heavier than following weight.
Underseat tray: 1 kg (2.2 lbs)

Assist grips

EXAMPLE

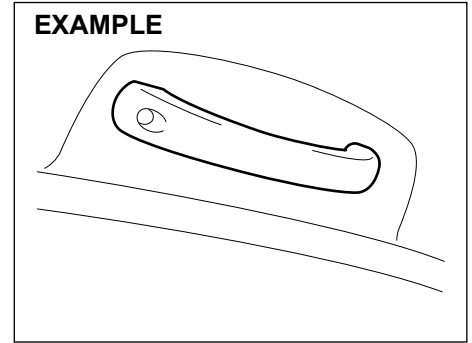


76MH0A072

Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Glove box

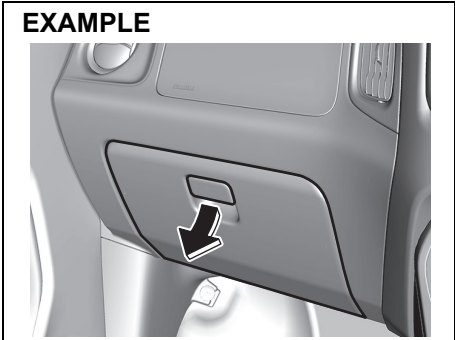


69RH132

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

⚠ WARNING

- Never drive with the glove box lid open. It could cause injury if an accident occurs.
- Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally causing a fire.

Cup holder and storage area

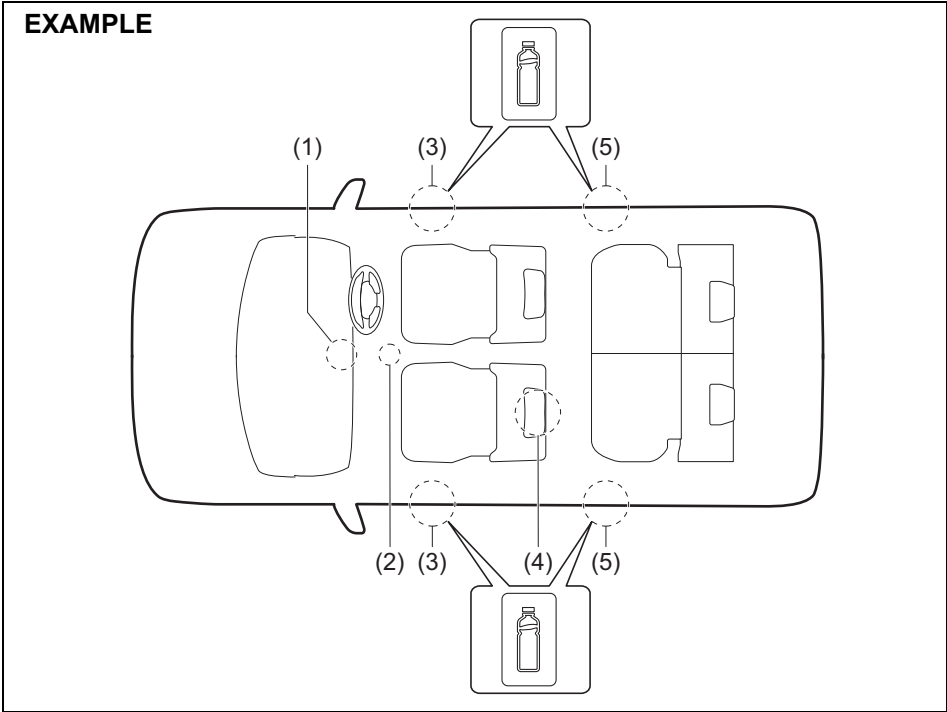

69RH054

- (1) Center console tray
- (2) Front cup holder
- (3) Front bottle holder
- (4) Front seat back pocket (if equipped)
- (5) Rear bottle holder

OTHER CONTROLS AND EQUIPMENT

Center console tray (1)

⚠ WARNING

Do not place any objects which may fall out from the pocket when the vehicle is moving.

Failure to take the precaution may result in an object interfering with the pedals and causing a loss of vehicle control or an accident.

Front cup holder (2)

Use the front cup holder to put a cup with a lid or a bottle with a cap. Also, you can put small articles in the front cup holder.

⚠ WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful and use a lid for a drink not to spill out liquid. Spilling out hot liquid can cause burn injury. In addition, if liquid spills out on the following parts, it may cause a fire or a malfunction and an airbag system may not work properly.
 - Navigation system, audio system or the relevant switches
 - Wiring or electrical components under the floor
 - Moving part of the gearshift lever or the seatbelt buckle

(Continued)

⚠ WARNING

(Continued)

- Do not use the cup holders to hold sharp-edged, hard or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.
- If you spill, or drop liquid accidentally, have your vehicle inspected by a authorised Maruti Suzuki workshop.
- Do not leave cigarette lighters or spray cans in the front cup holder. Otherwise, gas may leak from them and may cause a fire.


Front bottle holder (3) / Rear bottle holder (5)

You should only place a bottle with a cap in the holder.

NOTE:

Maruti Suzuki recommends to use maximum 1 liter capacity of bottle.

Front seat back pocket (4) (if equipped)

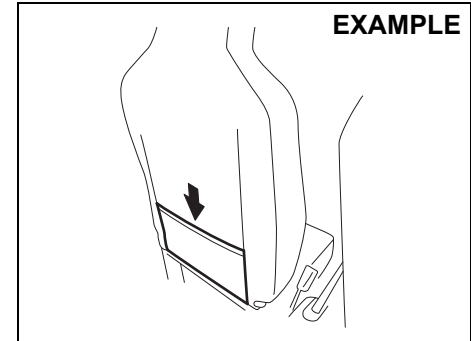


69RH138

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

⚠ CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.


Footrest

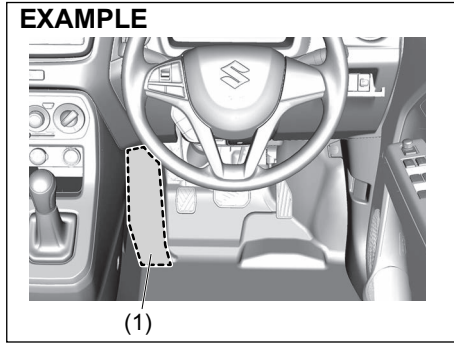

69RH077

Use the footrest (1) (for driver side only) as a support for your left foot only.

Luggage compartment cover (if equipped)

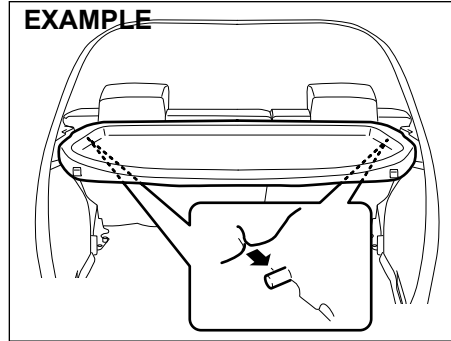

69RM05011

Luggage or other cargo placed in the luggage compartment is hidden from view by a luggage compartment cover.

⚠ WARNING

Do not carry items on top of the luggage compartment cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.

Frame hooks

It is not recommend that you use the frame hooks for towing another vehicle. They are originally designed to tow your vehicle in emergency situation.

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in the "EMERGENCY SERVICE" section.

⚠ WARNING


Observe the following instructions when using frame hooks. The towing hook or vehicle body may break and cause serious injury or damage:

- Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the towing hook.

In such case, we recommend that you contact a professional service.

OTHER CONTROLS AND EQUIPMENT


Front

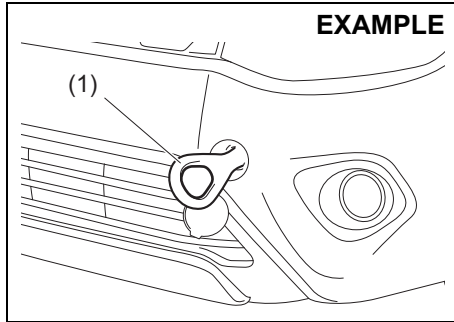

69RH096


The towing hook (1) is provided on the front of the vehicle for use in emergency situations only.

To install the towing hook (1), jack handle (2) and wheel brace (3), follow the procedure below.

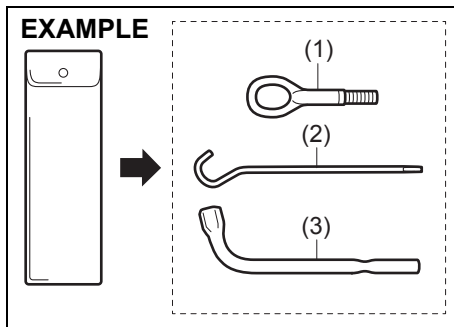

69RH197

- 1) Pick up the towing hook (1), jack handle (2) and wheel brace (3) that are stowed in luggage compartment.

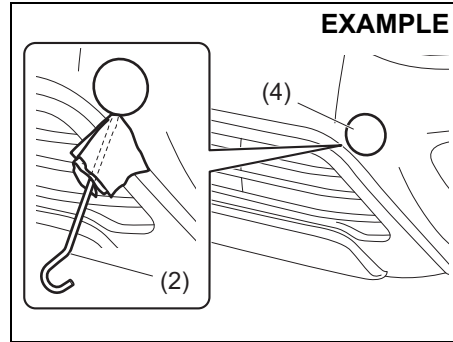


69RH198

- 2) Remove the cover (4) by using a jack handle (2) covered with a soft cloth as shown in the illustration.

NOTE:

Do not use excessive force as it may damage the cover strap.

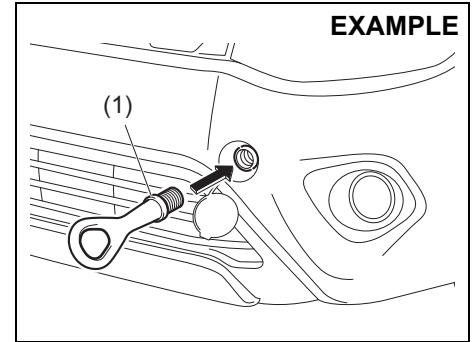


69RH098

- 3) Install the towing hook (1) by hand.

NOTE:

We recommend to fasten the cover with tape to prevent damage during towing.

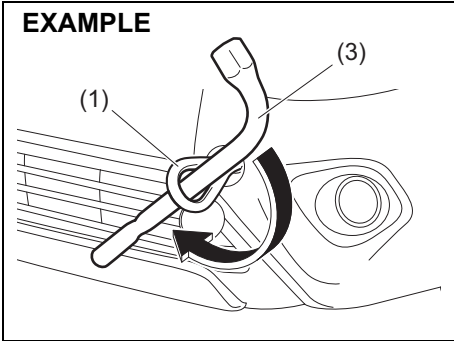


69RH199

4) To tighten the towing hook (1), turn it clockwise by using a wheel brace (3) until the towing hook (1) is securely installed.

! WARNING
 Use extreme caution when you use the towing eye (1). Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which would give excessive stress on the towing eye. The towing eye or vehicle body may break and cause serious injury or damage.

To remove the towing hook (1), reverse the installation procedure.

Rear

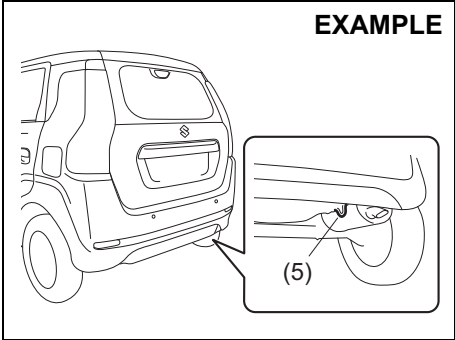

69RH200

NOTICE


- Your vehicle was originally designed to carry people and a normal amount of cargo, not to tow a trailer.
- The frame hook (5) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only. Do not use the frame hook for towing another vehicle, being towed by another vehicle or transporting your vehicle by a car carrier trailer, etc. Otherwise, the frame hook or the vehicle body may break and cause serious injury or damage.

To tow your vehicle on the road or highway, follow the instruction of "Towing" in "EMERGENCY SERVICE" section.


OTHER CONTROLS AND EQUIPMENT

Heating and air conditioning system

Air outlet

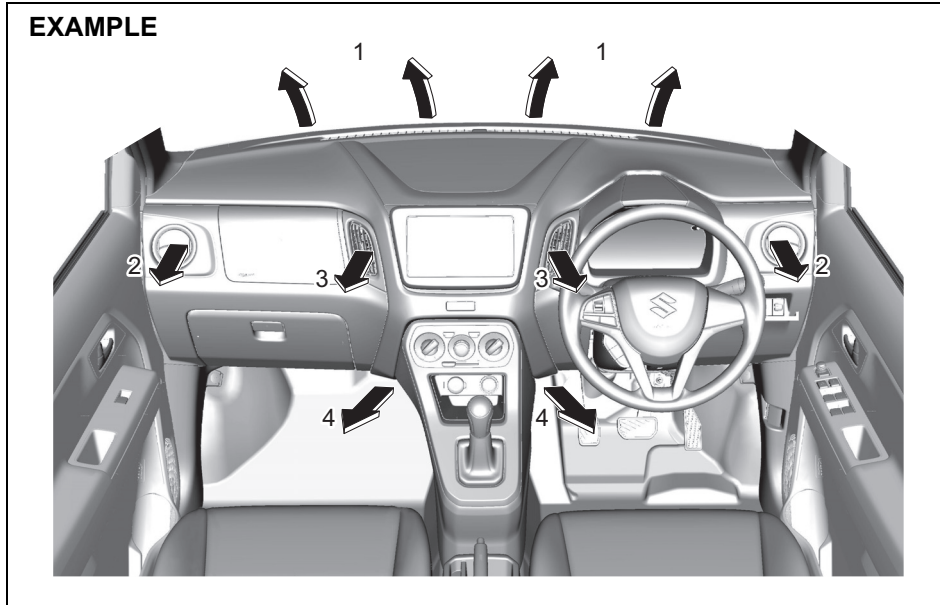


Side outlet

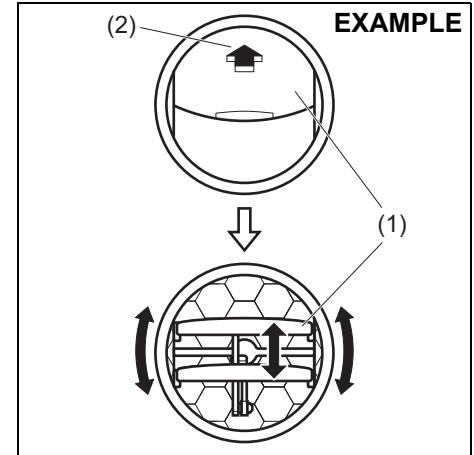

To open the louver (1), push the arrow part (2) as shown in the illustration. To adjust the direction of the air flow, move up or down or turn the opened louver (1).

Center outlet

EXAMPLE

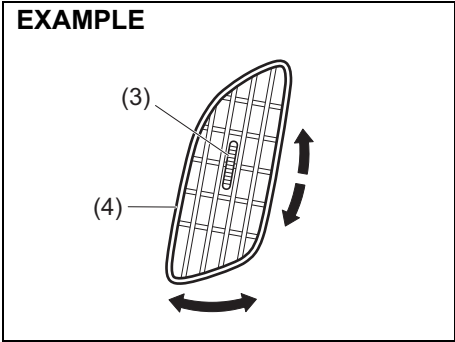

69RH156

Move the knob (3) vertically or the case (4) horizontally to adjust the direction of air-flow as desired.


CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Manual heating and air conditioning system

Description of controls

EXAMPLE

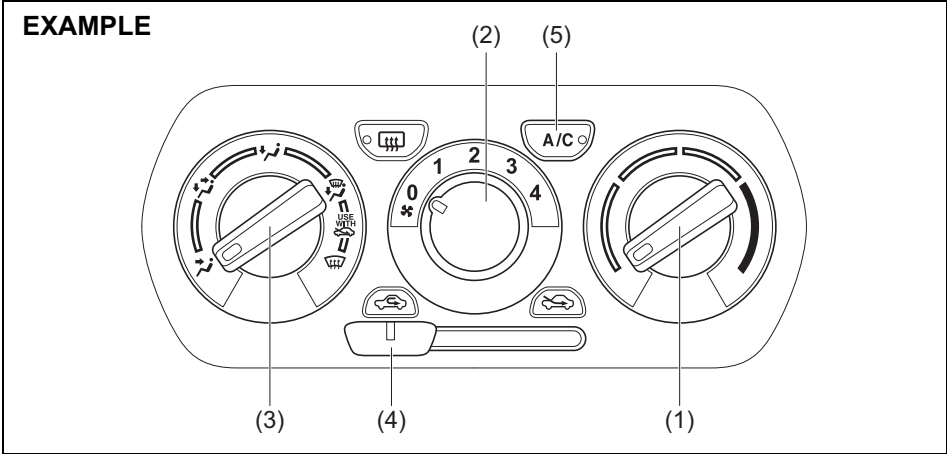

69RH023

Temperature selector (1)


This is used to select the temperature by turning the selector.

Blower speed selector (2)

This is used to turn on the blower and to select blower speed by turning the selector.

OTHER CONTROLS AND EQUIPMENT


Air flow selector (3)

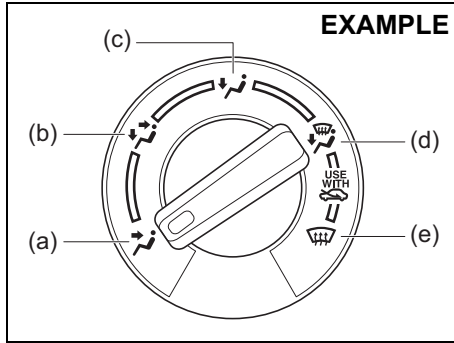

75RM022

This is used to select one of the following functions.

VENTILATION (a)

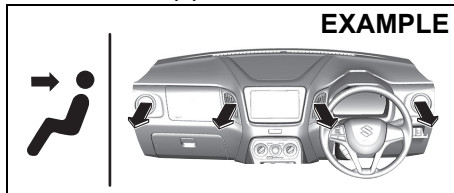

69RH088

Temperature-controlled air comes out of the center and side air outlets.

BI-LEVEL (b)



69RH089

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.


HEAT (c)



69RH090

Temperature-controlled air comes out of the floor outlets and the side outlets, small amount of air also comes out of the windshield defroster outlets.

HEAT & DEFROST (d)

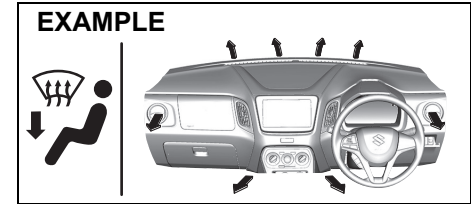

69RH091

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets and the side outlets.


DEFROST (e)



69RH092

Temperature-controlled air comes out of the windshield defroster outlets and the side outlets.

Air intake selector (4)

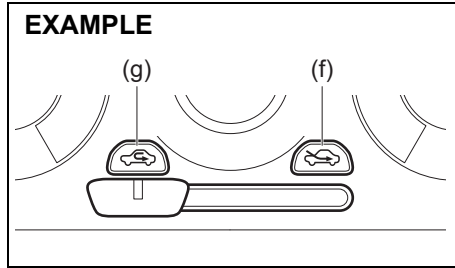

69RH024

This selector is used to select the following modes.

FRESH AIR (f)


When this mode is selected by moving the lever to right, outside air is used.

RECIRCULATED AIR (g)

When this mode is selected by moving the lever to left, inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down or warm up the interior or to reduce unwanted odor from entering the vehicle.

NOTE:

If you select the RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated. Therefore, you should occasionally select the FRESH AIR.

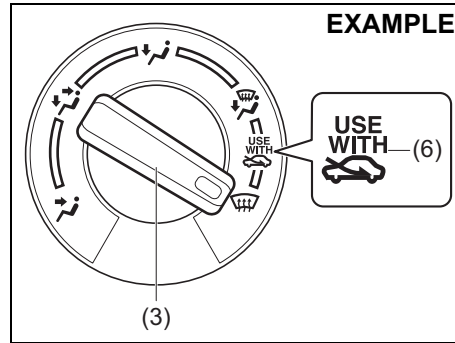

75RM403

NOTE:

The mark of "USE WITH" (6)

To clear fog on the windshield and/or the side windows quickly, set the air flow selector (3) to HEAT & DEFROST or DEFROST and air intake selector (4) to FRESH AIR. These positioning will clear the fogged windshield and/or the side windows faster than the RECIRCULATED AIR.

Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is on. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System operating instructions

Natural ventilation

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The control settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

OTHER CONTROLS AND EQUIPMENT

Quick heating (using recirculated air)

The control settings are the same as for normal heating except you select RECIRCULATED AIR. If you use this heating method for an extended period of time, the air in the vehicle may become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The control settings are the same as for normal cooling except you select RECIRCULATED AIR and the highest blower speed.

NOTE:

- If you select the RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated. Therefore, you should occasionally select the FRESH AIR.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.


Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

EXAMPLE

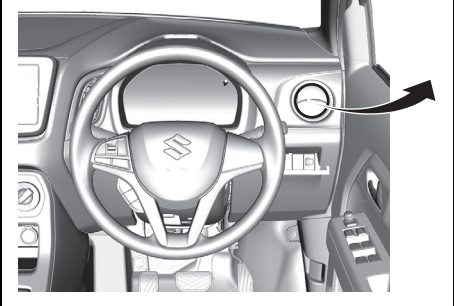

69RH079

NOTE:

If you need maximum defrosting:

- select DEFROST and FRESH AIR,
- set the blower speed selector to high,
- adjust the temperature selector to the hot end,
- turn on "A/C" switch, and
- adjust the side outlets so the air blows on the side windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in the "INSPECTION AND MAINTENANCE" section. Have this job done by a authorised Maruti Suzuki workshop as the lower glove box must be lowered for this job.


NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio antenna

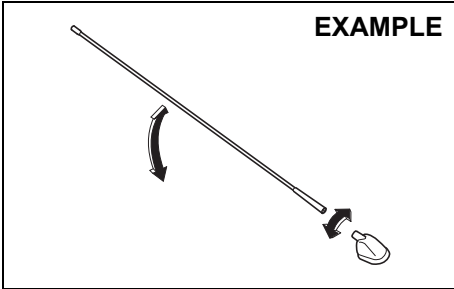

69RH201

The radio antenna on the roof is removable. To remove the antenna, turn it counter-clockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTE:

Adjust the antenna angle to maximum for optimum radio reception.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.

Installation of radio frequency transmitters


We recommend that you always ask a authorised Maruti Suzuki workshop about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your authorised Maruti Suzuki workshop or qualified service technician for advice.

OTHER CONTROLS AND EQUIPMENT

Audio system (if equipped)

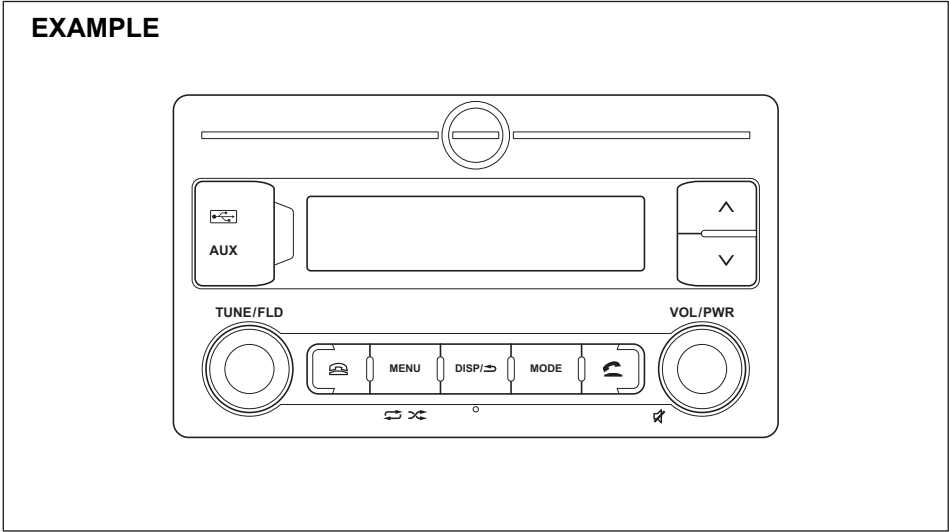

69RM05009

NOTE:
For vehicle equipped with SMARTPLAY STUDIO INFOTAINMENT SYSTEM, refer to audio manual available with the vehicle.

Safety information

⚠ WARNING

If you pay too much attention to operating the audio system or viewing the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying too much attention to operating the audio system or viewing the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.
- Set the sound volume to a level that will allow you to continue to be aware of road and traffic conditions while driving.

NOTICE

- Avoid spraying or spilling of clearing solutions, perfumes, car fresheners, beverages, chemicals or any liquids on the audio system surface. Also ensure that any liquid does not enter the system, it can damage the screen and the system. The warranty of the system will be void, if liquid ingress marks are observed inside the system.
- Avoid exposure of the audio system to water or excessive moisture as it can cause electric shocks, fire or other damages.

Open source definition

This Product includes following open source software.
mbedtls version 2.5.1

Copyright © 2006–2015, ARM Limited, All Rights Reserved
SPDX-License-Identifier: Apache-2.0

Licensed under the Apache License, Version 2.0 (the “License”); you may not use this file except in compliance with the License.

You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is on an “AS IS” BASIS,

WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.

See the License for specific language governing permissions and limitations under the License.

This file is part of mbed TLS (<https://tls.mbed.org>)

Please be noted that a portion of this software is made by changing or modifying original source files.



The Bluetooth® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Ink.


Stop using this unit and a Bluetooth® ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit whenever you are notified that your unit disturbs other wireless communication immediately.

OTHER CONTROLS AND EQUIPMENT

Basic operations

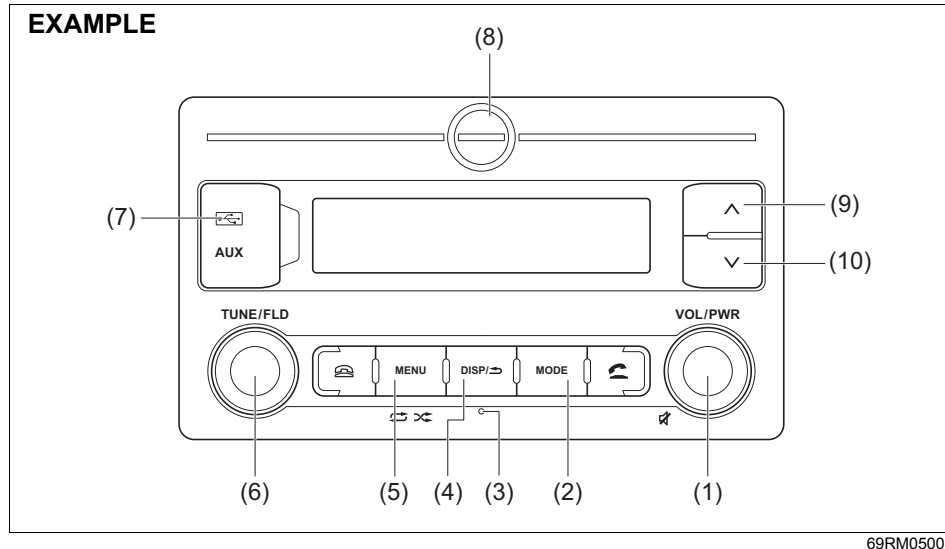

69RM05001

- (1) "VOL/PWR" knob
- (2) "MODE" button
- (3) MICROPHONE (for handsfree)
- (4) "DISP/BACK" button
- (5) "MENU" button
- (6) "TUNE/FLD" knob
- (7) USB/AUX
- (8) SMARTPHONE DOCK CAP
- (9) UP button
- (10) DOWN button

Turning on/off power

Press "VOL/PWR" knob (1) to turn on the power. The unit starts to operate in the previous mode that the power was turned off.

- To turn off the power, press "VOL/PWR" knob (1) for about 1 second.

Adjusting the volume

Turn "VOL/PWR" knob (1).

- Turning it clockwise increases the volume.
- Turning it counterclockwise decreases the volume.

Mute

- Press "VOL/PWR" knob(1) to mute the sound.
- To cancel mute, press any button.

NOTE:

For the purpose of safe driving, adjust the audio volume to a level that allows you to hear sounds outside of the vehicle including car horns and particularly emergency vehicle sirens.


Display & Back setting

Press "DISP/BACK" button to go back to the previous display when a list or menu screen is displayed.

On long pressing "DISP/BACK" button, tuner display will be turned OFF. However all operations such as media playing etc will be active. Display will be turned ON by pressing any button on audio unit, steering switches or any other interrupt such as handsfree calling etc.

Sound settings


- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (6) to select "Sound Settings", and press the knob (6) to determine the selection.
- 3) Turn "TUNE/FLD" knob (6) to select one of the settings as follows, and press the knob (6) to determine the selection.

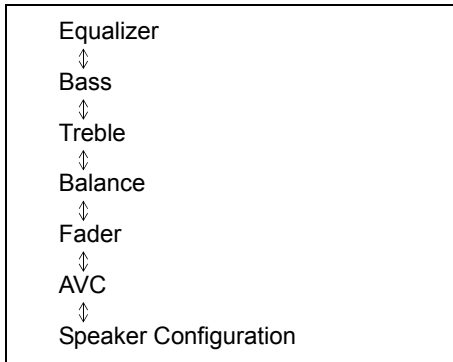

Equalizer

The equalizer can set various types of sounds depending on the type of music.

- 1) Turn "TUNE/FLD" knob (6) to select "Equalizer", and press the knob (6) to determine the selection.
- 2) Turn "TUNE/FLD" knob (6) to select one of the settings as follows, and press the knob (6) to determine the selection.

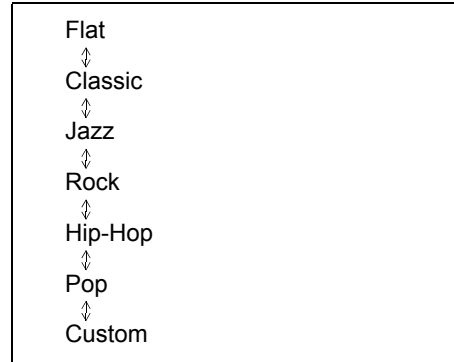

NOTE:

- When you select "Custom", the sound curve can be adjusted as your preference. Turn "TUNE/FLD" knob (6) to adjust values of sound, and press the knob (6) to determine the selection.
- ">> <<" mark appears at both left and right ends of the currently selected equalizer.

Adjusting bass/treble/balance/fader

- 1) Turn "TUNE/FLD" knob (6) to select "Bass", "Treble", "Balance" or "Fader", and press the knob (6) to determine the selection.
 - 2) Turn "TUNE/FLD" knob (6) to adjust the sound, and press the knob (6) to determine the selection.
- "Bass" / "Treble":
 - Can be adjusted in levels -6 to 0 to +6.
 - Turn "TUNE/FLD" knob (6) clockwise to increase the frequency & counter clockwise to decrease the frequency.
 - "Balance":
 - Can be adjusted in 9 level left to right.
 - Turn "TUNE/FLD" knob (6) clockwise to emphasize the right speaker, and turn the knob (6) counterclockwise to emphasize the left speaker.
 - "Fader":
 - Can be adjusted in 9 level back to front.
 - Turn "TUNE/FLD" knob (6) clockwise to emphasize the front speaker, and turn the knob (6) counterclockwise to emphasize the rear speaker (if equipped).

NOTE:

When you adjust to emphasize the rear speakers, sound output may fade out completely in case vehicle is not equipped with rear speakers.

OTHER CONTROLS AND EQUIPMENT

Adjusting the AVC (Auto volume control)

The Auto Volume Control (AVC) function automatically adjusts (increases/decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with four selectable levels (LEVEL OFF, 1, 2, 3). The level of volume adjustment increases together with the LEVEL number.

- 1) Turn "TUNE/FLD" knob (6) to select "AVC", and press the knob (6) to determine the selection.
- 2) Turn "TUNE/FLD" knob (6) to adjust the level, and press the knob (6) to determine the selection.

Adjusting the sound parameters as per speaker configuration

- 1) Turn "TUNE/FLD" knob (6) to select "Speaker Configuration", and press the knob (6) to determine the selection.
- 2) Turn "TUNE/FLD" knob (6) to select "2SPK" or "4SPK", and press the knob (6) to determine the selection.


- "2SPK":
Sound is generated from the front speakers.
- "4SPK" (if equipped):
Sound is generated from the all speakers.

NOTE:

For optimal sound experience, ensure that speaker configuration is selected as per the actual speakers present in the vehicle.

System settings

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (6) to select "System Settings", and press the knob (6) to determine the selection.
- 3) Turn "TUNE/FLD" knob (6) to select one of the settings as follows, and press the knob (6) to determine the selection.

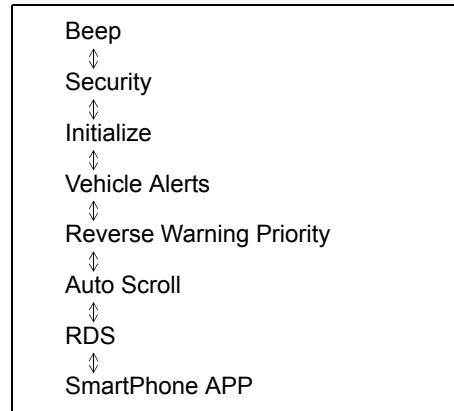

Beep on/off

Beep sound is activated when error message is displayed or during operations of few button.

Beep setting can be turned on or off through the following steps:

- 1) Turn "TUNE/FLD" knob (6) to select "Beep".
- 2) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".

Security setting

Refer to "Anti-theft feature" later in this section.

Initialize setting


You can delete the registered Bluetooth® device information.

- 1) Turn "TUNE/FLD" knob (6) to select "Initialize", and press the knob (6) to determine the selection.
- 2) Turn "TUNE/FLD" knob (6) to select "Reset BT", and press the knob (6) to determine the selection.
- 3) Turn "TUNE/FLD" knob (6) to select "YES", and press the knob (6) to determine the selection for resetting.

Vehicle alerts setting

You can turn on or off the warning indications related to vehicle system using this setting. By default, this setting is ON for all alerts.

- 1) Turn "TUNE/FLD" knob (6) to select "Vehicle Alerts", and press the knob (6) to determine the selection.
- 2) Turn "TUNE/FLD" knob (6) to select one of the settings as follows, and press the knob (6) to determine the selection.

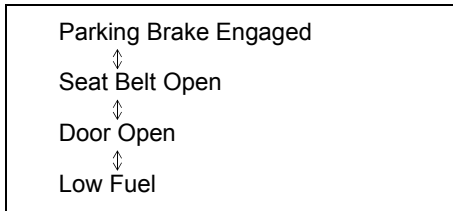

- 3) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".
- 4) Following are the warning display related to vehicle system:
 - "Parking Brake Engaged": This message will appear when the vehicle is moved without releasing the parking brake. Check that parking brake is fully released.
 - "Seat Belt Open": This message will appear when the vehicle is moving and driver has not fastened his seat belt.

- "Door Open": This message will appear when any door (except tailgate) is open when the vehicle is moving.
- "Low Fuel": This message will appear to remind to fill the fuel. Fill the fuel immediately.

NOTE:

If you push "DISP/BACK" button (4) while the warning and indicator messages is displayed, the indication will disappear.

Reverse warning priority setting

On applying reverse, volume of audio system gets lowered. By default, this setting is ON. This setting can be turned on or off through the following steps:

- 1) Turn "TUNE/FLD" knob (6) to select "Reverse Warning Priority", and press the knob (6) to determine the selection.
- 2) Turn "TUNE/FLD" knob (6) to select "No" or "Yes", and press the knob (6) to determine the selection.

Auto scroll setting

Auto scroll setting is ON by default.

When playing the media files, if the files text contains more characters, ">" mark will appear at the right end up the display screen and the display changes to the next set of characters automatically.

- 1) Turn "TUNE/FLD" knob (6) to select "Auto Scroll".
- 2) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".

RDS (Radio Data System) setting

Enabling this setting displays the messages transmitted by FM station. This setting is ON by default. You can choose to turn ON/OFF this setting through the following steps:

- 1) Turn "TUNE/FLD" knob (6) to select "RDS".
- 2) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".

NOTE:

- Messages are displayed only when RDS signal is included in FM radio waves.
- The messages are displayed program service name only.

Smartphone app setting

Refer to section 5-49 for details about smartphone application.

Smartphone app can be used only when app setting is enable as ON.

Refer to "Suzuki Smartplay Dock application" later in this section for details.

- 1) Turn "TUNE/FLD" knob (6) to select "SmartPhone APP".
- 2) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".


NOTE:

An Apple device can be connected in either Bluetooth® or iPod mode. Bluetooth® mode has higher priority over iPod Mode. In case, you want to connect the Apple device on iPod mode instead and change Smartphone app setting to "OFF".

OTHER CONTROLS AND EQUIPMENT

Listening to the radio

EXAMPLE

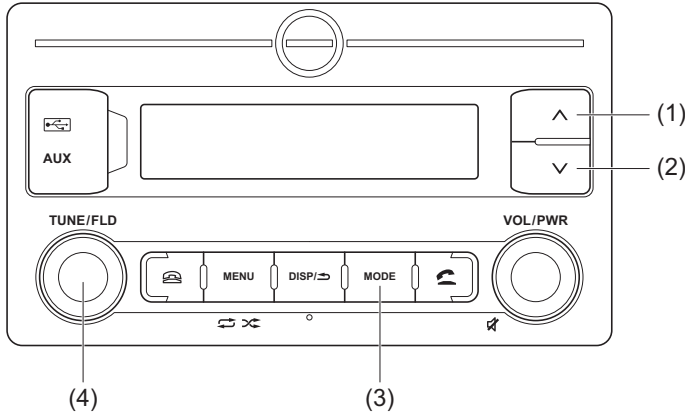

- (1) UP button
- (2) DOWN button
- (3) "MODE" button
- (4) "TUNE/FLD" knob

- (A) Frequency
- (B) Band
- (C) Auto store mode indication
- (D) RDS data

NOTE:


Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station.

Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

69RH145

Display

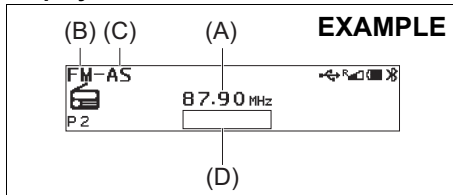

69RM05002

Selecting the band

- 1) Press and hold "MODE" button (3) to change to the list of available modes.
- 2) Turn "TUNE/FLD" knob (4) to select "FM" or "AM", and press the knob (4) to determine the selection.

NOTE:

You can also switch the display in sequence by short pressing the "MODE" button (3).

Seek tuning

Press and hold UP button (1) or DOWN button (2) to start searching.

The unit stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

Turn "TUNE/FLD" knob (4).
The frequency being received is displayed.

Preset memory

- 1) Tune to the desired station.
- 2) Press "TUNE/FLD" knob (4) to change the display to the preset channel list.
- 3) To store the station, turn "TUNE/FLD" knob (4) to select one of the channels, and press and hold the knob (4) to determine the selection.
- 4) To select station from the preset channel list, press "TUNE/FLD" knob (4) to change the display to the preset channel list.
Turn "TUNE/FLD" knob (4) to select one of the channels, and press the knob (4) to determine the selection.

NOTE:

12 stations can be stored for FM, and 6 stations can be stored for AM.
In case a station is stored over an existing preset station, previous data will be overridden.

Auto store

- 1) Press and hold "TUNE/FLD" knob (4) to start searching when in FM/AM mode. Some stations in good reception will automatically be stored to preset channel list in order, starting from a station whose frequency is the lowest.
- 2) To select station from the preset channel list, press "TUNE/FLD" knob (4) to change the display to the preset channel list while auto store mode indication (C) is displayed.


NOTE:

- Auto Store can be cancelled by pressing the "DISP/BACK" button.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- 6 stations can be preset for FM-AS, and 6 stations can be preset for AM-AS in auto store mode.

OTHER CONTROLS AND EQUIPMENT

Listening to files stored in a USB device

EXAMPLE

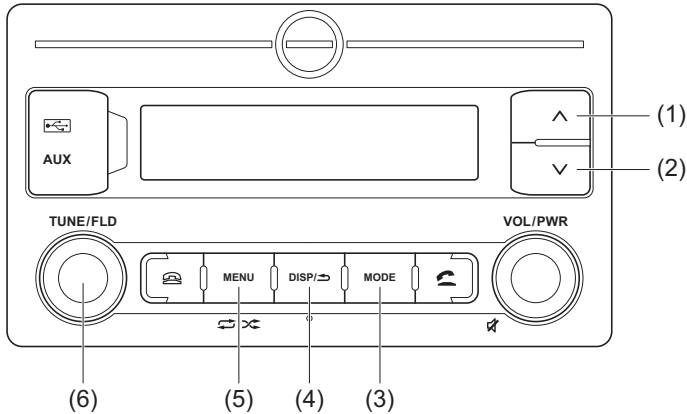

69RH146

- (1) UP button
- (2) DOWN button
- (3) "MODE" button
- (4) "DISP/BACK" button
- (5) "MENU" button
- (6) "TUNE/FLD" knob


- (A) Track number
- (B) Play time
- (C) Current Active track information
(if supported by audio device)
- (D) Repeat/Random status Indication

NOTICE

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating, smoke and permanent damage to audio system.

Display

EXAMPLE

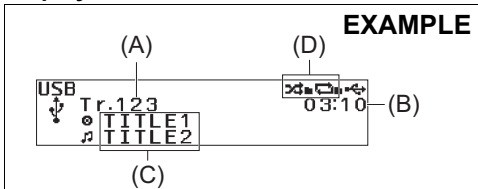

69RM05003

Selecting a USB device mode

- 1) Press and hold "MODE" button (3) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "USB", and press the knob (6) to determine the selection.

NOTE:

You can also switch the display in sequence by short pressing the "MODE" button (3).

Selecting a folder

Turn "TUNE/FLD" knob (6) to select the desired folder.

Selecting a track

- Press UP button (1) to listen to the next track.
- Press DOWN button (2) twice to listen to the previous track.
When DOWN button (2) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Press and hold UP button (1) to fast forward the track.
- Press and hold DOWN button (2) to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Repeat playback

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Repeat".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.



- FILE
The track currently being played will be played repeatedly.
- FOLDER
All the tracks in the folder currently selected will be played repeatedly.

Random playback

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Random".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.




- FOLDER
The tracks in the currently selected folder will be played in random order.
- ALL
The tracks in the connected USB device will be played in random order.

OTHER CONTROLS AND EQUIPMENT

Display change

Press "DISP/BACK" button (4).

Each time the button is pressed, display will change as follows:

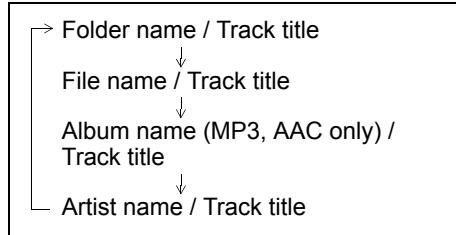

NOTE:

- "NO TITLE" will be displayed when there is no text information in the file currently being played.
- If text data contains more characters than the display area, ">" mark will appear at the right end.

Notes on USB device

Compatible USB devices

- USB mass storage class
For details as to whether your USB memory/USB audio is compatible with USB mass storage class, please contact the USB memory/USB audio manufacturer.
- Audio file
MP3 (.mp3) / WMA (.wma) / AAC (.m4a) / AAC (.aac)
- File system
FAT 16/32, VFAT (supporting long file name)
- USB standard compatibility
1.1/2.0 full speed
- Maximum current less than 2.1 A
- If a USB hub or extension cable is connected to the audio system, it may not be recognized. In this case, directly connect the USB device to the audio system.
- Devices such as MP3 players/mobile phones/digital cameras may not be recognized as audio systems for playing music and 'USB READ ERROR' message may be displayed.

USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port present on audio system.
- Depending on the USB flash drive that you are using, (non-brand product, USB flash drive that has been externally damaged) it may disable connection or cause unstable operation.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand. We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA format.

Playing MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.
- The DRM (Digital Rights Management) file cannot be played.

Compatible compression formats

MP3

- Bit rate
 - MPEG1 Audio Layer III: 32 up to 320 kbps
 - MPEG2 Audio Layer III: 8 up to 160 kbps
 - MPEG2.5 Audio Layer III: 8 up to 160 kbps
- VBR: up to 384 kbps (MAX.)
- Sampling frequency
 - MPEG1 Audio Layer III: 32/44.1/48 kHz
 - MPEG2 Audio Layer III: 16/22.05/24 kHz
 - MPEG2.5 Audio Layer III: 8/11.025/12 kHz
- Channel
 - Stereo/Joint stereo/Dual channel/
Monaural
- ID3 tag
 - ID3v1.x/ID3v2.x

WMA

- Windows Media Audio Ver.7/Ver.8/Ver.9 Standard compliant
- Bit rate: 32 up to 320 kbps
- VBR: up to 384 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- WMA tag: Ver.8.0
- Channel: 2 Channels

AAC

- Bit rate: 16 up to 320 kbps
- VBR: up to 320 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- AAC tag: iTunes m4a metadata

Maximum number of files/folders


- Maximum number of files: 2500
- Maximum number of files in a folder: 255
- Maximum number of folders: 255
 - Root folder and empty folder are included.
- Maximum depth of tree structure: 8

NOTICE


Never use “.mp3”, “.wma” or “.m4a” as a file name extension if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.

OTHER CONTROLS AND EQUIPMENT

Listening to an iPod

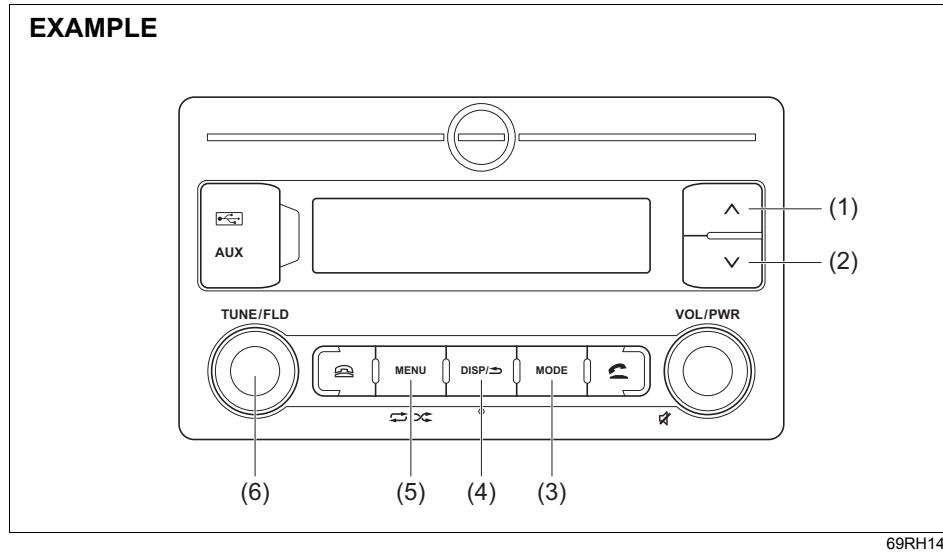

Display

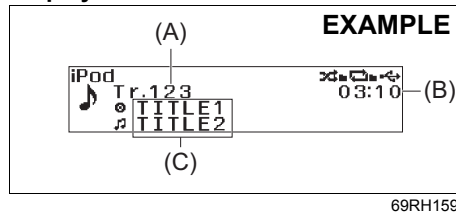

Fast forwarding/rewinding a track

- Press and hold UP button (1) to fast forward the track.
- Press and hold DOWN button (2) to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Repeat playback

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Repeat".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.



- FOLDER
All the tracks in the folder currently selected will be played repeatedly.
- SONG
The track currently being played will be played repeatedly.

NOTE:
Settings may be displayed depending on the model of iPod.

Random playback

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Random".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.




- SONG
The tracks in the iPod will be played in random order.

NOTE:
Settings may be displayed depending on the model of iPod.

Display change

Press "DISP/BACK" button (4). Each time the button is pressed, display will change as follows:

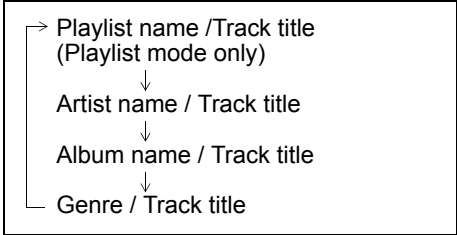

- NOTE:*
- "NO TITLE" will be displayed when there is no text information in the file currently being played.
 - If text data contains more characters than the display area, ">" mark will appear at the right end.

Selecting a category

Categories such as Artist, Album, Podcast, Genre, Audiobook, Playlist, Song may be displayed depending on the model of iPod.

- 1) Press and hold "TUNE/FLD" knob (6) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select one of the categories, and press the knob (6) to determine the selection.

OTHER CONTROLS AND EQUIPMENT

Notes on iPod/iPhone

Made for iPod/iPhone

- iPod touch (6th generation)*
- iPod touch (5th generation)*
- iPod nano (7th generation)*
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- iPhone SE
- iPhone 6s Plus
- iPhone 6s
- iPhone 6 Plus
- iPhone 6
- iPhone 5s
- iPhone 5c
- iPhone 5

* Some functions may not be available depending on the model of iPod.

iPod




69RH201

- Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPod touch, iPod nano, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

NOTE:

Please do not connect iPod accessory such as iPod remote control or headphones while connecting the iPod with the unit. Unit may not operate correctly.


AUX function

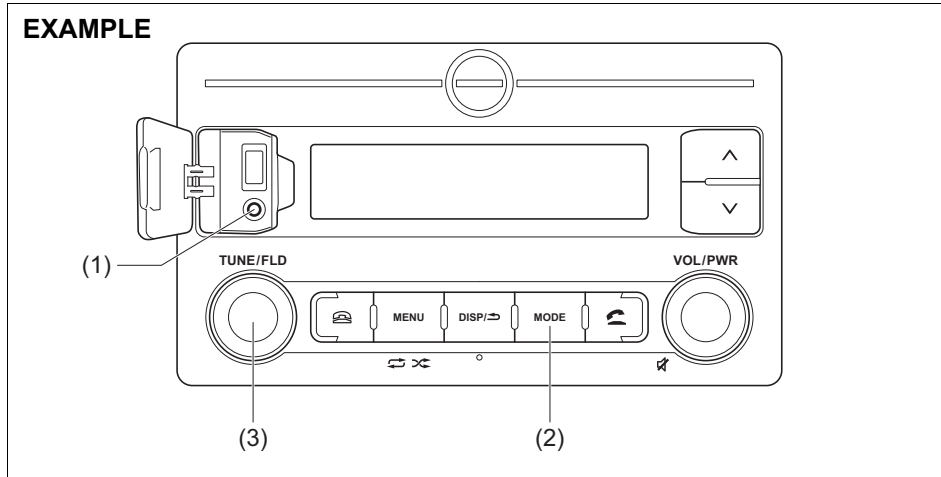

69RH147

- (1) AUX socket
- (2) "MODE" button
- (3) "TUNE/FLD" knob

Display

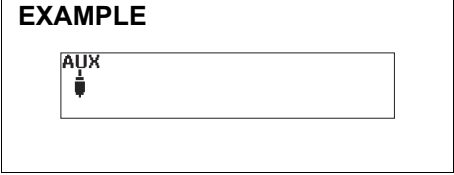

69RH160

AUX connection

To listen to auxiliary audio sources (sold separately) through the unit, follow the instruction below.

- 1) Connect the auxiliary audio source to the AUX socket (1) with an AUX cable.
- 2) Press and hold "MODE" button (2) to change the display.
- 3) Turn "TUNE/FLD" knob (3) to select "AUX", and press the knob (3) to determine the selection.

NOTE:

You can also switch the display in sequence by short pressing the "MODE" button (2).

OTHER CONTROLS AND EQUIPMENT

 **CAUTION**


- Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.

NOTE:

- *Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.*
- *The volume and tone controls of the auxiliary audio source can be adjusted on the unit.*
- *In AUX mode, the volume which is set is different from another mode.*

Setting of Bluetooth® devices


EXAMPLE

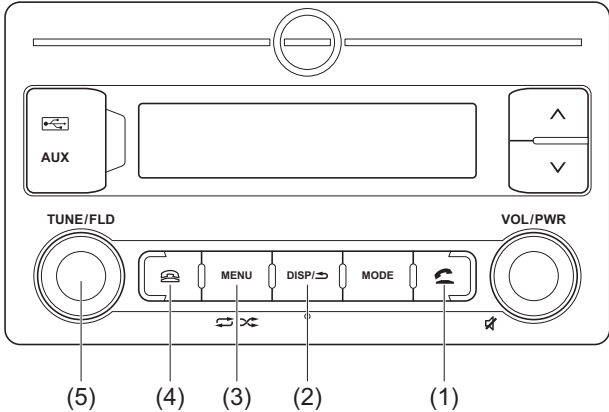

69RH185

Steering switch (if equipped)

EXAMPLE

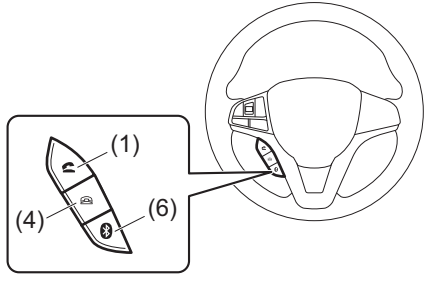

69RM05004

- (1) OFF HOOK button
- (2) "DISP/BACK" button
- (3) "MENU" button
- (4) ON HOOK button
- (5) "TUNE/FLD" knob
- (6) Bluetooth® setting button

⚠ WARNING

Do not register or set the Bluetooth® device while driving. Stop your vehicle in a safe area before registering the device.

Bluetooth® related settings can be entered only when the vehicle is in stationary condition.

OTHER CONTROLS AND EQUIPMENT

Registration of Bluetooth® devices

To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system. Up to 5 Bluetooth® devices can be registered.

NOTE:

- *Certain functions cannot be used depending on the Bluetooth® device.*
- *Refer to the instruction manual of your Bluetooth® device regarding the operation method of Bluetooth®.*
- *If the pairing cannot be established, the connection operation is canceled. For the Bluetooth® device pairing method, refer to the instruction manual of your Bluetooth® device or try pairing again.*

- 1) Press "MENU" button (3). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- 3) Turn "TUNE/FLD" knob (5) to select "Pairing", and press the knob (5) to determine the selection.
- 4) Turn "TUNE/FLD" knob (5) to select "Name & Passkey", and press the knob (5) to determine the selection.

NOTE:

If you have no Bluetooth® device to be registered, you can also switch the display to "Pairing Name" and "Passkey" at once by pressing the Bluetooth® setting button (6),

OFF HOOK button (1) or ON HOOK button (4).

- 5) Operate and register the Bluetooth® device.

Secure Simple Pairing (SSP) incompatible Bluetooth® device:

Enter the passkey into the Bluetooth® device.

Secure Simple Pairing (SSP) compatible Bluetooth® device:

Select "Yes" to register the Bluetooth® device.

It is possible to automatically register devices depending on the type of Bluetooth® device.

NOTE:

If the Bluetooth® device contains music player and mobile phone function, both functions will be registered simultaneously. When deleting a Bluetooth® device, both functions will be deleted simultaneously.

Selection from the Bluetooth® phone list

The list of paired mobile phones is displayed and the various settings can be changed.

- 1) Press "MENU" button (3). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- 3) Turn "TUNE/FLD" knob (5) to select "Pairing", and press the knob (5) to determine the selection.

NOTE:

If you have the mobile phone which currently connected, you can also switch the display to "Pairing" at once by pressing the Bluetooth® setting button (6).

- 4) Turn "TUNE/FLD" knob (5) to select "Pairing Phone List", and press the knob (5) to determine the selection.
- 5) Turn "TUNE/FLD" knob (5) to select one of the registered mobile phones, and press the knob (5) to determine the selection.

NOTE:

">>" mark appears at the left end of the currently connected mobile phone.

- 6) Turn "TUNE/FLD" knob (5) to select one of the settings as follows, and press the knob (5) to determine the selection.

- "Connect": Connect a registered mobile phone.
- "Disconnect": Disconnect a registered mobile phone.
- "Delete": Delete a registered mobile phone.

NOTE:

If a device is deleted from phone list, it will be deleted from audio list as well.

Selection from the Bluetooth® audio list

The list of paired Bluetooth® audio is displayed and the various settings can be changed.

- 1) Press “MENU” button (3). Setup menu will be displayed.
- 2) Turn “TUNE/FLD” knob (5) to select “Bluetooth Settings”, and press the knob (5) to determine the selection.
- 3) Turn “TUNE/FLD” knob (5) to select “Pairing”, and press the knob (5) to determine the selection.

NOTE:

If you have the Bluetooth® audio which currently connected, you can also switch the display to “Pairing” at once by pressing the Bluetooth® setting button (6).

- 4) Turn “TUNE/FLD” knob (5) to select “Pairing Audio List”, and press the knob (5) to determine the selection.
- 5) Turn “TUNE/FLD” knob (5) to select one of the registered Bluetooth® audio devices, and press the knob (5) to determine the selection.

NOTE:

“>>” mark appears at the left end of the currently connected Bluetooth® audio.

- 6) Turn “TUNE/FLD” knob (5) to select one of the settings as follows, and press the knob (5) to determine the selection.

- “Connect”:
Connect a registered Bluetooth® audio.

- “Disconnect”:
Disconnect a registered Bluetooth® audio.
- “Delete”:
Delete a registered Bluetooth® audio.

NOTE:

If a device is deleted from audio list, it will be deleted from phone list as well.

Managing paired devices

The devices paired with the audio unit can be managed from the “Bluetooth® settings” screen. You can connect one Bluetooth® device as audio and another Bluetooth® device as phone from registered Bluetooth® devices simultaneously.

Change of passkey

- 1) Press “MENU” button (3). Setup menu will be displayed.
- 2) Turn “TUNE/FLD” knob (5) to select “Bluetooth Settings”, and press the knob (5) to determine the selection.
- 3) Turn “TUNE/FLD” knob (5) to select “Pairing”, and press the knob (5) to determine the selection.

NOTE:

If you have the Bluetooth® device which currently connected, you can also switch the display to “Pairing” at once by pressing the Bluetooth® setting button (6).

- 4) Turn “TUNE/FLD” knob (5) to select “Edit Passkey”, and press the knob (5) to determine the selection.

- 5) Turn “TUNE/FLD” knob (5) to select a number for the first digit, and press the knob (5) to determine the selection. Select and determine numbers for from the second to fourth digits in order in the same manner.
- 6) Press “TUNE/FLD” knob (5) to determine the passkey setting.

Automatic connection with the Bluetooth® device

If the “BT Power” is set to “ON”, turning the ignition switch to “ON” position will automatically connect the registered Bluetooth® device.

- With the automatic connection, the Bluetooth® device that was connected last will be prioritized.

- 1) Press “MENU” button (3). Setup menu will be displayed.
- 2) Turn “TUNE/FLD” knob (5) to select “Bluetooth Settings”, and press the knob (5) to determine the selection.
- 3) Turn “TUNE/FLD” knob (5) to select “Initial Settings”, and press the knob (5) to determine the selection.
- 4) Turn “TUNE/FLD” knob (5) to select “BT Power”.
- 5) Press “TUNE/FLD” knob (5) to select “ON” or “OFF”.

NOTE:

- *When “BT Power” is set to “OFF”, the audio system disconnects from the registered Bluetooth® device.*

OTHER CONTROLS AND EQUIPMENT

- If “BT Power” is set to “OFF”, the audio system will not automatically reconnect the next time the ignition is switched on.

The device status will be displayed

- 1) Press “MENU” button (3). Setup menu will be displayed.
- 2) Turn “TUNE/FLD” knob (5) to select “Bluetooth Settings”, and press the knob (5) to determine the selection.
- 3) Turn “TUNE/FLD” knob (5) to select “Pairing”, and press the knob (5) to determine the selection.

NOTE:

If you have the Bluetooth® device which currently connected, you can also switch the display to “Pairing” at once by pressing the Bluetooth® setting button (6).

- 4) Turn “TUNE/FLD” knob (5) to select “Device Information”, and press the knob (5) to determine the selection. The device name and address will be displayed.

Initialize Bluetooth® settings

It is possible to initialize the Bluetooth® settings.

⚠ CAUTION

- Do not initialize the settings while driving. Stop your vehicle in a safe area before initializing the device.
- Initialize with caution. Initialized settings cannot be restored.

- 1) Press “MENU” button (3). Setup menu will be displayed.
- 2) Turn “TUNE/FLD” knob (5) to select “Bluetooth Settings”, and press the knob (5) to determine the selection.
- 3) Turn “TUNE/FLD” knob (5) to select “Initial Settings”, and press the knob (5) to determine the selection.
- 4) Turn “TUNE/FLD” knob (5) to select “Initialize BT”, and press the knob (5) to determine the selection.
- 5) Turn “TUNE/FLD” knob (5) to select “YES”, and press the knob (5) to determine the selection.

- Items to be initialized:
 - BT Power
 - Talk Volume
 - Ring Volume

Notes on Bluetooth®



73R0209

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.

This telecommunication equipment con-

forms to the requirements of the National Telecommunications Commission.

- Stop using this unit and a Bluetooth® ready device whenever requested. This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.


Profile

- SSP (Secure Simple Pairing)
- PBAP (Phone Book Access Profile)
- OPP (Object Push Profile)
- HFP (Hand-Free Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)
- SPP (Serial Port Profile)

NOTE:


- After the Audio system is turned ON, it takes a few seconds to detect and set up Bluetooth® related settings.
- For Bluetooth related issues, unpair, restart your smartphone and try again.

Bluetooth® hands-free

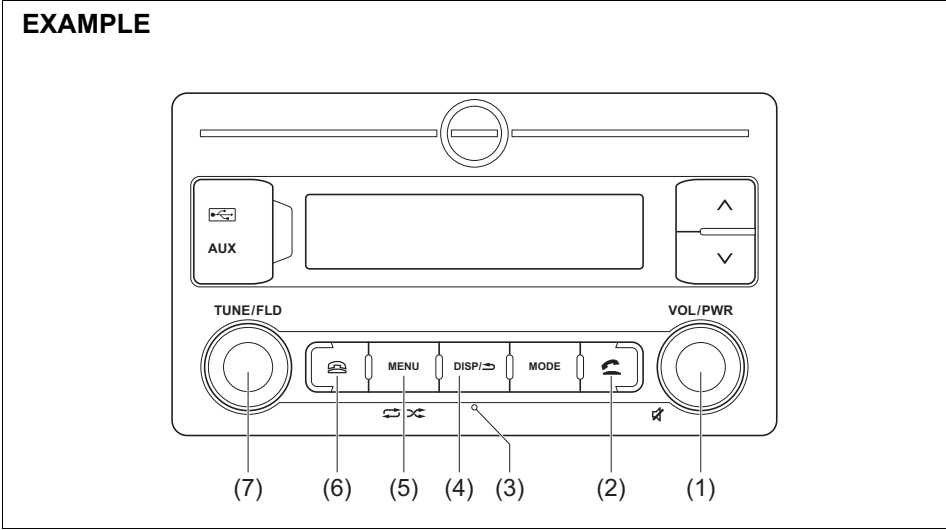

69RH187

Steering switch (if equipped)

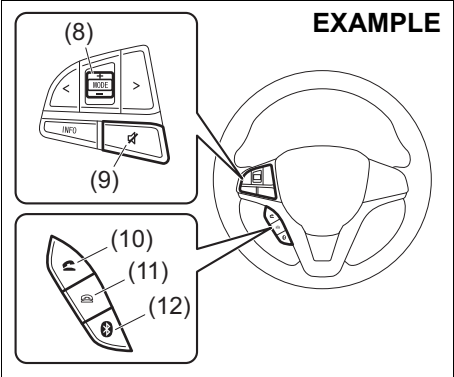

69RH188

- (1) "VOL/PWR" knob
- (2) OFF HOOK button (on audio)
- (3) Microphone
- (4) "DISP/BACK" button
- (5) "MENU" button
- (6) ON HOOK button (on audio)
- (7) "TUNE/FLD" knob
- (8) Volume button
- (9) Mute button
- (10) OFF HOOK button (on steering wheel)
- (11) ON HOOK button (on steering wheel)
- (12) Bluetooth® setting button

OTHER CONTROLS AND EQUIPMENT

NOTICE

- Do not leave your mobile phone inside your vehicle. If the temperature inside the vehicle increases, it may damage your mobile phone.
- When disposing your vehicle, make sure to delete all personal information saved to the audio system.
- The following hands-free data must be deleted from the audio system.
 - Speed dial
 - Reception history/Incoming call history
 - Bluetooth® phonebook data

NOTE:

- Please keep your phone volume low. The person's voice who you are talking to may be heard outside of the vehicle and increase the voice echo. When talking on the phone, speak clearly towards the microphone.
- In the following cases, your voice may not be heard clearly by the person on the other line:
 - When driving on unpaved roads. (If there is loud traffic noise.)
 - When driving at high speeds.
 - When driving with the window open.
 - If the air conditioner is blowing directly towards the microphone.
 - When the sound of the air conditioner fan is loud.

- When there is an adverse effect to the sound quality of the phone or network that you are using.
- The audio system may not function under the following conditions.
 - When the phone power is not turned on.
 - When the mobile phone is out of service.
 - When the mobile phone is not connected.
 - When the mobile phone battery is low
- The Bluetooth®'s hands-free operation is dependent upon the mobile phone's compatibility.
- The Bluetooth®'s hands-free performance is affected by the driving conditions of mobile phone networks, handsets and vehicles.
- The audio system's performance may be restricted due to the model of your mobile phone.
- Bluetooth®, phone battery level and network signal strength status are displayed only when a phone is connected to the system.
- The information depends on status received from the phone.
- The call, contact synchronization action is controlled from the smartphone.

To use the hands-free function with this unit, it is required to register the phone in advance.

It is possible to register a mobile phone and register the phone number to the audio system as follows:

- Up to 1,000 phone numbers can be saved for every registered mobile phone.
- Up to 30 phone numbers of the latest calls can be stored. (30 calls including missed, received and dialed call).
 - When the call history exceeds 30 calls, they are deleted from the oldest one first, and the latest call history information is displayed in descending order.
- Up to 6 phone numbers can be saved to the speed dial list.
- When attempts to establish the pairing fail within 60 seconds, the connecting operation will be canceled. Try to establish the pairing again or refer to the manual of the phone in use for how to establish the pairing with the phone.

Answer the phone

Press OFF HOOK button (2) or (10).

- When you press the ON HOOK button (6) or (11) during an incoming call, you can block the call. (Only for compatible phone units)

NOTE:

- If you receive a call from a registered phone, the caller's name will appear on the screen.
- If you receive a call from an unregistered phone, only the caller's phone number will appear on the screen.

Hang up the phone

When the call is finished, press the ON HOOK button (6) or (11).

Call waiting

When a phone call is interrupted by a second call, it is possible to hold the current call and answer the other incoming call.

To talk to incoming call:

- Press the OFF HOOK button (10) or (2). The current call will be put on hold.
- Every time you press OFF HOOK button (10) or (2), the phone call will be switched to the call which was put on hold.
- When the current call is completed, the call which was put on hold will connect.

To refuse the incoming call:

- Press the ON-HOOK button (11) or (6).

NOTE:

This function can only be used with phone units that are compatible with call waiting.

Move call to Private mode

If you wish to move a call to private mode, press the "DISP/BACK" button (4).

To move the call back to Handsfree mode, press the OFF/ON hook button.

Mute the reception volume

Press "VOL/PWR" knob (1) or mute button (9).

- To deactivate the mute volume, press "VOL/PWR" knob (1) or mute button (9) again.

Adjust the reception volume

- Turn "VOL/PWR" knob (1) during a call. Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press volume button (8) during a call. Pressing the button up increases the volume; pressing the button down decreases the volume.

NOTE:

The volume and microphone sensitivity settings vary depending on the specifications of each mobile phone.

Adjust the ringtone volume

- Turn "VOL/PWR" knob (1) during an incoming call. Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press volume button (8) during an incoming call. Pressing the button up

increases the volume; pressing the button down decreases the volume.

Adjust the volume with the Bluetooth® settings

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select "Initial Settings", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Talk volume" or "Ring volume", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to adjust the volume, and press the knob (7) to determine the selection.

Make a call

Press the OFF HOOK button (2) or (10) to enter the telephone mode.

Use the phonebook

- 1) Turn "TUNE/FLD" knob (7) to select "Contacts", and press the knob (7) to determine the selection.
- 2) Turn "TUNE/FLD" knob (7) to select the desired initials, and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select the desired name, and press the knob (7) to determine the selection.

OTHER CONTROLS AND EQUIPMENT

- 4) Turn "TUNE/FLD" knob (7) to select the desired phone number, and press the knob (7) or OFF HOOK button (2) or (10).

Use the call history

- 1) Turn "TUNE/FLD" knob (7) to select "Call Log", and press the knob (7) to determine the selection.
- 2) Turn "TUNE/FLD" knob (7) to select "All", "Missed", "Dialed" or "Received", and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select the desired name or phone number, and press the knob (7) or OFF HOOK button (2) or (10).

Use the speed dial

- 1) Turn "TUNE/FLD" knob (7) to select "Speed Dial", and press the knob (7) to determine the selection.
- 2) Turn "TUNE/FLD" knob (7) to select the desired name or phone number, and press the knob (7) or OFF HOOK button (2) or (10).

NOTE:

Speed dial numbers must be registered before this function can be used.

Transfer all contacts from your mobile phone

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Setup Contacts", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Overwrite", and press the knob (7) to determine the selection.
- 6) Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Delete the registered phonebook

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Setup Contacts", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Delete Contacts", and press the knob (7) to determine the selection.

- 6) Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Delete the call history

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Setup Contacts", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Delete Call Log", and press the knob (7) to determine the selection.
- 6) Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Registration in speed dial

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Add Speed Dial", and press the knob (7) to determine the selection.

- 5) Turn "TUNE/FLD" knob (7) to select "Add/Modify", and press the knob (7) to determine the selection.
- 6) Turn "TUNE/FLD" knob (7) to select the desired speed dial number, and press the knob (7) to determine the selection.
- 7) Turn "TUNE/FLD" knob (7) to select the desired initials, and press the knob (7) to determine the selection.
- 8) Turn "TUNE/FLD" knob (7) to select the desired name, and press the knob (7) to determine the selection.
- 9) Turn "TUNE/FLD" knob (7) to select the desired Phone number, and press the knob (7) to determine the selection.
- 10) Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Deletion of speed dial

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Add Speed Dial", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Delete", and press the knob (7) to determine the selection.
- 6) Turn "TUNE/FLD" knob (7) to select "Delete All" or "Delete Contact", and press the knob (7) to determine the selection.
 - If you select "Delete Contact", select the name for delete.
- 7) Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Automatic transfer of the phonebook/ call history


When registering the mobile phone, you can select to automatically transfer the phonebook and call history from your device each time after phone is connected. Select according to the following steps.

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- 3) Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Setup Contacts", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Auto Transfer".
- 6) Press "TUNE/FLD" knob (7) to select "ON" or "OFF".

OTHER CONTROLS AND EQUIPMENT

Bluetooth® audio

EXAMPLE

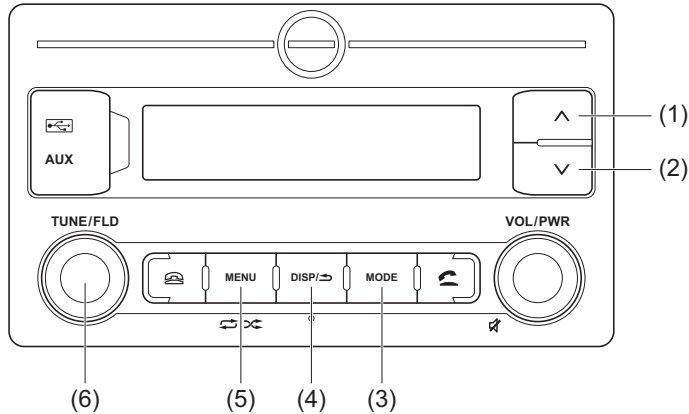

- (1) UP button
- (2) DOWN button
- (3) "MODE" button
- (4) "DISP/BACK" button
- (5) "MENU" button
- (6) "TUNE/FLD" knob

- (A) Track number
(B) Play time
(C) Text information display

NOTE:

Some functions may not be usable on some Bluetooth® devices.

Selecting Bluetooth® audio mode

- 1) Press and hold "MODE" button (3) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Bluetooth", and press the knob (6) to determine the selection.

NOTE:

You can also switch the display in sequence by short pressing the "MODE" button (3).


Selecting a group (only for supported models)

Turn "TUNE/FLD" knob (6) to select a group.

69RH146

Display

EXAMPLE

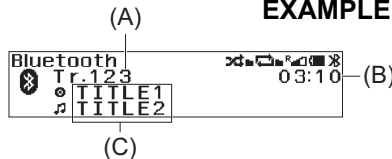

69RH161

Selecting a track


- Press UP button (1) to listen to the next track.
- Press DOWN button (2) twice to listen to the previous track.
When DOWN button (2) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Press and hold UP button (1) to fast forward the track.
- Press and hold down DOWN button (2) to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Repeat playback (if supported by device)

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Repeat".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.

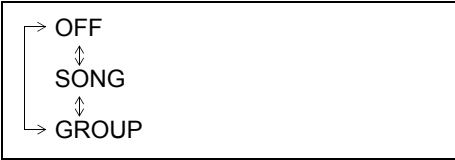


- SONG
The track currently being played will be played repeatedly.

- GROUP
All the tracks in the group currently selected will be played repeatedly.

NOTE:
Settings may be displayed depending on the Bluetooth® device.

Random playback (if supported by device)

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Random".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.

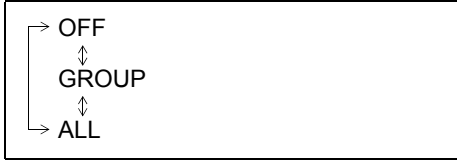


- GROUP
The tracks in the currently selected group will be played in random order.
- ALL
The tracks in the connected device will be played in random order.

NOTE:
Settings may be displayed depending on the Bluetooth® device.

Display change

Press "DISP/BACK" button (4). Each time the button is pressed, display will change as follows:

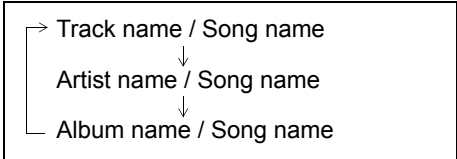

NOTE:
• "NO TITLE" will be displayed when there is no text information in the device currently being played.
• If text data contains more characters than the display area, ">" mark will appear at the right end.


OTHER CONTROLS AND EQUIPMENT

Disclaimer for Bluetooth® function

- Depending on the mobile phone models, some phones may not be compatible fully or partially (some function may be restricted).
- Media playback and handsfree calling through third-party applications is not guaranteed and may have limited support.
- Playback, display contents, connectivity or voice quality etc. may get affected depending on circumstances.
- After the ignition switch is turned to “ON” position the audio system takes few seconds to detect and connect to the Bluetooth® device (if already paired).
- Make sure that you are aware of all applicable local laws and accordingly use Bluetooth® device.

Steering wheel button (if equipped)


Use the steering wheel button to operate the basic functions of the audio system.

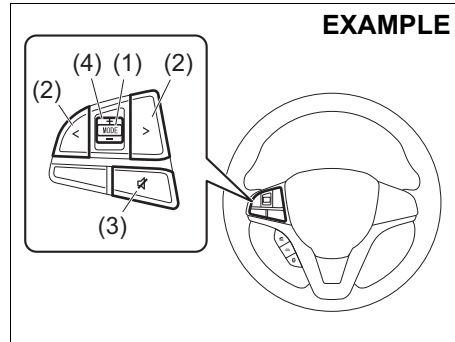

- (1) “MODE” button
- (2) Selection button
 - Selecting the radio station
 - Selecting the track (USB (iPod), Bluetooth® audio mode)
- (3) Mute button
- (4) Volume button

“MODE” button (1)

Each time the button is pressed, the mode will change as follows:

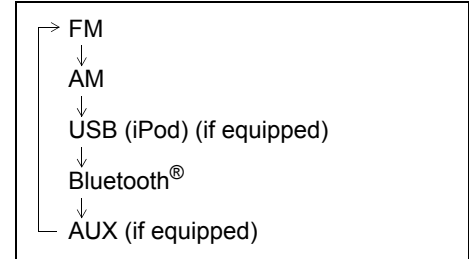

Selection button (2)

- FM, AM mode:
 - Press “>” to transfer to the next preset channel.
 - Press “<” to transfer to the previous preset channel.
 - Press “>” for 1 second or longer, it will search for receivable stations at a high frequency.
 - Press “<” for 1 second or longer, it will search for receivable stations at a low frequency.
- USB (iPod), Bluetooth® audio mode:
 - Press “>” to transfer to the next song. With the folder operation mode, it will transfer to the next folder.

- Press “<” to return to the beginning of the currently playing song. Pressing it twice consecutively will return to the previous song.
With the folder operation mode, it will return to the previous folder.
- Press “>” for 1 second or longer to fast-forward the song.
When the button is released, it will stop fast-forwarding.
- Press “<” for 1 second or longer to rewind the song.
Releasing the button can stop rewinding.

Mute button (3)


- Hands-free/iPod mode:
Each time you press the button the mute will switch from ON/OFF.
- USB mode:
Press the button during playback to temporarily stop the playback.

Volume button (4)

- Hands-free mode:
 - Press “+” during an outgoing or incoming call, the reception/ringtone sound will increase.
 - Press “-” during an outgoing or incoming call, the reception/ringtone sound will decrease.
 - Press “+” during an outgoing call, the ringtone sound will increase.
 - Press “-” during an outgoing call, the ringtone sound will decrease.
- Radio, USB (iPod), Bluetooth® audio, AUX mode:
 - Press “+”, the volume will increase.
 - Press “-”, the volume will decrease.

OTHER CONTROLS AND EQUIPMENT

Anti-theft feature

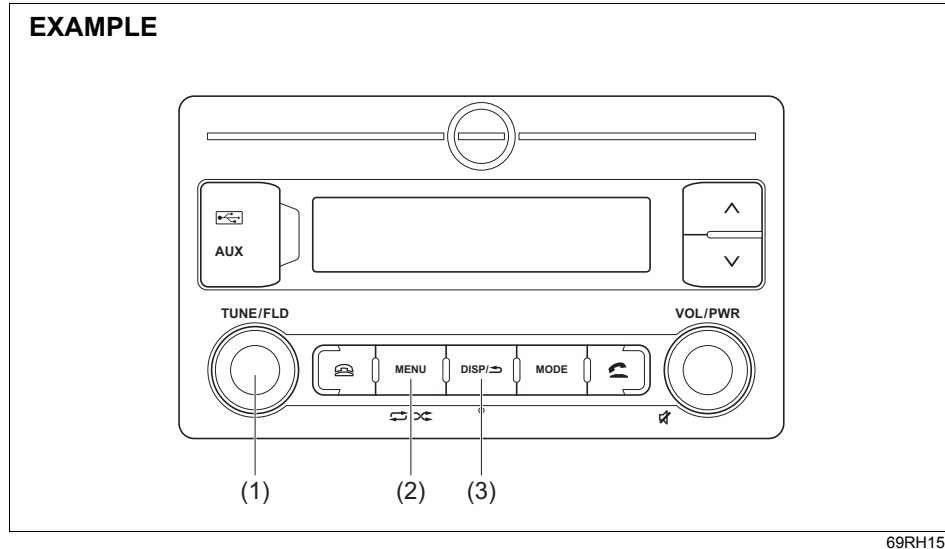


- (1) "TUNE/FLD" knob
- (2) "MENU" button
- (3) "DISP/BACK" button

The anti-theft function is intended to discourage thefts, such as that the audio system becomes inoperable when it is installed on other vehicles.

This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the battery is disconnected, the unit will become inoperable until the PIN is reentered.

Display

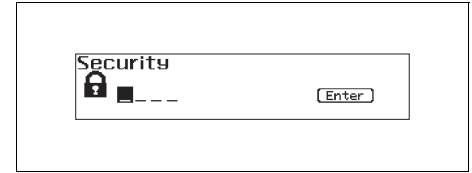

69RH162

Setting the anti-theft function

- 1) Press "MENU" button (2). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (1) to select "System Settings", and press the knob (1) to determine the selection.
- 3) Turn "TUNE/FLD" knob (1) to select "Security", and press the knob (1) to determine the selection.
- 4) Turn "TUNE/FLD" knob (1) to select "ON", and press the knob (1). "----" will be displayed.
- 5) Enter a 4-digit number to be registered as PIN by turning and pressing the "TUNE/FLD" knob (1).
- 6) After entering 4-digit number, press "TUNE/FLD" knob (1) on "Enter" indication. "Do you want to set XXXX as password" will be displayed.
- 7) Turn "TUNE/FLD" knob (1) to select "YES", and press the knob (1). "XXXX is set as password" will be displayed and the anti-theft function will be set.

NOTE:

Take a note of the registered PIN and keep it for the future use.

Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- 1) Press “MENU” button (2). Setup menu will be displayed.
- 2) Turn “TUNE/FLD” knob (1) to select “System Settings”, and press the knob (1) to determine the selection.
- 3) Turn “TUNE/FLD” knob (1) to select “Security”, and press the knob (1) to determine the selection.
- 4) Turn “TUNE/FLD” knob (1) to select “OFF”, and press the knob (1). “----” will be displayed.
- 5) Enter a 4-digit number to be registered as PIN by turning and pressing the “TUNE/FLD” knob (1).
- 6) After entering 4-digit number, press “TUNE/FLD” knob (1) on “Enter” indication. The anti-theft function will be canceled.

NOTE:

To change your PIN, first delete your current PIN, and then set a new one.

Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the battery is replaced, etc, it is required to enter the PIN to make the unit operable again.

- 1) Set the ignition switch to “ACC” position. “SECURITY” will be displayed.
- 2) Press “TUNE/FLD” knob (1). “----” will be displayed.
- 3) Enter a 4-digit number to be registered as PIN by turning and pressing the “TUNE/FLD” knob (1).
- 4) Press and hold “TUNE/FLD” knob (1) for a while.

When the same PIN as registered is entered, the power of the audio system will be turned off automatically and it will become operable again.

NOTE:


If an incorrect PIN is entered, “ERROR” and the total number of incorrect entry attempts will be displayed.

If an incorrect PIN is entered 10 times or more, “Contact Dealer” will be displayed and the audio system will become inoperable.

“Suzuki Smartplay Dock” application

“Suzuki Smartplay Dock” is an application that allows:

- To control the audio system
- Access smartphone features such as calling & messaging.
- Access vehicle information such as Instantaneous & average fuel consumption, history (last 5 driving cycle & last 5 refuel cycle) fuel consumption, driving range & alerts.

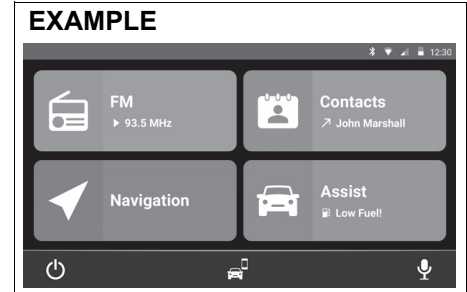

69RM05008

This application can be downloaded on smartphone through Google Play store or Apple App Store.

OTHER CONTROLS AND EQUIPMENT

WARNING

While driving, ensure adherence to all traffic regulations. Insufficient attention to the road and traffic may cause an accident. It is recommended to familiarize with the tutorial section of application before actual usage.

In vehicle running condition, the application can be used in landscape mode only.

merely provides the option to display and operate these applications.

- If many apps are installed, your smartphone might work slowly.*
- For information on using smartphone applications, please read your smartphone instruction manual.*

NOTE:

- For further information on compatible phones and application download process, please refer to MARUTI SUZUKI website.*
- Application is compatible with smartphones supporting iOS version 9.0, Android OS 5.0 and above.*
- Since this audio allows pairing of 2 devices on Bluetooth® simultaneously, application is supported on the phone which is paired through handsfree profile.*
- Application services are subject to change. It is recommended to install the latest updates for optimal experience.*
- Application functioning is dependent on mobile data carrier and smartphone hardware, OS performance.*
- The smartphone manufacturers are responsible for the content and functions of smartphone applications. The device*

Troubleshooting

When encountering a problem, check and follow the instructions below.

If the described suggestions do not solve the problem, it is recommended to take the unit to a authorised Maruti Suzuki workshop.

Problem	Possible cause	Possible solution
---------	----------------	-------------------

Common

Unable to operate	The security function is on.	When “SECURITY” is displayed, enter the PIN. When “Contact Dealer” is displayed, contact a authorised Maruti Suzuki workshop.
Unable to turn on the power (No sound is produced)	Fuse is blown.	Contact a authorised Maruti Suzuki workshop.

Radio

Much noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.

USB

Playback does not start when the USB device is connected	There is no supported format file to play on this unit.	Check the file format.
	The current consumption of the USB device exceeds 2.1 A.	Use a USB device with a current consumption lower than 2.1 A.
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.

OTHER CONTROLS AND EQUIPMENT

Display	Possible solution	Display
Bluetooth®		
Pairing failed	The distance between this unit and the Bluetooth® ready device is too far, or a metallic object may be located between the Bluetooth® ready device and this unit.	Change the location of the Bluetooth® ready device.
	The Bluetooth® function of the Bluetooth® ready device is off.	Refer to the manual of the Bluetooth® ready device. (Some devices have the power saving function that automatically activates after a certain time.)
Unable to receive a call	Your current location may be out of service area.	Drive your vehicle to the service area of the phone.
The voice quality of hands-free is low (Distortion, noise etc.)	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit. Check the microphone opening for obstruction on audio device.

Error display messages


The following messages (flashing) will be displayed onto the screen depending on the condition of the audio system.

Display	Possible solution
USB READ ERROR	When the USB device or iPod reading error occurs, this message will be displayed. Reconnect the USB device or iPod connection cable. When the Bluetooth® audio playback malfunction occurs, this message will be displayed. Check the Bluetooth® audio body.
ERROR 1	When the USB device or iPod communication error occurs, this message will be displayed. Reconnect the USB device or iPod connection cable.
iPod ERROR 1	
ERROR 2	When the USB device or iPod mechanical error occurs, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod.
ERROR 3	If the USB device or iPod does not operate due to an over current, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod.
HUB NOT SUPPORTED	When the USB hub is connected, this message will be displayed. Disconnect the USB hub.
UNSUPPORTED	When an unsupported iPod is connected, this message will be displayed. Connect the supported iPod.
MEDIA NOT SUPPORTED	When an unsupported USB device is connected, this message will be displayed. Connect the supported USB device. When the Bluetooth® audio playback malfunction occurs, this message will be displayed. Check the Bluetooth® audio body.
NO MUSIC	When an empty USB device or iPod is connected, this message will be displayed. Connect the USB device or iPod containing files with the playable extension.

OTHER CONTROLS AND EQUIPMENT

Display	Possible solution
VEHICLE DATA NOT AVAILABLE	Contact your nearest authorised Maruti Suzuki workshop for troubleshooting.
MEMORY FULL	When the maximum limit for number of phonebook data transfer is reached, this message will be displayed. Delete registered data of unnecessary number in phonebook and try to transfer the register phone numbers in the phonebook again.

Talk button (if equipped)

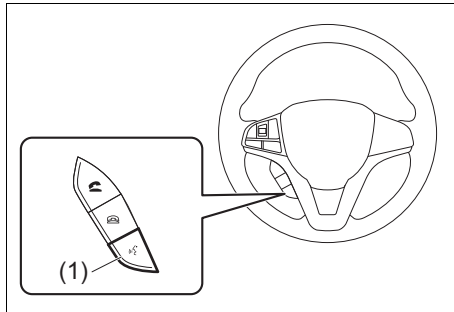


69RH050010

(1) Talk button

- It can be used with a device having a voice recognition function. To use the function, it is necessary to perform a corresponding setting on your device. For operation of the audio system or the navigation system, refer to the supplementary manual, provided along with it.


INSPECTION AND MAINTENANCE

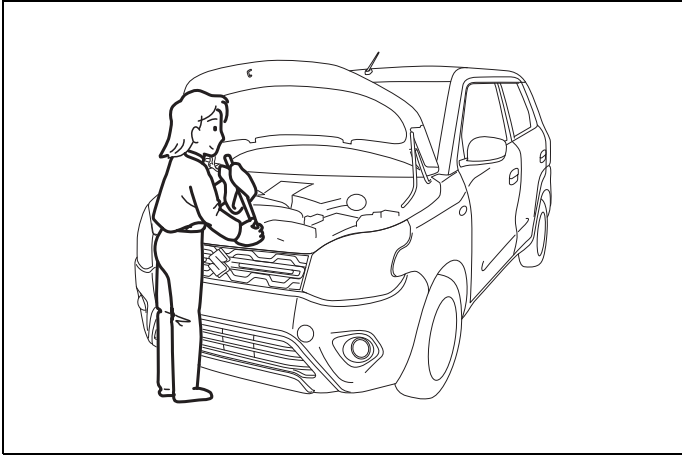

69RM06000

- Maintenance Schedule 6-2
- Periodic Maintenance Schedule 6-2
- Drive belt 6-6
- Engine oil and filter 6-6
- Engine coolant 6-10
- Air cleaner 6-12
- Spark plugs 6-13
- Gear oil 6-13
- Clutch 6-15
- Fuel filter 6-15
- Brakes 6-15
- Steering 6-18
- Tires 6-19
- Battery 6-21
- Fuses 6-24
- Headlight aiming 6-27
- Bulb replacement 6-27
- Wiper blades 6-33
- Windshield washer fluid 6-36
- Air conditioning system 6-37

INSPECTION AND MAINTENANCE

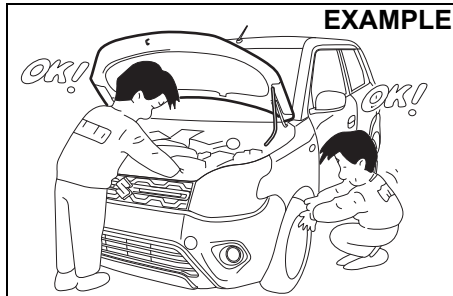

69RM03001

⚠ WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

- To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, check that the battery is disconnected and the ignition switch has been in "LOCK" position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires.

(Continued)

⚠ WARNING

(Continued)

- The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.
- Do not leave the engine running in garages or other confined areas.
- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, check that the parking brake is set fully and the transmission is in Neutral (for manual transmission or Auto Gear Shift vehicles).
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.

(Continued)

⚠ WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorised workshop.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI genuine replacement parts or their equivalent.

Periodic Maintenance Schedule

“C”: Clean

“R”: Replace or Change

“I”: Inspect, clean, adjust, lubricate or replace as necessary

“L”: Lubricate

“T”: Tighten to Specified Torque

“O”: Rotate

NOTE:

- This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.
- For free inspection the cost of materials and consumables to be borne by customer.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
ENGINE												
1-1.	Water pump drive belt (Wear)	-	-	I	I	I	I	I	I	I	I	R
1-2.	Engine Coolant SUZUKI LLC: Super (Blue) (#1,2)	First time only:		Replace at 100000 KM or 60 months whichever comes first.								
	Engine Coolant SUZUKI LLC: Standard (Yellow) (#1,3)	Second time and after:		Replace every 40000 KM or 24 months whichever comes first.								
1-3.	Engine oil, engine oil filter and drain plug gasket (Level, Leakage)	I	I	R	R	R	R	R	R	R	R	R
1-4.	Cooling system hoses and connections (Leakage and Damage)	I	I	I	I	I	I	I	I	I	I	I
1-5.	Engine mounting and manifold fixing (Loose Damage)	-	-	I	-	I	-	I	-	I	-	-
1-6.	Exhaust system (Noise, Leakage etc.)	-	I	-	I	-	I	-	I	-	I	-
1-7.	Positive crank case ventilation system (Hoses, Connections and Valve)	-	I	-	I	-	I	-	I	-	I	-
IGNITION												
2-1.	Spark plug	For petrol		Replace every 100000 KM or 84 months whichever comes first								
		For CNG		Replace every 50000 KM or 48 months whichever comes first								
FUEL												
3-1.	Air cleaner filter element	Paved-road		Clean every 5000 KM. Replace after every 40000 KM.								
		Dusty Condition		Clean every 2500 KM or as required. Replace after every 40000 KM.								
3-2.	Fuel tank cap, fuel lines and connections (Leakage and Damage)	-	I	-	-	-	I	-	-	-	I	-
3-3.	Fuel filter (Leakage)	I	I	I	I	I	R	I	I	I	I	R
CLUTCH AND TRANSMISSION												
4-1.	Clutch pedal (Play)	I	I	I	I	I	I	I	I	I	I	I

#1: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section.

The same type of coolant that is filled at the time of a brand new car should be used when you add or replace the coolant. Refer to "Engine coolant" in this section.

#2: Do not add SUZUKI LLC: Standard (Yellow) Coolant or distilled water or others when your vehicle is originally filled with SUZUKI LLC: Super (Blue) Coolant.

#3: When your vehicle is originally filled with SUZUKI LLC: Standard (Yellow) Coolant, follow the maintenance schedule of SUZUKI LLC: Standard (Yellow) Coolant.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
4-2.	Clutch slipping (Dragging or Excess Damage)											
4-3.	Manual transmission oil / Auto Gear Shift oil (Level, Leakage)											
4-4.	Gear shifter (Operation)											
DRIVE SHAFT												
5-1.	Drive shaft noise											
5-2.	Drive shaft boot (Damage)	-										
BRAKE												
6-1.	Brake fluid (Level, Leakage)											
		Replace every 40000 km or 24 months whichever comes first										
6-2.	Brake pedal (Pedal - carpet clearance)											
6-3.	Parking brake lever and cable (Play, Damage)											
6-4.	Brake disc and pad (Wear)	-										
6-5.	Brake drum and shoes (Wear)	-	-									
6-6.	Master cylinder, wheel cylinder, caliper piston (Fluid leakage, Boot/Seal damage)											
6-7.	Brake hoses and pipes (Fluid leakage, Damage)											
WHEEL												
7-1.	Tyres (Air pressure, Abnormal wear, Crack and Rotation)		I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	
7-2.	Wheels (Damage)											
7-3.	Front/Rear wheel bearing (Loose, Damage)											
FRONT / REAR SUSPENSION												
8-1.	Suspension strut (Oil leakage, Damage)											
8-2.	Suspension arms / Knuckle support and Torsion rods (Loose, Damage)	-										
8-3.	Rear spring (Damage)											
8-4.	Shock absorbers (Oil leakage, Damage)											
8-5.	All bolts and nuts (Loose)	-	T	T	T	T	T	T	T	T	T	

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
STEERING												
9-1.	Steering wheel (Play, Loose)											
9-2.	All rods and arms (Loose, Damage, Wear)											
9-3.	Tilt steering (Operation)											
ELECTRICAL												
10-1.	Battery - Electrolyte (Level, Leakage) and voltage											
10-2.	Wiring harness connection (Loose, Damage)	-										
10-3.	Lighting system (Operation, Stains, Damage)											
10-4.	Wiper (Operation)											
10-5.	Horn (Operation)											
10-6.	AUX, USB (if equipped) and accessory socket (Operation)	-										
BODY												
11-1.	All chassis bolts and nuts (Tighten)	-	T	T	T	T	T	T	T	T	T	
11-2.	All latches, hinges and locks (Function)		I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	
ROAD TEST												
12-1.	Operation of Brakes, gear shifting and speedometer											
12-2.	Body and chassis noise											
AIR CONDITIONER												
13-1.	Check belt tension											
13-2.	Tighten compressor mounting bolt	-	T	T	T	T	T	T	T	T	T	
13-3.	All hose joint (Check, Tighten)											
13-4.	Check functioning of recirculating flap											
13-5.	Clean condenser with low pressure water	-	C	C	C	C	C	C	C	C	C	
13-6.	Check belt for frayed edges											
13-7.	Check all mounting bolts											
13-8.	Air conditioner filter element (if equipped)					R			R			

Drive belt

⚠ WARNING
When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.


The drive belts tension is adjusted automatically. If the belt is too loose, insufficient lead-acid battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a Maruti Suzuki authorised workshop.


Engine oil and filter

Specified oil
K10C engine model

For India

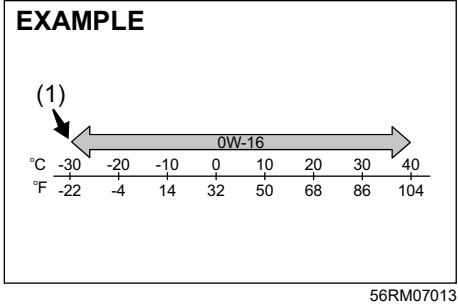

Except for India

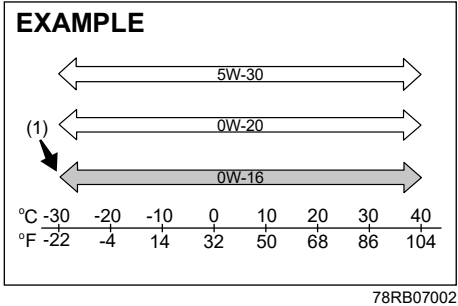

(1) Recommended

Select the appropriate oil viscosity according to the above chart.

For India, check that the engine oil you use comes under the quality classification as listed below:

- API SN, SP
- ILSAC GF-6

Except for India, be sure that the engine oil you use comes under the quality classification as listed below:

- API SL, SM, SN, SP
- ILSAC GF-6

SAE 0W-16 (1) is the best choice for good fuel economy and good startability in cold weather.

NOTE:


- The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.
- We recommend that you use MARUTI SUZUKI genuine oil. To purchase it, visit a Maruti Suzuki authorised workshop.

INSPECTION AND MAINTENANCE

K12N engine model

For India


EXAMPLE

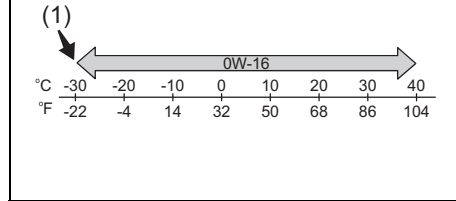

56RM07013

Except for India

EXAMPLE

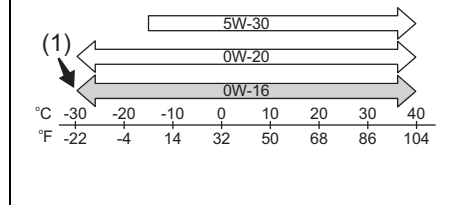

55T090690

(1) Recommended

Select the appropriate oil viscosity according to the above chart.

For India, check that the engine oil you use comes under the quality classification as listed below:

- API SN, SP
- ILSAC GF-6

Except for India, be sure that the engine oil you use comes under the quality classification as listed below:

- API SL, SM, SN, SP
- ILSAC GF-6


SAE 0W-16 (1) is the best choice for good fuel economy, and good starting in cold weather.

NOTE:

- The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.
- We recommend that you use **MARUTI SUZUKI** genuine oil. To purchase it, visit a Maruti Suzuki authorised workshop.


Oil level check

EXAMPLE

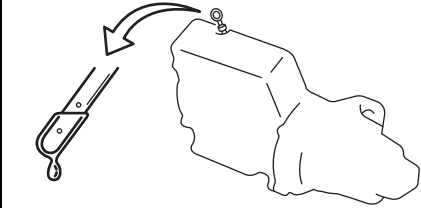

80G064

EXAMPLE

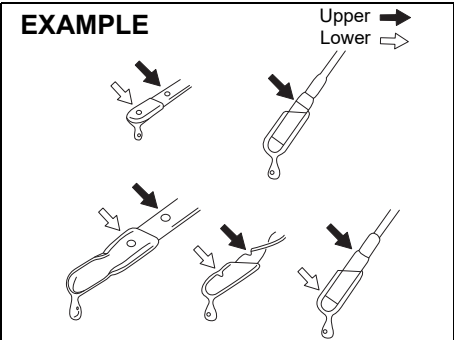

52D084


It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, and then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

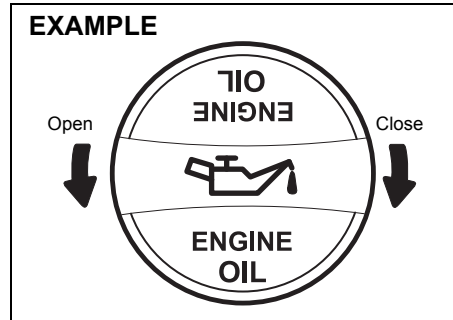


69RM06007

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

Changing engine oil and filter

Drain the engine oil while the engine is still warm.

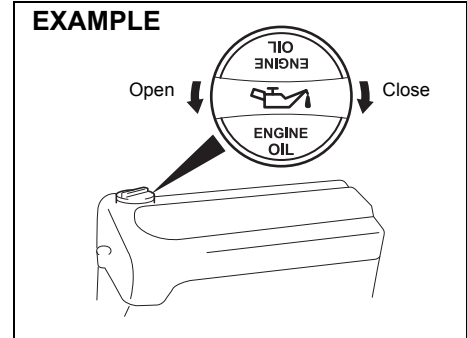

68KH067a


- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain the engine oil.

⚠ CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

INSPECTION AND MAINTENANCE

EXAMPLE

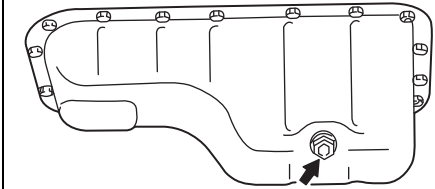

60G306

**Tightening torque for drain plug:
35 Nm (3.6 kg-m, 25.8 lb-ft)**

⚠ WARNING

Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets. Repeated, prolonged contact with used engine oil may cause skin cancer. Brief contact with used oil may irritate skin.

(Continued)

⚠ WARNING

(Continued)


To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dish-washing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water. Launder any clothing or rags if it is with oil. Recycle or properly dispose of used oil and oil filters.

- 4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

Oil filter replacement

- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- 2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- 3) Smear a small amount of engine oil around the rubber gasket of the new oil filter.
- 4) Screw the new filter by hand until the filter gasket contacts the mounting surface.

EXAMPLE

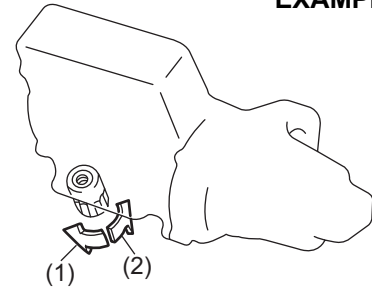


54G092

- (1) Loosen
- (2) Tighten

Tightening (viewed from filter top)

EXAMPLE

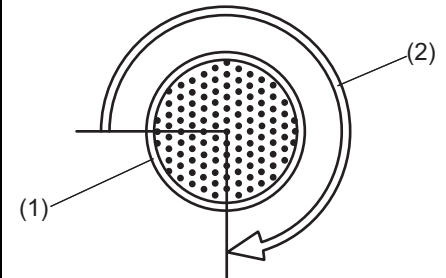

54G093

- (1) Oil filter
- (2) 3/4 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

- 5) Tighten the filter as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter
 3/4 turn or
 14 Nm (1.4 kg-m, 10.3 lb-ft)

NOTICE

To prevent oil leakage, check that the oil filter is tight, but do not over-tighten it.

Refill with oil and oil leakage check


- 1) Pour oil through the filler hole and install the filler cap.
 For the approximate capacity of the oil, refer to "Recommended fuel / lubricants and capacities (approx.)" in the "SPECIFICATIONS" section.
- 2) Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- 3) Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE

- When replacing the oil filter, it is recommended that you use a **MARUTI SUZUKI** genuine replacement filter. If you use an aftermarket filter, check that it is of equivalent quality and follow the manufacturer's instructions.
- Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine coolant

Coolant level check

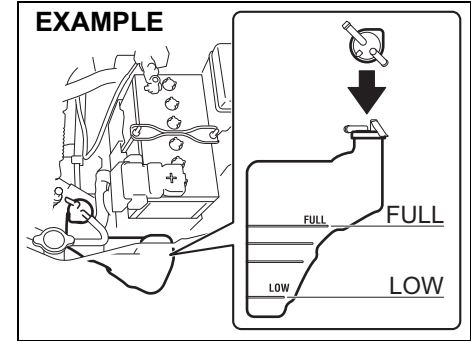

69RH080

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks. If the coolant level is below "LOW" mark, coolant should be added.

Coolant addition and replacement

When you add the coolant, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark while the engine is cool. Never fill the reservoir tank above "FULL" mark.

Since special procedures are required for coolant replacement, ask a Maruti Suzuki authorised workshop for this job.

INSPECTION AND MAINTENANCE

WARNING

Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Selection of coolant

To maintain optimum performance and durability of your engine, use MARUTI SUZUKI genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. A Maruti Suzuki authorised workshop can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/transmission damage.

(Continued)

NOTICE

(Continued)


have your vehicle inspected by a Maruti Suzuki authorised workshop.

NOTE:

Maruti Suzuki highly recommends the use of Maruti Suzuki genuine coolant. Maruti Suzuki genuine coolant has been specially formulated for your Maruti Suzuki product and contributes to the desired vehicle performance and ideal driving experience.

Depending on the production period of your vehicle, the coolant type filled at the time of a brand new car differs. There are two coolant types, SUZUKI LLC: Super (Blue) Coolant and SUZUKI LLC: Standard (Yellow) Coolant. You can check the original coolant type in your vehicle by the color of the coolant in the reservoir tank (Refer below figure).

EXAMPLE

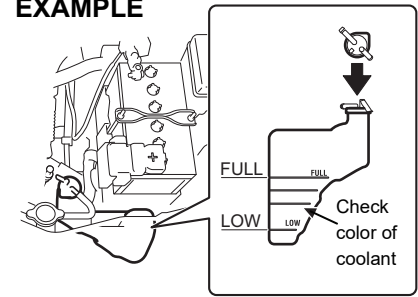

69RH060041

Coolant Color	Coolant Type
Blue	Suzuki LLC : Super
Yellow	Suzuki LLC : Standard

NOTE:

The same type of coolant that is filled at the time of a brand new car should be used when you add or replace the coolant.

SUZUKI LLC: Super (Blue) Coolant:

NOTICE
<ul style="list-style-type: none"> • This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant. • Do not add SUZUKI LLC: Standard (Yellow) Coolant or distilled water or others when your vehicle is originally filled with SUZUKI LLC: Super (Blue) Coolant. If such a case occurs, then get the vehicle inspected by a Maruti Suzuki authorized workshop.


SUZUKI LLC:Standard (Yellow) Coolant:

NOTICE
<ul style="list-style-type: none"> • The concentration of the mixture to be used shall be 30% antifreeze and 70% distilled water. Do not use straight coolant nor plain water. • If the lowest ambient temperature in your area is expected to be -15°C (5°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container. Concentrations greater than 60% will cause overheating conditions. • When your vehicle is originally filled with SUZUKI LLC: Standard (Yellow) Coolant, follow the maintenance schedule of SUZUKI LLC: Standard (Yellow) Coolant in this section. In case you replace with Suzuki LLC: Super (Blue) Coolant, then get the vehicle inspected by a Maruti Suzuki authorized workshop.

Air cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

K10C engine model

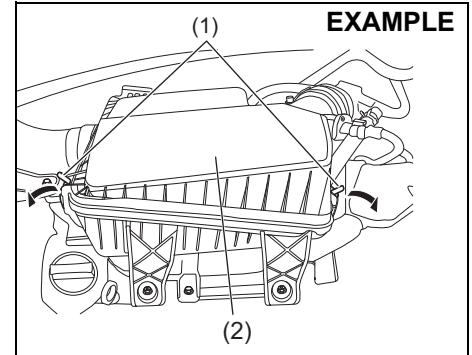


81RM06004

- 1) Unhook air cleaner case clamps (1). Open air cleaner case (2) and then remove air cleaner filter.


INSPECTION AND MAINTENANCE

K12N engine model

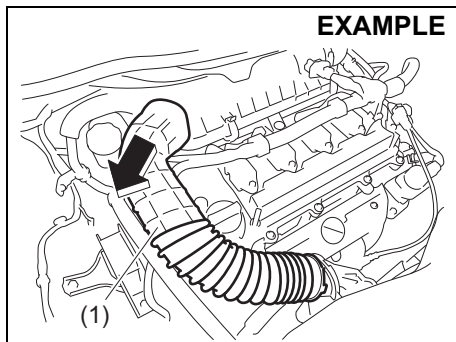


81P60030a

- 1) Remove the duct (1).

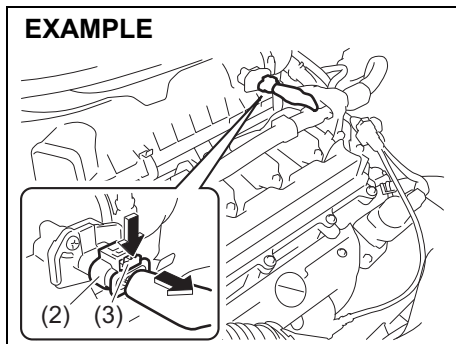

81P60040a

- 2) To disconnect the coupler (2), pull the release lever (3) toward you and then push the lever down.

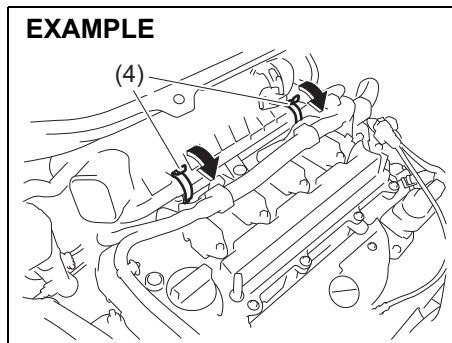

81P60050a

- 3) Unclamp the side clamps (4), then pull the air cleaner case toward you. Remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.
- 4) Reinstall the air cleaner case securely.

Spark plugs

Spark plug replacement and inspection

Since special procedures, materials and tools are required, it is recommended that you trust this job to a Maruti Suzuki authorised workshop.


Gear oil

Manual transmission oil / Auto Gear Shift oil


When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use "MARUTI GEAR OIL 75W" for manual transmission or Auto Gear Shift oil.

Manual transmission oil / Auto Gear Shift oil

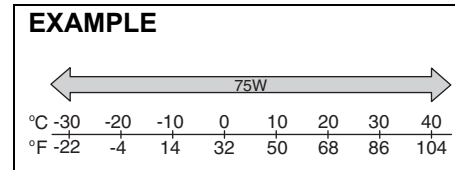

54P120706

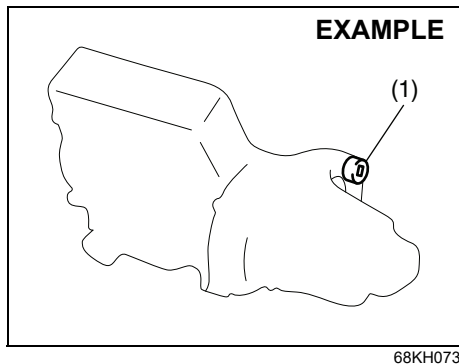Gear oil level check

(1) Oil filler and level plug

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug.
- 3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.

Tightening torque for oil filler and level plug

Manual transmission (1):
21 Nm (2.1 kg-m, 15.5 lb-ft)

Auto Gear Shift (1):
21 Nm (2.1 kg-m, 15.5 lb-ft)

▲ CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug are cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE

When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.
MARUTI SUZUKI Bond No. "1217G"


Gear oil change

Since special procedures, materials and tools are required, ask a Maruti Suzuki authorised workshop for this job.

INSPECTION AND MAINTENANCE

Clutch

Clutch pedal

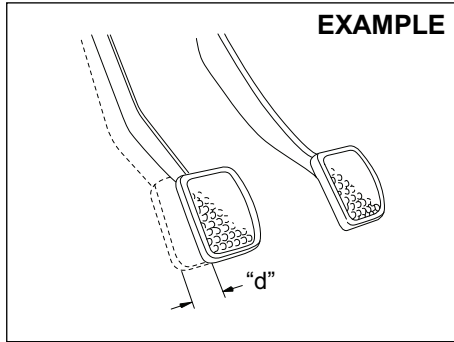

54G274

**Clutch pedal play "d":
10 – 15 mm (0.4 – 0.6 in.)**


Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be between the specified values. If the play is more or less than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorised workshop.

Fuel filter

Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorised workshop for fuel filter replacement.

Brakes

Brake fluid

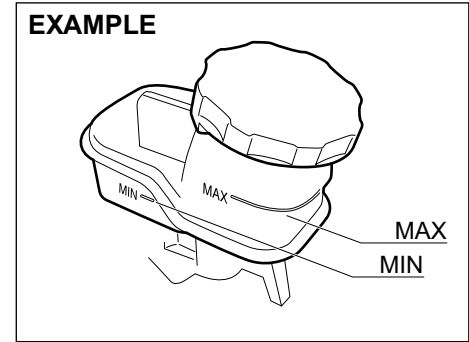

66RH139

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines with Maruti Genuine Brake Fluid (MGBF) or DOT 3. We highly recommend to use "Maruti Genuine Brake Fluid" (MGBF).

⚠ WARNING

- Failure to follow the guidelines below can result in personal injury or serious trouble in the brake system.
 - If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument cluster will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.
 - A rapid fluid loss indicates leakage in the brake system. In this case, immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.
 - Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or DOT 3. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

⚠ WARNING

- Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

NOTICE

- If your brake fluid level is near the “MIN” line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case, ask a Maruti Suzuki authorised workshop to inspect the brake system.
- Brake fluid can damage painted surfaces. Be careful when refilling the reservoir.


NOTE:

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.

- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.
Replace the brake fluid according to the maintenance schedule in this owner's manual.

Brake pedal

Check if the brake pedal stops at the regular height without “spongy” feeling when you depress it. If not, have the brake system inspected by a Maruti Suzuki authorised workshop. If you doubt the brake pedal is at its normal height, check it as follows:

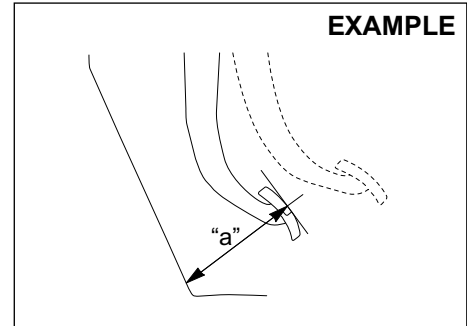

54G108

**Minimum distance between brake pedal and floor carpet “a”:
79 mm (3.11 in.)**


INSPECTION AND MAINTENANCE

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorised workshop.

NOTE:

When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.

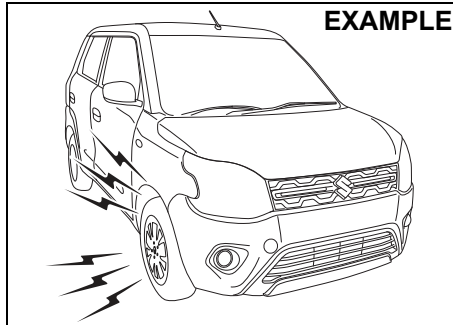

69RM06001

⚠ WARNING

If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.

If you hear this noise, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop. Continued driving with this condition can cause an accident.


⚠ CAUTION

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels)
- Excessive pedal travel
- Brake dragging

Parking brake

EXAMPLE

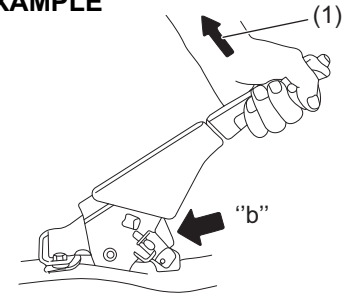


54G109

Ratchet tooth specification "b":
4th – 9th
Lever pull force (1):
200 N (20 kg, 45 lbs)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorised workshop.

Brake Discs and brake drums


Brake Disc

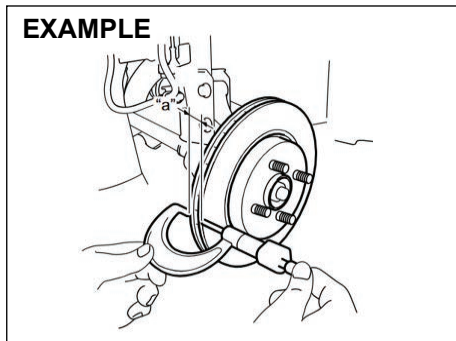

69RM06012

Brake location	Minimum thickness "a"
Front wheels	15.0 mm (0.59 in.)

Brake drum

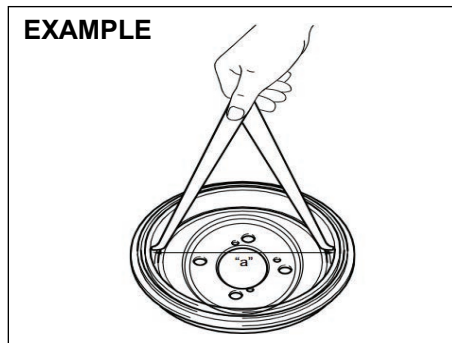


69RM06011

Brake location	Maximum inner diameter "a"
Rear wheels	182 mm (7.17 in.)

If the measured thickness or inner diameter of the most worn part exceeds the value indicated above, the parts should be replaced with a new one. The measurement involves disassembling each brake and requires the use of a micrometer, which must be done according to the instructions described in the relevant service manual or available from the relevant repair information site.

Steering

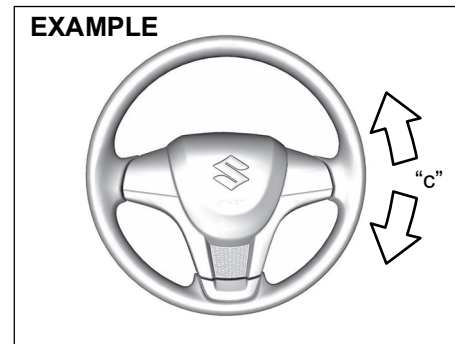

69RH174


**Steering wheel play "c":
0 – 30 mm (0.0 – 1.2 in.)**

Check the play of the steering wheel by gently turning it from left to right and right to left, with wheels in straight ahead position and engine in OFF condition. Measure the distance that the steering moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is not as specified or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorised workshop.

INSPECTION AND MAINTENANCE

Tires

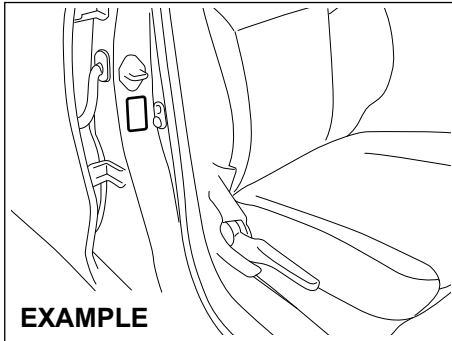

55RM07004

The front and rear tire pressure specifications are listed on the tire information label. Both front and rear tires should have the specified tire pressure.

Tire inspection


Inspect your vehicle's tires at least once a month by performing the following checks:

- 1) Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- **Never under-inflate or over-inflate the tires. Under-inflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim. Over-inflation can cause the tire to burst, resulting in personal injury. Over-inflation can also cause unusual handling characteristics which may result in an accident.**

EXAMPLE

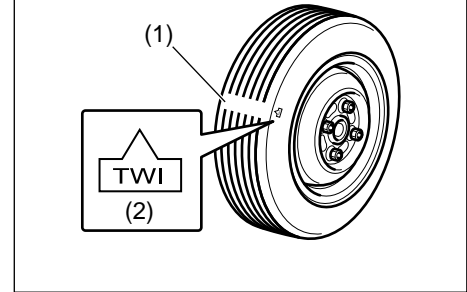

69RM06005

- (1) Tread wear indicator (TWI)
- (2) Indicator location mark

- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
- 3) Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by a Maruti Suzuki authorised workshop.

⚠ CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Have tires and wheel alignment checked periodically by a Maruti Suzuki authorised workshop.


- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.

⚠ WARNING


- Your MARUTI SUZUKI vehicle is equipped with tires which are all the same type and size (Except spare tire, which may be dependent on vehicle variant). This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.
- Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.

NOTICE

Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorised workshop before purchasing replacement tires that differ in size from the original tires.

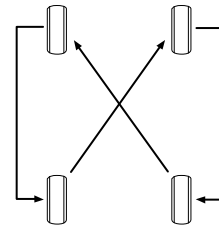Tire rotation**4-tire rotation****EXAMPLE**

54G114

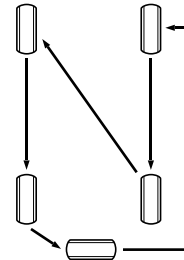5-tire rotation**EXAMPLE**

68PH00755

INSPECTION AND MAINTENANCE

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated as mentioned in periodic maintenance schedule. After rotation, adjust front and rear tire pressures to the specification listed on your vehicle's tire information label.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at Maruti Suzuki a authorised workshop.

Wheel Alignment

In case of abnormal tire wear or pulling towards one side, have the wheel aligned at authorised Maruti Suzuki workshop.

Tubeless Tires

The vehicle is equipped with Tubeless Tires. In tubeless tire, a thin layer of butyl rubber is used for lining the inside of the tubeless tire. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tire bead and wheel rim. Tubeless tires are having advantage of slow air loss and preventing sudden deflation while driving.


Care and maintenance tips for tubeless tires

- 1) Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tire damage.
- 2) In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tire has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tire is fitted, replace the valve.
- 5) If continuous high speed driving is required, increase tires pressure by 5 psi over recommended inflation pressure.
- 6) Never run the tire beyond TWI (Tread wear indicator). The tire is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tire marked by a triangular symbol (TWI).
- 7) Always prefer tubeless tire mounting machine. In case of manual mounting-tire/ wheel rim damage may occur.
- 8) In case of any problem, please get in touch with a Maruti Suzuki authorised workshop.

Battery

WARNING

- **Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.**
- **When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.**
- **To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions in the "EMERGENCY SERVICE" section if it is necessary to jump-start your vehicle.**
- **Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.**

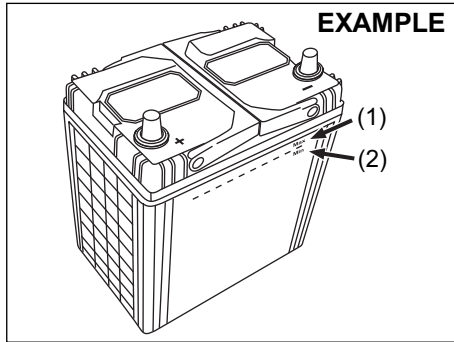

EXAMPLE

69RM06006

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery fluid (acid) must be kept between the upper level line "MAX" (1) and lower level line "MIN" (2) at all times. You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

⚠ WARNING

If the battery is used with battery level being less than the lower level line "MIN" (2), it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN" (2).

NOTICE

- If the battery liquid is added more than the upper level line "MAX" (1), liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid overflows, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX" (1).

(Continued)

NOTICE

(Continued)

- If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult an authorized SUZUKI dealer or a qualified workshop.


NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" (1) and lower level "MIN" (2), add distilled water till it reaches the upper level line "MAX" (1).

INSPECTION AND MAINTENANCE

Replacement of the battery

EXAMPLE

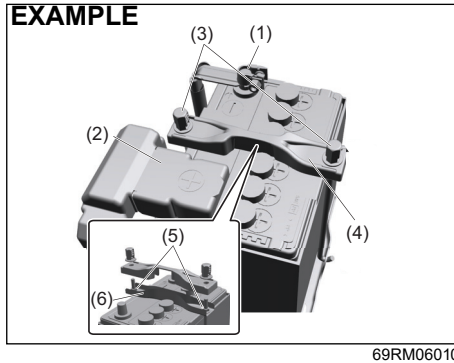

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the clips(3)(if equipped).
- 4) Remove the protector(4)(if equipped).
- 5) Remove the retainer nuts (5) and remove the retainer (6).

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:

When the battery is disconnected, some of the vehicle's function will be initialized and/or deactivated.

These function are required to reset after the battery is reconnected.


WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used battery must be disposed or recycled according to the local law and must not be discarded with ordinary household waste. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.

NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "OFF" or changing The ignition mode to "LOCK" (OFF).

(Battery label)

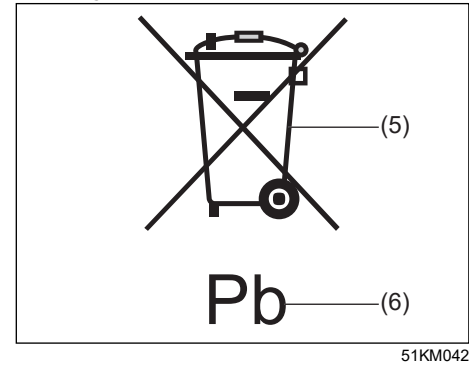

- (5) Crossed-out wheeled bin symbol
(6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a MARUTI SUZUKI authorized workshop.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the battery.

Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.


Individual fuses

These fuses are for individual electrical circuits.


NOTE:

- “Blank” indicates that fuse is not applicable in the variant, even though name of fuse might be available on cover of fuse box of your vehicle.
- Some fuse may not be applicable to your vehicle according to the variant of vehicle, even though it is not mentioned as blank.


To remove a fuse, use the fuse puller provided in the fuse box.

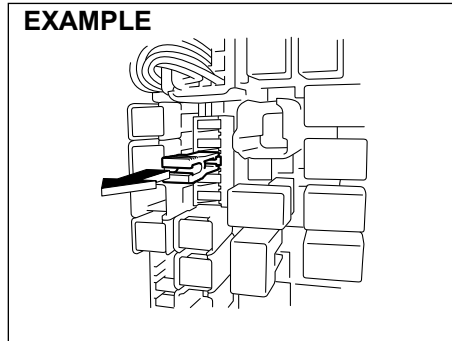

Fuses in engine compartment

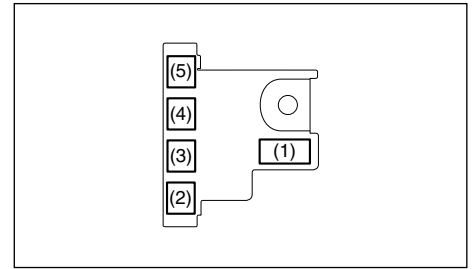

52RS70020

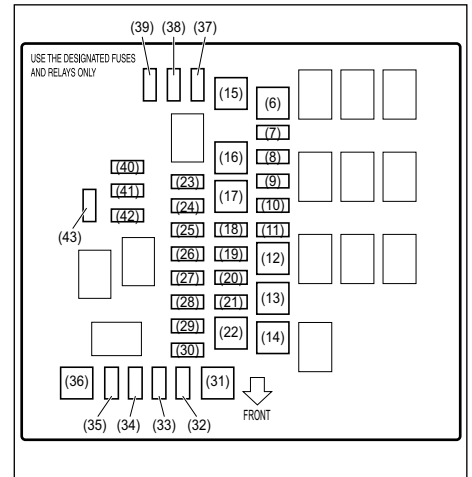

69RH194a


INSPECTION AND MAINTENANCE

MAIN FUSE / PRIMARY FUSE		
(1)	120 A	FL1
(2)	100 A	FL2
(3)	80 A	FL3
(4)	100 A	FL4
(5)	50 A	FL5
(6)	40 A	Power steering
(7)	–	Blank
(8)	10 A	A/C compressor
(9)	15 A	FI
(10)	15 A	Headlight (Left)
(11)	15 A	Headlight (Right)
(12)	30 A	Starter motor
(13)	30 A	Radiator fan
(14)	–	Blank
(15)	40 A	Ignition switch 2
(16)	–	Blank
(17)	30 A	T/M PUMP
(18)	30 A	Back-up
(19)	–	Blank
(20)	15 A	Front fog light
(21)	30 A	DCDC

(22)	30 A	Blower fan
(23)	–	Blank
(24)	5 A	Starting signal
(25)	–	Blank
(26)	–	Blank
(27)	–	Blank
(28)	–	Blank
(29)	–	Blank
(30)	–	Blank
(31)	40 A	ABS motor
(32)	25 A	ABS solenoid
(33)	10 A	A/B2
(34)	10 A	T/M
(35)	5 A	T/M2
(36)	40 A	Ignition switch
(37)	5 A	Spare fuse
(38)	10 A	Spare fuse
(39)	15 A	Spare fuse
(40)	20 A	Spare fuse
(41)	25 A	Spare fuse
(42)	30 A	Spare fuse
(43)	7.5 A	Spare fuse

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a MARUTI SUZUKI genuine replacement.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

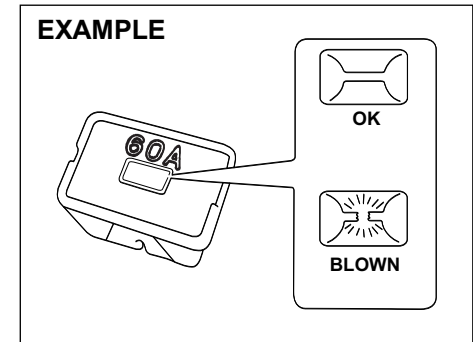


60G111

⚠ WARNING


If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorised workshop. Always use a MARUTI SUZUKI genuine replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.

NOTE:
Check that the fuse box always carries spare fuses.

Fuses under dashboard

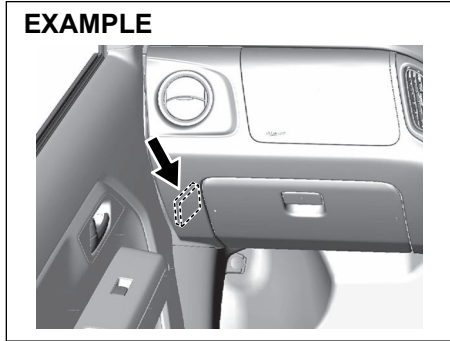

69RH133

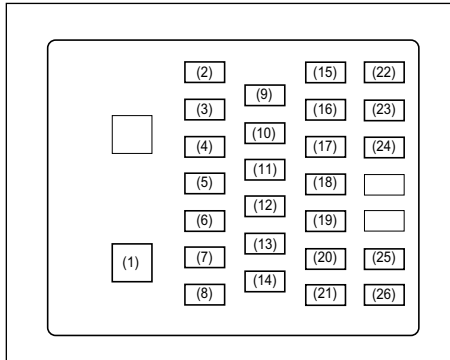


69RH120a

PRIMARY FUSE		
(1)	30 A	Power window
(2)	25 A	Rear defogger
(3)	20 A	Door lock
(4)	15 A	Horn
(5)	5 A	ABS control module
(6)	10 A	Airbag
(7)	10 A	Ignition-1 signal
(8)	5 A	ST signal
(9)	15 A	Radio
(10)	5 A	Dome light
(11)	10 A	Dome light-2
(12)	10 A	Stop light
(13)	10 A	Hazard
(14)	10 A	Tail light
(15)	–	Blank
(16)	25 A	Front wiper
(17)	15 A	Washer
(18)	5 A	Ignition-2 signal
(19)	10 A	Meter
(20)	15 A	Ignition coil
(21)	10 A	Back-up light

INSPECTION AND MAINTENANCE

(22)	5 A	ACC-3
(23)	5 A	Ignition-1 TX
(24)	10 A	Wiper
(25)	–	Blank
(26)	–	Blank
(27)	5 A	ACC
(28)	15 A	ACC-2

EXAMPLE

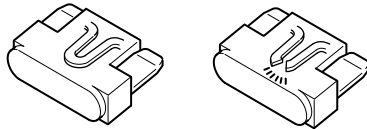

OK

BLOWN

81A283

▲ WARNING

Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

Headlight aiming

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

Bulb replacement

▲ CAUTION

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The halogen headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

- The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.
- Frequent bulb replacement indicates the need for an inspection of the electrical system. This should be carried out by a Maruti Suzuki authorised workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and or mentioned in SPECIFICATIONS.

NOTE:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights.

The above-mentioned phenomena are not vehicle malfunction.

However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have your vehicle inspected by a Maruti Suzuki authorised workshop.


Non-disassembled type lights

Since the lights shown below are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.

If you need to replace the assembly, ask a Maruti Suzuki authorised workshop.


- Side turn signal light (on outside rear-view mirror)

Headlights

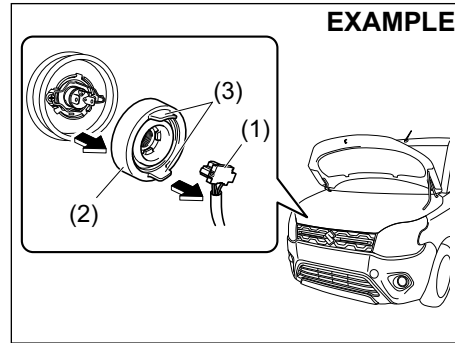


69RH084

- 1) Open the engine hood while the engine is stopped. Disconnect the coupler (1). Remove the sealing rubber (2) by pulling the grip (3).

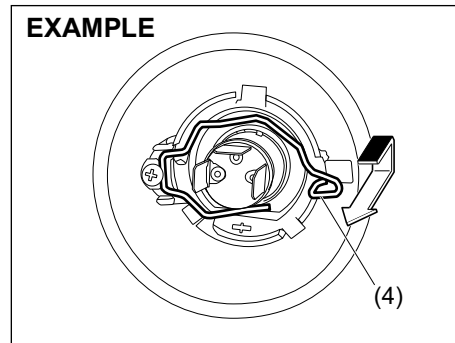

69RH085

- 2) Push the retaining spring (4) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

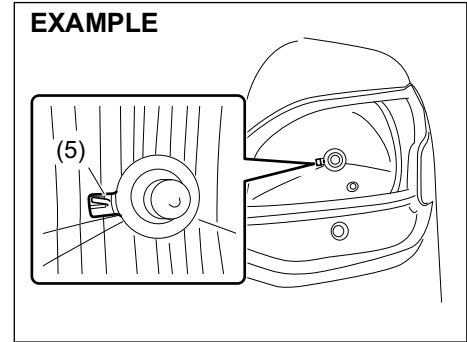

69RH101


NOTE:

You can see the position of retaining spring from the hole (5) of headlight.

INSPECTION AND MAINTENANCE


Front fog light (if equipped)

- 1) Start the engine. Turn the steering wheel to the opposite side of the fog light to be replaced to replace the bulb easily. Then turn off the engine.

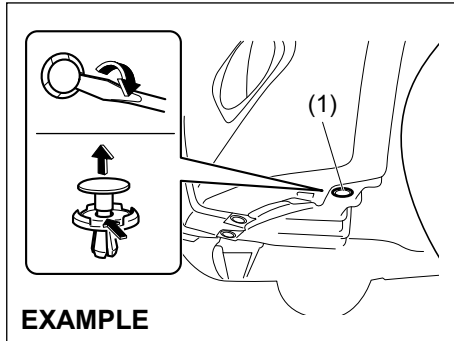

69RH102

- 2) Remove the clip (1) by prying it off with a flat-bladed screwdriver as shown in the illustration.

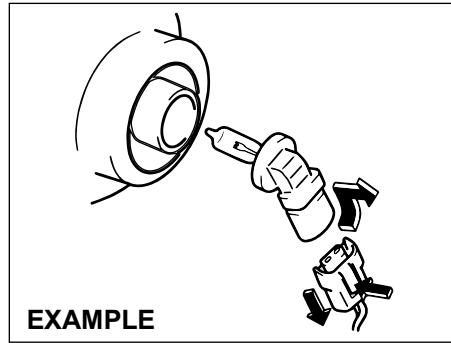

80JM071


- 3) Open the end of the cover inside the fender. Disconnect the coupler by pushing the lock release. Turn the bulb holder counterclockwise and remove it.

Side turn signal light

Outside rearview mirror type


LED module is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for LED module replacement.

Fender type

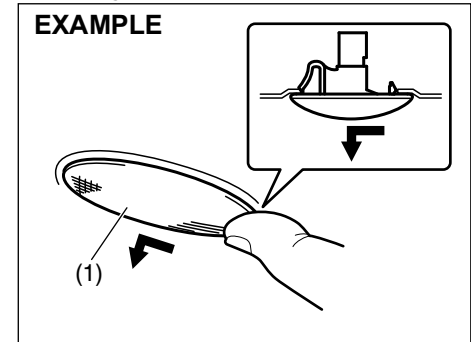


76MH0A006

- 1) Remove the side turn signal light assembly by sliding light housing (1) to left with your finger.

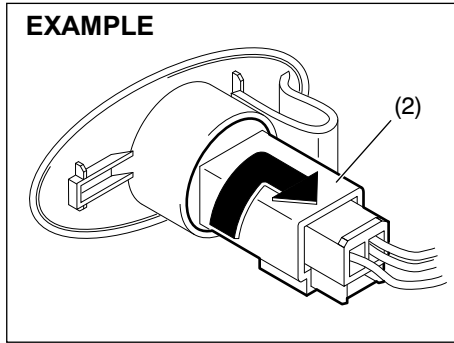

76MH0A007

- 2) Turn the bulb holder (2) clockwise and pull it out from the light housing.

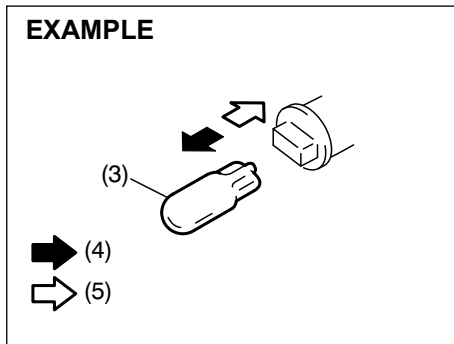


76MH0A008

- (4) Removal
(5) Install


- 3) To remove and install the bulb of the turn signal light (3), simply pull out or push in the bulb.

Front turn signal light and front position light

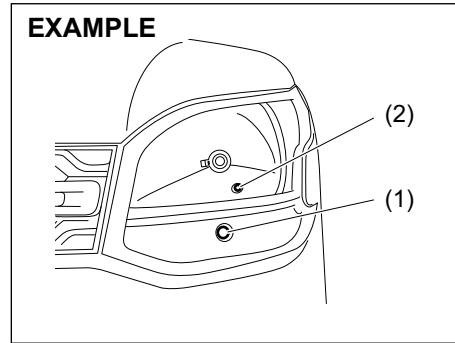

69RH103


- (1) Front turn signal light
(2) Front position light

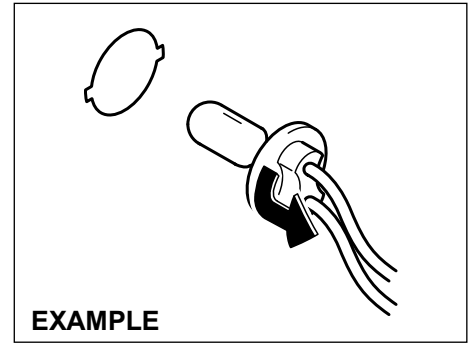

68PH00732

- 1) Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light (1) or the front position light (2) from the light housing, turn the holder counterclockwise and pull it out.


INSPECTION AND MAINTENANCE

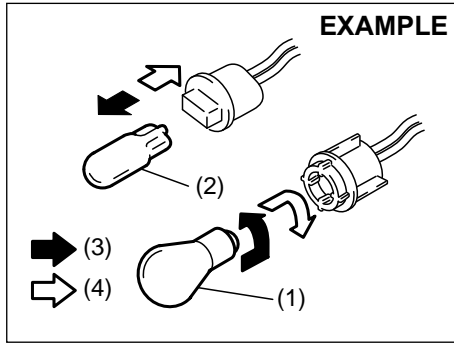

61MM0B078

- (3) Removal
- (4) Install
- 2) To remove the bulb of the front turn signal light (1) from the bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise. To remove and install the bulb of the front position light (2), simply pull out or push in the bulb.


Rear combination light

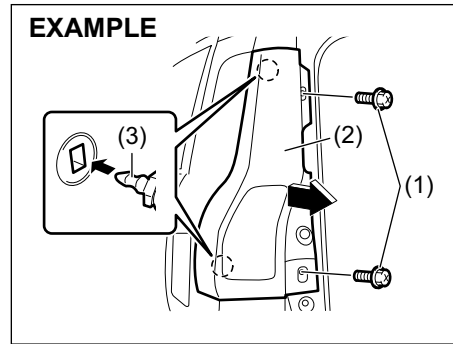

69RH104


- 1) Remove the bolts (1) and pull the light housing (2) straight.

NOTE:
When reinstalling the light housing, check that the clips (3) are properly attached.

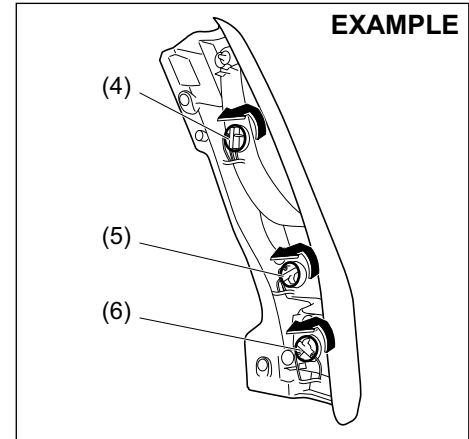

69RH121

- 2) To remove the bulb holder of the tail/brake light (4), the turn signal light (5) or the reversing light (6) from the light housing, turn the holder counterclockwise and pull it out.

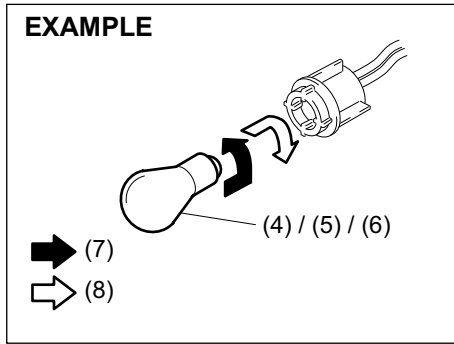


69RH163

- (7) Removal
- (8) Install


3) To remove the bulb of the tail/brake light (4), the turn signal light (5) or the reversing light (6) from bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.

License plate light

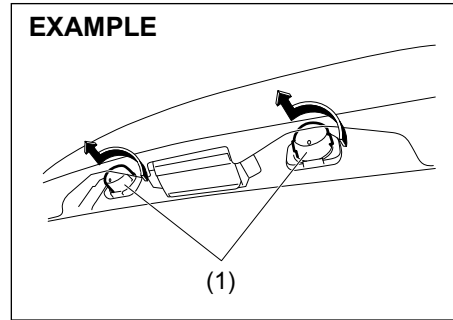

69RH105


- 1) Turn the covers (1) counterclockwise to remove it.

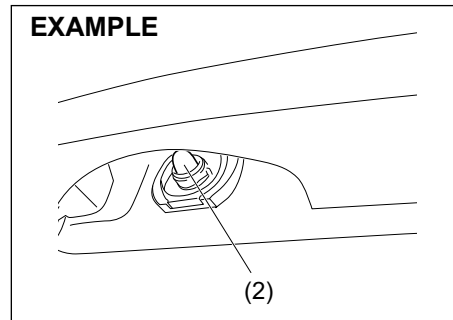

69RH106


- 2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.

High-mount stop light

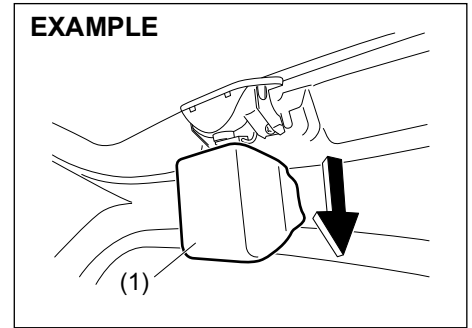

69RH107


- 1) Open the tailgate, and pull the cover (1) straight as shown in the illustration.

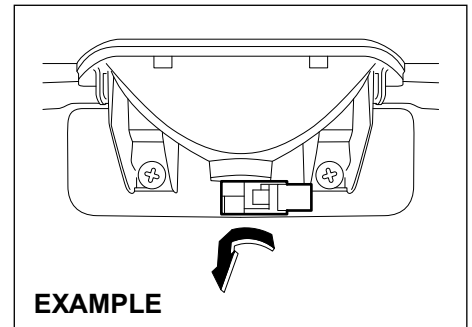

69RH134

- 2) Remove the bulb holder as shown in the illustration.

INSPECTION AND MAINTENANCE

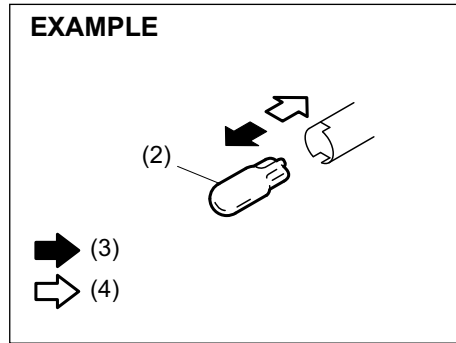


69RH086

- (3) Removal
- (4) Install


3) To remove and install the bulb of the high-mount stop light (2), simply pull out or push in the bulb.

Interior light

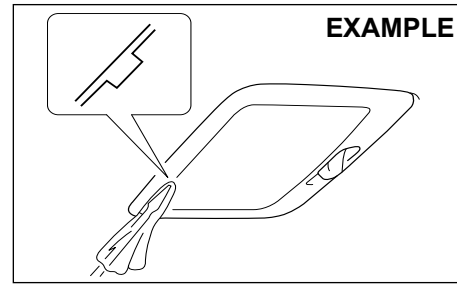

69RM06009

1) Remove the lens by using a flat blade screwdriver covered with a soft cloth as shown. To install it, simply push it back in.

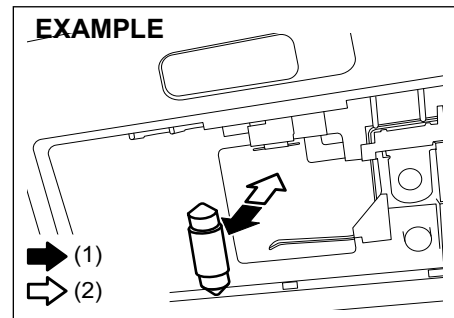


83S09241a

- (1) Removal
- (2) Install

2) Remove the bulb holder as shown in the illustration.

Wiper blades

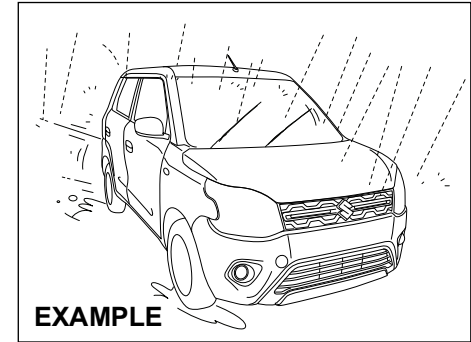

69RM06002

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blade rubber, follow the procedures below.


NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a Maruti Suzuki authorised workshop for proper replacement method.

For windshield wipers:

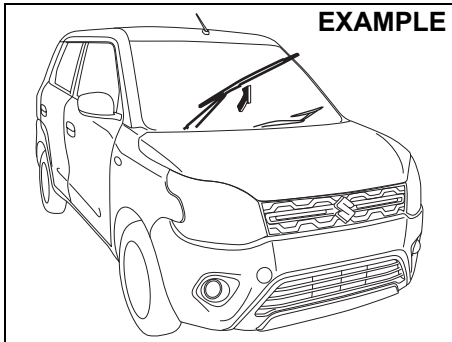


69RM06003

- 1) Hold the wiper arm away from the window.

NOTE:


When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first. Otherwise, the wiper arms may interfere with each other.

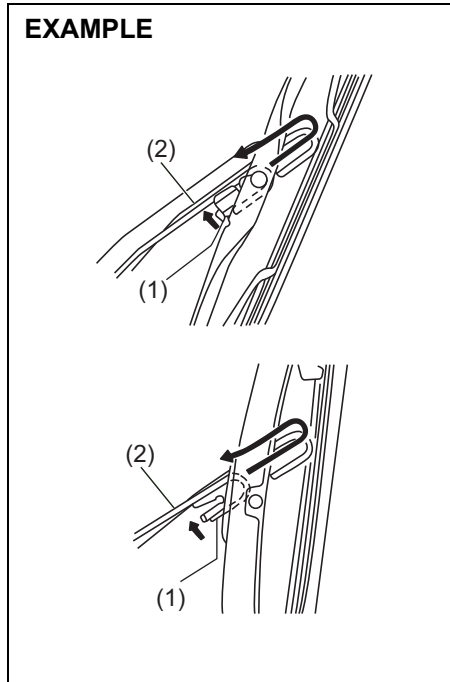

54G130


- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

Removal

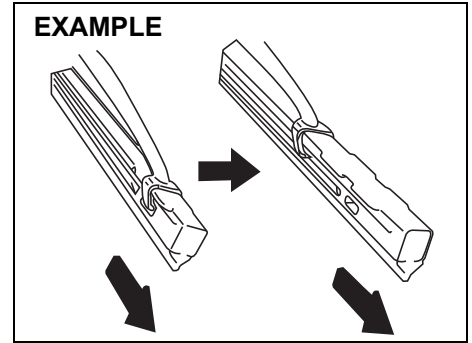

60A260


Installation

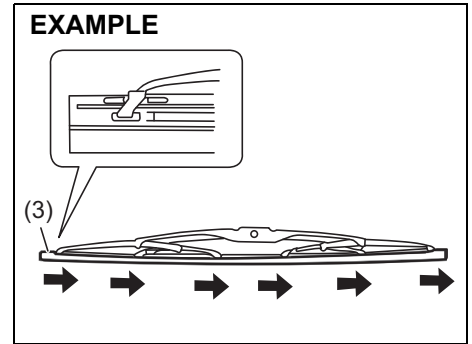

66RH107

- (3) Locked end


INSPECTION AND MAINTENANCE

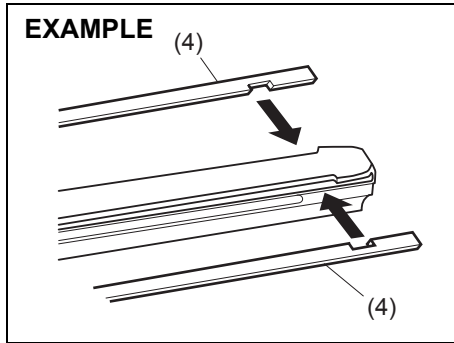


66RH108

(4) Retainer

- 4) If the new blade is provided without the two metal retainers (4), move them from the old blade to the new one.

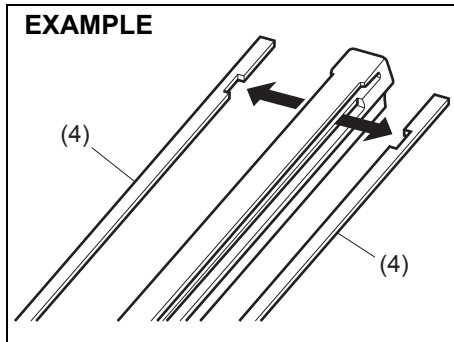

66RH109

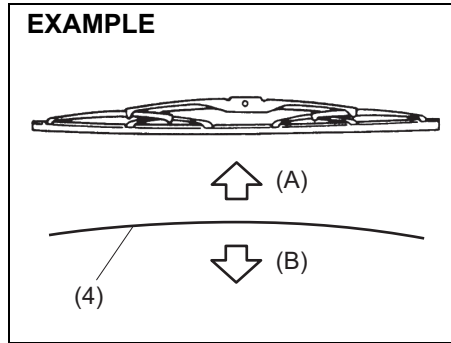

66RH110


(A) Up
(B) Down

NOTE:

When you install the metal retainers (4), check that the direction of metal retainers is as shown in the above illustrations.

- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm. Check that the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, checking that the lock lever is snapped securely into the arm.


For rear wipers:

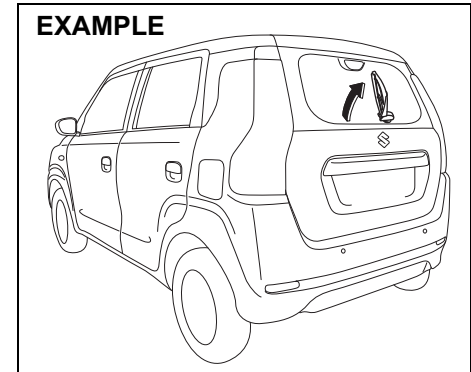

69RM06004


- 1) Hold the wiper arm away from the window.
- 2) Remove the wiper frame from the arm as shown.
- 3) Slide the blade out as shown.

Windshield washer fluid

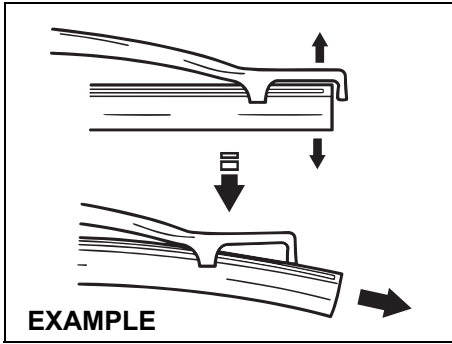

65D151


NOTE:
Do not flex the wiper blade frame end more than necessary. If you do, it can break off.

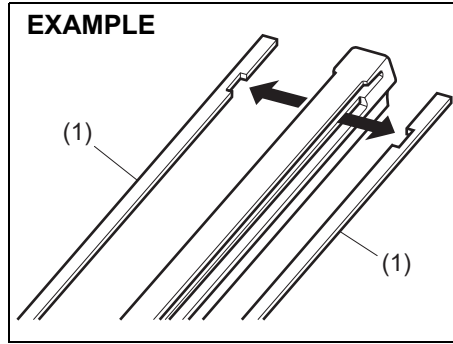

69RH182

(1) Retainer

- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.
- 5) Install the new blade in the reverse order of removal.
Check that the blade is properly retained by all the hooks.
- 6) Reinstall wiper frame to arm in the reverse order of removal.

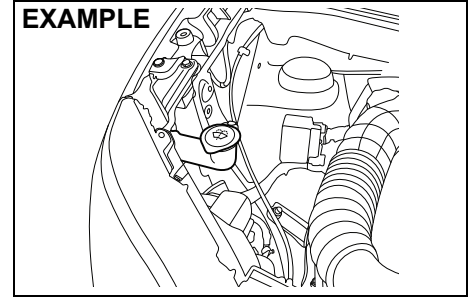

69RM06008

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

⚠ WARNING

Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.

NOTICE

- Damage may result if the washer motor is operated with no fluid in the washer tank.
- Avoid use of hard water to prevent building of lime scale on the vehicle.


INSPECTION AND MAINTENANCE

Air conditioning system


If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Air conditioner filter replacement


Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

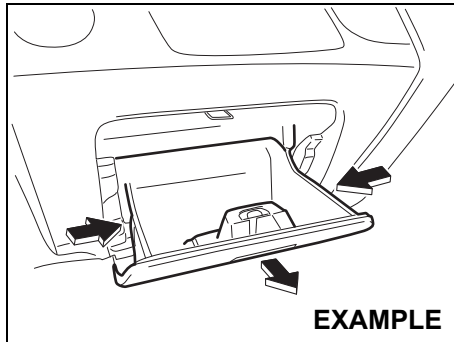


- 1) To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.

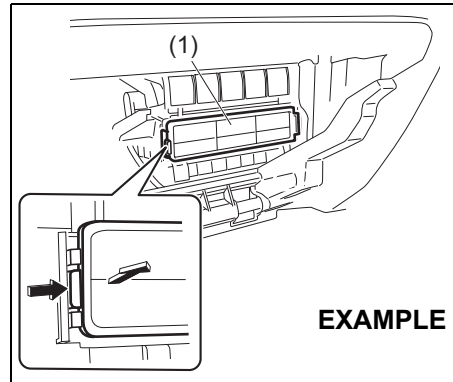

- 2) Unlock the holder (1) and release it **EXAMPLE** from the air conditioner unit.

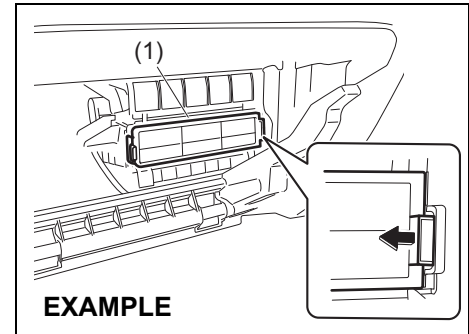


- 3) Slide the tab of the holder (1) in an arrow direction and remove the holder.

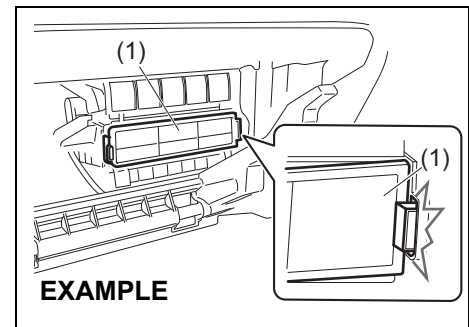

NOTICE

Do not apply excessive force to the tab when removing the holder (1). Otherwise, the tab may be damaged.

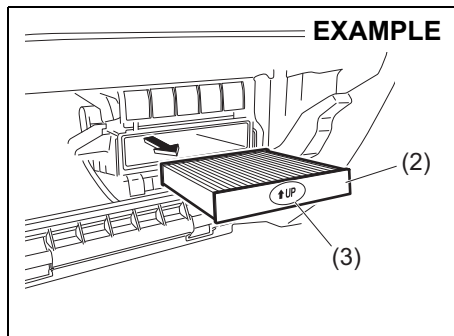


69RH060040

4) Pull out the air conditioner filter (2).

NOTE:

When you install a new air conditioner filter, check that the UP mark (3) faces upward.

EMERGENCY SERVICE

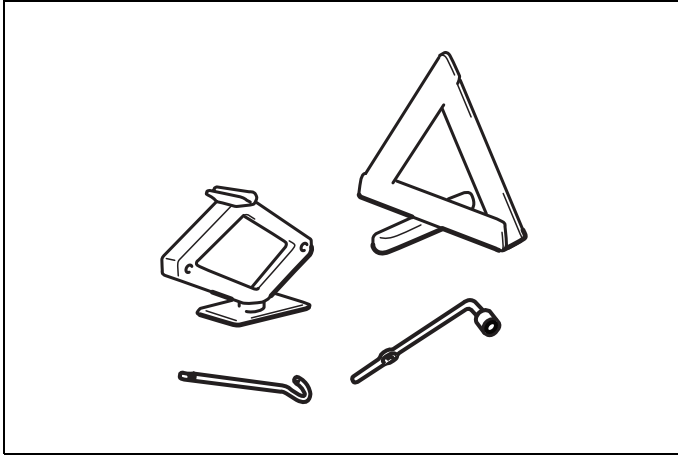


60G411A


Tire changing tool	7-1
Jacking instructions	7-3
Jump-starting instructions	7-8
Towing your vehicle	7-9
Engine trouble: Starter does not operate	7-10
Engine trouble: Flooded engine	7-11
Engine trouble: Overheating	7-11
Warning triangle	7-12

EMERGENCY SERVICE

Tire changing tool

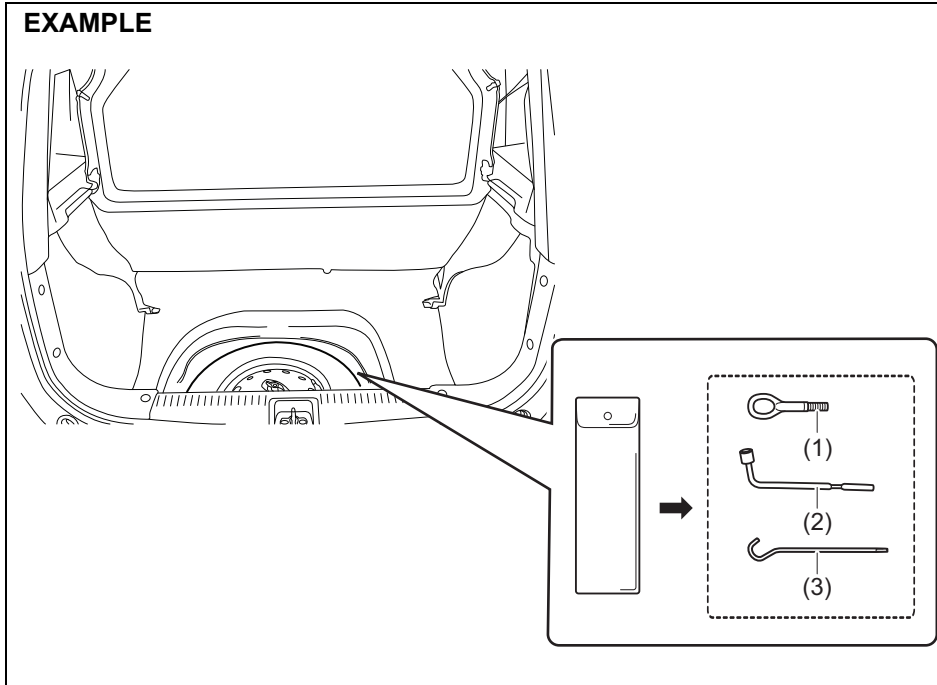

- (1) Towing hook
- (2) Wheel brace
- (3) Jack handle

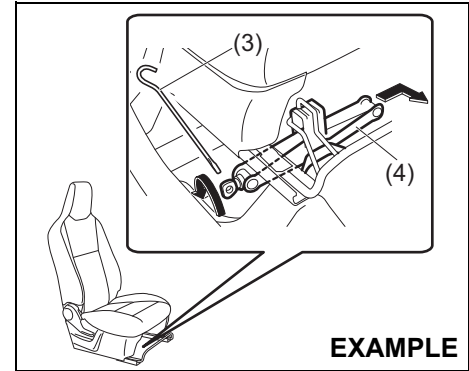

69RM07006

The jack (4) is stowed under the driver's seat.


Slide the driver's seat backward.

To remove the jack (4), turn the jack shaft (at the right side of the seat) counterclockwise by hand and pull the jack out of the storage bracket from the front side of the seat.

NOTE:

If it is difficult to turn the shaft by hand, use jack handle (3) as shown in the illustration.

To stow the jack, place it in the storage bracket and turn the shaft clockwise with hand.

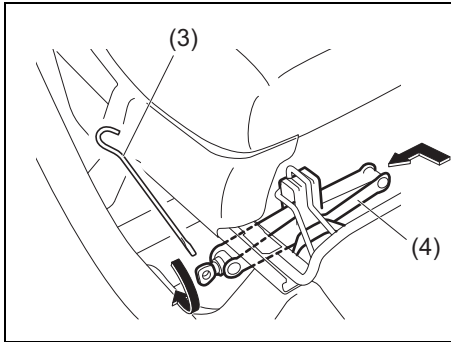


69RM07003

After temporarily holding the jack (4) until it contacts the storage bracket, turn the shaft approximately 90° to 180° by using jack handle (3) to securely hold the jack in place.

⚠ WARNING
 After using the tire changing tools, stow them securely or they can cause injury if an accident occurs.

⚠ CAUTION
 The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.


NOTICE
 To avoid damaging the storage bracket, do not expand the jack excessively.

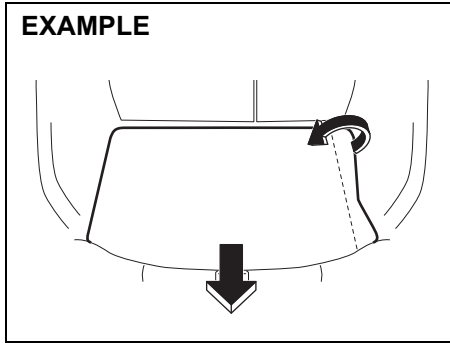

69RH110

To remove the luggage compartment carpet (if equipped) easily, fold the right side of the carpet and pull it out.

NOTE:
 When installing, install the carpet in the reverse order of removal.

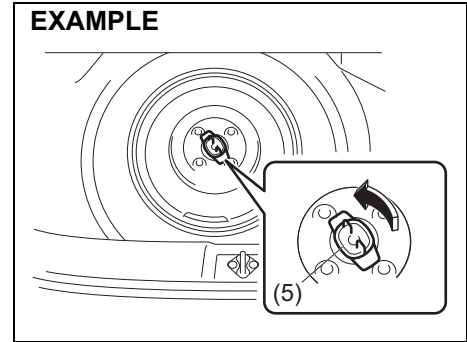

69RM07005

To remove the spare tire, turn its bolt (5) counterclockwise and remove it.


Store the spare tire in the reverse order of removal. Attach the center of the wheel to the attachment nut, and tighten firmly with the bolt. After storing, verify that the spare tire is stored securely.

Make sure that there is no looseness by trying to shake the spare tire.

NOTICE
 If there is a looseness, it may cause a rattling and damage the paintwork.

EMERGENCY SERVICE

Jacking instructions

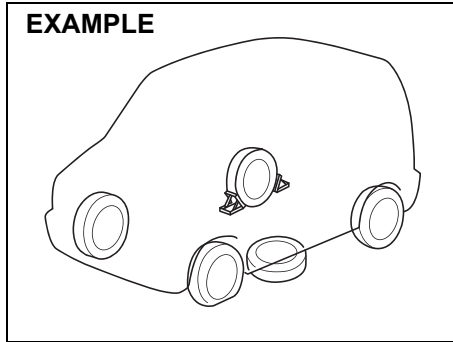


75F062

- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "R" (Reverse) if your vehicle has a manual transmission/Auto Gear Shift.


▲ WARNING

- Shift into "R" (Reverse) for a manual transmission/Auto Gear Shift vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.


- 3) Turn on the hazard warning flasher if your vehicle is near traffic.
- 4) Block the front and rear of the wheel diagonally opposite of the wheel being lifted.
- 5) Place the spare wheel near the wheel being lifted as shown in the illustration in case the jack slips.

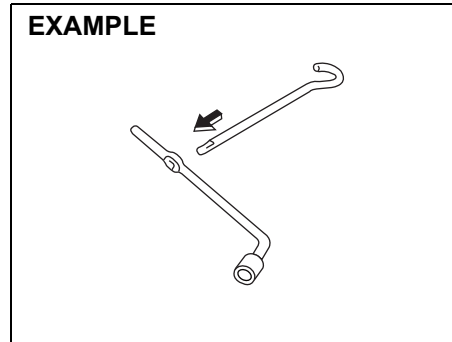

54G253

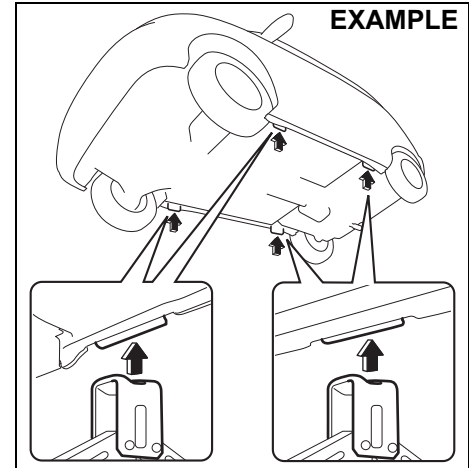

75RM077

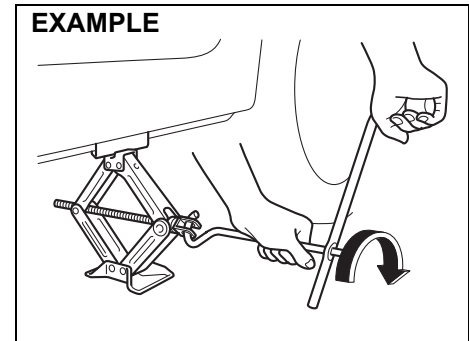

68PM00802

- 6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.
- 7) Continue to raise the jack slowly and smoothly until the tire clears the ground. Do not raise the vehicle more than necessary.

⚠ WARNING

If the jack comes off, your body may be caught in the vehicle and it may result in a serious injury. Also, the vehicle may start to move and it may result in an accident. When jacking up the vehicle, observe the following points.

- Jack up the vehicle on hard and level ground.
- Use the jack only for replacing the tires or repair the flat tires.
- Use this vehicle's jack only and do not use the other vehicle's jack. Also, do not use this vehicle's jack for the other vehicle.
- Place the jack on the designated position. If you place the jack on the position other than the designated one, the jack may come off and the vehicle may get damaged.
- Do not lift up the vehicle more than necessary by the jack.
- Do not use wooden blocks or similar objects as a jack underlay.
- When lifting up the vehicle by the jack, do not get into under the vehicle, do not start the engine and do not shake the vehicle. Never place your hands and feet under the raised vehicle when it is supported by a jack.

(Continued)

⚠ WARNING

(Continued)

- When lifting up the vehicle, do not pinch any object on or under the jack.
- Do not lift up several tires at the same time, using several jacks.


EMERGENCY SERVICE

Raising vehicle with garage jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

- (1) Front
- (2) Jack stand
- (3) Garage jack
- (4) Rear
- (5) Jacking point for garage jack

EXAMPLE

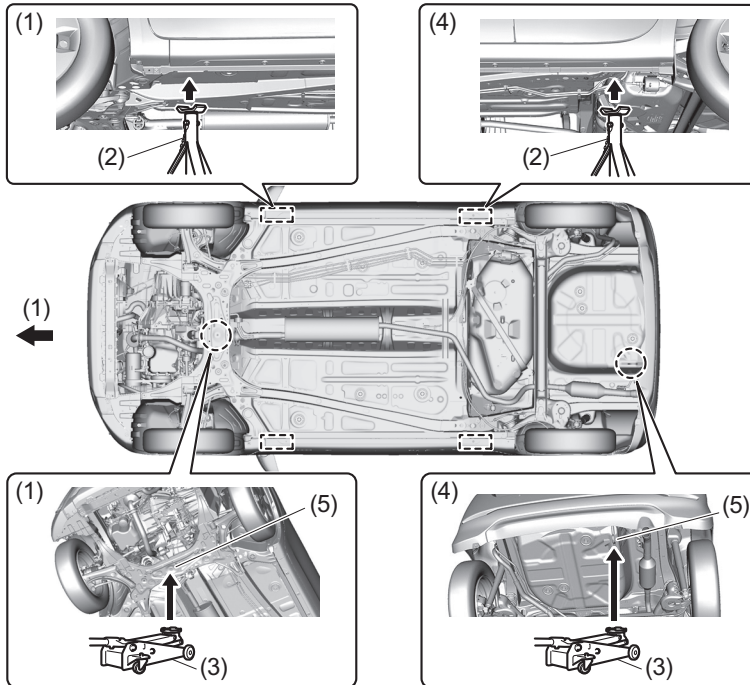

⚠ WARNING

As the vehicle may get damaged or an accident may occur, observe the following points.

- Observe the designated points shown in the illustrations.
- When holding the lifted vehicle, use the rigid rack.
- When jacking up the front side or the rear side only, place a chock (commercially-available product) on front and back of the grounded tire.

NOTICE

Never apply a garage jack to the exhaust pipe or rear torsion beam.

NOTE:

For more details, contact a authorised Maruti Suzuki workshop.

69RH176

Changing wheels

⚠ WARNING

- Never change in a wheel in traffic lane. Always move the vehicle of the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorised workshop.

To change a wheel, use the following procedure:

- 1) Remove the jack, tools and spare wheel from the vehicle.
- 2) Loosen, but do not remove the wheel nuts.
- 3) Jack up the vehicle (follow the jacking instructions in this section).


⚠ WARNING

- Shift into “R” (Reverse) for a manual transmission/Auto Gear Shift vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in “N” (Neutral). Otherwise, unstable jack may cause an accident.

⚠ CAUTION


Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven.

- 4) Remove the wheel nuts and wheel.

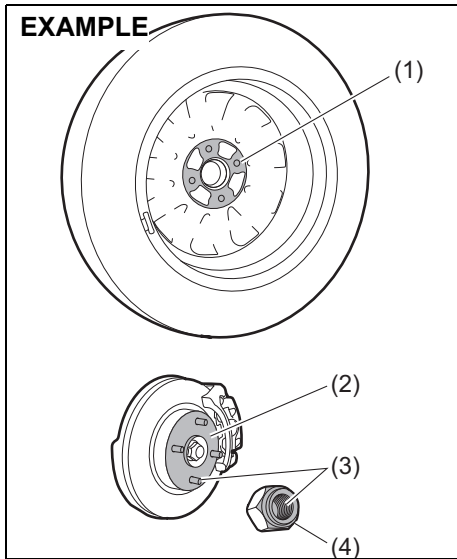

69RH177

- 5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

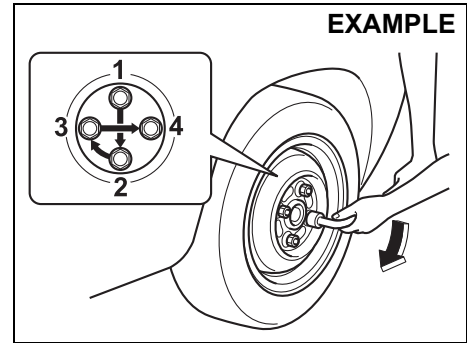

55RM08006

**Tightening torque for wheel nut
100 Nm (10.1 kg-m, 73.7 lb-ft)**


- 7) Lower the jack and fully tighten the nuts with a wrench in numerical order as shown in the illustration.

EMERGENCY SERVICE

WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a authorised Maruti Suzuki workshop.

EXAMPLE

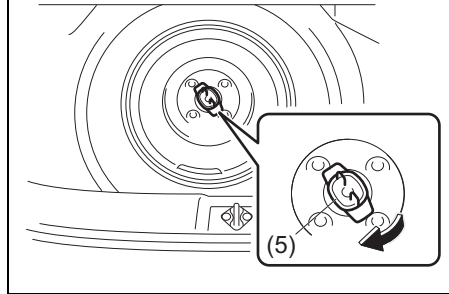

69RM07005a


Return the spare tire back into the luggage compartment in the reverse order of removal and tighten its bolt (5) clockwise as shown in the above illustration.

NOTICE

Make sure that the spare tire is fixed securely on the floor. Loosely fixed tire may cause noise during driving and damage paint on vehicle body.

Full wheel cover (if equipped)


EXAMPLE

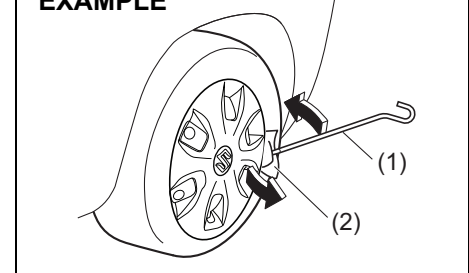

69RM07001

Remove the full wheel cover by using jack handle (1) covered with a soft cloth (2), as shown in the illustration.

EXAMPLE

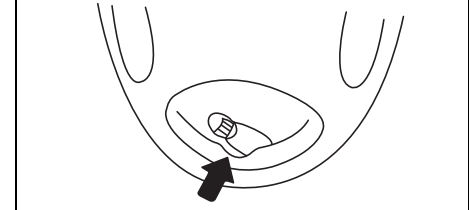

54P000803

Ensure not to cover or foul the air valve while installing the full wheel cover.

Jump-starting instructions


▲ WARNING

- Never attempt to jump-start your vehicle if the battery appears to be frozen. Batteries in this condition may explode.
- When making jump lead connections, check that your hands and the jump leads remain clear from pulleys, belts or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- If the booster battery you use for jump-starting is installed in another vehicle, check that the two vehicles are not touching each other.
- If your battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a authorised Maruti Suzuki workshop.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions below.
If you are in doubt, call for qualified road service.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or discharged battery.

- 1) Use only a 12-volt battery to jump-start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- 2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

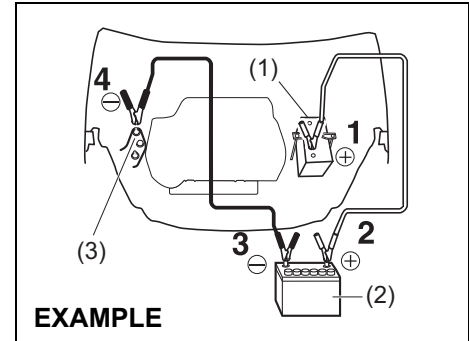

54P000804

- 3) Connect jump leads as follows:

1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
2. Connect the other end to the positive (+) terminal of the booster battery (2).
3. Connect one end of the second jump lead to the negative (-) terminal of the booster battery (2).
4. Make the final connection to an unpainted, heavy metal part (i.e. engine mount bracket (3)) of the engine of the vehicle with the discharged battery (1).

EMERGENCY SERVICE

WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged battery, or an explosion may occur.

CAUTION

Connect the jump lead to the engine mount bracket securely. If the jump lead disconnects from the engine mount bracket because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged battery.
- 6) Remove the jump leads in the exact reverse order in which you connected them.

Towing your vehicle

If you need to have your vehicle towed, contact a professional service. authorised Maruti Suzuki workshop can provide you with detailed towing instructions.

NOTICE

Observe the following instructions when towing your vehicle.

- To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.
- Using the frame hook, tow your vehicle on paved roads for short distances at low speed.

2-wheel drive (2WD) manual transmission or Auto Gear Shift

Manual transmission vehicles or Auto Gear Shift vehicles may be towed using either of the following methods.

- 1) From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, check that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, check that transmission is in neutral, the steering wheel is unlocked (the ignition key should be in "ACC" position), and the steering wheel is secured with a clamping device designed for towing service.

NOTICE

- The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.
- After shifting the Auto Gear Shift gearshift lever to the “N” position, always check the gear position indicator in the instrument cluster shows the “N” position to make sure that the transmission is disengaged.

If the transmission cannot be put in neutral, turn the key from the “LOCK” to the “ON” position, and move the Auto Gear Shift gearshift lever from “N” to “D”, “M” or “R”, then back to “N” again. Then turn the key from the “ON” to the “LOCK” position. These procedures may help put the transmission in neutral. If the transmission still cannot be put in neutral, you cannot tow the vehicle without using a towing dolly.

Running out of battery

In the following cases, the lead-acid battery is running out.

- The starter does not engage when attempting to turn on the engine. Or, the starter rotation is too weak to make the engine start.
- The headlight illumination is extremely low or the horn volume is low.

**Engine trouble:
Starter does not operate**

- 1) Try turning the ignition switch to “START” position with the headlights turned on to determine the battery condition. If the headlights go excessively dim or go off, it usually means that either the battery is discharged or the battery terminal contact is poor. Recharge the battery or correct battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a authorised Maruti Suzuki workshop.

EMERGENCY SERVICE

Engine trouble: Does not start

Make sure that your vehicle has enough fuel and battery.

If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.

If the engine still does not start have your vehicle inspected at a MARUTI SUZUKI authorized workshop.

- Do not operate the starter motor for more than 12 seconds.

NOTE:

If the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or if there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.

Engine trouble: Flooded engine

If the engine is flooded with petrol, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine. Do not operate the starter motor for more than 12 seconds.

Engine trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating during driving:

- 1) Turn off the air conditioner, if equipped.
- 2) Take the vehicle to a safe place and park.
- 3) Let the engine run at the normal idle speed for a few minutes until the high engine coolant temperature warning light goes off.

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

If the high engine coolant temperature warning light does not go off:


- 1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump, radiator hoses and heater hoses for leakage.

If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.

- 3) If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine coolant" in the "INSPECTION AND MAINTENANCE" section.)

NOTE:

If engine overheats and you are not sure what to do, contact a authorised Maruti Suzuki workshop.

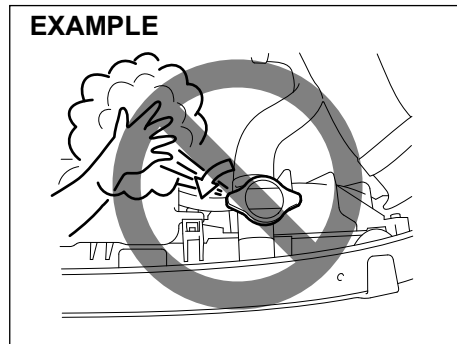


79J007

⚠ WARNING


- It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.

Warning triangle

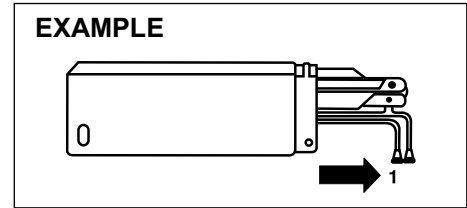

MH007001


In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

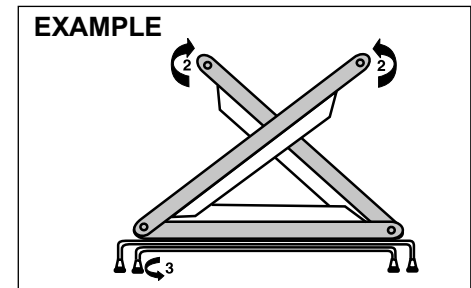

MH007014

EMERGENCY SERVICE

- Remove the warning triangle carefully from the cover as shown by arrow 1.
- Open both the reflector arms as shown by arrow 2 and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter-clockwise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

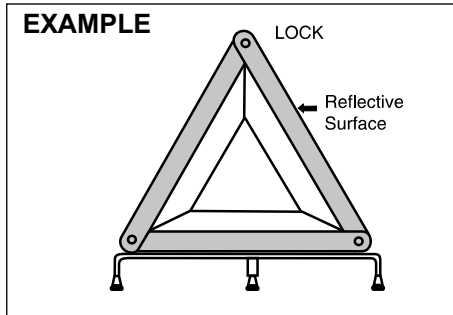


MH007015

APPEARANCE CARE

Corrosion prevention 8-1

Vehicle cleaning 8-2

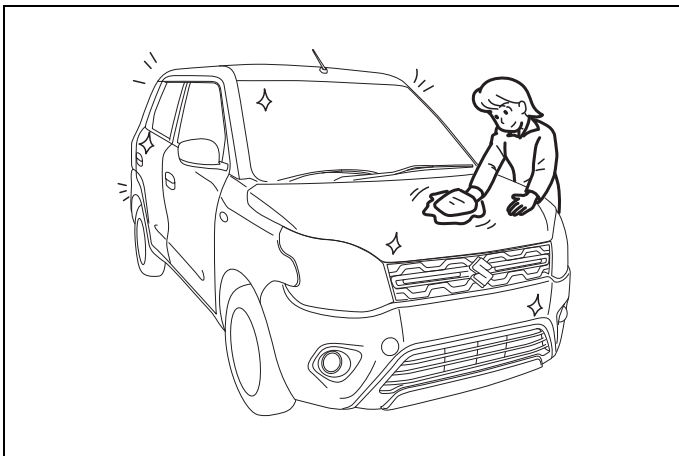

69RM08000

APPEARANCE CARE

Corrosion prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important information about corrosion

Common causes of corrosion

- 1) Accumulation of road salt, dirt, moisture or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- 2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.
- 3) Any or all of the below mentioned points.
 - Continuous exposure to sunlight.
 - Hard water and sea water coming in contact with vehicle.
 - Foot rubbing (skirting).

Environmental conditions which accelerate corrosion

- 1) Road salt, dust control chemicals, sea air or industrial pollution will all accelerate the corrosion of metal.
- 2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- 3) Moisture in certain areas of a vehicle for an extended period of time may pro-

mote corrosion even though other body sections may be completely dry.

- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to help prevent corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing.

Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Vehicle cleaning" section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of

your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Check that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area


Park your vehicle to save it from continuous exposure to direct sunlight. Do not park your vehicle in a damp, poorly-ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

▲ WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter and exhaust pipes. A fire could be started if the undercoating substance becomes overheated.

Vehicle cleaning

EXAMPLE

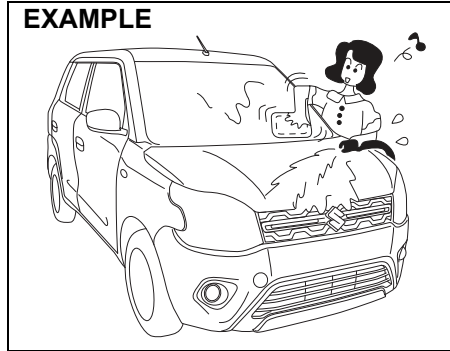

69RM08001

▲ WARNING

When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, petrol and benzene. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning interior

Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery (Except front passenger seat)

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

APPEARANCE CARE

CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

Fabric upholstery (For front passenger seat)

Do not use liquid for cleaning as it may penetrate the fabric and damage the seat sensor.

Leather upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- *In order to keep leather upholstery looking good, it should be cleaned at least twice a year.*
- *If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.*
- *When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink.*
- *As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.*

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.


Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Instrument panel and console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

<p>⚠ WARNING</p>
<p>Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components. Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/or lead to non-functioning of the part or may cause fire.</p>

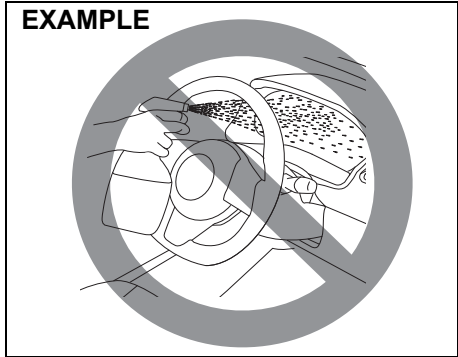

81RM08005

<p>NOTICE</p>
<ul style="list-style-type: none"> • Liquid such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth. • Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.

Cleaning exterior

<p>NOTICE</p>
<p>It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.</p>

Caring for aluminum wheels

- NOTE:**
- Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaner will cause permanent spots, discoloration and cracks on finished surfaces and damage to center caps.
 - Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.


APPEARANCE CARE

Washing

▲ WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to check that they have maintained their normal effectiveness.

Washing by hand

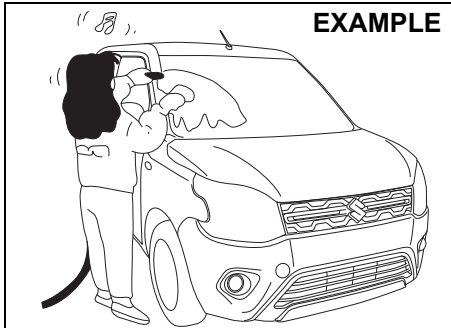

69RM08002


When washing the vehicle, park it in the place where direct sunlight does not fall on it and follow the instructions below:

- 1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.

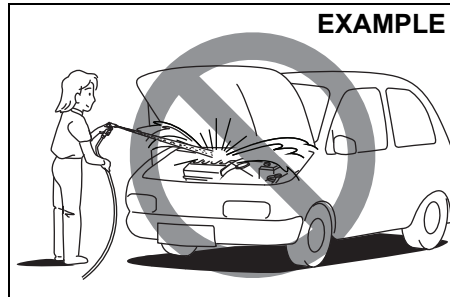

- 2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

- To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.
- When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.
- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
 1. Clean all damaged spots and allow them to dry.
 2. Stir the paint and touch up the damaged spots lightly using a small brush.
 3. Allow the paint to dry completely.

Washing by an automatic car wash

NOTICE


- If you use an automatic car wash, check that your vehicle's body parts, such as spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.
- Remove the antenna when using an automatic car wash.

Washing by a high-pressure cleaner

NOTICE

- If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.
- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
 - Pointing the nozzle to door glasses and doors can allow water to enter the cabin.

Waxing

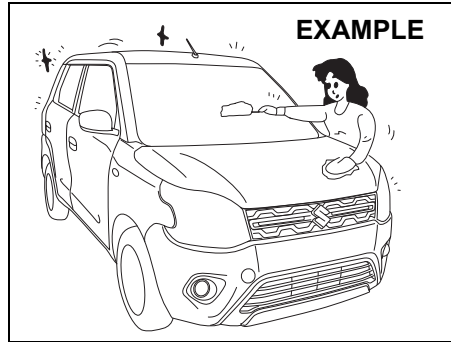


69RM08003

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

SPECIFICATIONS

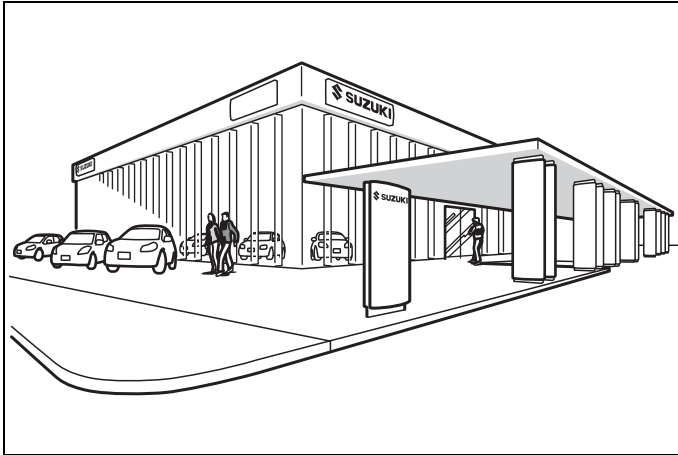


84MM01001

Vehicle identification	9-1
FASTag (if equipped)	9-2
High Security Registration Plate (HSRP) (if applicable)	9-3
Fuel Recommendation.....	9-4
Specifications	9-5


SPECIFICATIONS

Vehicle identification

Chassis serial number

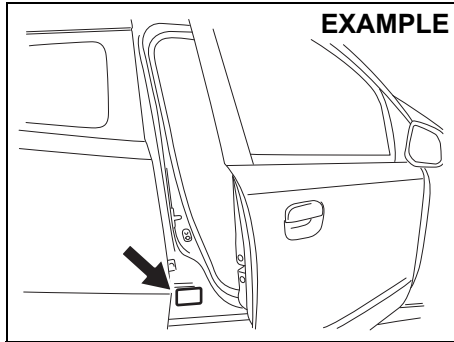


69RH087

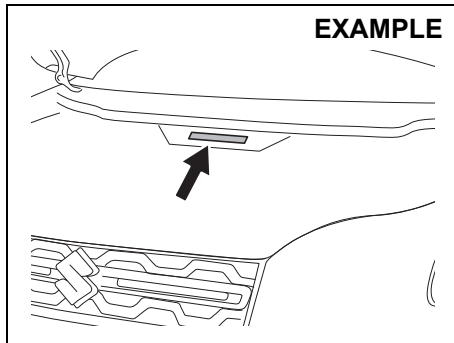

69RH135

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist a Maruti Suzuki authorised workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorised workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

Engine serial number

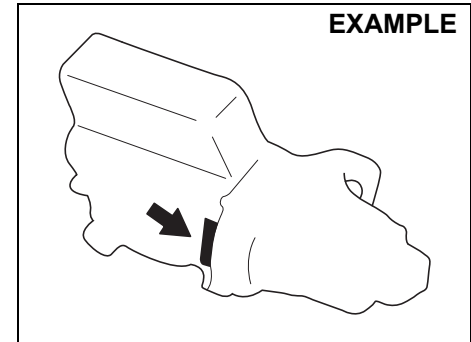


60G128

The engine serial number is stamped on the cylinder block as shown in the illustration.


FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.

In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorised workshop.

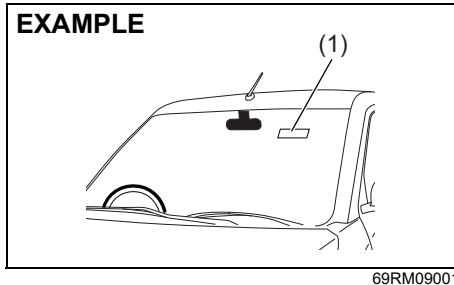


As seen from inside of the vehicle

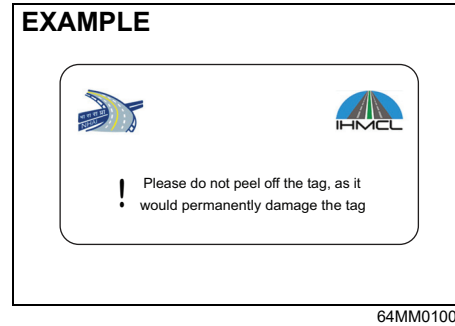

NOTE:
The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle

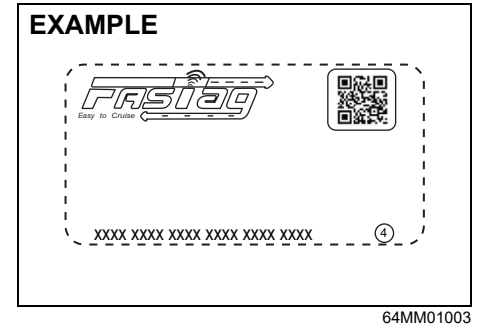

NOTE:
The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.

Use of any sharp objects on the tag can damage the tag.

SPECIFICATIONS


High Security Registration Plate (HSRP) (if applicable)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.

HSRP contains;


- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- Third license plate on front windshield.

Third License Plate

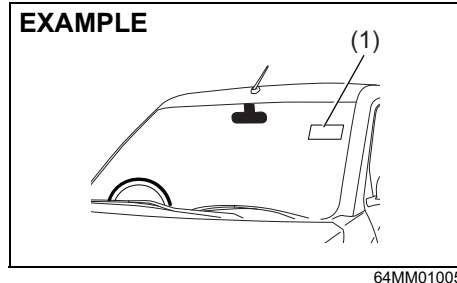

(1) Third license plate

Third license plate - As seen from outside of the vehicle

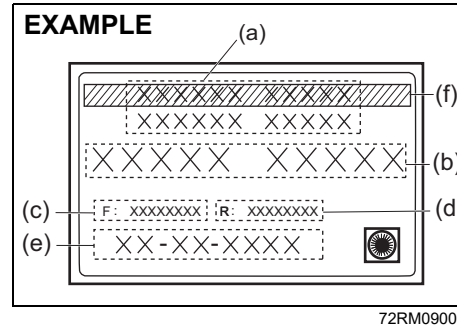

- (a) HSRP issuing authority name
- (b) Vehicle registration number
- (c) Unique laser number - Front plate
- (d) Unique laser number - Rear plate
- (e) Date of 1st registration (in DD-MM-YYYY format)
- (f) Green strip (BS6 vehicle)

NOTE:


The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:

- Any attempt to remove the third license plate from the windscreen will result in permanent damage to the label.
- Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.

- Use of any sharp objects on the label can damage the label.
- In the event of any replacement of the third license plate, may please contact the approved authority.

Third license plate - As seen from inside of the vehicle

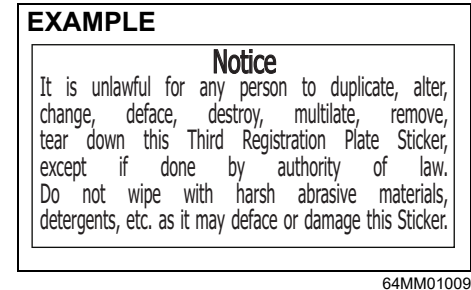

NOTE:

The picture shown is for indicative purpose only.

NOTE:

Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.

Fuel Recommendation

Petrol Engine

To avoid damaging catalytic converter, you must use unleaded petrol with an octane number (RON) of 91 or higher.

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol, also known as gasohol, are commercially available in the country and can vary with location. Gasoline Ethanol blend up to E20 can be used as fuel for this vehicle.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

CAUTION

Use of spurious, low quality, adulterated fuel can cause damage to the engine and engine auxiliaries, affect functioning of engine and degrade engine performance including but not limited to engine seizure.

NOTICE

- **The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.**
- **Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.**

SPECIFICATIONS

Specifications

NOTE:

Specifications are subject to change without notice.

M/T: Manual transmission

ITEM: Dimensions		UNIT: mm	
Overall length			3655
Overall width			1620
Overall height			1675
Wheelbase			2435
Track	Front		1430
	Rear		1440

ITEM: Mass (weight)		UNIT: kg	K10C engine model	K12N engine model
Curb mass (weight)	M/T		825 – 840	850 – 855
	Auto Gear Shift		845	855 – 860
Gross vehicle mass (weight) rating			1340	1340
Permissible maximum axle weight	Front		740	740
	Rear		725	725

SPECIFICATIONS

ITEM: Engine		
Type	K10C (DOHC)	K12N (DOHC)
Number of cylinders	3	4
Bore	73.0 mm (2.87 in.)	73.0 mm (2.87 in.)
Stroke	79.5 mm (3.13 in.)	71.5 mm (2.81 in.)
Piston displacement	998 cm ³ (998 cc, 60.9 cu.in)	1197 cm ³ (1197 cc, 73.0 cu.in)
Compression ratio	11.5 : 1	12.0 : 1

ITEM: Electrical		
Standard spark plug	K10C engine models	NGK ILZKR6F11
	K12N engine models	NGK ILZKR6F11
Battery	"ISS M42 ^{*1} 20HR 38Ah CCA 330A (JIS) " and "34B19L ^{*1} 20HR 33AH CCA 240 A (JIS)"	
Fuses	See "INSPECTION AND MAINTENANCE" section.	

*1: Your vehicle is equipped with a lead-acid battery for exclusive use of the ENG A-STOP system. When replacing the lead-acid battery, make sure to select the specified type for ENG A-STOP system. Consult a MARUTI SUZUKI authorized workshop for replacing the lead-acid battery.

SPECIFICATIONS

ITEM: Lights		WATTAGE	BULB No.
Headlight		12V 60/55W	H4
Front fog light (if equipped)		12V 19W	H16
Position light		12V 5W	W5W
Turn signal light	Front	12V 21W	PY21W
	Rear	12V 21W	PY21W
Side turn signal light	(on fender)	12V 5W	W5W
	(on outside rearview mirror)*	LED	–
Tail/brake light		12V 21/5W	P21/5W
High-mount stop light		12V 16W	W16W
Reversing light		12V 21W	P21W
License plate light		12V 5W	W5W
Interior light		12V 10W	–

• If you need to replace the following bulbs indicated in the above table, consult your Maruti Suzuki authorised workshop.

* Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.

ITEM: Wheels and tires		
Tire size (front, rear and spare)	155/80R13 79T*, 165/70R14 81S*	
Rim size	155/80R13 tire: 13×4 1/2J 165/70R14 tire: 14×5J	
Tire size, spare**	For vehicle equipped with 155/80R13 tire	155/80R13 (Steel Wheel)
	For vehicle equipped with 165/70R14 tire	165/70R14 (Steel Wheel)
Tire pressures	For the specified tire pressure, see the tire information label located on the driver's door lock pillar.	

* If you cannot prepare tires with the specified load index rate and speed symbol, prepare tires with higher load index rate and speed symbol.

** The provision of different spare wheel is as per government notification/regulation (MORTH notification vide GSR 625 (E)).

ITEM: Recommended fuel / lubricants and capacities (approx.)			
Fuel	See "Fuel" in this section.		32 L [#]
Engine oil	K10C engine models	Classification: API SN, SP ILSAC: GF-6 Viscosity: SAE 0W-16	2.8 L (replacement with oil filter)
	K12N engine models		3.7 L (replacement with oil filter)
Engine coolant	K10C engine models	"SUZUKI LLC: Super (Blue) Coolant" *1	3.7 L (including reservoir tank)
	K12N engine models	"SUZUKI LLC: Standard (Yellow) Coolant" *1	3.9 L (including reservoir tank)
Manual transmission oil/ Auto Gear Shift oil	K10C engine models	"MARUTI GEAR OIL 75W"	1.5 L
	K12N engine models		1.5 L
Brake fluid	MARUTI GENUINE BRAKE FLUID (MGBF) or DOT 3		Refill to the proper oil level according to the instructions in "INSPECTION AND MAINTENANCE" section.

*1: The recommended coolant varies depending on your vehicle. Refer to "INSPECTION AND MAINTENANCE" section.

#: The fuel tank capacity is slightly more than the recommended quantity of fuel that you can fill. The additional voluminous space is provided for safety and scientific reasons.

SERVICE NETWORK (AS ON 31.01.2026)

- **MARUTI SUZUKI AUTHORISED DEALER WORKSHOP** : SALES, SERVICE, WARRANTY & SPARE PARTS
- **MARUTI SUZUKI NEXA DEALER WORKSHOP** : SALES, SERVICE, WARRANTY & SPARE PARTS
- **MARUTI SERVICE MASTER (MSM)** : SERVICE, WARRANTY & SPARE PARTS
- **MARUTI SERVICE ZONE (MSZ)** : SERVICE, WARRANTY & SPARE PARTS
- **MARUTI AUTHORISED SERVICE STATIONS (MASSs)** : 'A' CATEGORY MASSs (**MARKED)
Free & paid Service, Major repairs & Accidental repairs
- 'B' CATEGORY MASSs (* MARKED)
Free & paid Service & Major repairs
- 'C' CATEGORY MASSs (##MARKED)
Free & paid Service & Minor repairs
- 'D' CATEGORY MASSs (#MARKED)
Free Service & Minor repairs

NOTE:

Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit www.marutisuzuki.com or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH:- 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO.- 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NO. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOTNOIID15,ACTIONAREAIID, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA

SERVICE NETWORK (AS ON 31.01.2026)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED Plot No-GEN 25 + 25 B/2,TTC INDUSTRIAL AREA,PAWANE VILLAGE,THANE BELAPUR ROAD,NAVI MUMBAI- 400705 PH NO-022 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 – 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 10th Floor, Block A, Global Infocity Park, No.40, Anna Nedunchalai, Kandanchavadi, Perungudi, Chennai, Tamil Nadu – 600096 PH. - 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING,VITTAL MALLYA ROAD,BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITD 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg,Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH

SERVICE NETWORK (AS ON 31.01.2026)

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact : 0755 6051555
Calicut	Maruti Suzuki India Limited, Ground Floor, Aarpees Arcade, YMCA Cross Road, Opp. Indusind Bank, Kozhikode, Kerala -PIN 673001 Phone:- 0495-2723151
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph.- 0422-2221091
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph. - 0452-4200203
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111

SERVICE NETWORK (AS ON 31.01.2026)

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph.- 0771-4039643
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001
Vijayawada	Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2, Opposite Executive Club, Vijayawada, -530002,
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299

ANDAMAN AND NICOBAR ISLANDS

DIGLIPUR

1. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-0B), MADHUPUR VILLAGE,TEHSIL DIGLIPUR,NORTH ANDAMAN - 744202

PORT BLAIR

2. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-01), GARACHRAMA, PORT BLAIR - 744105
3. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-04), NAYAGEN, PORTBLAIR - 744101

RANGAT

4. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, - 744201
PH :211546.

ANDHRA PRADESH

ADONI

5. MSA MOTORS (-01), BESIDE HP GAS YEMMIGANUR ROAD ADONI - 518301

AMALAPURAM

6. SB MOTOR CORPORATION (-01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL, MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201
PH :8374303303.

AMARAVATI

7. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 29, TOWNSHIP-16, SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1, SUB-DIVISION-L40, MALKAPURAM LIMITS, MANDAL - THULLURU, AMARAVATI-CITY, DIST. -GUNTUR, ANDHRA PRADESH. - 522237

ANAKAPALLE

8. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001
PH :7093575555.

ANANTAPUR

9. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 146-3, SRI NAGAR COLONY, ANANTAPUR, ANDHRA PRADESH
10. NIVYA AUTOMOBILES PRIVATE LIMITED (-01), NH 44 RAJEEV COLONYNEAR SILPARAMAM - 515001

ANNAVARAM

11. VARUN MOTORS PVT LTD (-01), DO-NO : 5/116, SURVEY NO - 59, CHALAMAYYA NAGAR, RAILWAY STATION ROAD, NEAR SMP BAJAJ SHOWROOM, ANNAVARAM, EAST GODAVARI DISTRICT, ANDHRA PRADESH. - 533406
PH :9885288339.

ARAKU

12. VARUN MOTORS PVT LTD (-01), SURVEY NO 33-9/A, RAVULAGADDA VILLAGE,BESIDE GOVT DEGGRE COLLEGE,ARAKU,VISHAKAPATNAM,ANDHRAPR ADESH - 531151
PH :9885317344.

ATMAKUR

13. BHARGAVI AUTOMOBILES PVT LTD (-01), D.NO. 524, NELLORE PALEM, ATMAKUR, BESIDE HERO SHOWROOM, KURNOOL - 524322

BHIANSA

14. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 448A/1, BASAR ROAD, BHAINSA,NIRMAL DISTRICT,TELANGANA - 504103
PH :8896092222.

BHIMAVARAM

15. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), NEAR BYEPASS ROAD,UNDI ROAD,BHIMAVARAM - 534202
PH :7799771177.

BOBBILI

16. VARUN MOTORS PVT LTD (-01), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE - MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT - VIZIANAGARAM, ANDHRA PRADESH. - 535558

CHANDRAGUNDA

17. VARUN MOTORS PVT LTD (-01), CHANDRUGONDA GRAM PANCHAYAT RECORD SURVEY NO. 81/4, OPP.SAI KRISHNA PETROL BUNK - 507166

CHEPURAPALLI

18. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), 4-284, CHEEPURPALLI, VIZIANAGARAM, ANDHRA PRADESH

CHILKALURIPET

19. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), MIS JAYALAKSHMI AUTO, SURVEY NO 457/C3, CHILKALURIPET, NADENLA MANDAL, GUNTUR, ANDHRA PRADESH - 522616
PH :9989144344.

CHINTALAPUDI

20. REDDY & REDDY MOTORS (-01), RS NO.698/2 MARUTI NAGAR COURT CENTRE, ELURU-CHINTALAPUDI HIGHWAY, CHINTALAPUDI MANDAL, ANDHRA PRADESH - 534460

CHIRALA

21. JAYALAKSHMI AUTOMOTIVES PVT LTD (-04), 9-1-92, CHURCH ROAD,CHIRALA, - 523157
PH :7331151661.

CHITTOOR

22. BHARGAVI AUTOMOBILES PVT LTD (-03), 22-241/A,KATTAMANCHI TIRUPATI ROAD,CHITTOOR, - 517001
PH :8463955558.

CHODAVARAM

23. VARUN MOTORS PVT LTD (-01), SURVEY.NO: 108-2-A, 108-3-A & 108-4, GOVCHODAVARAM, DIST. VISAKHAPATNAM, - 531036
PH :9885317344.

CUDDAPAH

24. MSA MOTORS (-03), K.T. BYE PASS ROAD,CUDDPPAH,ANDHRA PRADESH, - 516001
PH :7396685628.

DARSI

25. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 1025/1, DARSI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523247

DHARMAVARAM

26. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), BESIDE SIVALAYAM TEMPLE, B.C. COLONY, POTHUKUNTA, DHARMAVARAM - 515671

DRAKSHARAMMAM

27. VARUN MOTORS PVT LTD (-01), D.NO.19-2-9/1 ,PITTAVARI STREET , DRAKSHARAMAM, RAMACHANDRAPURAM MANDAL, EAST GODAVARI DISTRICT , ANDHRA PRADESH. - 533255

ELURU

28. REDDY & REDDY MOTORS (-01), OLD NH-5 ROAD,BESIDES C R REDDY WOMEN'S COLLEFFE OLD NH-5,ELURU, - 534001
PH :9705311566.

GAJAPATINAGARAM

29. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO 50-14, D.NO 3-1/C, BONDAPALLI MANADALAM, GAJAPATHINAGARAM, ANDHRA PRADESH. - 535270
PH :9100818111.

GAMBHEERAM

30. JAYABHERI AUTOMOTIVES PRIVATE LTD (-02), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHERAM, ANANDPURAM, VISHAKAPATNAM. - 530052
PH :9642496789.

GAMPALAGUDEM

31. VARUN MOTORS PVT LTD (-01), R.S.NO. 11/2A, AT PEDAKOMIRA PANCHAYAT, THIRUVURU SUB DIVISION, GAMPALAGUDEM MANDAL, N.T.R DISTRICT - 521403

GIDDALURU

32. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), S NO 716, BESIDE PADMAVATI GARDENS, GIDDALURU - 523357

GUDIVADA

33. VARUN MOTORS PVT LTD (2603-02), D NO. 1-621,AUTONAGER 1ST LANE,GUDIVADA - 521301
PH :9885651383.

GUDUR

34. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO.1619/3A,GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101
PH :9652984999.

GUNTUR

35. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D-N-8-24-31,MANGALAGIRI ROAD,GUNTUR - 522001
36. JAYALAKSHMI AUTOMOTIVES PVT LTD (-05), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP. - 522203
37. JAYALAKSHMI AUTOMOTIVES PVT LTD (-06), SURVEY NO 509, D NO 25-11-50 TOWN, WARD NO 22, OPPOSITE ITC BUILDING, R AGRAHARAM, NAGARAPALAM ROAD,GUNTUR, - 522004
PH :8374847777.
38. VARUN MOTORS PVT LTD (-01), DOOR NO. 25-16-176, IN D.NO. 169/C1 & 2, ANKIREDDYPALEM, GUNTUR CHIALAKALURIPET R - 522007

HANUMAN JUNCTION

39. SANTOSH AUTOMOTORS PVT LTD (-01), SY NO. 569/1 BESIDES NH5, VELURU VILLAGE, BAPULAPADU MANDAL, HANUMAN JUNCTION KRISHNA DISTRICT PIN 521105 - 521115
PH :9703633755.

HINDUPUR

40. JAYALAKSHMI AUTOMOTIVES PVT LTD (3602-36-01), PLOT NO.83,BYPASS ROAD,BESIDE AR HOSPITARTC COLONY,CHAITANYANAGAR, HINDUPUR - 515201

ICHAPURAM

41. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO. 105/3 , 105/4 AND 229/7, ICHAPURAM, BALAKRISHNAPURAM PANCHAYAT,MUNIBHADRA VILLAGE,ANDHRA PRADESH. - 532312

JAGGAIAHPETA

42. VARUN MOTORS PVT LTD (2603-05), DOOR NO. 2-20, MUTHYALAMMA GUIDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175

JAGGAMPET

Dealer Workshop (AS ON 31.01.2026)

43. SB MOTOR CORPORATION (-01), M/S D.NO 10-37, JAGGAMPETA, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533435 PH :8886877759.	KHAMMAM	MOVVA	74. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH :7702333513.
JAMMALAMADUGU	44. ADARSHA AUTOMOTIVES PVT LTD (-01), 21/570/A, TADIPATRI ROAD, JAMMALAMADUGU, KADAPA - 516434	45. VARUN MOTORS PVT LTD (-01), D.NO-15-19-48/3, PLOT NO.119, KHANAPURAM INDUSTRIAL AREA - 521108	75. BHARGAVI AUTOMOBILES PVT LTD (-01), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.31.NO.18, NELLORE(A.P.) - 524004 PH :9248742225.
JANGAREDDYGUDEM	45. REDDY & REDDY MOTORS (-02), NEAR R&B GUEST HOUSE, ELURU ROAD, JANGAREDDYGUDEM, - 534447 PH :9912563666.	KORUKONDA	76. BHARGAVI AUTOMOBILES PVT LTD (-04), A2, INDUSTRIAL ESTATE, A.K. NAGAR, NELLORE, - 524004 PH :9248727888.
K. KOTAPUDDU	46. VARUN MOTORS PVT LTD (-01), NEAR SAMPATH MOTORS, S.H: 142, K.KOTAPADU (VILLAGE & MANDAL), VISAKHAPATNAM - DIST. PIN: 531034, A.P - 531034	KURNOOL	77. VISHNU CARS PVT LTD (-01), FIELD NO. 628 /SURVEY NO. 877, 878/A/4 AND 883/A/1A, NELLORE BIT-II, BESIDES GSR GARDENS, BALAJI NAGAR, NH-16, NELLORE CITY. - 542002 PH :7337340778.
KAIKALURU	47. SANTOSH AUTOMOTORS PVT LTD (-01), SY. NO. 12777 &9, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL, DIST. KRISHNA - 521333	46. VARUN MOTORS PVT LTD (-01), D. NO.1-220, NEAR INDIAN OIL PETROL BUNK, JUMBUPATNAM, KORUKONDA, EAST GODAVARI- 533289. - 533289	78. BHARGAVI AUTOMOBILES PVT LTD (-07), PLOT NO 11, WOOD COMPLEX, VEDAYAPALEM, NELLORE - 524004
KAKINADA	48. SB MOTOR CORPORATION (-01), D. NO. 52-10-36/3, NEAR AMAR GHATI CENTER, KARAPA ROAD, KAKINADA - 533001 PH :9885119888.	MACHERLA	NIDDAVOHOLU
KALYANADURGAM	49. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO.328-B, DODAGATTA ROAD, NEAR NAGULA DHINNE, KALYANADURGAM - 515761	MADANAPALLI	79. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), D.NO 479/5, SAMISRAGUDEM , NIDADAVOLU, WEST GODAVARI, ANDHRA PRADESH - 534301
KANCHIKACHERLA	50. VARUN MOTORS PVT LTD (-01), SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERLA VILLAGE AND MANDAL, KRISHNA DIST., ANDHRA PRADESH. - 521180	MADHURAWADA	80. VARUN MOTORS PVT LTD (2603-03), BESIDE R T C BUS DEPOT., OLD D M OFFICE, VIJAYAWADA ROAD, NIZVID - 521201
KANDUKURU	51. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT - PRAKASHAM, ANDHRA PRADESH. - 523105	58. VARUN MOTORS PVT LTD (-01), SY. NO: 762B1, RAVADA ROAD, KURUPAM - 535524	ONGOLE
KANIGIRI	52. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 793, PLOT NO 11, 12 , KANIGIRI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523230	59. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D.NO. 343/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY. - 522426	81. JAYALAKSHMI AUTOMOTIVES PVT LTD (-02), THROVAGUNTA COMPANY CENTRE, NH-5, GUNTUR ROAD, ONGOLE, PRAKASAM DISTRICT. - 523003 PH :9701055955.
KAVALI	53. BHARGAVI AUTOMOBILES PVT LTD (-05), OPP. VENKATESWAR SWAMI TEMPLE, AUTO NAGAR MAIN ROAD KAVALI, DISTT. NELLORE - 524201 PH :9248702567.	60. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH :9959893434.	PADERU
		61. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY. NO. 180/2B, PRADESHIPALEM, MADHURAWADA, ANDHRA PRADESH - 530048 PH :8886669985.	82. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), DOOR NO.5-73, BESIDE MODHAKONDAMMA TEMPLE, NEAR OLD BUS STAND, G. MADUGULA ROAD - 524341
		62. VARUN MOTORS PVT LTD (-01), SURVEY NO 49/6A, MALKIPURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533250 PH :9885317344.	PALAKONDA
		63. SB MOTOR CORPORATION (-01), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT - EAST GOADAVARI, ANDHRA PRADESH . - 533308 PH :8886664090.	83. VARUN MOTORS PVT LTD (-01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440
		64. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D. NO 4/5/15, RAILWAY STATION ROAD, MARKAPURAM, DIST: PRAKASAM, ANDHRA PRADESH-523316 - 523316	PALASA
			84. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO. 63 OF VILLAGE - PURUSHOTTAPURAM, PALASA MANDAL, KASIBHOGGA MUNICIPALITY, DISTRICT - SRIKAKULAM, ANDHRA PRADESH. - 532221
			PALMANERU

85. VISHNU CARS PVT LTD (-01), SURVEY NO. 184/3, PALAMANERU VILLAGE, GANGAVARAM MANDALAM, DIST. CHITTOOR, PIN-517408, ANDHRA PRADESH - 517408	96. SB MOTOR CORPORATION (-01), OPP.FCI GOVDOWN,JAILROAD,LALACHERUVIL,RAJAMU NDRY. - 533101	SRIKAKULAM	117. BHARGAVI AUTOMOBILES PVT LTD (-06), DOOR NO: 22-9-57/5G, REVENUE WARD NO-22, THIMMINAIDU PALEM, RENIGUNTA ROAD, TIRUPATI - 517501 - 517501 PH :7997969919.
PARVATHIPURAM	97. SB MOTOR CORPORATION (-03), D. NO. 3-243, NH-5, ROAD, HUKUMPETA, RAJAHMUNDRY. - 533107 PH :9885477155.	107. VARUN MOTORS PVT LTD (4603-09), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH :9885477155.	118. VISHNU CARS PVT LTD (-01), SURVEY NO. 102/3A2A, 200' CHENNAI - TIRUPATI HIGHWAY, KOTRAMANGALAM,RENIGUNTA MANDAL, TIRUPATI - 517520 PH :9154971551.
86. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY.NO. 195-1A, NEAR TBR THEATRE, NARSIPURAM, PARVATHIPURAM MANDAL, DISTRICT - VIZIANAGARAM, ANDHRAPRADESH,PINCODE - 535522 - 535522 PH :9100818111.	98. VARUN MOTORS PVT LTD (-01), SURVEY NO. 660, PALACHERLA VILLAGE OF RAJANAGARAM MANDAL, RAJAHMUNDRY, EAST GODAVARI DSIT. - 533102 PH :9642225289.	108. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-04), SURVEY NO 22/7P.22/8 AND SURVEY NO 29/12,16,17, BALAGA RURAL,SRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH :9100818111.	TIRUVURU
PATHAPATNAM	RAJAM	SULLURUPETA	119. SANTOSH AUTOMOTORS PVT LTD (-01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. - 521235
87. VARUN MOTORS PVT LTD (-01), D.NO 4-245,SURVEY NO 264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA PRADESH - 532213 PH :9885317344.	99. VARUN MOTORS PVT LTD (-01), SURVEY NO 44, SARATHI VILLAGE, RAJAM, SRIKAKULAM, ANDHRA PRADESH. PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH :7799666998.	109. BHARGAVI AUTOMOBILES PVT LTD (-01), S.K.S KALYANA MANDAPAM, OPPOSITE KOTAPOLLUR RD, SULLURUPETA 524121 - 524121	TUNI
PEDDAPURAM	RAMPACHODAVARAM	TADA	120. SB MOTOR CORPORATION (-01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH :7661893888.
88. VARUN MOTORS PVT LTD (-01), S. NO. 19-1-412/2, SUDHA COLONY, REVENUE WARD NO-15, PEDDAPURAM- 533 437. KAKINADA DIST. A.P - 533437	100. VARUN MOTORS PVT LTD (-01), SURVEY NO 14/1,IRLAPALLY VILLAGE, RAMPACHODAVARAM,ANDHRA PRADESH - 533288 PH :9885288339.	110. VISHNU CARS PVT LTD (-01), SURVEY NO 58/3,TADA, NELLORE DISTRICT - 524401 PH :9840434242.	VENKATAGIRIKOTA
PENDURTHI	RAYACHOTY	TANUKU	121. BHARGAVI AUTOMOBILES PVT LTD (-01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK,GMR FUNTION HALL,DARASALLA,PALLIKUPPAM,KUPPAM ROAD,V KOTA - 517242
89. VARUN MOTORS PVT LTD (-01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DIST: VISAKAPATNAM - 530047 PH :9885438455.	101. ADARSHA AUTOMOTIVES PVT LTD (-01), #38/105-8-8, CHITTOOR ROAD, REVENUE WARD NO 88, RAYACHOTY - 516269	111. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH :9912341624.	VENKATAPGIRI
90. VARUN MOTORS PVT LTD (-02), SURVEY NO 240/1.2 & 241, PENDURTHI, VIZAG - 531173 PH :9703843737.	REPALLE	112. VARUN MOTORS PVT LTD (-01), D-2-96/2 ,NAGARAM VILLAGE.TATIPAKA, EAST GODAVARI DT ,ANDHRAPRADESH -	122. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO 166,169/1,169/2,RTC COLONY,VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH :9248747777.
PIDUGURALLA	102. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D NO 430, BESIDE ESAR PETROL BUNK, REPALLE, DISTRICT: GUNTUR, ANDHRA PRADESH - 522265 PH :8374847777.	TEKKALI	VIJAYAWADA
91. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT - GUNTUR, ANDHRA PRADESH. - 522413	S KOTA	113. VARUN MOTORS PVT LTD (-01), SURVEY NO 497-4, RAGHUNADHAPURAM, TEKKALI MAIN RD, TEKKALI, ANDHRA PRADESH - 532201	123. VARUN MOTORS PVT LTD (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH :9885576602.
PITHAPURAM	103. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO 113/3,MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH :9100818111.	TENALI	124. VARUN MOTORS PVT LTD (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY,VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH :8297241177.
92. SB MOTOR CORPORATION (-01), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAVRI DIST., ANDHRA PRADESH. - 533450	SALUR	114. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D.NO 131/1, SULTANABAD, GUNTUR MAIN ROAD, TENALI KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002	125. SANTOSH AUTOMOTORS PVT LTD (2607-01), SURVEY NO. 223/5, D. NO. 11-6/12, KANURU PANCHAYAT, PENAMALLURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH - 520010
PONNUR	104. VARUN MOTORS PVT LTD (-01), D. NO:139, NH-43, KOTTAKKI (VIL), RAMABADRA PURAM, SALUR-535579, ANDHRA - 535579	THAGARAPUVALASA	126. VARUN MOTORS PVT LTD (2603-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH :9642225291.
93. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), PLOT NO. 4, D. NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124	SHAHABAD	115. VARUN MOTORS PVT LTD (-01), SURVEY NO.11/2B.11/3,NAGARPALEM VILLAGE, NH-16, NAGARAPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM. - 531162	127. SANTOSH AUTOMOTORS PVT LTD (-02), D.NO. 77-42-16A, OPP. NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520015 PH :7799787932.
PRODUTHUR	105. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO 467/1, SHABAD ,RANGA REDDY - 509217	TIRUPATI	
94. ADARSHA AUTOMOTIVES PVT LTD (-02), 11/301,BESIDE-DMART MYDUKUR ROAD - 516360	SOMPETA	116. BHARGAVI AUTOMOBILES PVT LTD (-02), 11/66/1,TIRUPATI RENIGUNTA ROAD, TIRUPATI, - 517507 PH :7997969946.	
PUSAPTIRAGA	106. VARUN MOTORS PVT LTD (-01), KHATA NO 406.407.408 DENOTED IN SURVEY NO 241/1/1,MOGLIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284		
95. VARUN MOTORS PVT LTD (4603-11), SY. NO: 16/21, CHODAMMA AGRAHARAM - 535002			
RAJAHMUNDRY			

Dealer Workshop (AS ON 31.01.2026)

128. VARUN MOTORS PVT LTD (2603-26-08), SURVEY NO 20777, 207/8B2, 207/15B, D-NO 8-103, NEAR SHIVAJAYAM TEMPLE, ENKEPADU, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH - 521108 PH -9885576602.	139. VARUN MOTORS PVT LTD (4603-46-0L), SURVEY NO. 408/1 OF MADHURAJAWADA VILLAGE, RUSHIKONDA.TITI SEZ, VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. - 530045 PH -9885315344.	ITANAGAR	161. BHARATI MOTORS PVT LTD (-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313 PH: 7002819523.
VIJAYAWADA	140. VARUN MOTORS PVT LTD (4603-46-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530017	150. D Y MOTORS (-75-01), LPC NO - DC/CC/LPC, BORUM VILLAGE, PO/PS- NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100 PH :8415075164.	162. PODDAR CAR WORLD PVT LTD (-01), WARD NO. 1, BILHORTARIHATI, NEAR EMPLOYEE EXCHANGE OFFICE., BARPETA TOWN, PIN-781301, ASSAM, - 781301
129. JAYABHERI AUTOMOTIVES PVT LTD (-05), D.NO.40/17-192/1H, LABBIPET, VIJAYAWADA - 520002	141. VARUN MOTORS PVT LTD (4603-46-10), SURVEY NO 228/224, WARD NO 19, AGNAMPUDI,VIZAG - 533053 PH -9885317344.	NAMSALI	BIJOYNAGAR
VINUKONDA	142. VARUN MOTORS PVT LTD (4603-46-13), D.NO: 3-83, NH-16 ROAD, BESIDE ARCHIAN GRANITES, YENDADA - 530045	151. D Y MOTORS (-01), 2 MILES, NH 52, NH15, NAMSALI, ARUNACHAL PRADESH 792103 - 792103	163. PODDAR CAR WORLD PVT LTD (-01), AT/PO - BUIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BUIJOYNAGAR - 781125 PH -9864209733.
130. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 239/3A,237/3, VINUKONDA, PALNADU DISTRICT, ANDHRA PRADESH - 522647 PH :8374847777.	VISSANNAPETA	PASSIGHAT	BIJWANATH CHAIRALI
VISHAKHAPATNAM	143. VARUN MOTORS PVT LTD (-01), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH - 521215 PH -9885576602.	152. D Y MOTORS (-01), OPPOSITE TO DANGARIA MANDIR RANAGHAT PASIGHAT - 791102	164. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO- 7.8.9 PERIODIC PATTAN NO - 24, REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176 PH :8724087940.
131. VARUN MOTORS PVT LTD (4603-46-0E), PLOT NO.88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026 PH -9703843737.	VIZIANAGARAM	ROING	BISWANATH CHAIRALI
132. VARUN MOTORS PVT LTD (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003	144. VARUN MOTORS PVT LTD (4603-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001 PH -8886721213.	153. D Y MOTORS (-01), P.O/P.S-RAYAND, ROING ROAD,ROING, 792110, ARUNACHAL PRADESH - 792110	165. RAMLAL DURGADUTT MOTORS PVT LTD (-01), NORA GAON ROAD, BENGENAKHOWA, ASSAM 785601 - 785601
133. VARUN MOTORS PVT LTD (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISHAKHAPATNAM. - 530007 PH :9885511911.	145. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY NO: 108/12B & 109/2A, PLOT NO B2, B3 & B4, VT AGRAHARAM, VIZIANAGARAM, 535004 - 535001 PH :7702333514.	RUKSIN	BONGAIGAON
134. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKHAPATANAM, ANDHRA PRADESH - 530018 PH :8886322209.	YANAM	154. D Y MOTORS (-01), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH - 787060 PH :8415075164.	166. BHARATI MOTORS PVT LTD (-01), CHAPAGURI ROAD, BONGAIGAON - 783830
135. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-02), D.NO.51-17-2 . NH-5, KRANTHINAGAR, VISHAKHAPATNAM.(ANDHRA PRADESH). - 530013	YELAMANCHILI	ASSAM	CHAMATA
136. VARUN MOTORS PVT LTD (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKHAPATNAM. - 530007 PH :7799124243.	146. SB MOTOR CORPORATION (-01), SURVEY NO 82-2,TALLAREVU MANDAL,YANAM, EAST GODAVARI DISTRICT - 533463 PH :8886677759.	BADARPUR	167. PALLAVI MOTORS PVT LTD (-01), DAG NO.1137, PATTAN NO.376, MOUZA - DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306
137. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH - 530046 PH :8897541234.	YELESWARAM	BAGHA BAZAR	CHAYGAON
138. VARUN MOTORS PVT LTD (4603-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE - DUPPITURU, MANDAL - ACHUTAPURAM, DISTRICT - VISHAKHAPATNAM, ANDHRA PRADESH. - 531011 PH :9966877133.	148. VARUN MOTORS PVT LTD (-01), VARUN MOTORS P.LTD,DO-NO - 2-4-41,BESIDE GOLLAJI GARU BUNK,YERRAVARAM ROAD,YELESWARAM - 533429 - 533429 PH :9885511911.	156. JAIN UDYOG (-01), OPPOSITE TOBAM IDDGAH, VILL BONGRAM,BAGHA BAZAR - 788120	168. PALLAVI MOTORS PVT LTD (-01), CHAYGAON OUGURI CHOWK, NEAR BHARAT PETROL PUMP - 443301
	ARUNACHAL PRADESH	BAHARI	DAYANGMUKH
	BHALUKPONG	157. PODDAR CAR WORLD PVT LTD (-01), DAG NO 738, 739, UNDER MOUZA CHENGA, BARPETA DISTRICT - 781302	169. BAJRANG CAR WORLD (A UNIT OF MAVA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), KHERONI,DAYANMUKH,DIST WEST KARBI ANGLONG - 782448
	149. D Y MOTORS (-01), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG , ARUNACHAL PRADESH - 790114 PH :8415075164.	BAIHATA CHARIALI	DHEKIAJULI
		158. PALLAVI MOTORS PVT LTD (-01), DAG NO. 1042, PATTAN NO. 17, MOUZA - BORBANKHAR, P.S. - BAIHATA CHARIALI, DISTRICT - KAMRUP, ASSAM - 781381 PH :9864052488.	170. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO.242, K.P. PATTAN NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110 PH :9706568722.
		BANGALIPARA	DHEMAJI
		159. MITTAL AUTOZONE (-01), BANGALIPARA,, BANGALI PARA, - 781364	171. SAIKIA AUTO PVT LTD (-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057 PH :8638725209.
		BARAMA	DHING
		160. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), VILLAGE - BARJAR, PO & PS - BARAMA, ASSAM -781346 - 781346 PH :8638487401.	
		BARPETA	

172. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DHING TOWN, MOIZABARI ROAD - 782123	184. PALLAVI MOTORS PVT LTD (-01), DAG NO. 1&2,NEXT TO DEPTT. OF FAMILY WELFARE,SIX MILE, KHANAPARA G.S. ROAD, GUWAHATI - 781022	197. JAINCO AUTOTECH PVT LTD (-01), AT ROAD, SEUNI ALI, JORHAT, ASSAM 785001 - 785001 PH :9287957451.	MARGHERITA
DIBRUGARH		KALGACHIA	209. VISHAL CAR WORLD PVT LTD (-01), MARGERITA TOWN, BEHIND IOCI, PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181 PH :9435860000.
173. JAYBEE AUTO AGENCIES PVT LTD (-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH :9954799273.	185. PODDAR CAR WORLD PVT LTD (-01), HENGRABARI, VIP ROAD, GUWAHATI - 781036	198. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), VILL - KALGACHIA, PO - KALGACHIA , DIST BARPETA - 781319 PH :8638487401.	MORIGAON
174. BIMAL AUTO AGENCY (-01), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA - MANKHATTA KANIKAR, DIST.-DIBRUGARH, ASSAM. - 786004	186. BIMAL AUTO AGENCY (-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEAR GUWAHATI BRANCH, GUWAHATI - 781021	KALIABOR	210. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM. - 782105 PH :7002239592.
DIGBOI	187. BIMAL AUTO AGENCY (-02), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37, GUWAHATI - 781028	199. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MADHAB GAON,, PO-KUWARITOL,PS.KALIABOR , - 782137	NAGARBERA
175. VISHAL CAR WORLD PVT LTD (-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. - DIGBOI, DISTRICT - TINSUKIA , ASSAM. - 786171	188. PODDAR CAR WORLD PVT LTD (-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029	KAMPUR	211. PALLAVI MOTORS PVT LTD (-01), NAGARBERA,, DOKUCHI,KAMRUP , - 781127
DIMAKUCHI	189. BIMAL AUTO AGENCY (-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005	200. RAMLAL DURGADUTT MOTORS PVT LTD (-01), VILL KAMPUR,PANCHINI JAR, PO KAMPUR , DIST NAGAON, PIN 782426 - 782426	NAGAON
176. PALLAVI MOTORS PVT LTD (-01), DIMAKUCHI TOWN, DIMAKUCHI UDALGURI ROAD, NEAR SBI DIMAKUCHI BRANCH,DIST-UDALGURI - 781352	190. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028	KARIMGANJ	212. RAMLAL DURGADUTT MOTORS PVT LTD (-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002 PH :9706007918.
DIPHU	191. PALLAVI MOTORS PVT LTD (-02), DAG NO. 2201, PATTI NO. 237, VILLAGE - JYOTIKUCHI, MOUZA - BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT - KAMRUP, ASSAM. - 781034	201. JAIN UDOYG (6901-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710 PH :9435179025.	213. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DAG NO. 255, 1508(N)/254(O), 1509(N)/257(O) AND 291, PATTI NO. 506(N)/15(O), 507(N)/15(O), 507(N)/97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST.-NAGAON - 782002
177. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - - 782460 PH :9707556868.	HOJAI	202. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), B.B ROAD, KAYAKUCHI, BARPETA, ASSAM - 781352	214. RAMLAL DURGADUTT MOTORS PVT LTD (-03), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM
DOBOKA	192. RAMLAL DURGADUTT MOTORS PVT LTD (-01), KHATIYAN NO. : 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT - NAGAON , ASSAM - 782435 PH :7002680534.	KHARUPATIA	215. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-02), BAJRANG CAR WORLD DIMORJURI OPPOSITE KAPILI NURSING HOME DISTRICT NAGAON STATE ASSAM - 782003
178. RAMLAL DURGADUTT MOTORS PVT LTD (-01), WARD NO 4 DABOKA TOWN - 782440	HOWLY	203. BIMAL AUTO AGENCY (-01), VILL -BOLOGARAH, P.O - KHARUPETIA, P.S DHULA, DIST - DARRANG, ASSAM. - 784115	NAHARKATIYA
DULIAJAN	193. PODDAR CAR WORLD PVT LTD (-01), PATTI NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316 PH :8085957586.	KHATKHATI	216. JAYBEE AUTO AGENCIES PVT LTD (-03), NAHARKATIYA TOWN PART NO. 4, MOUZA - JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT - DIBRUGARH, ASSAM. - 786610 PH :7002722358.
179. JAYBEE AUTO AGENCIES PVT LTD (-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602 PH :7002722358.	HOWRAGHAT	204. PODDAR CAR WORLD PVT LTD (-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT - KARBI ANGLONG . - 782460 PH :6000900381.	NALBARI
GOALPARA	194. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), HOWRAGHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481 PH :9864191169.	KOKRAJHAR	217. BIMAL AUTO AGENCY (9201-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335 PH :7576842484.
180. BHARATI MOTORS PVT LTD (-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301 PH :9101940372.	JAGIROAD	205. BHARATI MOTORS PVT LTD (-01), TITAGURI,AT-KOKRAJHAR, DIST-KOKRAJHAR - 783370	NARAYANPUR
GOLAGHAT	195. RAMLAL DURGADUTT MOTORS PVT LTD (-02), JAGIROAD,MORIGAON,NALAOW,ASSAM - 782410 PH :9365884355.	LANKA	218. SAIKIA AUTO PVT LTD (-01), WARD NO-2, P.O.DIKRONG BADULAHATI,NH-52, NARAYANPUR - 784164
181. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO - 718, 684 & 706, PATTI A NO 213, 168 & 192, KURUKA GAON, P.O -MORANGI, P.S -GOLAGHAT, DIST: GOLAGHAT, ASSAM PIN-785702 - 785702 PH :7002099547.	JORHAT	206. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR , MOUZA - LANKA, DIST - HOJAI , ASSAM. - 782442 PH :9707556868.	NAZIRA
GORAIMARI	196. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO. 7 & 8 OF P.P NO. 33, DAG O. 9 OF P.P NO. 61, DAG NO. 382 OF P.P NO. 206, VILLAGE - PAKIMURI HABIAGON, MOUZA - SARABAHAL, JORHAT. - 785006	MAJULI	219. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MAIN ROAD NAZIRA., NEAR NRL PETROL PUMP,PO/PS NAZIRA - 786685
182. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DAG NO: 3, KP PATTI NO - 11, VILLAGE- CHALABASTI, MOUZA- GORAIMARI - 783390 PH :7002729100.	GUWAHATI	207. RAMLAL DURGADUTT MOTORS PVT LTD (-01), PETROL PUMP, NEAR GARMUR, GARMUR, MAJULI, JORHAT, ASSAM 785104 - 785104	NORTH LAKHIMPUR
183. BIMAL AUTO AGENCY (-01), JHALUKBARI, GUWAHATI. - 781014		208. PODDAR CAR WORLD PVT LTD (-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115 PH :9706970132.	

Dealer Workshop (AS ON 31.01.2026)

220. SAIKIA AUTO PVT LTD (-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031 PH :8473946336.	232. PODDAR CAR WORLD PVT LTD (-01), VILL: HAZUA NEW COLONY, PO- KOKLABARI, PS- SIMLA, DISTRICT- BAKSA, ASSAM - 781330	243. SEEMANCHAL MOTORS PVT LTD (-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318 PH :8797096013.	252. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), C/O DEVDHTRA UPPDHYYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101
221. SAIKIA AUTO PVT LTD (-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001 PH :7002571073.	SONAPUR 233. PODDAR CAR WORLD PVT LTD (-03), NEAR LUMSUM,N.C,SONARPUR,ASSAM,782401 - 782401	ARRAH 244. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH :8294634604.	CHAKIA 253. RAMKRISHNA MOTORS PVT LTD (-01), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412
PATHSALA 222. PODDAR CAR WORLD PVT LTD (-01), DAG NO. 451, PATTA NO. 151 KMP, PATHSALA, DIST. -BARPETA, ASSAM. - 781325 PH :6000900256.	SONARI 234. JAINCO AUTOTECH PVT LTD (-01), BORAHI CHARALI, WARD NO 12, SONARI, CHARAIDEO - 785690	AURANGABAD 245. KARLO AUTOMOBILES PVT LTD (-01), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANDI, AURANGABAD - 824101 PH :7019085212.	CHAPRA 254. REESHAV AUTOMOBILES PVT LTD (-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301 PH :7061295296.
RAHA 223. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (-01), RAHA TOWN, NH-37., NEAR TOLL GATE, - 782103	SOOTEA 235. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), BIGHA NO 2, KATHA 10, KHERAJ MIYADI, REVENUE CIRCLE NO DUAR, SOOTEA - 784175	BANKA 246. SEEMANCHAL MOTORS PVT LTD (-01), KHATA NO. 134, KHERSA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101 PH :8797096020.	DANAPUR 255. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, - 800018 PH :9386898458
RAJGARH 224. JAYBEE AUTO AGENCIES PVT LTD (-01), DAG NO.182, PP NO. 140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611 PH :9954799273.	SORBHOG 236. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM. - 781317 PH :8011042222.	BEGUSARAI 247. GS MOTORS PVT LTD (-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - 851101 PH :9204756206.	DARBHANGA 257. RAJKRISHNA MOTORS LLP (-01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - 846009 PH :7004529271.
RANGIA 225. PODDAR CAR WORLD PVT LTD (-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354 PH :872477892.	TANGLA 237. BIMAL AUTO AGENCY (-01), DAG NO.:121, PATTA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521 PH :9954387619.	BETTIAH 248. SHREE GOPAL AUTO PVT LTD (-01), BEETIAH -MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438 PH :9771486183.	DEHRI ON SON 258. RAJKRISHNA MOTORS LLP (-02), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - 846003 PH :9693127351.
SADIYA 226. VISHAL CAR WORLD PVT LTD (-01), 5 NO. SHANTIPUR, SADIYA, DIST. SADIYA, - 786155	TENGAGHAT 238. BIMAL AUTO AGENCY (-01), NEAR INDIAN OIL PETROL PUMP., SH-23, TEHGAGHAT - 786103	BHAGALPUR 249. SEEMANCHAL MOTORS PVT LTD (-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005 PH :8797096020.	GAYA 260. KARLO AUTOMOBILES PVT LTD (-01), BODH GAYA, GAYA, - 824231
SALBARI 227. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), K.C COMPLEX, SALBARI, P.O. ANANDA BAZAR, DIST. BAKSA - 781318	TEZPUR 239. RAMLAL DURGADUTT MOTORS PVT LTD (-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154	BHITA 250. REESHAV AUTOMOBILES PVT LTD (-01), PLOT NO 1674 & 1676, KHATA NO - 19 & 67 AT MOUZA - MAHADEOPUR PHULARI, P.O - BHITA, P.S- BIHTA, DISTRICT - PATNA - 801103 PH :7763954585.	261. DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD) (-01), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD,GAYA, PIN 823004 - 823004
SARUPATHAR 228. JAINCO AUTOTECH PVT LTD (-01), WARD NO 1, PADUMONI, SARUPATHER, GOLAGHAT - 785601	TINSUKIA 241. VISHAL CAR WORLD PVT LTD (-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - 786183 PH :9435860000.	BIHARSHARIF 251. REESHAV AUTOMOBILES PVT LTD (-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR - 803101 PH :9263632175.	GOPALGANJ 262. SHREE GOPAL AUTO PVT LTD (-01), NH-28, DANAPUR, TEHSIL-MANJAGARH,GOPALGANJ (BIHAR) - 800023
SIBSAGAR 229. RAMLAL DURGADUTT MOTORS PVT LTD (-02), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR - 785640	TITABAR 242. JAINCO AUTOTECH PVT LTD (-01), PUBALI NAGAR, TITABOR - 785630	BUXAR 259. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-02), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST. -ROHTAS, BIHAR. - 821307 PH :8294634602.	HAJIPUR
SILCHAR 231. JAIN UDYOG (6901-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006 PH :9706002524.	ARARIA		
SIMLA			

263. REESHAV AUTOMOBILES PVT LTD (-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI), - 844101 PH :9068045036.	274. RAJIV AUTOMOBILES PVT LTD (-04), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146 PH -9234609671.	286. RAMKRISHNA MOTORS PVT LTD (-01). KAWRIHAR, TOLA -LAXAMIPIUR, THANA NO -9, TALJI NO - 951, THANANA AND ANCHAL - RAXAUL, DIST - EAST CHAMPARAN , BIHAR - 845305	298. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), SHOP NO 4, 5, 6, 7 & 8, SHRI NARAYAN COMPLEX & GODOWN, NEAR INDRA UDYAN,SHEORINARAYAN ROAD,AKALTARA-495552, CHHATTISGARH - 495552 PH :7987590484.
JEHANABAD	NAUGACHIA	ROSERA	AMBAGARH CHOWKI
264. DMC CARS (A UNIT OF DHANRAJ AGENCIES PVT LTD) (-01), KHATA NO - 80, PLOT NO -1490, MOUZA - MUTHER, PS- JEHANABAD, DIST - JEHANABAD. - 804408	275. SEEMANCHAL MOTORS PVT LTD (-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT - BHAGALPUR, BIHAR. - 853204	287. RAJKRISHNA MOTORS LLP (-01), NAND CHOWK,JAIL ROAD , WARD NO.17,ROSERA, BIHAR - 848210	299. SPARSH AUTOMOBILES PVT LTD (-01), WARD NO.1, MOHALLA MANPUR BEHIND CRGB BANK,AMBAGARH CHOWKI, CHHATTISGARH - 491661
KATI HAR	NAWADA	SAHARSA	AMBIKAPUR
265. SEEMANCHAL MOTORS PVT LTD (-01), NEAR SBP VIDYA VIHAR SCHOOL, SIRSA, KATI HAR PURNEA ROAD, KATI HAR - 854105 PH :7762893700.	276. REESHAV AUTOMOBILES PVT LTD (-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110 PH :6206162228.	288. GS MOTORS PVT LTD (-02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201 PH :9263638456.	300. MAHAMAYA AUTOCARS PVT LTD (-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001 PH :7987741432.
KISHANGANJ	PATNA	SAMASTI PUR	ARANG
266. SEEMANCHAL MOTORS PVT LTD (-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANAKNE, WARD NO.1, KISHANGANJ (BIHAR) - 855101 PH :879709019.	277. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. - 800013	289. RAJKRISHNA MOTORS LLP (-01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTI PUR, BIHAR. - 848101 PH :920452405.	301. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (-01), MAIN ROAD, IN FRONT OF BLOCK OFFICE, ARANG, CHHATTISGARH - 493441
LAKHISARAI	278. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001 PH :9934020200.	SASARAM	BAGBAHARA
267. GS MOTORS PVT LTD (-01), TAUZI NO. 39, KHATA NO. 3, KHESRA NO. 496, MOUZA - JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR. - 811311 PH :9204756206.	279. REESHAV AUTOMOBILES PVT LTD (1506-15-01), PLOT NO 25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004 PH :7632995356.	290. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115	302. HDN MOTORS PVT LTD (-01), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449 PH :7909800004.
MADHUBANI	280. KARLO AUTOMOBILES PVT LTD (1502-05), JAGDEOPATH , NEAR SAI CORPORATE PARK, PATNA - 801506 PH :9264190675.	SITAMARHI	BAIKUNTHPUR
268. RAJKRISHNA MOTORS LLP (-01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211	281. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-06), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA - 800006 - 800006 PH :9304403916.	291. RAJIV AUTOMOBILES PVT LTD (-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. - 843301	303. MAHAMAYA AUTOCARS PVT LTD (-01), WARD NO.01, KHATA NO.916, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335
MAHUA	282. ALANKAR AUTO SALES & SERVICE PVT LTD (-15-07), BASUDEV SADAN CAMPUS,SANDALPUR,PATNA - 800006	SIWAN	BALOD
269. REESHAV AUTOMOBILES PVT LTD (-01), MUZAFFARPUR-MAHUA ROAD,RASALPUR,HP PETROL PUMP, MADHULL,MAHUA,VAISHALI,NEAR AKSHYAWAT COLLEGE - 844122	283. SHREE GOPAL AUTO PVT LTD (1507-15-01), KHAGAIL ROAD, OPP. KOTAK MAHINDRA BANK, DANAPUR, PATNA - 801503	292. SHREE GOPAL AUTO PVT LTD (-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236 PH :9771486132.	304. CHOUHAN AUTOMOBILES LLP (-01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228 PH :9837325267.
MOHANIA	284. HORIZON AUTOMOBILE PRIVATE LIMITED (1508-15-01), DHAWALPURA NAGAR, MAULI ROAD, PS-CHOWK,NEAR MURGI DANA FACTORY , - 800001	SUPAUL	BALODA BAZAAR
270. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), MOHANIA-BUXAR ROAD, SH-14,MOHANIA - 821109	PURNEA	293. GS MOTORS PVT LTD (-01), SISAUNI, ROAD, KISHANPUR WEST, BIHAR 852138 - 852138	305. SKY AUTOMOBILES (5001-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332
MOTIHARI	285. SEEMANCHAL MOTORS PVT LTD (-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326 PH :8797096014.	CHANDIGARH	BALRAMPUR
271. RAJIV AUTOMOBILES PVT LTD (-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401 PH :9234609669.	RAXAUL	294. MODERN AUTOMOBILES (-01), 4 M.W. INDL AREA, CHANDIGARH - 160002	306. MAHAMAYA AUTOCARS PVT LTD (-01), NEAR REST HOUSE,, RAMANUJGANJ ROAD,BHANORA. - 497119
MUZAFFARPUR		295. AUTOPACE NETWORK PVT LTD (-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002	BASNA
272. RAJIV AUTOMOBILES PVT LTD (-01), RAMDAYALI NAGAR, PATNA HAZI PUR ROAD, MUZAFFARPUR, BIHAR - 842002 PH :9910347908.		296. TRICITY AUTOS (-02), PLOT NO 89, PHASE-1 INDUSTRIAL AREA, CHANDIGARH - 160002 PH :9988882335.	307. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (-01), M/S VISHWABHARTH AUTO, PADAMPUR ROAD, BASNOUL, BASNA,CHHATTISGARH - 493554 PH :6262620060.
273. RAMKRISHNA MOTORS PVT LTD (-01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. - 842001		297. NAVDESH AUTOS LLP (-01), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. - 160002	BEOMETRA

Dealer Workshop (AS ON 31.01.2026)

308.	CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 89/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVGHAD CHOWK, BEMTARA CHATTISGARH - 491335 PH :6262000222.	321.	CHOUHAN AUTOMOBILES LLP (-01), H.NO 185, WARD NO 25, NAYA MARKET DALLIRAJHARA,BALOD DISTRICT-491228 - 491228 PH :6262000222.	332.	SATYA AUTO PRIVATE LIMITED (-01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668	343.	SPARSH AUTOMOBILES PVT LTD (5002--02), BARONDA CHOWNIK, BAGBAHRA ROAD, MAHASAMUND. - 493445
BHATAPARA		DANTEWADA		KANKER		MANENDRAGARH	
309.	SPARSH AUTOMOBILES PVT LTD (-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118	322.	SKY AUTOMOBILES (-01), PATAR RAS MAIN ROAD,DANTEWADA,PIN-494440, - 494440	333.	SKY AUTOMOBILES (5001--06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER , DISTRICT - KANKER, CHATTISGARH - 494334	344.	MAHAMAYA AUTOCARS PVT LTD (-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442
BHILAI		DEOBHOG		KATGHORA		MUNGELI	
310.	CHOUHAN AUTOMOBILES LLP (8305--01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI - 490023	323.	SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR,NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG - 493890 PH :9926626662.	334.	SATYA AUTO PRIVATE LIMITED (-01), BILASPUR RD, KATGHORA, KORBA, CHATTISGARH - 495445	345.	SATYA AUTO PRIVATE LIMITED (-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468
311.	SPARSH AUTOMOBILES PVT LTD (-01), R-17, INDUSTRIAL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH - 490026	DHAMTARI		KAWARDHA		PANDARIYA	
312.	CHOUHAN AUTOMOBILES LLP (8305--02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001	324.	SKY AUTOMOBILES (-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH :889998612.	335.	CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491995	346.	CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 24.7, KAWARDHA ROAD, NEAR INDIAN OIL, PANDARIYA, SINGARPUR, CHHATTISGARH - 491559
313.	SPARSH AUTOMOBILES PVT LTD (8304-83-02), M/S. SPARSH AUTO,VEERSAVARKAR MARKET, G.E.ROAD, SUPELA,BHILLAI-490023 - 490023 PH :9926626662.	DIPKA		KHAIRAGARH		PATHALGAON	
BHUBAN		325.	M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), NEAR GOVT COLLEGE ,JHABAR ROAD,DIPKA ,KORBA ,CHHATTISGARH - 495452	336.	SPARSH AUTOMOBILES PVT LTD (-01), KHAIRAGARH -JHALBANDHA ROAD,AMLIPARA, OPP - BIJALI OFFICE, KHAIRAGARH -491881 - 491881 PH :9926626662.	347.	MAHAMAYA AUTOCARS PVT LTD (-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT - JASPUR, CHHATTISGARH. - 496118
314.	SKY AUTOMOBILES (-01), NH-53, BYPASS ROAD, BHUBAN, DHENKANAL, - 759017	DONGARGARH		KHARSIA		PENDRA	
BILASPUR-CG		326.	SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES, ADARSH NAGAR, NEARTHANA CHOWK, DONGARGARH, DT:RAJNANDGAON, CHHATTISGARH - 491445 - 491445	337.	SATYA AUTO PRIVATE LIMITED (-01), M/S SATYA AUTO , BESIDE GOVT HIGH SCHOOL, RANISGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 498661 PH :9993092051.	348.	M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), - M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA,GOURELA PENDRA MARWAHI-495119 - 495119 PH :7987590484.
315.	SATYA AUTO PRIVATE LIMITED (-01), SECTOR C, PLOT NO. 42, SIRGITHI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001	DURG		KONDAGAON		PITHORA	
316.	SATYA AUTO PRIVATE LIMITED (-02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. - 495006 PH :9977879698.	327.	SPARSH AUTOMOBILES PVT LTD (-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001	338.	SKY AUTOMOBILES (-01), - M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGAON, CHHATTISGARH - 494226 PH :9425204051.	349.	SPARSH AUTOMOBILES PVT LTD (-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008
317.	M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. - 495223 PH :6262622560.	GARIYABANDH		KORBA		RAIPUR	
318.	SATYA AUTO PRIVATE LIMITED (-03), WARD NO.1, BESIDES HERO SHOWROOM, MUNGELI ROAD, SAKRI, BILASPUR - 495001	328.	SPARSH AUTOMOBILES PVT LTD (-02), MINI MATA CHOWK, PULGAON - 491001	339.	SATYA AUTO PRIVATE LIMITED (-01), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681	350.	SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010
CHARODA		GHARGHODA		KURUD		351.	SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH :9584460290.
319.	SPARSH AUTOMOBILES PVT LTD (-01), NH-6, OPP. RAIL NAGAR, CHARODA, BHILAI	329.	SPARSH AUTOMOBILES PVT LTD (-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABANDH, CHHATTISGARH. - 756032	LORMI		352.	SPARSH AUTOMOBILES PVT LTD (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001
CHHURIYA		GHARGHODA		MAGARLOD		353.	SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH :9893000161.
320.	SPARSH AUTOMOBILES PVT LTD (-01), NEAR CHURIYKALA BUS STAND ROAD, CHURIYA - 491558	330.	M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), M/S M SQAURE,VILLAGE BHENGARI, NAVAPARA-TENDA,GHARGHODA,DISTRICT - RAIGARH CHHATTISGARH. PIN CODE: 496111 - 496111 PH :7987690484.	MAGARLOD		354.	SKY AUTOMOBILES (5003-50-01), AVANTIVHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH :9522314155.
DALLIRAJHARA		JAGDALPUR		MAGARLOD		355.	SPARSH AUTOMOBILES PVT LTD (-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004
		331.	SKY AUTOMOBILES (-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001	MAGARLOD		356.	SPARSH AUTOMOBILES PVT LTD (5002-50-05), PLOT - 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPUR, RAIPUR - 494224
		JANJGIR		MAHASAMUND			

357. SKY AUTOMOBILES (5001-07), ADJOINING WALLFORD CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH - 492013
358. HDN MOTORS PVT LTD (5005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH - 492001
359. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-50-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DIST. CHHATTISGARH - 492005
- RAJGARH**
360. SATYA AUTO PRIVATE LIMITED (-01), JINDAL ROAD, RAIGARH - 496001
- RAJIM**
361. SPARSH AUTOMOBILES PVT LTD (5002-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM - 493881
- RAJNANDGAON**
362. SPARSH AUTOMOBILES PVT LTD (-01), NEAR HANUMAN TEMPLE, VILL-MAANKI, NH-6, RAJNANDGAON, CHHATTISGARH - 491441
- SAKTI**
363. SATYA AUTO PRIVATE LIMITED (-01), NH-49, NANDAUR KHURD, MALDI, DIST. SAKTI, PIN-495689, CHHATTISGARH - 495689
- SARAIAPALLI**
364. SKY AUTOMOBILES (-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIAPALLI, DIST-MASAMUND, SARAIAPALI - 493558
- SARANGARH**
365. SATYA AUTO PRIVATE LIMITED (-01), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DIST.T. RAIGARH - 733751
- SHIVIRNARAYAN**
366. SATYA AUTO PRIVATE LIMITED (-01), M/S SATYA AUTO,DEORI, SHIVIRNARAYA, JANJIR - CHAMPA, CHATTISGARH - PIN 495556 - 495556 PH -9993092051.
- SIMGA**
367. HDN MOTORS PVT LTD (-01), PLOT NO. 2, WARD NUMBER 05, SHANKAR NAGAR, SIMGA, BALODA BAZAR, CHHATTISGARH - 493101 PH -9826868000.
- SURAJPUR**
368. MAHAMAYA AUTOCARS PVT LTD (-01), NEARINMAHINDRA SHOWROOM ,CHANDAPUR ,CHATTISGARH - 497229
- TILDA**
369. SKY AUTOMOBILES (-01), KASRA NO. 29/31, TILDA, DIST -RAIPUR, CHHATTISGARH. - 493114 PH -9425204051.

DADRA AND NAGAR HAVELI

- SILVASSA**
370. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230 PH -9723816223.

DAMAN AND DIU

- DAMAN**
371. KATARIA AUTOMOBILES PRIVATE LIMITED (-11), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY - 396210

DELHI

- DELHI**
372. SAYA AUTOMOBILES LTD (-03), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033
373. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-01), A-100 MAYAPURI,PHASE-II,NEW DELHI - 110064
374. COMPETENT AUTOMOBILES CO LTD (-03), PLOT NO.3,GAZIPUR,DELHI, - 110096
375. T R SAWHNEY MOTORS PVT LTD (-01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094
376. RANA MOTORS PVT LTD (-02), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020
377. T R SAWHNEY MOTORS PVT LTD (-02), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042
378. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-01), S, WAZIRPUR INDUSTRIAL AREA,ADJACENT TO WAZIRPUR DEPOT,RING ROAD, NEW DELHI - 110034
379. ROHAN MOTORS LTD (-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044
380. MAGIC AUTO PVT LTD (-01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI - 110064
381. PREM MOTORS PVT LTD (-01), KHASRA NO. 544/1, MUNDKA, NEW DELHI - 110041
382. T R SAWHNEY MOTORS PVT LTD (-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092
383. MAGIC AUTO PVT LTD (-01), PLOT NO. 68/3,MOTINAGAR,NEW DELHI, - 110015
384. SAYA AUTOMOBILES LTD (-2B), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI - 110033
385. COMPETENT AUTOMOBILES CO LTD (-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI - 110015

386. RANA MOTORS PVT LTD (-04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020
387. PREM MOTORS PVT LTD (-01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI - 110037
388. AAA VEHICLELEADS PRIVATE LIMITED (-03), VILLAGE CHEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041 PH -9717092903.
389. RANA MOTORS PVT LTD (-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI - 110033
390. T R SAWHNEY MOTORS PVT LTD (-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI - 110064
391. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-02), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015
392. MAGIC AUTO PVT LTD (-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI - 110092
393. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (-03), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. - 110043
394. PREM MOTORS PVT LTD (-01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI. - 110040
395. DD MOTORS(A DIVISION OF D.D. MOTORS MOBILITY (-01), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI. - 110059
396. FAIR DEAL WHEELS PVT LTD (-01), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJHAWALA ROAD, DELHI - 110086 PH -3448690737.
397. COMPETENT AUTOMOBILES CO LTD (-07), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059
398. AAA VEHICLELEADS PRIVATE LIMITED (-01), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020 PH -8448582912.
399. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-05), A-90, WAZIRPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052 PH -9310367233.
400. JAGMOHAN AUTOMOTIVES PVT LTD (-01), PLOT NO. 69/2, WAZIRPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052 PH -9650790351.
401. RANA MOTORS PVT LTD (-08), B-83, GTK ROAD INDUSTRIAL AREA, DELHI. - 110033 PH -9289496300.

402. SHREYASH AUTOMOTIVES PVT LTD (-01), PLOT NO.2, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. - 110063 PH -43288988.
403. SHREYASH AUTOMOTIVES PVT LTD (-02), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. - 110052
404. VIPUL MOTORS PVT LTD (-01), B-26, JHILMIL INDUSTRIAL AREA, DELHI - 110095 - 110095 PH -9811233985.
405. COMPETENT AUTOMOBILES CO LTD (-08), 43/12, NAJAFGARH BAHDURGARH ROAD, NEW ANAJ MANDI, NEAR JAAT BAWHAN, NAJAFGARH, PIN-110043, DELHI - 110043
406. PREM MOTORS PVT LTD (-02), GROUND FLOOR, PLOT NO. C-7, SMA CO-OPERATIVE INDUSTRIAL AREA, GTK ROAD, AZADPUR, PIN-110033, DELHI - 110033
407. SINGLA LINK AGENCY PVT LTD. (-01), 395 PATPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092
408. JAGMOHAN AUTOMOTIVES PVT LTD (-02), KH. NO. 26/34/7/8 REVENUE ESTATE NANGLI SAKRAWATI INDUSTRIAL AREA, DELHI-110043. - 110043
409. AAA VEHICLELEADS PRIVATE LIMITED (-02), KH. NO.-32-33 VILLAGE SHAHOORPUR, SATBARI, NEAR FATEHPUR BERI, IN-FRONT SKY-MANSION TOWER, CHATTARPUR, PIN-110074, DELHI - 110074
410. FAIR DEAL WHEELS PVT LTD (-01), F-13, CHAND BAGH, MAIN WAZIRABAD ROAD, BHAJANPURA DELHI - 110053
411. SINGLA LINK AGENCY PVT LTD. (-02), E-26, B1 EXTENSION, MOHAN COOPERATIVE INDUSTRIAL AREA, MATHURA ROAD, NEW DELHI - 110044 - 110091
- GOA**
- BICHOLIM**
412. SAI SERVICE PRIVATE LIMITED (-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529
- CANACONA**
413. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702
- CUNCOLIM**
414. SAI SERVICE PRIVATE LIMITED (3402-06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNAMODDI, CUNCOLIM, SOUTH GOA - 403703
- DHARBANDORA**
415. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-07), AT- KHANDEPAR- UGAOAN, TAL-DHARBANDORA, SOUTH GOA - 403401
- GOA**

Dealer Workshop (AS ON 31.01.2026)

416.	SAI SERVICE PRIVATE LIMITED (3402-03), OFF PANJIM HIGHWAY,PONDA,GOA. - 403401	428.	CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-10), SURVEY NO. 60, SUB DIV NO. 05, VILLAGE OF ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA - 403505 PH -9923464422.	443.	KIRAN MOTORS LIMITED (-02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA,NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330	456.	ALPHA AUTOLINK LLP (-01), R.S NO 151/152, OPP GANESH GINNING, AMRELI BYE PASS ROAD, AMRELI - 385601
MAPUSA		TALEIGAO		ANAND		ANAND	
417.	SAI SERVICE PRIVATE LIMITED (3402-05), D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA, GOA. - 403507	429.	CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAO. - 403001	444.	KIRAN MOTORS LIMITED (-04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060	457.	AMAR CARS PVT LTD (-01), JANTHA CROSSING,SOJITRA ROAD,ANAND - 388121 PH -9909960772.
418.	CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-03), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE,KARASWADA, MAPUSA,GOA - 403507	VASCO		445.	POPULAR WHEELERS (INDIA) PVT LTD (-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. - 380007	458.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO. 189/1+2/A+3/A/K 190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT. - 388120 PH -7698954466.
MARGAO		GUJARAT		GUJARAT		ANKLAV	
419.	CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602	430.	SAI SERVICE PRIVATE LIMITED (3402-04), NEXT TO SHIKALIM CHURCH,SHIKALIM,VASCO,GOA - 403802	446.	PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO. 116, BOPAL - AMBIL ROAD, BOPAL , AHMEDABAD, DISTRICT - AHMEDABAD, GUJARAT. - 380058	459. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASODAR CHOKDI, TAL. ASODAR, CITY ANKLAV, DIST. ANAND, PIN-388510, GUJARAT - 388510 PH :7227917151.	
420.	SAI POINT CARS PVT LTD (3409-01), H.NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN,SALCETE .GOA - 403722	431.	CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-09), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO,GOA - 403802	447.	PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO.116 & 118/2. SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD - 382418	460. RAVIRATNA MOTORS PVT LTD (-01), PLOT NO. 624/2/B, GIDC, VALIA ROAD, ANKLESHWAR - 393002 PH -9687691063.	
421.	SAI SERVICE PRIVATE LIMITED (3402-02), SURVEY NO. 212/4,VILLAGE - VERNA,TAL : SALCETE ,NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718	AHMEDABAD		448.	TANU MOTORS PVT LTD (-01), SURVEY NO. 1155/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAN ROAD, SANAND, AHMEDABAD (GUJARAT) - 382110	BAGODRA	
422.	CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-08), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALCETE SOUTH GOA, GOA - 403722	432.	KIRAN MOTORS LIMITED (-01), SARKHEJ - GANDHINAGAR HIGHWAY,OPP. RAJPAETH CLUB,AHMEDBAD - 380054	449.	STARLINE CARS PVT LTD (-09), SR NO - TP - 57, PLOT NO. 67, NEAR GOTTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S.G. HIGHWAY, GOTTA, AHMEDABAD. - 382481	461. NANDA AUTOMOBILES PVT LTD (-01), SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA. - 382240	
PANAJI		433.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), D/8 BEHIND ESI HOSPITAL,OUTSIDE DARIAPUR DARWAJA, AHMEDABAD - 380016	450.	KATARIA AUTOMOBILES PRIVATE LIMITED (-02), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3.7.10, B/H SILVER STAR, BESIDE HARI VILLA BUNGLOWS, GOTTA ROAD, CHANDLODIYA, AHMEDABAD. - 382481	BALASINOR	
423.	SAI SERVICE PRIVATE LIMITED (3402-01), SURVEY NO: 36/1,PENHA DE FRANCE,TAL : BARDEZ, ALTO PCRVORIM,GOA - 403501	434.	POPULAR WHEELERS (INDIA) PVT LTD (-01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443	451.	KATARIA AUTOMOBILES PRIVATE LIMITED (-10), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD - 382470	462. AMAR CARS PVT LTD (-01), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARAJINA MUVADA, VILLAGE - VADALA, TALUKA - BALASINOR, DISTRICT - MAHISAGAR, GUJARAT. - 388255 PH :721109960.	
424.	CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-02), D.B BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001	435.	KIRAN MOTORS LIMITED (-02), BEHIND L&T GODOWN,SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210	452.	NANDA AUTOMOBILES PVT LTD (-02), PLOT NO-6, BEHIND HP PETROL PUMP, OPP. UMIYA TEMPLE, CANAL ROAD, THALTEJ-SHILAJI ROAD, AHMEDABAD -380059. - 380059	BARDOLI	
425.	SAI SERVICE PRIVATE LIMITED (3402-07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.1176, TELEIGAO, ST. INEZ, PANJIM, GOA-403 002. - 403001	436.	KATARIA AUTOMOBILES PRIVATE LIMITED (-05), NEAR KOKHRA BRIDGE,MANINAGAR - 380008	453.	KIRAN MOTORS LIMITED (-05), AMBER STATE, NEAR HONDA WORKSHOP, OPP. MG MOTORS, SANATHAL, AHMEDABAD - 382210	463. DHRU MOTORS (4002-02), G.I.D.C.SURAT BARDOLI ROAD,BARDOLI. - 394601	
PERNEM		437.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), BEHIND ADANAL PUMP, NEAR MAKARBA CROSSING, MAKARBA,SG HIGHWAY - 380051	AMBAJI		BAREJA	
426.	CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUSTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA. - 403512 PH :8380082893.	438.	POPULAR WHEELERS (INDIA) PVT LTD (-01), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA,AHMEDABAD - 380054	444.	TANU MOTORS PVT LTD (-01), OPP KUMBHARIYA JAIN DERASAR, GIDC ROAD, AMBAJI, DIST-BANASKANTHA, GUJARAT 385110 - 385110 PH :9727709227.	465. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NH 64, BAREJA, DISTRICT AHMEDABAD, GUJRAT - 382425 PH :7046079997.	
SANVORDEM		439.	KIRAN MOTORS LIMITED (-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005	AMOD		BARWALA (AHMEDABAD)	
427.	CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO. 4, SUBDIVISION-3, VILLAGE - CACORA, TALUKA - CURCHOREM, SANVORDEM, DIST. - SOUTH GOA, GOA. - 403706 PH -9850477607.	441.	NANDA AUTOMOBILES PVT LTD (-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405	445.	RAVIRATNA MOTORS PVT LTD (-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110	466. UDAY AUTOLINK PVT LTD (-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450	
SATTARI		442.	STARLINE CARS PVT LTD (-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330	AMRELI		BAVLA	

467. KATARIA AUTOMOBILES PRIVATE LIMITED (-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220	479. KATARIA AUTOMOBILES PRIVATE LIMITED (-19), PLOT NO.13, SURVEY NO 33,34, AND 35 PAIKKI VILLAGE, HADADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIVAD BOTAD ROAD - 364710 PH :9558060658.	DAHOD	499. TANU MOTORS PVT LTD (-01), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALIKUND HIGHWAY, DHOLKA, GUJARAT - 382225 PH :9512009104.
BECHARAJI		489. R B CARS PVT LTD (-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151	
468. STARLINE CARS PVT LTD (-01), R.S. NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST -MEHSANA - 384210 PH :9909043244.	CHANASMA	DANTIWADA	DHORAJI
BHABHAR	480. STARLINE CARS PVT LTD (-01), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA - 384220	490. TANU MOTORS PVT LTD (-01), VISHWAS COMPLEX, OPP HINGLAJ PETROL PUMP, NR. JAIN DESAR, DANTIWADA HIGHWAY, AT-PO PANTHWADA, TALUKA-DANTIWADA, DIST-BANASKANTHA - 385545 PH :9099940424.	500. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-09), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - 360410
469. STARLINE CARS PVT LTD (-01), SHOP NO. 7, 8 .9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320	CHANDRALA	DEDIAPADA	DHRANGADHRA
BHACHAU	481. NANDA AUTOMOBILES PVT LTD (-01), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST-GANDHINAGAR, GUJARAT - 382320	491. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-124/45, PLOT NO-1, VILLAGE-NIVALDA, TA-DEDIAPADA, DIST-NARMADA. - 393040	501. DREAM VEHICLES PVT LTD (-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH :9227775725.
470. K D MOTORS (-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140	CHANGODAR	DEESA	DIYODAR
BHANVAD	482. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), SURVEY NO.393, VILLAGE - MORAIYA, CHANGODAR, TALUKA - SANAND, SUN DISTT - AHMEDABAD - 382210 PH :7211120014.	492. TANU MOTORS PVT LTD (-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535 PH :990906099.	502. TANU MOTORS PVT LTD (-01), NR.HP PETROL PUMP, BHEASANA CROSS ROAD, BHABHAR HIGHWAY,DIYODAR-385330 PH :9099017756.
471. ATUL MOTORS JAM LLP (-01), R.S. NO.439, PLOT NO.19, BHANVAD (GUJARAT) - 360510	CHHOTAUDEPUR	DEHGAM	DWARKA
BHARUCH	483. KIRAN MOTORS LIMITED (-01), PLOT NO. 29-30, SURVEY NO. 137, OPP. TO SP OFFICE, CHHOTA UDEPUR - 391165	493. NANDA AUTOMOBILES PVT LTD (-03), SURVEY NO. 311, MOJE PALIYA TALUKA DEHGAM, GANDHINAGAR, GUJARAT-382305 - 382305	503. ATUL MOTORS JAM LLP (-01), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT - DWARKA - . - 361335
472. RAVIRATNA MOTORS PVT LTD (-01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011	CHIKHLI	DETROJ	GANDHI NAGAR
BHAVNAGAR	484. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521 PH :7698953899.	494. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO-61,MILKAT NO-2534, AT-DETROJ,TALUKA-DETROJ-RAMPURA-382120 - 382120 PH :7971846442.	504. NANDA AUTOMOBILES PVT LTD (-01), 1003,SECTOR-28,GANDHI NAGAR - 382028
473. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO 137/2, PLOT NO 301/2&3 AND 301/4&5, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004 PH :9426168286.	CHILODA	DEVGARBARIA	505. NANDA AUTOMOBILES PVT LTD (-05), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028
474. KATARIA AUTOMOBILES PRIVATE LIMITED (-02), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATANKA, AT-ADHEWADA, DIST-BHAVNAGAR, GUJARAT - 364002. - 364002 PH :9638884422.	485. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA,HIMMATNAGAR HIGHWAY, CHILODA. - 382355	495. R B CARS PVT LTD (-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380	GANDHIDHAM
BHUJ	CHOTILA	DHANERA	506. B.M. AUTOLINK (7702-03), SURVEY NO.129/26 P. GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110
475. K D MOTORS (-01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , BHUJ, GUJARAT - 370001	486. DREAM VEHICLES PVT LTD (-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO - CHOTILA, DISTRICT - SURENDRANAGAR, GUJARAT. - 363520 PH :9227775709.	496. TANU MOTORS PVT LTD (-01), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA. - 385310	GODHRA
476. K D MOTORS (-03), R.S NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001 PH :9909953124.	CHUDA	DHARAMPUR	507. R B CARS PVT LTD (-01), PLOT NO. 112/11.12-VAVDI,GODARA (-DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001
BODELI	487. DREAM VEHICLES PVT LTD (-01), NR. GOVT HOSPITAL,CHATARLIYA ROAD,CHUDA,SURENDRANAGAR. - 363410 PH :9313802500.	497. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050 PH :9723455291.	508. R B CARS PVT LTD (-04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001
477. KIRAN MOTORS LIMITED (-01), OPP.NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA- SANKHEDA,VADODARA - 391135 PH :9714592999.	DABHOI	DHARI	GONDAL
BORSAD	488. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110 PH :8156000463.	498. ALPHA AUTOLINK LLP (-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640	509. ATUL MOTORS PVT LTD (5503-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY,GONDAL - 360311
478. AMAR CARS PVT LTD (-01), BORSAD - TARAPUR HIGHWAY, BORSAD , DISTRICT - ANAND, GUJARAT - 388540		DHOLKA	510. ATUL MOTORS PVT LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003 PH :9924688774.
BOTAD			

Dealer Workshop (AS ON 31.01.2026)

511. ATUL MOTORS PVT LTD (-01), NEAR ASHAPURA RAILWAY CROSSING, RAJKOT-PORBANDAR NATIONAL HIGHWAY, GONDAL-360311. - 360311	522. ATUL MOTORS JAM LLP (-02), C-36, MP SHAH ARJUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361102	533. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), AT&POST. KAPRADA, DHARAMPUR - NASIK ROAD, N.H.67& 848. TA.KAPRADA, DIST. VALSAD - 396065	543. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SANVIRA HAT BAZAAR, KHERGAM-DHARAMPUR, HIGHWAY ROAD, SH-67, KHERGAM, PIN-396040. - 396040 PH :9624007774.
GOZARIA	523. ATUL MOTORS JAM LLP (-03), OPP MADHAV BAUG1, NEAR RAILWAY OVER BRIDGE, JAMNAGAR, GUJARAT-361006. - 361006 PH :9574004709.	KARJAN	KIM
512. VIMCO MOTORS PVT LTD (-01), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825 PH :7016623842.	JASDAN	534. AMAR CARS PVT LTD (-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H.-8, KARJAN, DISTT-VADODRARA (GUJARAT) - 391210	544. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110 PH :9723555185.
HALOL	524. ATUL MOTORS PVT LTD (5503-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN JETROL PUMP. JASDAN-ATKOT HIGHWAY, PANDOL, DIST.-RAJKOT, GUJARAT. - 360050 PH :9265404142.	KATHLAL	KODINAR
513. R B CARS PVT LTD (-01), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350	JHALOD	535. AMAR CARS PVT LTD (-01), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387630 PH :9909960761.	545. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), R.S.NO.222, PLOT NO.2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720
HALVAD	525. R B CARS PVT LTD (-01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA- JHALOD, DISTRICT - DAHOD. - 389170	KAWANT	KOSAMBA
514. DREAM VEHICLES PVT LTD (-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330 PH :8238000965.	JUNAGARH	536. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO :35 , NASVADI KAVANT ROAD, KAVANT, DIST: CHOTTA UDEPUR. - 391170	546. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-629, OPP. PIRAMAL GLASS COLONY, KIM KOSAMBA MAIN ROAD, KOSAMBA, DISTRICT- SURAT, GUJRAT - 394120
HANSOT	526. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-02), PLOT NO. 81-82,G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001	KESHOD	KUKARWADA
515. RAVIRATNA MOTORS PVT LTD (-01), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. - 393030 PH :9687691063.	527. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001	537. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA – KESHOD, DISTRICT – JUNAGADH, GUJARAT. - 362220 PH :7043999073.	547. STARLINE CARS PVT LTD (-01), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830
HIMATNAGAR	KADI	KHAMBHAT	LAJPUR
516. KIRAN MOTORS LIMITED (-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001	528. STARLINE CARS PVT LTD (-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH :8160707156.	538. AMAR CARS PVT LTD (-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620 PH :9909960772.	548. AMAR CARS PVT LTD (-01), NEAR INDIANOL PETROL PUMP, ACHIN, NAVSARI ROAD, DIST. SURAT - 394235
HISAR	KAKANPUR	KHANVEL	LALSAR
517. COMET CAR SALES & SERVICE PVT LTD (4006-04), SAROLI VILLAGE, NEAR SAIBABA MANDIR, SURAT-OLPAD ROAD - 394520	529. R B CARS PVT LTD (-01), SURVEY NO.618/2, PAIKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. - 388713 PH :9099049347.	539. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO 40/3, SILVASA KHANVEL ROAD, KHANVEL, GUJARAT - 396230	549. R B CARS PVT LTD (-01), SURVEY NO-202, AT-LALSAR, LALSAR-LUNAWADA HIGHWAY, TALUKA-LUNAWADA PIN-388270. - 388270
IDER	KALAVAD	KHEDA	LAVANA
518. KIRAN MOTORS LIMITED (-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430	530. ATUL MOTORS JAM LLP (-01), SANIDHYA ARCADE, NEAR SANIDHYA PARTY PLOT, KALAVAD – DHORAJI ROAD, KALAVAD - 361160 PH :9574222111.	540. AMAR CARS PVT LTD (-01), S.NO.708, PLOT NO. 1, VILLAGE-SOKHDA, TAL. MATER, DISTT. KHEDA, GUJARAT - 387570 PH :9909960761.	550. R B CARS PVT LTD (-01), AT PO -LAVANA, NEAR BABILIYA CROSSING, MODASA ROAD, LAVANA-389230 - 389230
JAMBUSAR	KALOL	KHEDBRAHMA	LIMBASI
519. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-2939-2954, PLOT NO-2, VILLAGE-JAMBUSAR, TALUKA-JAMBUSAR, DIST-BHARUCH - 392150 PH :9687667595.	531. NANDA AUTOMOBILES PVT LTD (-01), PLOT NUMBER 1147, 1148, MEHSANA HIGHWAY, KALOL. GANDHINAGAR - 383028	541. KIRAN MOTORS LIMITED (-01), AMBAJI ROAD, KHEDBRAHMA, DIST. – SABARKANTHA, PIN – 383255 - 383255 PH :9824010721.	551. AMAR CARS PVT LTD (-01), SURVEY NO 2495, OPP PHC CENTER, VILLAGE -LIMBASI - 387250
JAMJODHPUR	KAPADVANJ	KHERALU	LIMBDI
520. ATUL MOTORS JAM LLP (-01), NEAR HDFC BANK, GAYATRI MANDIR ROAD, JAMJODHPUR, DIST-JAMNAGAR (GUJARAT) - 360530. - 360530 PH :9537888988.	532. AMAR CARS PVT LTD (-01), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADVANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620 PH :9909960761.	542. STARLINE CARS PVT LTD (-01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA. - 384325	552. DREAM VEHICLES PVT LTD (-01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421
JAMNAGAR	KAPRADA	KHERGAM	LUNAWADA
521. ATUL MOTORS JAM LLP (-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001			553. R B CARS PVT LTD (-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA - TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230

MADHI	564. STARLINE CARS PVT LTD (-01), NAGALPUR HIGHWAY, MAHESANA , GUJARAT - 384002 PH :9909943635	575. AMAR CARS PVT LTD (-02), NEAR RAJHANS MULTIPLEX, NADIAD-UTTARSANDA ROAD - 387370 PH :9909960761.	585. TANU MOTORS PVT LTD (-01), OPP. DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001 PH :9099017756
554. DHRU MOTORS (-01), MADHI SYADLA, BAJIPURA ROAD., ATPOS, MADHI, SYADLA, TAPI, - 394340	565. TANU MOTORS PVT LTD (-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH :9909906076.	NAKHATARANA	586. STARLINE CARS PVT LTD (-08), SURVEY NO.4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH :8924601793.
MAHUVA (BHAVNAGAR)	566. VIMCO MOTORS PVT LTD (-01), SURVEY NO. 104 & 104 PAKI 1, AT P.O. - PALAVASANA, MEHSANA, GUJARAT. - 384002 PH :8909953333.	576. K D MOTORS (-01), PLOT NO-1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHATRANA, KUTCH PH :9909953119.	PALEJ
555. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290 PH :6357327534.	567. VIMCO MOTORS PVT LTD (-02), SHOP # 788, TIRUPATI SAHIBAGH MARKET, MEHSANA – RADHANPUR ROAD, NEAR SAHAJ VILLA, MEHSANA - 380002. - 380002 PH :8909953333.	NALIYA	587. RAVIRATNA MOTORS PVT LTD (-01), PLOT NO. 626/6, GIDC AREA, PALEJ, DISTRICT - BHARUCH - 392220
MAHUVA (SURAT)	METODA	577. K D MOTORS (-01), AT PO - SHAKTI SOCIETY, MAHAVIR NAGAR, PLOT(1), OPP. BANK OF BARODA, NALIYA, TAL-ABDASA, KUTCH. - 370655 PH :9909953119.	PALITANA
556. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), BLOCK NO. 14/2, VILLAGE BUDHALESHWAR, SURAT SAPUTARA STATE HIGHWAY, TAL. MAHUVA, DIST. SURAT - 394250 - 394250	568. ATUL MOTORS PVT LTD (5503--08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021	NANA PONDHA	588. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO 15, YASOVJAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BHAVNAGAR. - 364270 PH :6357314891.
MANAVADAR	MODASA	578. AMAR CARS PVT LTD (-01), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA- KAPRADA, DIST-VALSAD - 396126 PH :7227971155.	PALSANA
557. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA - MANAVADAR, DIST -JUNAGADH. - 362630 PH :7043999073.	569. KIRAN MOTORS LIMITED (-02), SHAMLAL JI ROAD, SABARKANTHA DIST., MODASA - 383315	NANDASAN	589. KATARIA AUTOMOBILES PRIVATE LIMITED (4004--07), BESIDE SAINATH COMPLEX, KADDARA AHMEDABAD ROAD , NH-8, UMHEL GAM, TALUKA: PALSANA KADODARA, SURAT. - 382721 PH :9924446895.
MANDAL	MORBBI	579. TANU MOTORS PVT LTD (-01), M/S TANU MOTORS PVT LTD, AT&PO-NANDASAN, TALUKA-KADI, DIST-MEHSANA 382705 - 382705	PARDI
558. KIRAN MOTORS LIMITED (-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH :9408803925.	570. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502--07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI , TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. - 363641	NASWADI	590. AMAR CARS PVT LTD (-01), OPPOSITE MORARJI DESAI MEMORIAL HALL, SERVICE ROAD N.H-48, KILLA-PARDI, DIST-VALSAD - 396125 PH :7226800777.
MANDVI	571. DREAM VEHICLES PVT LTD (-03), PLOT NO 2, DHARM GOLD INDUSTRIAL ESTATE, PIPLI JETPUR HIGHWAY, DIST MORBI, PIN 363642 - 363642 PH :7069089532.	580. RAVIRATNA MOTORS PVT LTD (-01), HOUSE NO-301,302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR - 391150 PH :9687691047.	PATAN
559. K D MOTORS (-01), PLOT NO.25.26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVIKUTCH - 370465	MOTI KHAVADI	NAVSARI	591. STARLINE CARS PVT LTD (-02), CHANASMA HIGHWAY, PATAN - 384265 PH :7046046187.
560. KIRAN MOTORS LIMITED (-01), C.S NO-3278, ZHANKHAVAV-MANDVI ROAD, DHOBANI NAKA, MANDVI - 394160. - 394160	572. ATUL MOTORS JAM LLP (-01), PLOT NO 22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST - JAMNAGAR, GUJARAT. - 361140	581. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO.-891, OPP PALUVA MILL, NH-8, NEAR GANESH SISODRA CHOKDI, GANESH SISODIA NAVSARI, GUJARAT - 396463 PH :9723430012.	PATDI
MANGROL	MUNDRADOM	NETRANG	592. DREAM VEHICLES PVT LTD (-01), R.S. NO.1614/2, PLOT NO.16, PATDI TALUKA DASADA, DISTT. SURENDRANAGAR, GUJARAT - 382765 PH :9227775709.
561. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH :6357071775.	573. B. M. AUTOLINK (7702--02), PRAGPAR ROAD, MUNDRA, DISTRICT-KUTCH, GUJARAT. - 370421	582. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST.-BHARUCH - 393130 PH :9687691063.	PAVI JETPUR
MANSA	MUVAL	OLPAD	593. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), NEAR ANKUR HOTEL, OPP DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370
562. NANDA AUTOMOBILES PVT LTD (-04), SURVEY NO. 1866, NR. UMA PETROLEUM (INDIAN OIL), RAJPURA CROSS ROADS, MANSA GANDHINAGAR HIGHWAY, MANSA -382845. - 382845 PH :9727921000.	574. AMAR CARS PVT LTD (-01), YOGI RESIDENCY MOVAL CHOKDI, PADRA- JAMBUSAR HIGHWAY – MUVAL, TALUKA-PADRA, VADODARA. - 391430	583. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006--02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH :9099916099.	PETLAD
MEHMDABAD	NADIAD	PADRA	594. AMAR CARS PVT LTD (-01), SURVEY NO. 396/2, RANGAIPUR VILLAGE, PETLAD, DIST.-ANAND. - 388450 PH :9099017068.
563. AMAR CARS PVT LTD (-01), PATEL FALIYA, KHATRAJ, MEHMDABAD, DIST.-KHEDA, GUJARAT. - 387130 PH :9909960761.		584. AMAR CARS PVT LTD (2205--02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST – VADODARA, GUJARAT - 391440	
MEHSANA		PALANPUR	

Dealer Workshop (AS ON 31.01.2026)

POR	RAJPIPLA	SAYLA	628. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (-01), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA - SONGADH, DIST.-TAPI. - 384220 PH :9099916099.
595. AMAR CARS PVT LTD (-01), SANKRUTI COMPLEX, POR KAYAVAROHAN ROAD, OPPOSITE OM BUNGALOWS, POR GUJARAT 391243 - 391243	607. RAVIRATNA MOTORS PVT LTD (-01), OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145	618. DREAM VEHICLES PVT LTD (-01), LALGURU COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT SURENDRANAGAR, GUJARAT PIN 363430 - 363430 PH :9227775709.	SUPEDI
PORBANDAR	RAJULA	SELAMBA	629. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-4827, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST - RAJKOT - 360440 PH :9409497902.
596. ATUL MOTORS JAM LLP (-01), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY, PORBANDAR, DIST. PORBANDAR GUJARAT - 360577	608. ALPHA AUTOLINK LLP (-01), R.S NO 98/3, PLOT NO-6 & 7, HINDORNA ROAD, RAJULA CITY, TALUKA-RAJULA. - 365560 PH :9033409043.	619. RAVIRATNA MOTORS PVT LTD (-01), CITY SURVEY NO. NA124/2/1, VILLAGE :- GHANSHERA, SELAMBA TALUKA- SAGBARA, DIST- NARMADA, PIN CODE:- 393050 - 393050	SURAT
PRANTIJ	RANPUR	SHANKESHWAR	630. KIRAN MOTORS LIMITED (4001-40-01), SURAT-BARDOLI ROAD,DUMBHAL,NEAR PUNA JAKAT NAKA,SURAT - 395010
597. KIRAN MOTORS LIMITED (-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205	609. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO -624/1,P2 PALIYAD ROAD, TALUKA RANPUR, DIST- BOTAD, GUJARAT. - 382245	620. STARLINE CARS PVT LTD (-01), MANIBHADRA SHOPPING CENTRE, SHANKHESHWAR HIGHWAY, SHANKHESHWAR (GUJARAT)- DIST: PATAN - 384246 PH :9824601729.	631. DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR,NEAR JEEVAN JYOTI THEATRE,UDHNA MAIN ROAD,SURAT - 394210
RADHANPUR	RAPAR	SHAPAR	632. KIRAN MOTORS LIMITED (4001-40-02), PANDESARA,BAMROLI ROAD,SURAT - 395002 PH :9824603880.
598. STARLINE CARS PVT LTD (-01), SURVEY NO. 208/A, MOUJA - RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT - PATAN, GUJARAT. - 385340	610. B.M. AUTOLINK (-01), PARAGRAP CHAAR RASTA RAPAR GHANDHIDHAM KUTCH - 370165 PH :9727725723.	621. ATUL MOTORS PVT LTD (-01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT - RAJKOT, GUJARAT - 360024	633. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-04), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESU, SURAT -395007 - 395007
RAJKOT	SAMI	SHIHORI	634. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-05), KATARIA ARCADE,OPP. RAJHANS CINEMA,DUMAS ROAD, PIPLOD, SURAT - 395007
599. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-55-01), PERFECT HOUSE,GONDAL ROAD,VANDI,RAJKOT - 360004	611. STARLINE CARS PVT LTD (-01), SHOP NO. 55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD. - 384240	622. TANU MOTORS PVT LTD (-01), OPP. PANCHMUKHI HANUMAN TEMPLE, SHIHORI - DEESA HIGHWAY, SHIHORI, TA- KANKREJ, DIST- BANASKANTHA.385550 - 385550	635. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH :9099915995.
600. ATUL MOTORS PVT LTD (5503-55-01), PLOT NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL ESTATE, RAJKOT. - 360002 PH :8140909093.	612. VIMCO MOTORS PVT LTD (-01), SURVEY NO 917, VIRA SHOPPING CENTER, AT-SAMI, TALUKA-HARIJ, DIST-PATAN, GUJARAT. - 384245 PH :8909953333.	SIDDHPUR	636. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT - 394310 PH :9924119020.
601. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-55-04), 150 RING ROAD,OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005	SANTEJ	623. STARLINE CARS PVT LTD (-01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA - VADGAM, DISTRICT - PATAN. - 384151	637. KIRAN MOTORS LIMITED (4005-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009
602. ATUL MOTORS PVT LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005 PH :8347005382.	613. NANDA AUTOMOBILES PVT LTD (-01), SUB PLOT NO. 05, SHOP NO. 3 & 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060 PH :9727822000.	SIHOR	638. AMAR CARS PVT LTD (4009-02), PLOT NO.108.11, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR DVGVL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH :7069026512.
603. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006	SANTRAMPUR	624. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY PLOT NO 338, PAKKI 1 SIHOR BHAVNAGAR RAJKOT HIGHWAY. - 364240	639. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT - SURAT, GUJARAT. - 395004 PH :9099916099.
604. KATARIA AUTOMOBILES PRIVATE LIMITED (5504-55-01), S. NO. 10/1, TPS NO. - 10, KALAVAD ROAD, MOTAMAVA, RAJKOT, GUJARAT. - 360001 PH :7573870001.	614. R B CARS PVT LTD (-01), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR,DISTT.- PANCHMAHAL - 389260	SINOR	
605. KATARIA AUTOMOBILES PRIVATE LIMITED (5504-55-02), OPP.ADARSH MARBLE,BESIDE SANNY PAJI KA DHABA, JAMNAGAR-RAJKOT HIGHWAY. - 360001	SARDHAR	625. RAVIRATNA MOTORS PVT LTD (-01), NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD, AT AND POST SEVGA, TALUKA SINOR, DIST. VADODARA, PIN-391105, GUJARAT - 391105 PH :7227055065.	
RAJPARDI	SAVLI	SITAPUR	
606. RAVIRATNA MOTORS PVT LTD (-01), R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI, TALUKA-JHAGADIA, DISTT. BHARUCH - 393115	616. KIRAN MOTORS LIMITED (-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRVA CHOWKDI, SAVLI - TIMBA ROAD, SAVLI, TALUK - SAVLI, DISTRICT - VADODARA, GUJARAT. - 391770 PH :7984799054.	626. STARLINE CARS PVT LTD (-01), SHOP NO. 2, RUDRA ARCADE, REVENUE SURVEY NO. 129, VITHLAPUR (SITAPUR) BECHARAJI - VIRAMGAM HIGHWAY, DIST. AHMEDABAD, PIN CODE: 382120 - 382120	
	SAYAN	SOJITRA	
	617. KIRAN MOTORS LIMITED (-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIYA, TALUKA: OLPAD, SAYAN - 394130	627. AMAR CARS PVT LTD (-01), RAMDEV ARCADE, OPP. BUS STATION, AT - SOJITRA, DIST. - ANAND GUJARAT PIN 387240. - 387240 PH :9662357557.	

640.	DHRU MOTORS (4002-40-03), PLOT NO.54/A, LAXMINARAYAN INDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210 PH :9978900862.	651.	TANU MOTORS PVT LTD (-01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA - 384220	660.	VIMCO MOTORS PVT LTD (-01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355 PH :7016623842.	673.	AMAR CARS PVT LTD (-01), SHAH ALKABEN JITENDRA KUMAR, VALETVA CHOWKI, NEAR VISAT MIATA MANDIR, PADGOL ROAD, VALETVA, DIST.-KHEDA, GUJARAT - 388440		
641.	KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-09), SR NO-465+476, PLOT NUMBER: -1-9 AND 13-23, GURU KRUPA SHOPPING, NRLAXMIBA PARK SOCIETY, NH 8, KHOLWAD, KAMREJ, SURAT-394190. - 394190	THASARA	652.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO 1 & 2, GIDC THASRA, BESIDES NARMADA VASAHAAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250 PH :7984092780.	VADODARA	674.	RAVIRATNA MOTORS PVT LTD (-01), AT & PO VALIA, TA-VALIA, DIST. BHARUCH, VALIA - 393135		
642.	DHRU MOTORS (4002-40-06), TP NO.59, FP NO. 148, SUB PLOT NO-2, NEAR D'MART, MADHURAM CIRCLE, DINDOLI, SURAT - 394210	TILAKVADA	653.	RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-157, VILLAGE- MOTI KAMSOLI, TALUKA-TILAKVADA, DIST-NARMADA, PIN-391120. - 391120	661.	KIRAN MOTORS LIMITED (2201-01), 909/A,G.I.D.C.MAKARPURA,VADODARA - 390010 PH :9624472699.	VALIA		
SURENDRANAGAR	643.	DREAM VEHICLES PVT LTD (-01), 261/P OPP MARKETING YARD,GIDC AREA,WADHWAN CITY, SURENDRANAGAR - 363030	UMERGAON	654.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT - VALSAD, GUJARAT. - 396170 PH :9624001794.	662.	KIRAN MOTORS LIMITED (2201-02), PLOT NO.160, SUB-I NUTAN GUJ.INDL ESTATE,OLD CHHANI ROAD, VADODARA - 390002 PH :9824207889	VALOD	
644.	DREAM VEHICLES PVT LTD (-02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANAGAR, GUJARAT-363030 - 363030 PH :9227775724.	UMRETH	655.	AMAR CARS PVT LTD (-01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH , DIST.ANAND, GUJARAT. - 388220 PH :9909960772.	663.	AMAR CARS PVT LTD (2203-01), GORWA ROAD,VADODARA GUJARAT. - 390018	675.	DHRU MOTORS (-01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO -VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. - 394640 PH :9712984522.	
TALAJA	645.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-168, DHANJIBHAI BALADHIYA NI VADI, NEAR MAHUVA PALITANA CROSS ROAD, MAHUVA BHAVNAGAR HIGHWAY, TALAJA-364140. - 364140 PH :9316626475.	UNA	656.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT - GIR SOMNATH, GUJARAT. - 362560	664.	AMAR CARS PVT LTD (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH :7211109952	VALSD	
646.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), SURVEY NO-55/9/1, PLOT NO-10, TALALA-VERAWAL HIGHWAY, AT-TALALA, DIST-GIR SOMNATH, 362150 - 362150 PH :8511147524.	UNJHA	657.	TANU MOTORS PVT LTD (-02), OPP. DHANA DAL FACTORY,MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH :9727762079.	665.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-01), 984/4,GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH :9904033422.	676.	KATARIA AUTOMOBILES PRIVATE LIMITED (-08), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,VALSAD, GUJARAT - 396020	
TALODA	647.	KIRAN MOTORS LIMITED (-01), SURVEY NO-168, NEAR BALAJI PARK, TALOD, TALUKA-TALOD, DIST-SABARKANTHA, PIN-383215 - 383215	UPLETA	658.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360490	666.	AMAR CARS PVT LTD (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA,GUJARAT - 390016 PH :8980006756.	677.	AMAR CARS PVT LTD (9701-97-02), NEAR KALPANA WEIGH BRIDGE, OPP. VISHWAKARMA MANDIR, DHAMDACHI - 396001
TANKARA	648.	ATUL MOTORS PVT LTD (-01), PLOT NO. 8/1, S. NO. 107, VILLAGE - JABALPUR, TALUKA - TANKARA, SUB DISTRICT - MORBI, DISTRICT - RAJKOT. - 363650	VADGAM	659.	VIMCO MOTORS PVT LTD (-01), _SURVEY NO-177, BESIDE ESSAR PETROL PUMP, VADGAM - PALANPUR ROAD, VADGAM, DIST - BANASKANTHA, GUJARAT - 385410. - 385410 PH :8909953333.	667.	KIRAN MOTORS LIMITED (2201-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH :2771122.	678.	KATARIA AUTOMOBILES PRIVATE LIMITED (-02), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT - NAVSARI, GUJARAT - 396580 PH :7624088188.
TARAPUR	649.	AMAR CARS PVT LTD (-01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST.-ANAND. - 388180 PH :9909960772.	VADNAGAR	660.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360490	668.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001 PH :8156017770	679.	KATARIA AUTOMOBILES PRIVATE LIMITED (-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C. VAPI, TAL. PARDI - 396195
THANGADH	650.	DREAM VEHICLES PVT LTD (-01), NEAR GATE, OPP.RELIANCE PETROL PUMP. - 363530	VALETV	661.	KATARIA AUTOMOBILES PRIVATE LIMITED (2202-22-04), OPP. RUDRAKSH BLISS, RANG VATTIKA ROAD, BAPOD, WAGHODIA - 390019	669.	RAVIRATNA MOTORS PVT LTD (2206-22-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA - 390012	680.	KATARIA AUTOMOBILES PRIVATE LIMITED (-97-09), PLOT NO. 304/2, VILLAGE BALIHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI , DISTRICT -VALSAD, GUJARAT - 369191
THARAD	651.	DREAM VEHICLES PVT LTD (-01), NEAR GATE, OPP.RELIANCE PETROL PUMP. - 363530		662.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-03), C/O SHIVAM TIMBER MART, BESIDES SHEDSHWAR PLAZA NEAR SARDAR ESTATE, NEW VIP ROAD, VADODARA -390019. - 390019	670.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-03), C/O SHIVAM TIMBER MART, BESIDES SHEDSHWAR PLAZA NEAR SARDAR ESTATE, NEW VIP ROAD, VADODARA -390019. - 390019	681.	AMAR CARS PVT LTD (9701-97-01), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALIHA, VAPI. - 396145 PH :9327909504.
				663.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO -8, NEAR MADHURAM FARMHOUSE, MAUJA-VASO, DIST-KHEDA, GUJARAT - 387380	671.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-04), OPP. RUDRAKSH BLISS, RANG VATTIKA ROAD, BAPOD, WAGHODIA - 390019	682.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-05), SR 9882/P1/P1, AT VILLAGE-DARI, TALUKA - PATAN, JUNGADH VERAWAL HIGHWAY, CHATRODA CHOWK, VERAVAL - 362255
				664.	RAVIRATNA MOTORS PVT LTD (-02), SURVEY NO 560, BEHIND IOCL PETROL PUMP., VILLAGE-VEMALI (SAMA), SAMA-SAVLI ROAD - 682024	672.	RAVIRATNA MOTORS PVT LTD (-02), SURVEY NO 560, BEHIND IOCL PETROL PUMP., VILLAGE-VEMALI (SAMA), SAMA-SAVLI ROAD - 682024	683.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-05), SR 9882/P1/P1, AT VILLAGE-DARI, TALUKA - PATAN, JUNGADH VERAWAL HIGHWAY, CHATRODA CHOWK, VERAVAL - 362255
				665.	AMAR CARS PVT LTD (2203-01), GORWA ROAD,VADODARA GUJARAT. - 390018	673.	AMAR CARS PVT LTD (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH :7211109952	VUJAPUR	

Dealer Workshop (AS ON 31.01.2026)

684.	STARLINE CARS PVT LTD (-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH :9909043835.	693.	MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003 PH :9215016044.	703.	DINCO 4 WHEELS LLP (AUTO VIBES) (-01), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, BAWAL, DISTRICT - REWARI, HARYANA - 123501 PH :7082100250.	713.	EAKANSH MOTORS PVT LTD (-01), PANCHMUKHI CHOWK, KARNAL ROAD, DHAND, DISTT. KAITHAL, HARYANA - 136020 PH :8395906111.
VIRAMGAM		694.	EAKANSH WHEELS PVT LTD (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001 PH :9991703000.	BERI		DHARUHERA	
685.	KIRAN MOTORS LIMITED (-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH :8156016222.	695.	EAKANSH WHEELS PVT LTD (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001 PH :88813874888.	704.	COMPETENT AUTOMOBILES CO LTD (-01), KHASRA NO.9/19,KEWAT NO.320, BERI JHAJJAR ROAD,WAZIRPUR, - 124201	714. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI. - 122106 PH :7082100270.	
VISAVADAR		696.	T R SAWHNEY MOTORS PVT LTD (1803-18-01), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003 PH :9990110068.	BHIWANI		ELLENABAD	
686.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), OPP BUS STAND, AT PO-MANDAVAD, TAL-VISAVADAR, DIST-JUNAGADH, PIN-362130. - 362130	ASSANDH		705.	JAGMOHAN AUTOMOTIVES PVT LTD (-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021 PH :8685005592.	715. SHAKTI MOTORS PVT LTD (-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055 PH :8222900250.	
VISNAGAR		687.	STARLINE CARS PVT LTD (-05), VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT - MEHSANA - 384315 PH :7046046174.	697.	KARNAL MOTORS PVT LTD (8906-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032 PH :7082111325.	FARIDABAD	
VYARA		BABARPUR		706.	PLATINUM MOTOCORP LLP (-02), KHASRA NO.54/67, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT - GURUGRAM. - 122413	716. VIPUL MOTORS PVT LTD (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002	
688.	COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (-01), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT - TAPI, GUJARAT - 394650 PH :9099916099.	698.	AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), G. T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103	BILASPUR-HR		717. VIPUL MOTORS PVT LTD (5801-58-03), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006	
WAGHODIA		BAHADURGARH		707.	PANDIT AUTOMOBILES PVT LTD (-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT - YAMUNANAGAR, HARYANA. - 135102 PH :9992113854.	718. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD, - 121001	
689.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA - WAGHODIA, DISTRICT - VADODARA, GUJARAT. - 391760 PH :7203013712.	699.	COMPETENT AUTOMOBILES CO LTD (-01), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124507 PH :8929648144.	CHARKHI DADRI		719. FAIR DEAL PREMIUM WHEELS PVT LTD (5807-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003 PH :8448296686.	
WANKANER		BAPOLI		708.	JAGMOHAN AUTOMOTIVES PVT LTD (-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306 PH :8059900538.	720. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (5804-58-02), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. - 121003	
690.	ATUL MOTORS PVT LTD (-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 383621	700.	AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), KHEWAT NO. 136, VILLAGE - JHAMBA, TEHSIL - BAPOLI, DISTRICT - PANIPAT. - 132103 PH :9053400583.	CHEEKA		721. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-01), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003	
HARYANA		BARARA		709.	EAKANSH MOTORS PVT LTD (-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034 PH :8053086000.	722. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-58-02), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. - 121006	
ADAMPUR (HARYANA)		701.	EAKANSH WHEELS PVT LTD (-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201 PH :9991478100.	CHHACHHARAULI		723. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-58-03), 15-INDRA COMPLEX, NAHAR PAR NEAR SIDDHARTHA SCHOOL, FARIDABAD, KHERIKALANM PIN-121002, HARYANA - 121002	
691.	SARAOGI AUTOMOBILES PVT LTD (-01), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 44/21/1/2(1-0), MANDI ADAMPUR, TEHSIL - ADAMPUR, DIST.-HISSAR, STATE - HARYANA. - 125052 PH :8607777153.	BARWALA		710.	PANDIT AUTOMOBILES PVT LTD (-01), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL - CHHACHHARAULI, DISTRICT - YAMUNA NAGAR. - 135103 PH :9812455895.	FARMANA	
AMBALA		702.	MODERN AUTOMOBILES (-01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118 PH :9896217059.	DADRI TOE		724. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR PARAMOUNT SCHOOL OF SCIENCE, KHARKHODA ROAD, FARMANA, DISTRICT SONIPAT, HARYANA - 131408	
692.	MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003 PH :9215016044.	BAWAL		711.	COMPETENT AUTOMOBILES CO LTD (-01), KHEWAT NO. - 270 MIN. KHATONI NO. - 319, DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN 124103 - 124103 PH :9812455895.	FARRUKHNAGAR	
				DAHINA		725. PLATINUM MOTOCORP LLP (-01), KHEWAT NO. 299, MUSTIL NO.-12, KHASRA NO.-19/3 AND 22/2, VILLAGE - SEHADPUR MOHAMADPUR, TEHSIL - FARRUKHNAGAR, DISTRICT - GURGAON. - 122506	
				DHAND			

FATEHABAD		741. PREM MOTORS PVT LTD (9512-95-02), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017	755. MODERN AUTOMOBILES (7602-76-02), OPP. BMB, HISSAR DELHI ROAD, HISSAR - 125001 PH :9355473000	765. JAGMOHAN AUTOMOTIVES PVT LTD (-01), BHIWANI ROAD, KALANAUR, DISTRICT ROHTAK - 124113 PH :9812000425
726. SHAKTI MOTORS PVT LTD (-01), NH-10, SIRSA ROAD, FATEHABAD - 125050 PH :8222900217	742. PLATINUM MOTOCORP LLP (-03), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL, GURGAON HARYANA - 122018	756. UNIQUE MOTORS PVT LTD (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD, HISSAR (HARYANA) - 125006 PH :8818055535.	766. PANDIT AUTOMOBILES PVT LTD (-01), VPO, KALANAUR, DISTRICT- YAMUNANAGAR, HARYANA - 124113 PH :9053055550.	
FEROZPUR JHIRKA		743. PREM MOTORS PVT LTD (9512-95-G1), QILA NUMBER 8/2, MUSTAKIL NO -25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015 PH :8800000817.	HODAL	KALAYAT
727. PASCO AUTOMOBILES (-01), VILLAGE - CHAK RANGLA, TEHSIL - FIROZPUR, JHIRKA DIST - NUH - 122104	744. PLATINUM MOTOCORP LLP (-95-04), KILA NO. 15, SECTOR 93, NEAR HAYATPUR POLICE CHOWKI, HAYATPUR, GURGAON, PIN-122050, HARYANA - 122050 PH :9899118850.	745. PASCO AUTOMOBILES (9506-95-04), KHASRA NO. 191/2 & 190/2, MAIN DAULTABAD ROAD, OPP. OLD BHALLA CHEMICALS FACTORY, DAULTABAD INDUSTRIAL AREA, GURGAON, HARYANA - 122006 - 122006 PH :8851227233.	757. ROHAN MOTORS LTD (-02), KILA NO. 8/2(7-11), 9/5-06, 12/5-0, 13/8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DIST.-PALWAL. - 121106	767. EAKANSH MOTORS PVT LTD (-01), NEAR BUS STAND, KAITHAL-KALAYAT ROAD, VILLAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117 PH :9671788801.
GANAUR		746. SWASTIK MOTOCORP PVT LTD (9514-95-01), NEAR RAO JAI SINGH CHOWK, SIKANDERPUR BADHA, SECTOR-85, GURUGRAM, HARYANA - 122004 - 122004	ISMAILABAD	KALKA
728. JAGMOHAN AUTOMOTIVES PVT LTD (-01), SAROJ GARDEN, GT ROAD, GANNAUR , DISTRICT SONIPAT RAILWAY ROAD, GANAUR - 131101 PH :8199911106.	747. COMPETENT AUTOMOBILES CO LTD (9505-95-02), MAIN FARUKH NAGAR ROAD, DHANKOT, GURGAON - 122505 - 122505	748. PREM MOTORS PVT LTD (9512-95-03), OPP. TRUE VALUE, SECTOR 17-18 DIVIDING ROAD GURGAON - 122001	758. KARNAL MOTORS PVT LTD (-01), KHEWAT NO. 928, KHASRA NO. 2760(5-14), 2761(800), VILLAGE - ISMAILABAD, TEHSIL - PEHOW, DIST. -KURUKSHETRA, HARYANA - 136129 PH :7082007138.	768. MODERN AUTOMOBILES (-01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT - PANCHKULA, HARYANA - 133302 PH :8986217059.
GHARAUNDA		749. SWASTIK MOTOCORP PVT LTD (9514-95-02), KHATA NO.141/1146, KILA NO.16/2/2, SECTOR-83, GURUGRAM, - 122004	ISRANA	KARNAL
729. KARNAL MOTORS PVT LTD (8906-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114 PH :8222022321.	750. SWASTIK MOTOCORP PVT LTD (9514-95-03), KHATAUN NO 135, KHASRA/KILA NO 66/3/2/1 & 66/3/2/2, GURGAON- SOHNA RD, NEAR VATIKA CHOWK, GURUGRAM - 122011	751. HANSI	759. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), MUSHTIL NO.-119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132107 PH :9053400417.	769. KARNAL MOTORS PVT LTD (8906-89-01), 71/3 MILESTONE G.T.ROAD, KARNAL - 132001 PH :8222022399.
GOHANA		HANSI	JASANA	770. KARNAL MOTORS PVT LTD (8906-89-02), KHEWAT NO. 59, JHANJHARI GT ROAD, KARNAL - 132001 PH :8222022430.
730. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT - 131301 PH :8685005521.	752. HATHIN	753. HISSAR	760. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (-01), MUSTKIL NO -06, KILL NO -22 VILLAGE, JASANA FARIDABAD HARYANA-121101 - 121101	771. MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL - 132001 PH :7419900042.
GURGAON		754. HATHIN	JHAJJAR	772. MODERN AUTOMOBILES (8907-89-03), 117-118 KM MILE STONE NH1, NEAR VILLAGE KAMBOUPURA, GT ROAD, KARNAL - 132001 PH :7419900042.
731. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006	755. HISSAR	756. HATHIN	761. COMPETENT AUTOMOBILES CO LTD (-01), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101 PH :9999493040.	KATHURA
732. VIPUL MOTORS PVT LTD (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001	757. MODERN AUTOMOBILES (7602-76-01), OPP. VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005 PH :9355473000.	758. HATHIN	762. EAKANSH MOTORS PVT LTD (-01), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102 PH :7876008184.	773. JAGMOHAN AUTOMOTIVES PVT LTD (-01), GOHANA MAHAM ROAD, KATHURA, GOHANA. - 131301 PH :8685005400.
733. COMPETENT AUTOMOBILES CO LTD (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004	759. RANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON - 122001	759. HATHIN	JULANA	KHARKHODA
734. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, - 122015	740. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001	752. HATHIN	763. EAKANSH MOTORS PVT LTD (-01), PLOT NO. 52,53, KHEVAT NO. 253/3, ROHTAK ROAD, JULANA, DISTRICT JIND, HARYANA. JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101 PH :8816802111.	774. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR KHANDA BYPASS CHOWK, SONIPAT ROAD, KHARKHODA, DISTRICT: SONIPAT, HARYANA - 131402 PH :8685005593.
735. ROHAN MOTORS LTD (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001		753. HISSAR	JULANA	KOSLI
736. VIPUL MOTORS PVT LTD (5801-04), PLOT NO 5/22/1, SARHAUL VILLAGE, SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102		754. HISSAR	764. EAKANSH MOTORS PVT LTD (-01), AMBALA ROAD, NH-65, KAITHAL - 136027 PH :9671788801.	775. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT - REWARI, HARYANA - 123302 PH :7082100202.
737. PREM MOTORS PVT LTD (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON - 122017		755. HISSAR	KALANAUR	KUND
738. PREM MOTORS PVT LTD (9512-95-01), PLOT NO. 3, IDC, OPPOSITE SECTOR-14, GURGAON - 122001		756. HISSAR		

Dealer Workshop (AS ON 31.01.2026)

776. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), NEAR KUND BARRIER, OPP. SBI BANK, NARNAUL ROAD, VILLAGE - MANETHI, KUND, DISTRICT - REWARI, HARYANA - 123102	786. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (-01), YAMUNA PUL ROAD, NEAR GYATRI PETROL PUMP, VPO-MOHANA TEHSIL BALLABGARH, DISTT FARIDABAD - 121004	797. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), KHASRA NO. 436, 44/9 & 10, VILLAGE - JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA. PH :9053400515.	808. UNIQUE AUTOLEAD LLP (-01), KHASRA NO- 3597, JIND ROAD, JIND CHOWK, ROHTAK, HARYANA - 124001 PH :9812259000.
KUNDLI	MUSTAFABAD	PATAUDI	SAFIDON
777. JAGMOHAN AUTOMOTIVES PVT LTD (-01), 34 E, SECTOR 57, PHASE 4, KUNDLI INDUSTRIAL AREA, KUNDLI - 131001 PH :8059900518.	787. PANDIT AUTOMOBILES PVT LTD (-01), KHATUNI NO. 205/287, KHASRA NO. 39/17/2, VILLAGE - MANSURPUR, THANA - CHAPPER, MUSTAFABAD, DIST.-YAMUNA NAGAR, STATE - HARYANA. - 133103 PH :9992113854.	798. PLATINUM MOTOCORP LLP (-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503	809. EAKANSH MOTORS PVT LTD (-05), NEAR BRSK SCHOOL, OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT- JIND - 126112 PH :9416616603.
KURUKSHETRA	NARAINGARH	PEHOWA	SALHAWAS
778. KARNAL MOTORS PVT LTD (8906-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA - 136118 PH :8222022371.	788. EAKANSH WHEELS PVT LTD (1802-02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203 PH :9991143700.	799. KARNAL MOTORS PVT LTD (-01), NEAR DAV COLLEGE, AMBALA ROAD, PEHOWA. 136128 - 136128 PH :8222022464.	810. COMPETENT AUTOMOBILES CO LTD (-01), JHAJJAR KOLSI ROAD, NEAR BDPO OFFICE, SALHAWAS, DISTT JHAJJAR HARYANA - 123106 - 123106
LADWA	NARNAUL	PUNDRI	SAMALKHA
779. KARNAL MOTORS PVT LTD (-01), KHEWAT NO.197, KHATONI NO.233, KHASRA NO.271/171,271/4, LADWA-KURUKSHETRA ROAD, VILLAGE - LADWA, TEHSIL THANESAR, DISTT. KURUKSHETRA - 136132 PH :7802007182.	789. PLATINUM MOTOCORP LLP (-01), KALASH NAGAR, REWARI ROAD, NARNAUL, HARYANA, NARNAULND	800. EAKANSH MOTORS PVT LTD (-01), KAITHAL-KARNAL ROAD, OPP. ESSAR PETROL PUMP, PUNDRI, KAITHAL, HARYANA. KILA NO- 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026 PH :9671788801.	811. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), GT ROAD, SAMALKHA, PANIPAT, HARYANA PIN- 132101 - 132101 PH :9053700003.
LOHARU	790. JAGMOHAN AUTOMOTIVES PVT LTD (-01), KHASRA NO. 234, HANSI ROAD, NARNAULND, DISTT. HISAR, HARYANA. - 125039 PH :9812000471.	PUNHANA	SAMPLA
780. JAGMOHAN AUTOMOTIVES PVT LTD (-01), BHIWANI ROAD , OPP. ITI, CITY: LOHARU - 127201 PH :9812000425.	NARWANA	801. PASCO AUTOMOBILES (-01), KILA NO. 4/2, PUNHANA, DIST.-MEWAT, HARYANA - 122508	812. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501 PH :9812000351.
MADLAUDA	791. EAKANSH MOTORS PVT LTD (-03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116 PH :9813583100.	RADAUR	SATNALI
781. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD, MADLAUDA, PIN-132113, HARYANA - 132113 PH :9053400524.	NUH	802. PANDIT AUTOMOBILES PVT LTD (-02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA - 135001 PH :9992113854.	813. PLATINUM MOTOCORP LLP (-01), KHEWAT NO.605, KHATONI NO-1134 KILLA NO.167, VILL: SATNALI, NEAR BHARAT PETROL PUMP MAHENDRAGARH ROAD, HARYANA -123024 (LOCATION: MAHENDRAGARH) - 123024 PH :9910100341.
MAHENDARGARH	792. PASCO AUTOMOBILES (-01), MAIN DELHI - ALWAR ROAD, NEAR SHAHEED PARK, NH -248A, NUH, DISTRICT -MEWAT, HARYANA. - 122107 PH :9810014947.	RAIPUR RANI	SHAHABAD
782. PLATINUM MOTOCORP LLP (-01), KHEWAT NO. 187, KILLA NO. 5/18, REVENUE ESTATE OF VILLAGE REWASA, DADRI ROAD, TEHSIL & DISTRICT, MAHINDERGARH, PIN-123029, HARYANA - 123029	PALWAL	803. AUTO VOGUE PRIVATE LIMITED (-01), BARIWALA ROAD, RAIPUR RANI, DISTRICT PANCHKULA, HARYANA. PIN CODE - 134204. - 134204	814. KARNAL MOTORS PVT LTD (-01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST. - KURUKSHETRA - 136135 PH :8222022338.
MANDI DABWALI	793. ROHAN MOTORS LTD (-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101	RAJOUND	SIRSA
783. SHAKTI MOTORS PVT LTD (-02), SANGARIA ROAD, DABWALI, DISTT.-SIRSA - 125104 PH :8222900209.	PANCHKULA	804. EAKANSH MOTORS PVT LTD (-01), MITTAL KHAL BHANDAR, RAJOUND, DISTT KAITHAL PH :9671788801.	815. SHAKTI MOTORS PVT LTD (-01), DABBALI RD., SIRSA, HARYANA - 125055 PH :822900201.
MANESAR	794. MODERN AUTOMOBILES (-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113	REWARI	SIWANI
784. PLATINUM MOTOCORP LLP (-01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052	795. AUTOPACE NETWORK PVT LTD (-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113	805. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401	816. SARAOGI AUTOMOBILES PVT LTD (-01), OPP.GOV'T HOSPITAL, SIWANI BYPASS CHOWK,HISSAR ROAD, SIWANI,DIST.BHIWANI -127046 HARYANA - 127046 PH :860777149.
MEHAM	796. AUTO VOGUE PRIVATE LIMITED (-01), PLOT NO- 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113 PH :8558813181.	ROHTAK	SOHNA
785. JAGMOHAN AUTOMOTIVES PVT LTD (-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101 PH :8059900592.	PANIPAT	806. JAGMOHAN AUTOMOTIVES PVT LTD (-01), SONEPAT ROAD, ROHTAK - 124001 PH :9467465035.	817. PASCO AUTOMOBILES (9506-03), 56, KILLA NO. 13 (4-10), 18(4-6), 19 (8-0), 22 (8-0), 23 (4-2), VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA, DISTRICT -GURUGRAM. - 122103
MOHNA		807. JAGMOHAN AUTOMOTIVES PVT LTD (-09), SWAN GARDEN, DELHI ROAD, ROHTAK - 124001 PH :9812000357.	

818.	COMPETENT AUTOMOBILES CO LTD (-03), DAULA-197, LOHATKI VILLAGE, KHASRA NO.174, SOHNA ROAD, GURGAON, PIN-122103, HARYANA - 122103	BAIJNATH	829.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), TASHI JONG, PAPROLA-BAIJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAIJNATH, DISTT. KANGRA - 176115	GAGRET	849.	COMPETENT AUTOMOBILES CO LTD (-01), PLOT 3&4, INDUSTRIAL AREA, SHAMSHI, KULLU (HP) - 175126 PH :7018035136.	
SONEPAT						KUNIHAR		
819.	JAGMOHAN AUTOMOTIVES PVT LTD (-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001 PH :9992200372.	BANGANA	830.	COMPETENT AUTOMOBILES CO LTD (-01), VILLAGE BHALET, POST OFFICE DOHGI, TEHSIL BANGANA, DISTT UNA, HIMACHAL PRADESH - 174307	GHUMARWINT	850.	GOVAL MOTORS PVT LTD (-01), KHATA NO. - 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSIL - ARKI, DISTRICT - SOLAN, HIMACHAL PRADESH - 173207 PH :9418312472.	
820.	JAGMOHAN AUTOMOTIVES PVT LTD (-02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001 PH :8685005686.	BANIKHET	831.	PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO.709, KHATA KHATOONI NO.23, BANIKHET, THE-DALHOUSIE, DISTT. CHAMBA - 176303	HAMIRPUR	MANALI	851.	COMPETENT AUTOMOBILES CO LTD (-01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & TEHSIL- MANALI, DIST. KULLU, (H.P.) - 175131 PH :9418387465.
821.	JAGMOHAN AUTOMOTIVES PVT LTD (-03), O-11 INDUSTRIAL AREA, SONIPAT, HARYANA. - 131001 PH :9812615000.	BILASPUR-HP	832.	COMPETENT AUTOMOBILES CO LTD (-01), KHEWAT NO. 8/8 KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. - CHANDPUR, TEHSIL - SADAR, DIST.- BILASPUR, HIMACHAL PRADESH. - 174001	INDORA	MANDI	852.	COMPETENT AUTOMOBILES CO LTD (-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI - 124501
TAURU						MATIANA	853.	GOVAL MOTORS PVT LTD (-), VPO MATIANA (NEAR DEV BHOOMI APPLE COLD STORAGE),THEOG, SHIMLA, HIMACHAL PRADESH-171212. - 171212
822.	PASCO AUTOMOBILES (-01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA - 122015	CHAMBA	833.	PATHANKOT VEHICLEADES PVT LTD (-01), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310	JASINGHPUR	NADAUN	854.	COMPETENT AUTOMOBILES CO LTD (-01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041 PH :9805737436.
TOHANA						NAGROTA	855.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047 PH :7018268819.
823.	SHAKTI MOTORS PVT LTD (-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120 PH :8572800991.	CHAMBA	834.	PATHANKOT VEHICLEADES PVT LTD (-02), KHASRA NO. 88/96.1 & KHASRA NO.628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310	JASWAN	844.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), JASWAN, KANGRA, HIMACHAL PRADESH. - 221502	
TOSHAM						JAWALI	845.	PATHANKOT VEHICLEADES PVT LTD (-01), VILLAGE - TIUKARI, NEAR MAHAVIR HOSPITAL LUBH ROAD, TEHSIL - JAWALI, DIST.-KANGRA, HAMACHAL PRADESH. - 176023 PH :9418195333.
824.	JAGMOHAN AUTOMOTIVES PVT LTD (-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040 PH :8059900566.	CHOWARI	835.	PATHANKOT VEHICLEADES PVT LTD (-01), KHATA KHATNI NO. 24/32 MIN, KHASRA NO. 90, VILLAGE - LAHRU, P.O. - PARCHHORE, TEHSIL - BHATTIYAT, DIST.-CHAMBA, HAMACHAL PRADESH. - 144416 PH :8894569632.	JHANDUTTA	846.	COMPETENT AUTOMOBILES CO LTD (-01), BEHRAN, TEHSIL JHANDUTTA, DISTRICT BILASPUR H.P. - 174031	
YAMUNANAGAR						JOGINDER NAGAR	847.	COMPETENT AUTOMOBILES CO LTD (-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015 PH :9805005754.
825.	PANDIT AUTOMOBILES PVT LTD (-01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001 PH :9812455896.	DARLAGHAT	836.	GOVAL MOTORS PVT LTD (-01), VILL SYAR, , PO DARLAGHAT,TEH ARKI, HIMACHAL PRADESH - 171102	JWALAMUKHI	848.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), KHASRA 880/613, MAUJA BOHAN, TEHSIL JWALAMUKHI, DISTRICT KANGRA - 176031 PH :9418488999.	
826.	PANDIT AUTOMOBILES PVT LTD (-03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001 PH :9812455896.	DEHRA	837.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101 PH :9817013058.	KULLU			
HIMACHAL PRADESH								
ALAMPUR								
827.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), KHASRA NO. 1606/1582, STATE HIGHWAY PALAMPUR-SUJANPUR AT JANGAL, VILLAGE - ALAMPUR, DIST.-KANGRA. - 176082	GAGGAL	838.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), NATIONAL HIGHWAY -20, ZAMANABAD ROAD, ICHI, GAGGAL, DISTT. KANGRA , HIMACHAL PRADESH - 176209 PH :9418988832.				
BADDI								
828.	GOVAL MOTORS PVT LTD (-04), KHATA/KHATAUNI NO. 26/26, KHASRA NO. 93/56/32 AND 94/56/32, KITAS 2, REVENUE MAUZA - CHAK JANGI, HADBAST NO. 203, TEHSIL - BADDI, DISTRICT - SOLAN, HIMACHAL PRADESH. - 173205 PH :9418076972.					NALAGARH	857.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037, MAHAL BASSA, SUB TEHSIL - NAGROTA SURIAN, DISTRICT - KANGRA. - 176027 PH :9418488999.

Dealer Workshop (AS ON 31.01.2026)

858. GOYAL MOTORS PVT LTD (-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101 PH :9418704572.	SARAHAN	879. HIGHLAND AUTOMOBILES PVT LTD (-04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM, - 191111 PH :9419019899.	890. JAMMU MOTORS PRIVATE LIMITED (3308-33-01), 6, AKHNOOR ROAD, JAMMU, - 180001 PH :9419118393.
NERWA		CHOWKI CHOURA	891. JAMMU MOTORS PRIVATE LIMITED (3308-33-02), PLOT NO.2, RAJUPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002 PH :9419118393.
859. GOYAL MOTORS PVT LTD (-01), KHASRA NO. 482, VILLAGE - KEDI, TEHSIL - NERWA, DISTRICT - SHIMLA, HIMACHAL PRADESH. - 171210 PH :9418663572.	SHAHPUR	880. JAMMU MOTORS PRIVATE LIMITED (-01), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154 PH :956975060.	892. PEAKS AUTO PVT LTD (3312-02), KHASRA NO.425 & 426, KHATA NO.425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU, - 180001 PH :9697001125.
NURPUR		DAYALACHAK	893. JAMKASH VEHICLEADES PVT LTD (-07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU, - 180007 PH :9419191502.
860. PATHANKOT VEHICLEADES PVT LTD (-01), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201	SHIMLA	881. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK, TEHSIL & DISTT. KATHUA, JAMMU & KASHMIR - 184121 PH :88492849170.	894. NSF VEHICLES (UNIT OF NEW STYLE FABRICATORS PVT LTD) (3314-33-01), INDUSTRIAL ESTATE, ASHOK NAGAR (ADJOINING BAJAJ 2WHEELER), NEAR SATWARI, JAMMU - 180003
861. PATHANKOT VEHICLEADES PVT LTD (-02), VILL- NANGLAHAR, PO-RAJA KA BAG, TEH- NURPUR, KANGRA - 176201	870. GOYAL MOTORS PVT LTD (-01), TARADEVI, SHIMLA,(H.P.) - 171010 PH :9418663572.	DODA	895. NSF VEHICLES (UNIT OF NEW STYLE FABRICATORS PVT LTD) (-02), RAMNIBAGH, NEAR JAMMU AIRPORT, JAMMU, NEAR JAMMU AIRPORT, JAMMU, - 180001
PALAMPUR	SOLAN	882. J&K VEHICLEADES PVT LTD (-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202 PH :9419796821.	KATHUA
862. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061	871. GOYAL MOTORS PVT LTD (-01), DEON GHAT, SOLAN - 173211 PH :9418138772.	GANDERBAL	896. JAMMU MOTORS PRIVATE LIMITED (-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH-1A, KATHUA TEHSIL KATHUA - 184101 PH :9419118393.
PAONTA SAHIB	UNA	883. JAMKASH VEHICLEADES PVT LTD (-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201 PH :9419000828.	KATRA
863. GOYAL MOTORS PVT LTD (-02), OPP BIBUEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR , NH-72, PAONTA SAHIB - 173025 PH :9459210872.	872. COMPETENT AUTOMOBILES CO LTD (-01), VILLAGE RAINSARY, P.O. JHALERA, TEHSIL & DISTRICT:UNA - 174303 PH :9805737436.	HANDWARA	897. J&K VEHICLEADES PVT LTD (-01), VILLAGE: KOTLI BAJALAN, TEHSIL - KATRA, DISTRICT - REASI, JAMMU AND KASHMIR. - 182301
RAJGARH	JAMMU AND KASHMIR	884. JAMKASH VEHICLEADES PVT LTD (-01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO- 3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST- KUPIWARA, J&K - 193221	KRALPORA
864. GOYAL MOTORS PVT LTD (-01), KHATA NO. 517/505, 478/3, KHASRA NO. - 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL - RAJGARH, DISTRICT - SIRMAUR , HIMACHAL PRADESH - 173101 PH :9418312472.	AKHNOOR	HANJUWARA PATTAN	898. JAMKASH VEHICLEADES PVT LTD (-01), SHULOORA ROAD, KARALPORA, DISTRICT - KUPWARA, JAMMU & KASHMIR. - 193224
RAMPUR	873. JAMMU MOTORS PRIVATE LIMITED (-01), MAIN ROAD DASKAL, TEHSIL - AKHNOOR, DISTRICT - JAMMU - 181201 PH :9419118393.	885. JAMKASH VEHICLEADES PVT LTD (-01), NEAR LIGHT HOUSE SCHOOL, HANJUWARA BRIDGE, HANJUIWARA PATTAN - 193121	KUPWARA
865. GOYAL MOTORS PVT LTD (-01), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL - RAMPUR, DISTRICT - SHIMLA. - 172001 PH :9459296572.	874. JAMMU MOTORS. PVT.LTD. (-02), MAIN ROAD DASKAL NEAR HANUMAN CHOWK, NEAR HANUMAN CHOWK AKHNOOR - 181201	JAMMU	899. JAMKASH VEHICLEADES PVT LTD (1205-03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223 PH :9622499902.
ROHRU	BANDIPORA	886. JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015 PH :6006801639.	MAGAM
866. GOYAL MOTORS PVT LTD (-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207 PH :9418016072.	875. JAMKASH VEHICLEADES PVT LTD (1205-04), AJAR BANDIPORA , J&K - 193502 PH :9149726427.	887. JAMKASH VEHICLEADES PVT LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001 PH :9419224014.	900. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO. 34, MOUZA - CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST.-BARAMULLA, JAMMU & KASHMIR. - 193401 PH :8825016046.
SALOONI	BARAMULLA	888. JAMKASH VEHICLEADES PVT LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011 PH :7006018600.	MAHANPUR
867. PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO. 299/174, VILLAGE. MANJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320 PH :9418059252.	876. JAMKASH VEHICLEADES PVT LTD (-01), VILLAGE SANGRAMA,WAGAROO, BARAMULA - 193101 PH :7889612218.	889. PEAKS AUTO PVT LTD (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010 PH :9697001125.	
	BHADRAWAH		
	877. J&K VEHICLEADES PVT LTD (-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K - 182222		
	BHASOLI		
	878. JAMKASH VEHICLEADES PVT LTD (-01), ZERO MORTH: BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201 PH :9018847230.		
	BUDGAM		

901. JAMMU MOTORS PRIVATE LIMITED (-01), MAHANPUR, DISTRICT KATHUA, TEHSIL MAHANPUR - JAMMU & KASHMIR - 184202 PH :9596975060.	912. PEAKS AUTO PVT LTD (-01), AGLAR SOFANAMANI, SHOPIAN - 192303 PH :9519275151.	924. JAMMU MOTORS PRIVATE LIMITED (-01), JAMMU PATHANKOT HIGHWAY, VIJAYPUR (SAMBHA), J&K - 184120 PH :9596975060.	DEOGHAR
MANJAKOTE	SIDHRA	JHARKHAND	935. RELIABLE INDUSTRIES (5202-03), SHAHEED ASHRAM ROAD, JHAUNSAGARJI, DEOGHAR, - 814112
902. JAMKASH VEHICLEADES PVT LTD (-01), NEAR PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE, DISTRICT RAJOURI, J&K - 185131 PH :7006014395.	913. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019 PH :9419134144.	BAGODAR	936. RELIABLE INDUSTRIES (-01), MOUZA - CHAKRIPAHARI, NO. 587, WARD NO. 36, DEOGHAR, JHARKHAND - 814114
MARH	SRINAGAR	925. RELIABLE INDUSTRIES (-01), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRIDIH, JHARKHAND - 825322	DHANBAD
903. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO. 269, LOWER MUTHI DHARMAL, DIST.-JAMMU, STATE - JAMMU & KASHMIR, - 181205 PH :70060898474.	914. HIGHLAND AUTOMOBILES PVT LTD (1202-01), SONWAR, SRINAGAR - 190001 PH :9419057564.	BALIAPUR	937. RELIABLE INDUSTRIES (5202-01), KATRAS ROAD, DHANBAD, JHARKHAND - 826001
NOWSHERA	915. JAMKASH VEHICLEADES PVT LTD (1205-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015 PH :7006037255.	926. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (-01), WARD NO 53, HOLDING NO - SAF3797, KANDRA SINDRI, BALIAPUR. - 828123 PH :7990074787.	938. RELIABLE INDUSTRIES (5202-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIHELHA, DHANBAD - 828127
904. JAMMU MOTORS PRIVATE LIMITED (-01), TEHSIL - NOWSHERA, DISTRICT RAJOURI, JAMMU & KASHMIR - PIN CODE - 185152	916. PEAKS AUTO PVT LTD (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101 PH :9519275151.	BOKARO	939. RELIABLE INDUSTRIES (5202-52-06), SUGIADIH, HIRAK ROAD, SARAIHELHA, DHANBAD, JHARKHAND. - 828127 PH :9334094940.
PANCHARI	917. JAMKASH VEHICLEADES PVT LTD (1205-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017 PH :9796700750.	927. HINDUSTAN AUTO AGENCY (-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004	940. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (-01), NH-2, GT ROAD, SAHARJOIRI, BARWADA, DHANBAD. - 828109
905. J&K VEHICLEADES PVT LTD (-01), VILLAGE MIR, TEHSIL PANCHARI, DISTT. UDHAMPUR J&K - 182125	918. KATHROO MOTORS PRIVATE LIMITED (1207-12-01), MIRZA KAMIL CHOWK, HAWAL SRINAGAR - 190001	928. HINDUSTAN AUTO AGENCY (-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) - 827004	941. RELIABLE INDUSTRIES (5202-09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 828109 PH :9031096662.
PHINTER	SUMBAL	BUNDU	DUMKA
906. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203	919. JAMKASH VEHICLEADES PVT LTD (-01), GULSHAN PORA, SRINAGAR- SUMBAL ROAD, DISTRICT BANDIPORA, J&K- 193501 - 193501	929. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), NH - 33 NEAR PPK COLLAGE , PS - BUNDU, RANCHI, JHARKHAND - 835204	942. RELIABLE INDUSTRIES (-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101 PH :6205161170.
POONCH	SURANKOTE	CHAIBASA	943. RELIABLE INDUSTRIES (-02), GILAN PARA, NEAR TOWER CHOWK - 814110
907. JAMKASH VEHICLEADES PVT LTD (-01), VILLAGE KUNJUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121 PH :7006014395.	920. PEAKS AUTO JAMMU PVT LTD (-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101 PH :9697001125.	930. PEBCO MOTORS LIMITED (-01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT - WEST SINGHDHUM, JHARKHAND. - 833201	GARHWA
PULWAMA	THANA MANDI	CHANDANKIYARI	944. PREMSONS MOTOR UDYOG PVT LTD (-01), KHATA NO. 4, KESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114
908. PEAKS AUTO PVT LTD (1204-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301 PH :9519275151.	921. JAMKASH VEHICLEADES PVT LTD (-01), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI -185212 - 185212 PH :9419267607.	931. HINDUSTAN AUTO AGENCY (-01), KHATA NO.119,PLOT NO.4055 AND 4056,, MOUZA BARKAMA,MAIN ROAD,CHANDANKIYARI, - 828134	GHATSHILA
RAJOURI	UDHAMPUR	CHANDWVA	945. PEBCO MOTORS LIMITED (-01), PLOT NO. 68, KHASRA NO.128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK,GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303
909. JAMKASH VEHICLEADES PVT LTD (3306-06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI - 185131 PH :7006014395.	922. J&K VEHICLEADES PVT LTD (-01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLAW, UDHAMPUR - 182101 PH :7006881028.	932. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA - 829203, DIST - LATEHAR, JHARKHAND - 829203 PH :7061157502.	GIRIDIH
REASI	URI (CHAAL BONIYAAR)	CHIRKUNDA	946. RELIABLE INDUSTRIES (5202-04), MOHANPUR, PACHAMBA ROAD, GIRIDIH, - 815301
910. J&K VEHICLEADES PVT LTD (-01), HOSPITAL ROAD, MADI, REASI, REASI, JAMMU & KASHMIR - 182311	923. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123 PH :9419074012.	933. RELIABLE INDUSTRIES (-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. - CHIRKUNDA, DISTRICT - DHANBAD, JHARKHAND - 828202	947. RELIABLE INDUSTRIES (-08), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND. - 815301 PH :9835835101.
RS PURA	VIJAYPUR	DALTONGANJ	GODDA
911. JAMKASH VEHICLEADES PVT LTD (3306-03), GAGAIN MORTH, R S PURA, JAMMU, - 181102 PH :9419190370.		934. PREMSONS MOTOR UDYOG PVT LTD (5103-02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101 PH :9835507004.	948. RELIABLE INDUSTRIES (5202-05), ASANBANI CHOWK, MAIN ROAD, GODDA, - 814133 PH :6207129088.
SHOPIAN			GOMIA

Dealer Workshop (AS ON 31.01.2026)

949. HINDUSTAN AUTO AGENCY (-01), HAZARI, GOMIA-KATHWARA ROAD, - 829111	NAGAR UNTARI	973. PREMSONS MOTOR UDYOG PVT LTD (-01), R/S PLOT NO 4674 UNDER KHATA NO 157, SITUATED AT VILLAGE - GOTRA, NEAR GOUSHALA, MAIN ROAD, SIMDEGA, JHARKHAND, - 835223 PH -9835507004.	982. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO: 5/A3,SUNKADAKATTE, KOLAMBE VILLAGE,BAJPE, DAKSHINA KANNADA DIST, KARNATAKA,574142 - 574142
GUMLA	961. PREMSONS MOTOR UDYOG PVT LTD (-01). PLOT NO.-598, KHATA, NO.-134, CITY, SHRI BANSHIDHAR NAGAR, JHARKHAND 822121 - 822121	TORPA	BANDAHALLI
950. PREMSONS MOTOR UDYOG PVT LTD (5103-04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207 PH -9835507004.	PAKUR	974. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), OPPOSITE NAGAR KARYALAY, KHUNTI SIMDEGA ROAD, TORPA, KHUNTI, JHARKHAND - 835227	983. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SURVEY NO: 44/11, TAVARAKERE VILLAGE, NANDAGUDI HOBLI, BANDHALLI, HOSKOTE TALUK, BANGALORE RURAL DIST, KARNATAKA- 562122 - 562122
HAZARIBAGH	962. RELIABLE INDUSTRIES (-01), C/O KHOKHAN RAY,HIRANPUR ,PAKUR, MAIN ROAD,VILL.SAHERKOL,PS PAKUR REGISTRY OFFICE - 816107 PH -9031096662.	KARNATAKA	BANGALORE
951. HINDUSTAN AUTO AGENCY (-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301	PHUSRO	975. PRATHAM MOTORS PVT LTD (-04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106	984. MANDOVI MOTORS PVT LTD (-01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027
952. HINDUSTAN AUTO AGENCY (-02), MASIPIRHI, BABHANBAY, HAZARIBAGH , JHARKHAND. - 825301	963. HINDUSTAN AUTO AGENCY (-01), DUMRI BERMO JAINA ROAD, PHUSRO, JHARKHAND - 829144	ANEKAL	985. MANDOVI MOTORS PVT LTD (-07), 17/A-2&3 IND.SUBURB,IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022
JAMSHEDPUR	RAMGARH	ANKOLA	986. MANDOVI MOTORS PVT LTD (-05), NO.2/1106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN.
953. PEBCO MOTORS LIMITED (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH -9308433388	964. HINDUSTAN AUTO AGENCY (-01), MARAR, RANCHI ROAD (NH-33), RAMGARH - 829122 PH -9263631345.	976. BHARATH AUTO CARS PVT LTD (-01), NEAR NARAYANA TRESSLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT - 581314 PH -7829567400.	987. RNS MOTORS PVT LTD (7301-03), 2275 TUMKUR ROAD, GURGUNTEPALAYA, YESHWANTPUR, BANGALORE - 560022 PH -9606933236.
954. PEBCO MOTORS LIMITED (3101-31-02), 16 BALICHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHEDPUR - 831011 PH -9308433388	RANCHI	ATHANI	988. BIMAL AUTO AGENCY INDIA PVT LTD (-01), NO. - 60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064
955. MOTOR WORLD (A DIVISION OF KALIMATI MOTORS PVT LTD) (3102-31-01), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR - 831012	965. PREMSONS MOTOR UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. - 834008 PH -9304807355.	977. SHANTESHA MOTORS PVT LTD (-01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304 PH -8884472587.	989. BIMAL AUTO AGENCY INDIA PVT LTD (-01), 60/2, MAHADEVपुरA, WHITE FIELD ROAD, BANGALORE - 560048
JAMTARA	966. PREMSONS MOTOR UDYOG PVT LTD (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE,BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010 PH -9262899003.	ATHRADI	990. RNS MOTORS PVT LTD (7301-04), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068 PH -9148001412.
956. RELIABLE INDUSTRIES (-01), PLOT NO. 483, FARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351	967. PREMSONS MOTOR UDYOG PVT LTD (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003 PH -9835507004.	ATTIBELE	991. MANDOVI MOTORS PVT LTD (-08), NO. 70 SARAKKI INDUSTRIAL LAYOUT,J.P NAGAR,3RD PHASE, BANGALORE - 560078
KATRAS	968. PREMSONS MOTOR UDYOG PVT LTD (5103-51-06), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001 PH -9835507004.	979. SURAKSHAA CAR CARE PVT LTD (-01), SURVEY NO 22/7/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE. - 562107 PH -9449865665.	992. PRATHAM MOTORS PVT LTD (-01), SY. NO. 78/4, OPP. TO BELLANDUR CENTRAL MALL, OUTER RING ROAD, VARTHUR HOBLI, BELLANDUR,BANGALORE EAST TALUK, BANGALORE- 560103 - 560037
957. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (-01), RAJHANS REFRATORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-828114 - 828114 PH -8910900556.	969. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), KHATA NO. 247, MOUZA - PUNDAG,P.S. - PUNDAG, RANCHI, JHARKHAND. - 834004 PH -7061157502.	BAGALKOT	993. BIMAL AUTO AGENCY INDIA PVT LTD (-02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078
KHUNTI	970. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-02), NEAR KATHAL MORE, ARGORA RANCHI RD, NEAR EKLABBA TOWER, DHIPATOLI, ARGORA, RANCHI - 834004 PH -7061157502.	980. VIJAY MOTOWINGS PVT LTD (-01), 180/4-2,BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103 PH -9481289167.	994. PRATHAM MOTORS PVT LTD (-02), STHANIKAM'S ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE - 560010
958. PREMSONS MOTOR UDYOG PVT LTD (-01), PLOT NO. 747, KHATA NO. 2, DAHUGUTU, CHAIBASA ROAD, KHUNTI, JHARKHAND. - 835210 PH -9835507004.	971. PREMSONS MOTOR UDYOG PVT LTD (5103-51-07), ARGORA-KATHAL MORE ROAD, OPPOSITE OF RELIANCE FRESH - 834001	BAGEPALLI	995. KALYANI MOTORS PRIVATE LIMITED (-01), MYSORE ROAD,PANTHARAPALYA,KENGRHI HOBLI,BANGALORE - 582301
KODARMA	972. TULSYAN MOTORS PRIVATE LIMITED (5110-51-01), TULSYAN COMPOUND, PANDRA, RATU ROAD, RANCHI JHARKHAND - 834001	981. BIMAL AUTO AGENCY INDIA PVT LTD (-01), H.L. NO. 423 AND 436 SRI SATHYA SAI NAGAR, ON NH-7, THIMAKALAPALLI BLOCK-II, PARAGODU GRAM PANCHAYATH, KASABA HOBLI, BAGEPALLI TALUK, CHIKKABALLAPUR DIST. - 561207 PH -9742458888.	
959. HINDUSTAN AUTO AGENCY (-01), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. - TILAIYA, DISTRICT - KODERMA, JHARKHAND. - 825409 PH -6201998936.	SIMDEGA	BAJPE	
MURI			
960. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), NEAR BANK OF INDIA, SILLI MAIN ROAD, MURI, PIN - 835102 - 835102 PH -7061157502.			

996.	BIMAL AUTO AGENCY INDIA PVT LTD (-03), NO.7/1, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERGHATTA RD., BANGALORE - 560076	1012.	BIMAL AUTO AGENCY INDIA PVT LTD (-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066	1025.	KALYANI MOTORS PRIVATE LIMITED (-05), SY.NO.8/4, G HOSAHALLI MAIN ROAD, GOLLARAHATTI, V N POST, YESHWANTPURA HOBLI, MAGADI MAIN ROAD, BANGALORE - 560091	1038.	POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 26, OHNR ROAD, NEXT TO PRIMARY HEALTH CENTRE - 560037
997.	BIMAL AUTO AGENCY INDIA PVT LTD (-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE - 560038	1013.	SURAKSHAA CAR CARE PVT LTD (-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034	1026.	SURAKSHAA CAR CARE PVT LTD (-06), BEARING NO. 54/4-320/2, BEGUR HOBLI, BOMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE, KARNATAKA - 560068	1039.	AVANISH AUTO LLP (-02), NO. 277, NELAMANGALA TALUK, DASANAPURA, HOBLI, MADANAYAKANAHALLI, BANGALORE - 560037
998.	MANDOVI MOTORS PVT LTD (-0C), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAVESHWAR NAGAR - 560044	1014.	KALYANI MOTORS PRIVATE LIMITED (-01) - # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056	1027.	PRATHAM MOTORS PVT LTD (-07), SUVEY NO. 43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST - DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA - 562125	1040.	SURAKSHAA CAR CARE PVT LTD (-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH :9449866601.
999.	KALYANI MOTORS PRIVATE LIMITED (-04), 119/1, 11TH CROSS,MALLESHWARAM,BANGALORE, - 560033	1015.	BIMAL AUTO AGENCY INDIA PVT LTD (-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033	1028.	SURAKSHAA CAR CARE PVT LTD (-07), SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN,MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA - 560099	BANTWAL	
1000.	MANDOVI MOTORS PVT LTD (-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043	1016.	VARUN MOTORS PVT LTD (-01), SURVEY NO: 93, PLOT NO:31,PEENYA III PHASE, INDUSTRIAL AREA,PEENYA,YESHWANTHPUR HOBLI, BANGALORE NORTH,	1029.	VARUN MOTORS PVT LTD (-03), SY NO: 136 (OLD NO 54/8) SANGEGERUVANAHALLI(VP) KAMAKSHIPALAYA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE, KARNATAKA - 560079	1041.	MANDOVI MOTORS PVT LTD (-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231 PH:9006810123.
1001.	MANDOVI MOTORS PVT LTD (-0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA, - 560102	1017.	KALYANI MOTORS PRIVATE LIMITED (-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. - 560043	1030.	RNS MOTORS PVT LTD (-01), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD,ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560099	BASAVAKALYAN	
1002.	KALYANI MOTORS PRIVATE LIMITED (-02), SY. NO. 58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE. - 560049	1018.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST - AADUGODI, BANGALORE. - 560030	1031.	KALYANI MOTORS PRIVATE LIMITED (-03), SURVEY NO. 194/5, HUNSEMARANAHALLI, JALA HOBLI, DEVANAHALLI TALUK, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH - 562110	1042.	LAHOTI MOTORS PVT LTD (-01), SURVEY NO: 122/16, TRIPURANTH, SASTAPUR BANGLA MUMBAI HIGHWAY, BASAVAKALYAN - 585327
1003.	KALYANI MOTORS PRIVATE LIMITED (-03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU - 574239	1019.	MANDOVI MOTORS PVT LTD (-0I), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASAPURA, KENGERI HOBLI, UTTARAHALLI, BANGALORE - 560060	1032.	MANDOVI MOTORS PVT LTD (-09), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018 - 560018	BELGAUM	
1004.	SURAKSHAA CAR CARE PVT LTD (-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100	1020.	VARUN MOTORS PVT LTD (-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073	1033.	KALYANI MOTORS PRIVATE LIMITED (-06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDAKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062	1043.	SHANTESHA MOTORS PVT LTD (-01), MUJAWAR COMPOUND,NEHRU NAGAR,BELGAUM, - 590010 PH :9902043711.
1005.	SURAKSHAA CAR CARE PVT LTD (-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068	1021.	MANDOVI MOTORS PVT LTD (-0J), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKIRSHNAN ROAD, VIDYARANYAPURA, BANGALORE. - 560097	1034.	KALYANI MOTORS PRIVATE LIMITED (-06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDAKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062	1044.	SHANTESHA MOTORS PVT LTD (-03), PLOT NO. 39, RS NO. 670, CTS NO. 1612/3, KHANAPUR ROAD, UDAYAMBA, BELGAUM (SCREE SHOT ATTACHED) - 590006 PH :8984433911.
1006.	KALYANI MOTORS PRIVATE LIMITED (-04), 250/1,BILEKAHALLI, BANNERGHATTA ROAD, BENGALURUE - 560076	1022.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO. 8/3, 10/4, 10/2, VILLAGE - THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA. - 560109	1035.	KALYANI MOTORS PRIVATE LIMITED (-06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDAKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062	1045.	SHANTESHA MOTORS PVT LTD (-06), PLOT NO. 2/1, RS NO. 29, KIADB INDUSTRIAL AREA, KIADB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010 PH :9731396805.
1007.	BIMAL AUTO AGENCY INDIA PVT LTD (-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058	1023.	RNS MOTORS PVT LTD (7301-0J), SY. NO. 11/2 & 12/1, VILLAGE - ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE - 560 076. - 560076 PH :7760982836.	1036.	AVANISH AUTO LLP (-01), SURVEY NO 8/1B, JALAHALLI CROSS, T DASARAHALLI, BENGALURU - 560038	BELLARY	
1008.	RNS MOTORS PVT LTD (7301-0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH :6364884787.	1024.	SURAKSHAA CAR CARE PVT LTD (-05), SURVEY NO.2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE. - 560100	1037.	SANVIT AUTOMOTIVES LLP (-02), SANVIT MOTORS, HULIMAVLU TO BEGUR ROAD, GOTTIGERE, BANGALORE - 560037	1046.	KPF PVT LTD (-01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101 PH :9449876025.
1009.	PRATHAM MOTORS PVT LTD (-05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034					BELLURU CROSS	
1010.	RNS MOTORS PVT LTD (7301-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158 PH :9538965771.					1047.	KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 537/61, BELLURU VILLAGE, BELLURU HOBLI, NAMANGALA TALUK, MANDYA DIST KARNATAKA 571418 - 571418
1011.	KALYANI MOTORS PRIVATE LIMITED (-02), 10/1, HEBBAL, AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024					BELTHANGADY	

Dealer Workshop (AS ON 31.01.2026)

BHATKAL

1050. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320
PH :9008693940.

BIDAR

1051. LAHOTI MOTORS PVT LTD (-01), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402
PH :8884412049.

1052. LAHOTI MOTORS PVT LTD (-02), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585401
PH :9108707709.

BIJAPUR

1053. RNS MOTORS PVT LTD (7301-01), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109
PH :8861208998.

BUDHIGERE

1054. BIMAL AUTO AGENCY INDIA PVT LTD (-01), KHATTA NO:115,SY. NO. 128/33, MANDUR MAIN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOCL PETROL BUNK, BANGALORE EAST TALUK, BANGALORE, - 560049
PH :9742259528.

BYNDOOR

1055. ABHARAN MOTORS PVT LTD (-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214
PH :7899751777.

CHALLAKERE

1056. SAKETH AUTOMOBILES (-01), SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522
PH :9686550126.

CHAMARAJANAGAR

1057. MANDOVI MOTORS PVT LTD (-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPUR EXTENSION, CHAMRAJANAGAR (KARNATAKA) - 571313
PH :9845445586.

CHANNAGIRI

1058. SHRUTI MOTORS PVT LTD (-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213

CHANNAPATNA

1059. KALYANI MOTORS PRIVATE LIMITED (-01), PROPERTY NO.58, MALUR GRAMA, MALUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160
PH :9845066682.

CHANNARAYAPATNA

1060. VENKAT MOTORS (-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA - 573116
PH :8147077144.

CHICKBALLAPUR

1061. BIMAL AUTO AGENCY INDIA PVT LTD (-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101
PH :9742262499.

CHICKMANGALUR

1062. SHRUTI MOTORS PVT LTD (-01), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102

CHIKKA TIRUPATI

1063. SURAKSHAA CAR CARE PVT LTD (-01), URVEY NO. 1/2, OPPOSITE TO BHARATH PETROL BUNK, ANCHEMUSKUR, CHIKKA TIRUPATI, KOLAR, KARNATAKA - 563160 - 563160

CHIKODI

1064. SHANTESHA MOTORS PVT LTD (-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201
PH :7829925790.

CHINTAMANI

1065. PRATHAM MOTORS PVT LTD (-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASAPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125

CHITRADURGA

1066. SAKETH AUTOMOBILES (-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130
PH :9686550313.

DABASPET

1067. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 33/4 (OLD SY NO. 33/3 & 33/2C), KENGAL KEMPOHALLI VILL., SOMPURA HOBLI, DABASPET MAIN ROAD, NELAMANGALA TALUK, BANGALORE RURAL DIST., KARNATAKA-562111 - 562111

DAVANGERE

1068. SHRUTI MOTORS PVT LTD (-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004

1069. SHRUTI MOTORS PVT LTD (-02), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001

DEVANAHALLI

1070. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT - 562110
PH :9742262514.

DHARWAD

1071. RNS MOTORS PVT LTD (-01), NO.29A/1, 29A/2, 29A/3 PLOT NO.1, ASHOK NAGAR, DODDANAYAKANAKOPPA VILLAGE, GOA ROAD, DHARWAD, KARNATAKA - 580008

DODDABALLAPUR

1072. PRATHAM MOTORS PVT LTD (-01), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDADAHALLI, KASABA HOBLI TALUK - DODDABALLAPUR, DISTRICT - BENGALURU RURAL. - 561203
PH :9886671687.

DODDADUNNASANDRA

1073. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO.57/1A, DODDADUNNASANDRA VILLAGE, ANUGONDANHALLI HOBLI, HOSKOTE TALUK, BANGALORE RURAL, KARNATAKA- 562114. - 562114

GADAG

1074. RNS MOTORS PVT LTD (7301-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG - 582103
PH :9538925602.

GAJENDRAGARH

1075. PRN AUTOMOTIVES LLP (-), BESIDE PIAGGIO SHOWROOM, HUBLI-GAJENDRAGAD ROAD, GAJENDRAGAD.GADAG DISTRICT,KARNATAKA - 582101

GANGAVATI

1076. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI. - 583227
PH :949870754.

GAURIBIDANUR

1077. MANDOVI MOTORS PVT LTD (-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210
PH :8217453513.

GOKAK

1078. SHANTESHA MOTORS PVT LTD (-01), RS NO.106/30/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307
PH :7829925760.

GONIKOPPAL

1079. MANDOVI MOTORS PVT LTD (2501-07), KAIKERY VILLAGE,GONIKOPPAL., - 571213
PH :9900064873.

GUBBI

1080. SAKETH AUTOMOBILES (-01), SY NO. 71, ASSESSMENT NO. 54/4/4911, PROPERTY NO. 28-5-252, NEAR PETROL BUNK, B H ROAD, GUBBI TOWN & TALUK, TUMKUR DISTRICT, KARNATAKA,572216 - 572216

GUDIBANDA

1081. BIMAL AUTO AGENCY INDIA PVT LTD (-01), DOOR NO:160, 1ST WARD, OPP.FO TO GOVERNMENT BUS STAND, BAGEPALLI ROAD, GUDIBANDA, CHICKBALLAPURA DISTRICT KARNATAKA - 581209
PH :9742261903.

GULBARGA

1082. LAHOTI MOTORS PVT LTD (-01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104
PH :9480825014.

1083. LAHOTI MOTORS PVT LTD (-02), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA. - 585104
PH :7619342035.

GUNDLUPET

1084. KALYANI MOTORS PRIVATE LIMITED (-01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111
PH :9686855799.

HAGARIBOMMANAHALLI

1085. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212
PH :9481343007.

HALIYAL

1086. RNS MOTORS PVT LTD (-01), SURVEY NO: 347/27, DOOR NO.B1180/15 & B1180/16, HANUMAN COMPLEX, HALIYAL CIRCLE, MAIN ROAD, HALIYAL TOWN & TALUK, UTTARA KANNADA DISTRICT,KARNATAKA - 581329
PH :8284200200.

HARAPANAHALLI

1087. SHREE LAKSHMI CARS PVT LTD (-01), SURVEY NO 13/1, ADAVIHALLI VILLAGE, KASABA HOBLI, HARAPANAHALLI. DISTRICT - VIJAYANAGARA, KARNATAKA - 583131	1096. SHRUTI MOTORS PVT LTD (-01), SH-52, OPPOSITE CANARA BANK, HOSANGARA, PIN-577418, - 577418	1107. SHRUTI MOTORS PVT LTD (-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548	1116. KALYANI MOTORS PRIVATE LIMITED (-01), NO.1, DORNHALLI, DODDEKOPPALU GRAMA PANCHAYAT, KASABA HOBLI, KRISHNARAJANAGARA, MYSORE DISTRICT, KARNATAKA - 571602 PH : 8971159430.
HAROHOLLI	HOSDURGA	KANAKAPURA	KRISHNARAJAPET
1088. SURAKSHAA CAR CARE PVT LTD (-01), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA, - 562112 PH :9449865608.	1097. SAKETH AUTOMOBILES (-01), ASSESSMENT NO. 9310/6, PLOT NO. 6. HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST. -CHITRADURGA, KARNATAKA. - 577527 PH :7625088946.	1108. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 447/1B, KASABA HOBLI, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT - RAMANAGARA. KARNATAKA. - 562117 PH :9900599933.	1117. MANDOVI MOTORS PVT LTD (-01), KHATA NO.3094, SY. NO.278, MYSORE CHENNERAYAPATNA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423 PH :9845132038.
HASSAN	HOSKOTE	KARKALA	KUDUR
1089. VENKAT MOTORS (-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201 PH :9844044038.	1098. BIMAL AUTO AGENCY INDIA PVT LTD (-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114	1109. ABHARAN MOTORS PVT LTD (-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104 PH :9880232666.	1118. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO.272/1 AND SURVEY NO.272/2, NARASANDRA VILLAGE, KUDURU HOBLI, MAGADI TALUK, RAMANAGARA DISTRICT, KARNATAKA 562127 - 562127
HAVERI	HOSPET	KARWAR	KUMTA
1090. REVANKAR MOTORS PVT LTD (-01), NEAR TIMEA SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110 PH :7022016903.	1099. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-01) BELLARY ROAD,SANKLAPUR,HOSPET. - 583203 PH :7619505001.	1110. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 459/2B, 456/2B AND 458/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. - 581301 PH :7829567400.	1119. BHARATH AUTO CARS PVT LTD (-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334 PH :9448979530.
H-CROSS	HUBLI	KITTUR, BELGAUM	KUNDARPUR
1091. BIMAL AUTO AGENCY INDIA PVT LTD (-01), PART NO.1, SITE NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122 PH :9738948126.	1100. RNS MOTORS PVT LTD (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025 PH :9538965902.	1111. SHANTESHA MOTORS PVT LTD (-01), PLOT NO. 219, KITTUR INDUSTRIAL AREA (KIADB), POONA BANGALORE HIGHWAY (NH-4),KITTUR TOWN AND TALUK, BELGAUM DISTRICT, - 591115 PH :9731396808.	1120. ABHARAN MOTORS PVT LTD (-02), NH-17, THAKKATTE, KUNDAPURA - 272877 PH :9880197524.
HEBRI		KOLAR	KUNIGAL
1092. ABHARAN MOTORS PVT LTD (-01), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI, KARKALA, DIST.-UDUPI, KARNATAKA. - 576112 PH :9900077605.	1102. REVANKAR MOTORS PVT LTD (7303-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029 PH :8792008301.	1112. MANDOVI MOTORS PVT LTD (-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101	1121. SAKETH AUTOMOBILES (-01), NEAR KRS AGRAHARA, BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130 PH :9886550127.
HEGGADADEVANA KOTE (H D KOTE)	1103. PRM AUTOMOTIVES LLP (7304-73-01), SURVEY NO 33, NAGASHETTI KOPPA VILLAGE BESIDES SRINIVAS GARDENS, HUBALI - 580020	KOLLEGAL	KUSHAL NAGAR
1093. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 5/4, VILLAGE – YARAHALLI, KASABA HOBLI, TALUK – H.D.KOTE, DISTRICT – MYSORE. - 571125 PH :968685799.	HUNSUR	1113. MANDOVI MOTORS PVT LTD. (-01), MYSORE KOLLEGAL ROAD, NEAR BRAHMARAMBA KALYANAMTAP. - 571440	1122. MANDOVI MOTORS PVT LTD (-01), SY NO:88,MADAPATANA,KUSHAL NAGAR,SOMVARPUR,NORTH KODAGU, KARNATAKA - 571234 PH :9900080893.
HESSARGHATA	1104. KALYANI MOTORS PRIVATE LIMITED (-01), M-18 & M-19, KSSIDC INDUSTRIAL ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE DISTRICT, KARNATAKA - 571105 PH :7022669699.	KOPPA	LINGASUGUR
1094. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SY NO 294/3, HESARAGHATTA VILLAGE YELAHANKA TALUK, BENGALURU, KARNATAKA - 560088 PH :9743658662.	JEWARGI	1114. SHRUTI MOTORS PVT LTD (-01), NEARBY ARCACENT POWDER SHOP, UPPERPET, KOPPA, DIST-CHIKMAGALURU, KARNATAKA - 577126	1123. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122 PH :9480830255.
HONNAVAR	1105. LAHOTI MOTORS PVT LTD (-01), S NO: 125, PLOT NO:7, FILTER BED ROAD, OPP. BUS DEPOT, JEWARGI, KALABURGI DISTRICT (FORMERLY GULABARGA) , KARNATAK-585310. - 585310 PH :9480825004.	KOPPAL	MADDUR
1095. RNS MOTORS PVT LTD (-01), SURVEY NO. 727/1A, KARKI VILLAGE, HONNAVAR (HONAVAR) TALUK AND TOWN, UTTARA KANNADA DIST., KARNATAKA - 581327	KADABA	1115. KPF PVT LTD (-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238 PH :9449876027.	1124. MANDOVI MOTORS PVT LTD (-01), SURVEY NO 802/2A4B, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN,MANDYA DISTRICT, KARNATAKA - 571428
HOSANAGRA	1106. MANDOVI MOTORS PVT LTD (-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA - 574221 PH :9740912365.	KRISHNARAJANAGARA (KRNAGARA)	MADIKERI
	KADUR		

Dealer Workshop (AS ON 31.01.2026)

1125. KALYANI MOTORS PRIVATE LIMITED (-01), BASAPPA THEATRE BUILDING, DASAWAL ROAD, MADIKERI KODAGU DISTRICT. - 571201 PH -9606073967.	1137. BHARATH AUTO CARS PVT LTD (-08), S. NO. 1376/1-41, 1375/4-1-2-A1P1, 2A1P3, 1373/1-40, 1369/1-40-42, KASABA BAZAR, KANDADAPALLI, KUDROLI TALUK - MANGALORE, MANGALORE, KARNATAKA - 575003 PH -9886785730.	1148. MANDОВI MOTORS PVT LTD (-01), SURVEY NO-3316/2327,VISHALAXAMMA COMPLEX, T B BADAVANE B H ROAD, NAGAMANGALA TOWN, MANDYA DISTRICT, KARNATAKA - 571432 PH -9845132038.	1157. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SURVEY NO # NO-39:NO-113, SAMRUDDHI NILAYA GROUND FLOOR, NH7, ARURU VILLAGE, PERESANDRA, CHIKKABALLAPUR DISTRICT, KARNATAKA- 562104 - 562104 PH -8660799820.
MAGADI		NANJANGUD	
1126. PRATHAM MOTORS PVT LTD (-01), SY NO-92/2, THIRUMALAI VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARNATAKA - 562120 PH -9900058483.	MUDBIDRI	1149. KALYANI MOTORS PRIVATE LIMITED (-01), 4340/4159/4, HULLAHALI ROAD, NANJANGUD, DISTRICT - MYSORE, KARNATAKA - 571301 PH -9688855799.	PUTTUR
MALUR	1138. BHARATH AUTO CARS PVT LTD (4503-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227 PH -9886785430.	NARASIMHARAJAPURA	1158. BHARATH AUTO CARS PVT LTD (4503-02), NEAR RAILWAY STATION, HARADY, PUTTUR - 517583 PH -9886072730.
1127. MANDОВI MOTORS PVT LTD (-01), NO 12/8, BANGALORE - MALLUR MAIN ROAD, OPPOSITE OF INDIAN OIL PETROL BUNK - 563130	MUDHOL	1150. SHRUTI MOTORS PVT LTD (-01), SURVEY NO # SURVEY NO.173,/P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALU R DIST.,KARNATAKA - 577134	RAICHUR
MANCHENAHALLI	1139. VIJAY MOTOWINGS PVT LTD (-01), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587313 PH -9606046173.	NARAVI	1159. MUNEEAR CARS (A UNIT OF MUNEEAR ENTERPRISES PVT LTD) (-02), #12-10-64, GOUSHAL ROAD,SIYA TALAB AREA,RAICHUR - 584101 PH -9480830264.
1128. VARUN MOTORS PVT LTD (-01) NO:1219,GOLAPPA COMPUIND, MAHESHWARI CIRCLE, MANCHENAHALLI, GOVREBIDANUR TALUK, CHIKKABALLAPUR DIST, KARNATAKA- 562121 - 562121 PH -9513979162.	MUDIGERE	1151. MANDОВI MOTORS PVT LTD (-01), SURVEY NO:122/1B1,DOOR NO-4/59,SHRI CHAITHANYA , ARASAKATTE, NARAVI, BELTHANGADY TALUK, DAKSHINA KANNADA DIST, KARNATAKA- 574109 - 574109 PH -9740392005.	RAJANUKUNTE
MANDYA	1140. SHRUTI MOTORS PVT LTD (-01), SURVEY NO.10/11, 10/2, SITE NO.14, 15 NEXT TO SRIRANGPURA VIHAR, GOWDAHALLI RD - 577132	NELAMANGALA	1160. VARUN MOTORS PVT LTD (-01), SURVEY NO. 3/1, SITE NO. 6 , SINGANAYAKANATHALLI, RAJANKUNTE, BANGALORE NORTH TALUK, BANGALORE URBAN, KARNATAKA - 560064 PH -9513979162.
1129. MANDОВI MOTORS PVT LTD (2501-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, - 571401 PH -9611165873.	MULBAGAL	1152. RNS MOTORS PVT LTD (-01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123 PH -7259875385.	RAMANAGARA
1130. KALYANI MOTORS PRIVATE LIMITED (-02), PROPERTY NO 139/A,UMMADAHALLI VILLAGE, KASABA HOBLI, MANDYA,KARNATAKA - 571401	1141. PRATHAM MOTORS PVT LTD (-01), NO. 35-6-117/1, CHITTOOR MAIN ROAD, VEERABHADRA NAGAR, MULBAGAL, KOLAR DIST., KARNATAKA-563131 - 563131	NELYADI	1161. KALYANI MOTORS PRIVATE LIMITED (-02), #K1318/2034C,OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511
MANGALORE	MULKI	1153. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 97/11P AND SURVEY NO. 97/9, VILLAGE - HOSAMAJALI KAUKRADY, POST - NELYADI, TALUK - PUTTUR, DIST.-DAKSHIN KANNADA. - 574229 PH -9886072730.	RANEBENNUR
1131. MANDОВI MOTORS PVT LTD (4502-45-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001 PH -9845107701.	1142. BHARATH AUTO CARS PVT LTD (4503-05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154 PH -9986020730.	OORGAUMPET	1162. REVANKAR MOTORS PVT LTD (-01), SCHEDULE A-2, OPP. ST:JIT ENGINEERING COLLEGE, P B ROAD, RANEBENUR, KARNATAKA - 581115 PH -8830947883.
1132. BHARATH AUTO CARS PVT LTD (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAAL, NEAR A.J. HOSPITAL, MANGALORE - 575004 PH -9886785730.	MURUDESWAR	1154. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SITE NO:10, NEW KATHA NO: 251, ROBERTSONPET, KGF, OORGAUMPET, KOLAR DIST, KARNATAKA- 563122 - 563122 PH -9513748707.	SAGAR
1133. MANDОВI MOTORS PVT LTD (4502-45-03), NO., HASSAN GROWTH CENTRE ADYAR,N.H. -48, MANGALORE - 575007 PH -9845514146.	1143. RNS MOTORS PVT LTD (7301-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350 PH -9538965969.	PADUBIDRI	1163. SHRUTI MOTORS PVT LTD (-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. - 577401
1134. MANDОВI MOTORS PVT LTD (4502-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008 PH -9850079235.	MYSORE	1155. ABHARAN MOTORS PVT LTD (-01), PLOT NO. 51/20, VILLAGE - PADUBETTU, PADUBIDRI TOWN, TALLUKA & DISTRICT - UDUPI, KARNATAKA - 574111 PH -9880232999.	SAKLESHPUR
1135. BHARATH AUTO CARS PVT LTD (-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002 PH -9886333030.	1144. MANDОВI MOTORS PVT LTD (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH -9945248860.	PANDAVAPURA	1164. VENKAT MOTORS (-01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT - HASSAN - 573134 PH -7892809634.
1136. MANDОВI MOTORS PVT LTD (4502-08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT - DAKSHINA KANNADA, KARNATAKA - 575008 PH -9880278077.	1145. MANDОВI MOTORS PVT LTD (2501-25-05), NO.182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011 PH -9845539936.	1156. KALYANI MOTORS PVT. LTD. (-01), SY NO 299/12, KENNALU VILLAGE,, KASABA HOBLI, PANDAVAPURA TALUK, - 571435	SARJAPURA
	1146. KALYANI MOTORS PRIVATE LIMITED (2503-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008 PH -7259255558.	PERESANDRA	1165. PRATHAM MOTORS PVT LTD (-01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA - ANEKAL, SARJAPUR HOBLI, DISTRICT - BANGALORE URBAN, KARNATAKA. - 562125 PH -7760962890.
	1147. MANDОВI MOTORS PVT LTD (2501-25-08), 217/2, HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH -9845939937.		SAUNDATI
	NAGAMANGALA		1166. SHANTESHA MOTORS PVT LTD (-01), CTS NO. 4038/1,PLOT NO 16/3 DHARWAD ROAD, KENCHALARKOP, SAUNDATTI - 591126

1167. SHREE LAKSHMI CARS PVT LTD (-01), 35/5, AADHI SAKTI TEMPLE SHIMOOGA-SHIKARIPURA ROAD, SHIKARIPURA - 577427

SHIMOOGA

1168. SHRUTI MOTORS PVT LTD (-01), K.NO 599, SHANKARMUTT ROAD, SHIMOOGA - 577201

1169. SHRUTI MOTORS PVT LTD (-02), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOOGA - 577204

1170. SHRUTI MOTORS PVT LTD (-03), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOOGA - 577201

1171. SHREE LAKSHMI CARS PVT LTD (-01), SURVEY NO : 74 & 86 (PLOT NO 1800), URGADUR, BY PASS ROAD, SHIVAMOGGA, KARNATAKA - 577203 - 577203

1172. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 211, NEAR IOCL PETROL BUNK, JOG ROAD, VILLAGE - HOSUR, TALUK - SIDDAPUR, DISTRICT - UTTARA KANNADA - 581355 PH :9449402730.

SIDDAPUR

1173. KPF PVT LTD (-01), SY. NO. 168/15, EJ HOSAHALLI CAMP GANGAVATHI MAIN ROAD, SINDHANUR, RAICHUR DISTRICT, KARNATAKA - 584128 - 584128

SIRISI

1174. RNS MOTORS PVT LTD (-01), SURVEY NO 43/B, LANDKANALLI VILLAGE, DODNALLI GRAMA, SIRSI TALUK, AND HOBALLI, UTTAR KANNADA, KARNATAKA - 581402 PH :9895979023.

SIRSI

1175. RNS MOTORS PVT LTD (7301-0D), K H B COLONY, SIRSI - 581402 PH :9538925606.

SIRUGUPPA

1176. MUNEEER CARS (A UNIT OF MUNEEER ENTERPRISES PVT LTD) (-01), SITE NO:31C/1B & PLOT NO.1, BELLARY - SIRUGUPPA MAIN ROAD, SIRUGUPPA TALUK, BELLARY DISTRICT. - 583121 PH :7619505001.

SOMWARPET

1177. MANDIVI MOTORS PVT LTD (-01), SURVEY NO:130 SITUATED AT MADIKERI ROAD, NAGROO VILLAGE, BALAGUNDA POST, SOMWARPET TALUK, NORTH KODAGU DISTT. - 571236 PH :9845115665.

SORABA

1178. SHRUTI MOTORS PVT LTD (-01), NO: 2281681997, 6TH WARD, KHATA NO: 7/A-1/B, OPPOSITE TO GOVERNMENT JUNIOR COLLEGE, SHIRALA-KOPPA ROAD, SORABA, SHIVAMOGGA DIST, KARNATAKA- 577429. - 577429

SRINGERI

1179. SHREE LAKSHMI CARS PVT LTD (-01), SL NO 711, DHURUVANISH GRAND, RAJANAGAR, SRINGERI - 577139

SRINIVASAPURA

1180. SURAKSHAA CAR CARE PVT LTD (-01), SY NO. 40, VPRD NO. 86, PROPERTY NO. 84 & 87, CHALDIGANA HALLI GRAMA PANCHAYATH, PANNASAMAKANA HALLI VILLAGE, SRINIVASAPURA POST & TALUK, DIST.-KOLAR, KARNATAKA - 563135 PH :9449865601.

SULLIA

1181. MANDIVI MOTORS PVT LTD (4502-04), ODABAI ROAD, MANGALORE MYSORE ROAD, KARNATAKA - 574239 PH :9900002325.

SURTHKAL

1182. MANDIVI MOTORS PVT LTD (4502-02), KANA ROAD, SURATHKAL - 574158 PH :9845514143.

T. NARASIPURA

1183. MANDIVI MOTORS PVT LTD (-01), KHATA NO:472/473/474, OPP TO SRI RAGHAVENDRA SWAMY MUTT, CHAMARAJANAGAR ROAD, T. NARASIPURA TOWN, MYSORE DISTRICT, KARNATAKA - 571124 PH :9845132038.

THIRTHAHALLI

1184. SHRUTI MOTORS PVT LTD (-01), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI. - 577432

THOKOTU

1185. BHARATH AUTO CARS PVT LTD (-01), NH-66, KAPIKAD, ULLAL, THOKOTU, DAKSHINA KANNADA DISTT. - 575017 PH :9538796330.

TIPTUR

1186. SAKETH AUTOMOBILES (-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.-206, TIPTUR, KARNATAKA - 572201 PH :9945301023.

TUMKUR

1187. SAKETH AUTOMOBILES (-01), SIRA ROAD, TUMKUR - 572106 PH :9686550323.

UDUPI

1188. ABHARAN MOTORS PVT LTD (-01), N.H. 17, NITTUR, UDUPI - 576103 PH :9850232999

UJIRE

1189. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO.237-281, MANGALORE-CHARMADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKA, DISTT. DAKSHINA KANNADA, KARNATAKA. - 574240 PH :9886176130.

UPPINANGADI

1191. MANDIVI MOTORS PVT LTD (4502-05), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH :9740912365.

VENOOR

1192. BHARATH AUTO CARS PVT LTD (-01), RESURVEY NO.8/5, KARIMANELU VILLAGE, VENOOR, BELTHANGADY TALUK, DAKSHINA KANNADA DIST., KARANATAKA-574242. - 574242

VIJAYPURA

1193. BIMAL AUTO AGENCY INDIA PVT LTD (-01), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA. - 562135 PH :8884433996.

VITTAL

1194. MANDIVI MOTORS PVT LTD (-01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA - BANTWAL, DISTRICT - DAKSHIN KANNADA - 574243 PH :9008101123.

YADGIR

1195. LAHOTI MOTORS PVT LTD (-01), SURVEY NO. 101/1, GULSARAM VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA - 585223 PH :9480825031.

KERALA

ADIMALI

1196. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY NO:647/5-2, BUILDING NO:15/121, MANNANKANDAM VILLAGE, ADIMALI, DEVIKULAM TALUK, IDUKKI DISTRICT, KERALA-685561 - 685561

ADOOR

1197. AVG MOTORS PVT LTD (-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523 PH :9446355900.

ADUR

1198. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH :9745998303.

ALAKODE

1199. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE. SY. NO. 23/1958, ARANGAM, ALAKODE, TALIPARAMBA TALUK, KANNUR DISTRICT, KERALA - 670571. - 670571

ALANALLUR

1200. KVR AUTOCARS PVT LTD (-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST - ALANALLUR, TALUKA - MANNARKAD, DISTRICT - PALAKKAD, KERALA. - 678601 PH :9747020582.

ALAPPUZA

1201. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-12), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZA WEST VILLAGE, AMBALAPPUZA TALUK, ALAPPUZA DIST. KERALA-699002. - 699002 PH :974597744.

ALATHIYOOR

1202. A M MOTORS (-11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE - ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA - TIRUR, DIST.-MALAPPURAM, KERALA. - 676102

ALATHUR

1203. BRD CAR WORLD LIMITED (-01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682 PH :9745634999.

ALLEPEY

1204. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. XVIII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZA, KERALA-688011. - 688011 PH :9778698161.

ALUVA

1205. BRD CAR WORLD LIMITED (-09), RE SURVEY NO.330/7, NH-47, KUNNUPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102 PH :945907100.

ANCHAL

Dealer Workshop (AS ON 31.01.2026)

1206. SARATHY AUTO CARS (-01), SURVEY NO. 371/9, VILLAGE - IDAMULAKKAL, P.O. - ANCHAL, TALUK - PUNALUR, DISTRICT - KOLLAM. - 691306 PH -9526806665.	CALICUT	1216. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011 PH -9745998019.	CHANGANASSERY	1238. MAJO MOTO (A UNIT OF GEORGE MAJO AUTOMOBILES PVT LTD) (-01), RE SURVEY NO:121/2082 BUILDING NO:28/344, CHERTHALA,ALAPPUZHA DIST, KERALA - 688524 - 688524
1207. POPULAR VEHICLES AND SERVICES LIMITED (1601-14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KATHADY JUNCTION, ANCHAL, KERALA - 691306 PH -9778698200.	1217. POPULAR VEHICLES AND SERVICES LIMITED (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016 PH -9846298613.	1218. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT - 673005 PH -9745998020.	1239. KVR AUTOCARS PVT LTD (-01), SURVEY NO.191, VAYAKARRA VILLAGE. - 670511	CHERUPUZHACHINGAVANAM
ANGAMALY	1218. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT - 673005 PH -9745998020.	1219. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655 PH -9745998018.	1240. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531 PH:9778690817.	CHITTUR
1208. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572 PH:9745998434.	1220. POPULAR VEHICLES AND SERVICES LIMITED (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT - 673009 PH -9288012082.	1221. BIMAL AUTO AGENCY INDIA PVT LTD (-01), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH - CHERUVANNUR, P.O. - NALLALAM, CALICUT (KOZHIKODE) , KERALA. - 673027	1241. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), S.NO 719/3 AND 721/1, RE SURVEY NO 67/1/10, VELLIVAYALAMPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555	CHULLIMANLOOR
1209. POPULAR VEHICLES AND SERVICES LIMITED (2701--0D), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD,ANGAMALY - 683572 PH -8086078886.	1222. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-12), R S NO: 51/7, IRINGALLUR, OLAVANNA PANCHAYATH, GURUVAYOORAPPAN COLLEGE PO, PALLAZHI - 673014	1222. SARATHY AUTO CARS (-01), SURVEY NO: 99/2, 99/21-1 & 99/21-2, OPPOSITE CHAVARA BUS STAND, NH 66, CHAVARA, KOLLAM DIST., KERALA -691584 - 691584	1242. POPULAR VEHICLES AND SERVICES LIMITED (1601--16), RE-SURVEY NO. 43/7, VILLAGE-ANAND, CHULLIMANLOOR TOWN, TALUKA-NEDUMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541 PH -9778690745.	COCHIN
AREEKODE	1223. A M MOTORS (-47-01), SURVEY NO: 17/57, 55, AMBALAPADI, POOLADIKUNNU -NH-66,ERANJIKKAL POST - 673001	CHENGANNUR	1243. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-01), PERANDOUR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025 PH :9846017725.	1244. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-02), BEHIND COMMERCIAL SALES, T.X.M. G. ROAD, COCHIN. - 682015 PH :9745998040.
1210. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 196/22-4, 196/10-1, 196/22-2,19, KEEZHUPARAMBU VILLAGE, PATHANAPURAM, AREEKODE - 673639	CHALAKUDY	1234. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 276/2, 11, 13, 13-2-2, NEAR BPCL PUMP AND SURVEY NO. 276/12, M C ROAD, NEAR LABHAM MAVELI STORE,CHENGANUR PO & MUNICIPAL, CHENGANUR VILL & TALUK, ALAPUZA DIST., KERALA-689121 - 689121 PH :9288024220.	1245. SAI SERVICE PRIVATE LIMITED (2705-27-01), 50/1 15L, CHERANALLOOR ROAD,EDAPPALLY,COCHIN - 682024 PH :9645106339.	1246. SAI SERVICE PRIVATE LIMITED (2705-27-02), NH-47, PATHADIPALAM,EDAPPALLY,COCHIN - 682024 PH :9645105057.
ATTINGAL	1224. POPULAR VEHICLES AND SERVICES LIMITED (2701--0C), SURVEY NO: 350/1,352/1,352/2,362/1,363/3,364/1,NH BYEPASS 47,PERAMBRA VILLAGE, CHALAKUDY, THRISSUR DIST.,KERALA- 680722 - 680307 PH -9072609600.	1235. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE - CHERUPPALLASSERY, TALUK - OTTAPPALAM, DISTRICT - PALAKKAD - 679503	1247. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN. - 682018 PH :9846298618.	1248. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-09), PALARIVATTOM KAKANAND ROAD, KAKANAND, COCHIN. - 682030 PH:9745998013.
1211. POPULAR VEHICLES AND SERVICES LIMITED (1601--07), PALAMKONAM, PERUNKULAM,VIA- ALAMCODE, ATTINGAL - 695102 PH -8086078788.	1225. BRD CAR WORLD LIMITED (-01), MURINGOOR P.O., CHALAKUDY - 680316 PH :9645176999.	CHERTHALA		
1212. SARATHY AUTO CARS (-01), SURVEY NO. 2952/17 & 2952/4, KIZHUVILLAM VILLAGE, ATTINGAL, CHARAYINKEEZHU TALUK, TRIVANDRUM DIST., KERALA. - 695104 PH -9526052765.	1226. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 53/1, 53/2 & 55/1, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALUKA CHALAKKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307	1237. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO.1502-1,147/3, BUILDING NO KP-18/80, N.H. KANJIKUZHI VILLAGE, CHERTHALA, ALAPPUZHA DISTT., - 688582 PH :9072530127.		
1213. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY. NO. 54/13, 14, 15, 16, (OLD SY. NO. 22, 22/13, 16), IN BLOCK NO. 3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. - 695104 PH -9747550888.	CHALAPARAMBU			
BALARAMAPURAM	1227. AVG MOTORS PVT LTD (-01), VAIKOM, KOTTAYAM, CHALAPARAMBU, - 673002			
1214. POPULAR VEHICLES AND SERVICES LIMITED (1601--11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501 PH -8943345922.				
BHARANIKAVU				
1215. SARATHY AUTO CARS (-01), URVEY NO. 116/2 OF 4, SASTHAMKOTTA VILLAGE, BHARANIKAVU TOWN, KUNNATHOOR TALUK, KOLLAM DISTRICT. KERALA, PIN-690520 - 690520 PH :7994825565.				

1249. SAI SERVICE PRIVATE LIMITED (2705-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) - 682040 PH :8129496818.	1259. INDUS MOTOR (-01), 43/16-2, 43/17, 43/18, 43/3, 2, OPP. SANETUMANOOR, KOTTAYAM, PIN-686631, KERALA - 686631	1268. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA,WAYAND - 673591 PH :9745998592	1279. BRD CAR WORLD LIMITED (-02), BRD INDUSTRIAL ESTATE,KARIKKAD, KUNNAMKULAM - 680519 PH :9995804599.
1250. MAJU MOTO (A UNIT OF GEORGE MAJU AUTOMOBILES PVT LTD) (2709-27-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104	FORT KOCHI	1269. KVR AUTOCARS PVT LTD (-C1), BUILDING NOS. 363, 364, 365, 366,367,368 AND 369 CONSTRUCTED ON THE PLOT COMPRISED IN RESURVEY NOS. 719/6, 722/3, 722/22, 722/6, 722/8, 722/10, 722/21, SITUATED AT MUTTIL NORTH VILLAGE, VYTHIRI TALUK, KALPETTA SUB-DISTRICT, WAYANAD DISTRICT, KERALA. - 673122 PH :9747021902.	KARUNAGAPALLY
1251. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD,THEKUMBHAGAM, PUTHIYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301 PH :9745992070.	GURUVAYUR	KANHANGAD	1280. SARATHY AUTO CARS (-05), K.S. PURAM,NEELIKULAM, KARUNAGAPALLY,KOLLAM. - 690544 PH :952661565.
1252. MAJU MOTO (A UNIT OF GEORGE MAJU AUTOMOBILES PVT LTD) (2709--02), PLOT NO.2/316, NH-47, MARADU VILLAGE, KANNODIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001	1261. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH :9745998015.	1270. POPULAR VEHICLES AND SERVICES LIMITED (4702--06), HIGHWAY JUNCTION,KANHANGAD SOUTH P.O.,KANHANGAD - 689641 PH :9946104685.	1281. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY.NO.243/1, 243/10, 243/16, 243/14, 243/15, 243/16, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583 PH :9745998006.
1253. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-10), SURVEY NO: 1622,162/24-2,162/25,162/3,162/1-2,162/13-2 &162/5, BUILDING NO. 33/2,33/3 & 33/4, PIPELINE ROAD, PADIVATTOM, VAZHAKALA, COCHIN, KERALA-682021. - 682021	IRINJALAKUDA	1271. KVR AUTOCARS PVT LTD (-02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315 PH :9605040999	1282. SARATHY AUTO CARS (-11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA - 690562 PH :9526691565.
1254. BRD CAR WORLD LIMITED (-10), OPPOSITE IOC PARKING GATE, SEA PORT AIRPORT ROAD, IRRUMPANAM, -682024	1262. BRD CAR WORLD LIMITED (-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH :9539006999.	1272. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541	KASARGOD
EDAkkARA	IRITTY	1273. AVG MOTORS PVT LTD (-01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/1/1), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT ,KERALA - 686512	1283. KVR AUTOCARS PVT LTD (-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123 PH :9747021206.
1255. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 1087/1C-91, VAZHIKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679331 PH :9747020777.	1263. INDUS MOTOR COMPANY PRIVATE LIMITED (-02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRIITTY, KANNUR, KERALA - 670703 PH :9747554929.	KANJIRAPALLY	1284. POPULAR VEHICLES AND SERVICES LIMITED (4702-0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH :9946104621.
EDAPPAL	IRITY	1274. INDUS MOTOR COMPANY PRIVATE LIMITED (-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O., KANJIRAPALLY - 686506 PH :9745998009.	1285. INDUS MOTOR COMPANY PRIVATE LIMITED (-03), 18/300A & 18/304B, SY. NO. 39/3B, RE.SY. NO. 57/6,MOGRAL, MANJESHWAR TALUK, KASARAGOD, KERALA - 671541 PH :9747550747.
1256. POPULAR VEHICLES AND SERVICES LIMITED (4702-05), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH :9946104680.	1264. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRIITTY MUNICIPAL, KANNUR DIST. KERALA. - 670703 PH :7902473741.	KANJIRAPALLY	KATAPPANA
EDAVANNAPARA	KAIPAMANGALAM	1275. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0E), BALANKINAR JN., KATTAMPALLY.P.O, KANNUR - 690011	1286. AVG MOTORS PVT LTD (-01), PALLIKKAVALA, KATTAPPANA, IDUKKI, KERALA - 685508
1257. A M MOTORS (-01), SURVEY NO. 98/1, PALLIPADI,EDAVANNAPPARA- AREEKODE ROAD, CHEEKODE POST, EDVANNAPPARA, KONDOTTY TALUK, MALAPPURAM DIST., KERALA- 673645. - 673645	1265. SAI SERVICE PRIVATE LIMITED (2705-07), SURVEY NO: 240/4-2 & 240/4-3, 249/5-19, 249/4A-3, 249/4B-1, 249/5-14, 249/4B, 249/4A-4,KAIPAMANGALAM BOARD,KAIPAMANGALAM P O, THRISSUR DIST, KERALA - 680681 PH :8129496846.	KANNUR	KATTAPPANA
EDAVANNAPPARA	KALAMASSERY	1276. KVR AUTOCARS PVT LTD (-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011 PH :9656034333.	1287. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.) - 685508 PH :9746743460.
1258. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 77/16-1 & 77/2-4 ,BUILDING NO.18/152-B, CHEEKODE VILLAGE,EDAVANNAPPARA KONDOTTY ROAD, CHERUVAYOOR P.O, MALLAPPURAM DISTRICT, KERALA-673645 - 673645 PH :9539007323.	1266. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106 PH :9745998012.	1277. POPULAR VEHICLES AND SERVICES LIMITED (4702-0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOVVVA (PO), KANNUR - 670018 PH :9840662796.	1288. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO. 81/3, VILLAGE & TOWN - KATTAPPANA, TALUK & DIST.-IDUKKI, KERALA. - 685515 PH :9746818407.
ETUMANOOR	KALLAMBALAM	1278. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BALAN KINAR , KATTAMPALLY PO, KANNUR, KERALA - 670611	KAYAMKULAM
	1267. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. 5/472, NH-47, KADUVAPALLY, THOTTAKAD P.O, KALLAMBALAM, TRIVANDRUM DIST., KERALA - 695605 PH :8086078788.	KARIKKAD (KUNNAMKULAM))	1289. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-05), KARIYILAKULANGARA, KANYAKULAM P.O., ALAPPUZHA DISTT. - 690522 PH :9745998005.
	KALPETTA		1290. POPULAR VEHICLES AND SERVICES LIMITED (-03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. - 690502 PH :9946105601.

Dealer Workshop (AS ON 31.01.2026)

KODAKARA

1291. A.M. MOTORS (-01), OPPT. KODAKARA POLICE STATION, NH-544, PERINGAKULAM, KODAKARA POST, THRISSUR - 680684

KODANGALLUR

1292. SAI SERVICE PRIVATE LIMITED (2705-03), NH-17, T.K.S.PURAM, KODUNGALLOOR - 680667 PH :9645106571.

KODUNGALLUR

1293. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE-SURVEY NO. 116/1-6, 116/2-5, BUILDING NO. 560/A, WARD NO. VII, AALA VILLAGE, (OLD VILLAGE-SREENARAYANAPURAM), KODUNGALLUR TALUK, MADHILAKAM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA - 680008 PH :9747513444.

KODUVALLY

1294. A M MOTORS (-01), SURVEY NO:91/9, 91/10,NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572 PH :9895979023.

KOLANCHERRY

1295. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERY TOWN, NH-85, AIKARANADU NORTH VILL., KUNNATHUNADU TALUK, ERNAKULAM DIST., KERALA-682311 - 682311 PH :7356605955.

KOLLAM

1296. POPULAR VEHICLES AND SERVICES LIMITED (1601-04), H & C COMPOUND, MUNDAKKAL, KOLLAM - 680008 PH :7594977550.

1297. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-03), OLD SARATHY THEATRE, PUNALLOOR ROAD, KOLLAM - 691005 PH :9745998004.

KONDOTTY

1298. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPPURAM DISTRICT, KERALA - 683573 PH :9746743178.

KOOTHATTUKULAM

1299. SAI SERVICE PRIVATE LIMITED (-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. - 686662 PH :9645106258.

1300. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 614/3-4, BAPUJI JUNCTION,CHORAKUZH,MI C ROAD, KOOTHATTUKULAM, MUVATTUPUZZHA TALUK,ERNAKULAM DIST., KERALA - 686662 - 686662

KOPPAM

1301. A M MOTORS (-01), SURVEY NOS: 331/3-6, 331/3-10, NEAR SALAFIYYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309 PH :9048666635.

KOTHAMANGLAM

1302. POPULAR VEHICLES AND SERVICES LIMITED (2701-0B), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA - 686691 PH :9846027990.

1303. INDUS MOTOR COMPANY PRIVATE LIMITED (-03), PALAKKADAN BUILDING,CHANKLAM,KOTHAMANGALAM - 686691 PH :9745998479.

KOTTAKKAL

1304. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST., - 676503 PH :9745998017.

1305. POPULAR VEHICLES AND SERVICES LIMITED (4702-03), NH-17, ,CHANDAPARAMBU, ,RANBATHANI P.O., MALAPPURAM, KOTTAKAL - 676510 PH :9946104631.

KOTTARAKKARA

1306. POPULAR VEHICLES AND SERVICES LIMITED (-01), MYLON, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA - 691531 PH :8086073466.

1307. SARATHY AUTO CARS (-01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARAKARA DISTT. KOLLAM (KERALA) - 691531 PH :9847423365.

1308. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY NO.20773-2, KIZHAKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., - 691531 PH :9747562299.

1309. POPULAR VEHICLES AND SERVICES LIMITED (-02), BUILDING NO. MP/20749,20/426, 207/48, INCHAKADU, KALAYAPURAM VILLAGE, MYLON PANCHAYATH, KOTTARAKKARA TALUKA, KOLLAM DISTRICT, KERALA- 691560 - 691560 PH :8086073466.

1310. INDUS MOTOR COMPANY PRIVATE LIMITED (-02), RE-SURVEY NO.141/3-4,142/1-2,15-16,143/1-2,143/2,143/15-2,143/15-2-2, BEARING NOS. 25/36 & 36, KOTTARAKKARA VILLAGE, KOTTARAKKARA TALUK, KOLLAM DISTRICT, KERALA- 691506 - 691506 PH :9747562299.

KOTTAYAM

1311. AVG MOTORS PVT LTD (-01), ERAYILKADAVU, KOTTAYAM - 686001 PH :7510982222.

1312. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM, KERALA - 686013 PH :9745998148.

1313. POPULAR VEHICLES AND SERVICES LIMITED (-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O. KOTTAYAM - 686006 PH :8086073454.

1314. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0C), MANIPPUZZHA, NATTAKOM P.O.,KOTTAYAM - 686013 PH :9745998007.

KOZHENCHERRY

1315. AVG MOTORS PVT LTD (-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT-PATHANAMTHITTA, - 689641 PH :9446092995.

1316. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO: 315/15-B & 315/15-C, TB JUNCTION, NEAR HP PETROL PUMP, KOZHENCHERRY, PATHANAMTHITTA, KERALA - 689641 - 689641

KUNNAMANGALAM

1317. BIMAL AUTO AGENCY (-01), SURVEY NO 268/6, D.NO 6/247, KUNNAMANGALAM, KERALA - 673571

KUNNAMKULAM

1318. POPULAR VEHICLES AND SERVICES LIMITED (2701-07), CHOONDAL, TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH :9946105695.

KUTTIYADI

1319. A M MOTORS (-01), KUTTIYADI-PERAMBRA ROAD, PARAKKADAVU, PALERI POST, KUTTIYADI - 673508

1320. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), CHERIAKUMBALAM, PARAKADAVU,KUTTIYADI, - 673508

LAKKIDI PERUR

1321. A M MOTORS (-01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302

MAILLATTY

1322. KVR AUTOCARS PVT LTD (-03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH :9747021026.

MALAPPURAM

1323. A M MOTORS (-01), VARANGODE, DOWNHILL, MALAPURAM, - 676519 PH :9895705325.

MALLAPALLY

1324. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), THOPPI COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585 PH :9747541400.

MANATHAVADY

1325. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 1/2A1, A1, B1, RY 1/210, 1/99, MYSORE ROAD, CHETTAPPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA - 670645 PH :9745997002.

MANJARI

1326. POPULAR VEHICLES AND SERVICES LIMITED (-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THURKKAL, MANJERI (KERALA) - 676121 PH :8589992406.

MANJERI

1327. A M MOTORS (-05), THURAKKAL BYEPASS, MANJERI, MALAPPURAM, KERALA - 676121 PH :9895756035.

1328. KVR AUTOCARS PVT LTD (-01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123 PH :9747020801.

MANNARKAD

1329. A M MOTORS (-07), NH-213, MANNARKAD, DIST -PALAKKAD - 678582 PH :9895979048.

MANNARKKAD

1330. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0K), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZZHA-PO. MANNARKAD, KERALA - 678583 PH :9745995946.

MAVELIKARA

1331. POPULAR VEHICLES AND SERVICES LIMITED (-02), KONNAYIL SUVAKO INDUSTRIAL COMPLEX, SHED A-1., KOLLAKADAVU INDUSTRIAL ESTATE, KOCHAL MOODU, KALLIMEL P.O., MAVELIKKARA, KERALA - 690570 PH :9400052338.

1332. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 135/1/A, RE-SURVEY NO. 28/52, NEAR PRAYIKKARA, MAVELIKKARA VILLAGE & TALUK, ALAPUZZHA (ALLEPPEY) DISTRICT, KERALA - 690 101 - 690101	1341. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0A), MINERVA JUNCTION, NILAMBUR, KERALA - 679329 PH :9745998396	PALAKKAD	1362. INDUS MOTOR COMPANY PRIVATE LIMITED (-12), SURVEY NO. 11-13/12(1), KARIMPANKUZHAY ROAD, NEAR SAROJ GAS AGENCY, MAKKANKUNNU, PATHANAMTHITTA, KERALA - 689645 PH :974599858.
1333. POPULAR VEHICLES AND SERVICES LIMITED (-10), BUILDING NO. 10/115-A, WARD NO. 10, CHENNITHALA VILL. AND TOWN, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA TALUK, ALAPPUZZHA DIST., KERALA- 690104. - 690104 PH :9778690833.	1342. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329 PH :9745998396.	1352. POPULAR VEHICLES AND SERVICES LIMITED (2701-09), OPP. PALANA HOSPITAL,KODUVAYOOR ROAD,KINASSERY P.O.,PALAKKAD - 678707 PH :9946105613.	1363. POPULAR VEHICLES AND SERVICES LIMITED (-11), BUILDING NO 244 / A, CHURULIKODE PO, PULIMOODU JUNCTION,PATHANAMTHITTA TOWN & DIST.,KOZHENCHERY TALUKA, KERALA-689643. - 689643
MORAYUR	1343. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO: 6/1 BLOCK NO. 76, CHEMMARAN, NADUVATH PO, WANDOOR ROAD,NILAMBUR, MALAPPURAM DIST., KERALA - 679328 PH :7736094999.	1353. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD - 678701 PH :9745998590.	PATHANAPURAM
1334. A M MOTORS (-01), SURVEY NO. 328/1, VILLAGE - MORAYUR, VALENCHEERY, DISTRICT - MALAPPURAM, KERALA - 673642 PH :8086520666.	1344. A M MOTORS (-01), NILAMBUR MYSORE ROAD, JYOTHIPADI, NILAMBUR - 679329	1354. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007 PH :9747519500.	1364. SARATHY AUTO CARS (-01), SURVEY NO. 3060/7-4, 3060/7-5,SALEMPURAM, KAYAMKULAM - PUNALUR ROAD, PATHANAPURAM, KOLLAM DIST., KERALA - 689695 - 689695
MUVATTAPUZHACH	NILAMEL	PANDIKKAD	PATHIRAPPALLY
1335. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), NH-49, MUVATUPOUZZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPOUZZHA, ERNAKULAM DIST - 686661 PH :97459998011.	1345. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 195/10, 195/3-1-2, 195/3-2-1, 195/8, 195/14, 195/9-1, 195/11-1, BLOCK NO 32, ATTINGAL MUNICIPALITY, PAZHAYAKUNNAMEL VILLAGE, CHIRAYINKIL TALUK, (BORDER OF NILAMEL TOWN), TRIVANDRUM DIST., KERALA - 695601 PH :9745993331.	1355. A M MOTORS (-01), SURVEY NOS: 333/2-2, 333/3-2,CHOORAKKAVU, PERINTHALMANNA ROAD, NEAR INDIAN OIL PETROL PUMP, PANDIKKAD TOWN & POST, MALAPPURAM DISTRICT, KERALA - 676521 PH :953999570.	1365. POPULAR VEHICLES AND SERVICES LIMITED (-02), BUILDING NO. X/832 TO 834, X/837 TO 838, OPP. UDAYA STUDIO, PATHIRAPPALLY TOWN, AMBALAPUZZHA TALUK, NH-47, ALAPPUZZHA DIST., KERALA-688521. - 688521 PH :9778698169.
1336. POPULAR VEHICLES AND SERVICES LIMITED (2708-02), MUTHUKALLU JUNCTION,PERUMPALLUR P.O., MUVATTAPUZZHA, KERALA - 686673 PH :7356898940.	1346. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. 10/279 TO 288, M. C. ROAD, KANNANCODU, NILAMEL PO, KOLLAM (DIST.), KERALA- 691535 - 691535 PH :8714606483.	PARAPPANANGADI	PATTAMBI
NADAPURAM	OTTAPALAM	1356. A M MOTORS (-01), SURVEY NO 66/6, 66/7, KODAPPADI, POST-CHETTIPPADY, PARGANGADI, MALAPPURAM. - 676319 PH :9895900466.	1366. A M MOTORS (-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306 PH :9567866059.
1337. A M MOTORS (-01), NADAPURAM-THALASSERY ROAD, , PERODE POST, NADAPURAM, KOZHIKODE, KERALA - 673506	1347. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA - 679101 PH :9747544454.	PARASSALA	1367. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303 PH :9745998295.
NEDUMANGAD	PALA	1357. SARATHY AUTO CARS (-01), SURVEY NO.21/14, BUILDING NO. 717.C, NEAR SARASWATHY HOSPITAL, PARVATHIYANVIL - 695502	1368. A M MOTORS (-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. - 679306 PH :9567866059.
1338. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO - 855/29, 855/14/1(OLD SURVEY NO. 1583/1), KARIIPPUR VILLAGE, NEDUMANGAD TALUK, TRIVANDRUM DIST.,KERALA-695541. - 695541 PH :9846036696.	1348. POPULAR VEHICLES AND SERVICES LIMITED (-04), 12TH MILE,PALA-PONKUNNAM ROAD,PALA - 686575 PH :9072609475.	PARAVUR	PAYANNUR
NEYATTINKARA	1349. INDUS MOTOR COMPANY PRIVATE LIMITED (-05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574 PH :9745998878.	1358. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 340/1-76,77,78, NEAR HP PETROL PUMP, PARAVUR-MANJALI MAIN ROAD, MANNAM PO, NORTH PARAVUR MUNICIPAL, ERNAKULAM DIST. 683520, KERALA. - 683520 PH :9072609638.	1369. POPULAR VEHICLES AND SERVICES LIMITED (4702-04), N H 17, EZHILODE P O, ,PAYYANUR - 670309 PH :9946104701.
1339. POPULAR VEHICLES AND SERVICES LIMITED (-15), BUILDING NO. 11/562, KP-IX-843, NH 47, KOTTAMOM, KOLLAYIL PANCHAYAT, PANVEL - KOCHI - KANYAKUMARI HIGHWAY, KOTTAMOM, NEYATTINKARA, TRIVANDRUM, KERALA- 695122 - 695122 PH :9946104602.	1350. AVG MOTORS PVT LTD (-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651 PH :9447137246.	PATHANAMTHITTA	1370. POPULAR VEHICLES AND SERVICES LIMITED (-01), SY. NO. 218/1, CHERUTHAZHAM VILLAGE, EZHILODE (NEAR COLONY BUS STOP), PAYANNUR-KANNUR NH, PAYANNUR TALUK, KANNUR DISTRICT, KERALA - 670 309. - 670309 PH :9946104701.
NEYYANTTINKARA	1351. INDUS MOTOR COMPANY PRIVATE LIMITED (-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT - 686584 PH :9747516934.	1359. AVG MOTORS PVT LTD (-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671 PH :9446002987.	PAYYANUR
1340. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), INDUS MOTOR CO. PVT. LTD., OLD M.V THEATRE, NEAR KSRTC BUS STATION, NEYATTINKARA, DIST. TRIVANDRUM - 695121 PH :9747544500.		1360. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-13), KUMBAZHA, PATHANAMTHITTA - 689653 PH :9745998008.	1371. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO.-289/117, 290/105, KARIVELLUR PERALAM GRAM PANCHAYAT (NEAR PALATHARA BRIDGE), PAYYANUR TALUK, KANNUR DISTRICT, KERALA-PIN-670521. - 670521 PH :9745998204.
NILAMBUR		1361. POPULAR VEHICLES AND SERVICES LIMITED (-05), T.K. ROAD, NEAR COLLECTORATE,PATHANAMTHITTA - 689645 PH :9539009734.	PEREMBRA

Dealer Workshop (AS ON 31.01.2026)

1372. POPULAR VEHICLE & SERVICE (-01), NO. 62/1,KOOTHALI VILLAGE, MOORIKUTHI, PERAMBRA TOWN, KOYILANDY TALUKA, CALICUT - 673525	1383. SARATHY AUTO CARS (-12), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIYAM PO, KOLLAM DIST., KERALA. - 691571 PH -9847936165.	1392. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELlichERRY, KERALA - 670102 PH -9747520100.	1404. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH -9745998014.
PERINTHALMANA		THALASSERY	1405. BRD CAR WORLD LIMITED (-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH -9746476529.
1373. A M MOTORS (-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322 PH -8129818235.	1384. SARATHY AUTO CARS (-13), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AYATHIL, KILLIKULLOOR PO, PUNTHALATHAZHAM-PALATHARA ROAD, KOLLAM, KERALA - 691004 PH -8606430765.	1393. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH -974598022.	THRITHALLUR
1374. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351 PH -9747020573.	RAMANATTUKKARA	THALAYOLAPARAMBU	1406. BRD CAR WORLD LIMITED (-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619 PH -9539197888.
1375. KVR AUTOCARS PVT LTD (-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322 PH -9747020837.	1385. A M MOTORS (-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632 PH -9567866144.	1394. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0J), THODUPUZA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH -9746743003.	TIRUR
PERUMBAVOOR	RANNI	THAMARASSERY	1407. A M MOTORS (-02), SATELLITE AUTO WORKS, PAPPANAGADI POST, TIRUR - 676101 PH -9995879706.
1376. SAI SERVICE PRIVATE LIMITED (2705-04), M.C.ROAD,PERUMBAVOOR,ERNAKULAM DIST,KERALA - 683542 PH -7034258335.	1386. INDUS MOTOR COMPANY PRIVATE LIMITED (-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH -9745998737.	1395. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE-SY. NO. 44/5A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMARASSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. - 673573 PH -9747553362.	1408. KVR AUTOCARS PVT LTD (-05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307 PH -9747020673.
1377. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 72/2-3, 72/3-3, TALUK - KUNNATHUNADU, VILLAGE - RAYAMANGALAM, SUB DIST. -PERUMBAVOOR, DIST.ERNAKULAM. - 683541 PH -9747591803.	1387. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO:417/3, 417-10, 417/16-2-1 & 41, BLOCK NO:09,PAZHAVANGADI VILLAGE, RANNI - 689672	1396. POPULAR VEHICLES AND SERVICES LIMITED (-10), SURVEY NO 43/4 BLOCK NO:005 ,RAROTH VILLAGE , THAMARASSERY TALUK , KOZHIKODE DISTRICT, KERALA - 673573 PH -9846397060.	1409. A M MOTORS (-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103
PIROVAM	SASTHAMKOTTAH	THIRUVALLA	1410. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PVT. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA. - 676105 PH -9747518883.
1378. SAI SERVICE PRIVATE LIMITED (-01), SUEY NO. 788/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN & MUNICIPALITY, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA - 686664 PH -9645106198.	1388. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-09), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM --, KERALA - 690520 PH -9745998849.	1397. AVG MOTORS PVT LTD (-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107 PH -9446323999.	1411. KVR AUTOCARS PVT LTD (-07), 829/A, THANUR ROAD, MOOCHIKKAL, MEENADATHUR PO, TIRUR, MALAPPURAM DIST - 676103
PUNALUR	SHORNUR	1398. POPULAR VEHICLES AND SERVICES LIMITED (-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH -8086073489.	TRIPPUNITHURA
1379. SARATHY AUTO CARS (-03), NH-208, Q.S. ROAD,ELAMPAL POST,PUNALUR, KOLLAM DIST - 691322 PH -9744400265.	1389. POPULAR VEHICLES AND SERVICES LIMITED (2701-0E), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH -8589992432.	THODUPUZA	1412. SAI SERVICE PRIVATE LIMITED (2705-05), HILL PALACE ROAD, KARINGACHIRA,COCHIN - 682301 PH -9645105067.
1380. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY. NO. 48/1/42, OLD, SY. NO. 231A/3324, (OLD RAMRAJ TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALAR ANCHAL ROAD. - 691305 PH -9747638885.	SULTHAN BATHERY	1399. INDUS MOTOR COMPANY PRIVATE LIMITED (-04), PALA ROAD, THODUPUZA - 685584 PH -9745998631.	TRIPPRAYAR
QUILANDY	1390. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA. - 673591 PH -7594977551.	1400. POPULAR VEHICLES AND SERVICES LIMITED (-01), SY.NO.1247A-1, 1247A-2, THODUPUZA EHLOOR MAIN ROAD, VILLAGE & TOWN, THODUPUZA, DISTT. IDUKI - 685585	1413. POPULAR VEHICLES AND SERVICES LIMITED (2701-08), SURVEY NO. 296/5,8, 296/9, 296/9-1, NATTIKA VILLAGE, NEAR CIVIL STATION, POLY JUNCTION, TRIPPRAYAR TOWN, THRISSUR TALUK & DISTRICT, KERALA-680566 - 680566 PH -9846692425.
1381. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHICODE DISTT. - 673306	TALIPARAMBA	THRISSUR	TRIVANDRUM
QUILON	1391. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY 53/4, THRICHAMBARAM TALIPARAMBA, KANNUR - 670141	1401. POPULAR VEHICLES AND SERVICES LIMITED (2701-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH -6282306495.	1414. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM - 695014 PH -9745998001.
1382. SARATHY AUTO CARS (-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017 PH -9744552265.	TELLICHERRY	1402. SAI SERVICE PRIVATE LIMITED (2705-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH -9645105051.	1415. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002 PH -9946104601.

1416. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-02), NH BYE PASS ROAD, VEIMPALAVATTOM, TRIVANDRUM - 695029 PH -9745998003.	1426. POPULAR VEHICLES AND SERVICES LIMITED (4702-0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH -8086078664.	1436. RUKMANI MOTORS PVT LTD (-01), WARD NO 1, JHABUA ROAD, ALIRAJAPUR, MADHYA PRADESH, MP - 457887 PH -9889676035.	1447. KAMTHI MOTORS LLP (-01), IN FRONT OF AURAM CITY, DIST.BALAGHAT, MADHYA PRADESH - 481001
1417. SARATHY AUTO CARS (1607-16-02), KOVALAM BEYPASS,SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009 PH -9947270665.	1427. KVR AUTOCARS PVT LTD (-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH -9526021876.	ALOT	BARELI
1418. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, - 695011 PH -9745998002.	VADAKARA	1437. PATEL MOTORS (INDORE) PVT LTD (-01), IN FRONT OF VIP COLONY, STATION ROAD, ALOT, DIST : RATLAM MADHYA PRADESH - 457114 - 457114	1448. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), SURVEY 423/2, VILLAGE KAMTON, NH 12, BARELI, RAISEN, MADHYA PRADESH. - 464668 PH : 9795903922.
1419. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-05), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002 PH -9846298610.	1428. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-07), BYE PASS JN,VATAKARA-673104,CALICUT - 673104 PH -9745998021.	AMLAHA	BARHI
1420. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA,TRIVANDRUM - 695028 PH -9747540100.	1429. POPULAR VEHICLES AND SERVICES LIMITED (-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH -8943345935.	1438. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), INDORE ROAD AMLAHA - 466113	1449. SHUBH MOTORS PVT LTD (-01), 1286/2, BARHI, DIST. - KATNI, MADHYA PRADESH - 483770 PH -975246255.
1421. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-11), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM - 695030 PH -9747508822.	VALENCHERRY	ANUPPUR	BARI
1422. SARATHY AUTO CARS (1607-03), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT- THIRUVANANTHAPURAM, KERALA. PH :9961665865.	1430. A M MOTORS (-01), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. - 676552 PH -9745986666.	1439. SHUBH MOTORS PVT LTD (-01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224	1450. SRISATYASAI AUTOMOBILES PVT LTD (-01), WARD NO.12 ,IN FRONT OF JANPAD, PANCHAYAT OFFICE,BARI, PIN-464665, MAD - 464665
1423. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-12), RE-SURVEY NO. 26/4-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA. - 695015 PH -9846498605.	VARAKALA	ASHOK NAGAR	BARNAGAR
1424. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-17), BUILDING NO. 13/632,632-A, 633,633-A1,633-A2,634-636, 6TH MILE STONE, VAZHAYILA PO, PEROOKADA, THIRUVANANTHAPURAM, KERALA - 695521 - 695521 PH -9288023313.	1431. SARATHY AUTO CARS (-01), SURVEY NO.7, PALLACHIRA, VARKALA, CHIRAYANKEEZHU TALUKA,THIRUVANATHAPURAM DISTRICT, KERALA-695143 - 695143	1440. PREM MOTORS PVT LTD (-02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH -9926809856.	1451. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), RUNJIA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN - 456771
1425. SARATHY AUTO CARS (1607-16-01), SURVEY NO. 2449/4, VILL. MUTTATHARA, NH BYE PASS ROAD, KALLUNOOD JN., WALLAKADAU PO, ENCHAKKAL, THIRUVANANTHAPURAM, KERALA-695008 - 695008 PH -9562416665.	VETTICHIRA	ASHTA	BARWANI
UPPALA	1432. KVR AUTOCARS PVT LTD (-03), AP IV, 75A TO C, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA. - 676552 PH -9747020023.	1441. JEEWAN MOTORS PVT LTD (-01), KHASRA NO.111/1 NEAR RELIANCE PETROL PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001	1452. NIMAR MOTORS PVT LTD (-02), ANJAD ROAD, VILLAGE -KARHI, BARWANI, MADHYA PRADESH - 451851
	WADAKKANCHERY	BADARWAS	BATTIS SHIRALA
	1433. BRD CAR WORLD LIMITED (-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH -9567869403.	1442. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (-01), SUMELA HIGHWAY, BADARWAS, DISTT. SHIVPURI, - 473885	1453. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO-44/2/A/1 & 14/1/A/3, NEAR SIDHESHWAR PERTOL PUMP, VILLAGE - 32 SHIRALA, TALUKA-SHIRALA, DIST- SANGLI, MAHARASHJTARA - 415408
	LEH-LADAKH	BADNAWAR	BEGAMGANJ
	1434. DRUK AUTO ZONE (-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH - 194101 PH :8082800205.	1443. PATEL MOTORS (INDORE) PVT LTD (-01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH. - 454660	1454. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), IN FRONT OF DUSHERRA MAIDAN, SAGAR BHOPAL ROAD, BEGAMGANJ, DIST - RAISEN, MADHYA PRADESH - 464881 - 464881 PH :9799997536.
	LEH	BADWAH / BARWAHA (BOTH NAMES ARE OK)	BEOHARI
	1435. UNITARA MOTORS PVT LTD (-01), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669 PH -9575650883.	1444. NIMAR MOTORS PVT LTD (-05), NIRMAL COMPLEX , INDORE ROAD , BARWAH - 451001 BAGH (DISTRICT - DHAR)	1455. SHUBH MOTORS PVT LTD (-01), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST. -SHAHOL, MADHYA PRADESH. - 484774 PH :9755595423.
	MADHYA PRADESH	1445. RUKMANI MOTORS PVT. LTD. (-01), NEAR BAGHESHWARI MANDIR., KUKSHI ROAD,BAGH, - 454221	BERASIA
	AGAR	BAHORIBAND	1456. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT - BHOPAL, MADHYA PRADESH. - 463106 PH :8770593501.
	1435. UNITARA MOTORS PVT LTD (-01), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669 PH -9575650883.	1446. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), OPP GRAIN MARKET, BAHORIBAND, DIST. - KATNI, MADHYA PRADESH - 483330	BETMA
	ALIRAJPUR	BALAGHAT	

Dealer Workshop (AS ON 31.01.2026)

1457. OCEAN MOTORS PVT LTD (-01), OPPOSITE MPEB OFFICE, INDORE-AHEMDABAD ROAD, BETMA, DISTRICT - INDORE, MADHYA PRADESH - 453001 PH :7389936444.	1468. SRISATYASAI AUTOMOBILES PVT LTD (-01). RAJENDRA PRASAD BHAWAN PARISHAR, INFRONT OF OLD VIDHAN SABHA BUILDING, PO - JAHANGIRABAD, MALVIYA NAGAR, BHOPAL, DISTRICT - BHOPAL, MADHYA PRADESH - 462008. - 462008	CHHINDWARA 1478. KAMTHI MOTORS LLP (-01), KHASRA NO.1/53, BESIDE MVM SCHOOL, NAGPUR ROAD, VILL. -SARRA, DISTT. CHHINDWARA, MADHYA PRADESH - 480001	DHAR 1488. RUKMANI MOTORS PVT LTD (5304-02), 41/2 MAGAJPURA,DHAR., - 454001 DHARAMPURI 1489. RUKMANI MOTORS PVT LTD (-01), MANAWAR ROAD, DHARAMPURI , MADHYA PRADESH - 454449 - 454449
BETUL 1458. KAMTHI MOTORS LLP (-01), NEAR SUNITA COLONY, ITARSI ROAD, BETUL, MADHYA PRADESH - 4600013 - 4600013 PH -9111535777.	BIAORA 1469. UNITARA MOTORS PVT LTD (-01), OLD AB ROAD, KACHNARIA, BIAORA (M.P) - 465674 PH :9575650883.	CHITRAKOOT 1479. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), PILIKOTHI CHOURAHA, BESIDE SINGH AUTOMOBILE. A HERO AGENCY, CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA (MADHYA PRADESH)- 485334 - 485334	DINDORI 1490. STANDARD MOTOCORP PVT LTD (-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP,DINDORI - 481661
BHANPURA 1459. PATEL MOTORS (INDORE) PVT LTD (-01), GAROTH RD., BHANPURA, MADHYA PRADESH - 458775 - 458775	BICHHIYA 1470. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), NEAR CIVIL COURT, BICHHIYA, DIST. MANDLA, PIN-481995, MADHYA PRADESH - 481995 PH :9303143327.	DABRA 1480. PREM MOTORS PVT LTD (-01), PICHHORE TIRAHA, GWALIOR JHANSI ROAD, DABRA, DIST. -GWALIOR. - 475110 PH :9926809110.	FALI 1491. OCEAN MOTORS PVT LTD (-01), NH 47, NEAR GRAM - FALI, TEHSIL KHUDEL, INDORE, MADHYA PRADESH. - 452016 PH :7389936477.
BHAVRA 1460. RUKMANI MOTORS PVT LTD (-01), GRAM PANCHAYAT, KALIYAVAHO, OPP SUNKER MANDIR, BHAVRA TEHSIL, ALIRAJPUR DISTRICT, MADHYA PRADESH - 457882. - 457882 PH :9755549200.	BIJURI 1471. SHUBH MOTORS PVT LTD (-01), GRAM - NEAR GENTRI GATE, NAGAR PALIKA PARISHAD BIJURI, DISTRICT - ANUPPUR, MADHYA PRADESH - 484116 PH :975580253.	DAHI 1481. KTL AUTOMOBILE PRIVATE LIMITED (-01), BHAGAT SINGH MARG, WARD NO.2, DAHI DAHI, DHAR DISTRICT - 454331	GADARWARA 1492. STANDARD MOTOCORP PVT LTD (-01), KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119, GADARWARA, DISTRICT - NARSINGHPUR. - 487551 PH :8319784336.
BHITARWAR 1461. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (-01), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, DABRA- BHITARWAR ROAD, BHITARWAR, MP - 474009 - 474009 PH :9109105599.	BINA 1472. ADINATH CARS PVT LTD (-01), PLOT NO. 2/34/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT - SAGAR, MADHYA PRADESH - 470113 PH :9009780047.	DAMOH 1482. ADINATH CARS PVT LTD (-01), SAGAR JABALPUR BYPASS ROAD, DAMOH (M.P.) - 470661 PH :9009780035.	GANDHWANI 1493. RANA MOTORS PVT LTD (-01), MUKATI COMPLEX, BAGH AWALDA MAAN ROAD, TEHSIL- GANDHWANI , DIST - DHAR, MADHYA PRADESH - 454446 - 454446 PH :9109975566.
BHOPAL 1462. JEEWAN MOTORS PVT LTD (-01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024	BURHANPUR 1473. NIMAR MOTORS PVT LTD (-02), 654/15,16 BASEMENT OF HOTEL AMBIKA RESIDENCY,, OPPOSITE PAKIZA SHOWROOM. - 450331	DATIA 1483. PREM MOTORS PVT LTD (3003-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661 PH :9165012280.	GANJ BASODA 1494. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-01), LAL BAGH, BARETH ROAD, GANJ BASODA, VIDISHA, 464221. - 464221 PH :9425148584.
1463. SATYAM MOTORS PVT LTD (-01), NH-12,SUVEESHA NAGAR,HOSHANGABAD ROAD,MISROAD - 462040	CHAKGHAT 1474. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), GRAM AND POST - CHANDAL CHAKGHAT, TEHSIL - TEONHTER, PRAGRAJ ROAD, NH 27, DIST-REWA, MP - 486226. - 486226	DEORI 1484. ADINATH CARS PVT LTD (-01), C/O VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE, NEAR GOVT. HIGH SCHOOL, NARSINGHPUR ROAD,VILLAGE KHEER, DEORI DISTT. SAGAR (M.P.) - 470226 PH :7000410522.	GARRA 1495. KAMTHI MOTORS LLP (-01), LALBARRA ROAD, GARRA INDUSTRIAL AREA, GARRA, BALAGHAT, MADHYA PRADESH. - 481331 PH :7723202684.
1464. JEEWAN MOTORS PVT LTD (-04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH,CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036	CHANDERI 1475. PREM MOTORS PVT. LTD. (-01), NEW BUS STAND,NEAR SBI BANK., CHANDERI-LALITPUR BYE PASS - 473446	DEPALPUR 1485. OCEAN MOTORS PVT LTD (-03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,DIST.INDORE-MP - 453115	GAUTAMPURA 1496. OCEAN MOTORS PVT LTD (-01), RUNJI CHOURAHA, GAUTAMPURA, TEHSIL - DEPALPUR, DISTT -INDORE, MADHYA PRADESH. - 453220
1465. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA, INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023	CHATTARPUR 1476. ADINATH CARS PVT LTD (-01), MAHOBA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGAR - 471001 PH :9009785577.	DEWAS 1486. UNITARA MOTORS PVT LTD (-01), SURVEY NO 255, A. B. ROAD, RASULPUR SQUARE, DEWAS, MADHYA PRADESH PIN 455001 - 455001 PH :9575650883.	GHATIYA 1497. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), NEAR JAGOTI SQUARE, UJJAIN - AGAR ROAD, GHATIYA, MP - 456550 - 456550 PH :9425067979.
1466. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-01), 4/1, DAGA HEIGHTS, NEAR BUDHNA MANDIR, MAIN ROAD KOLAR ROAD, CHUNABHATTI, BHOPAL, MADHYA PRADESH. - 462016	CHHANERA 1477. NIMAR MOTORS PVT LTD (-01), NEAR ST. STEPHEN SCHOOL, HARDA ROAD, CHHANERA (HARSUD), PIN-450001, MADHYA PRADESH - 450001 PH :9669569504.	DHAMNOD 1487. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (-01), KHASRA NO. 484/1/2, OLD A B ROAD, OPPOSITE HP PETROL PUMP, DHAMNOD, DIST.-DHAR, MADHYA PRADESH. - 454552 PH :9981585165.	GOTEGAON
1467. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-02), KHASRA NO. 80/1/K, VILLAGE - HALALPURA, TEHSIL - HUZUR, DISTRICT - BHOPAL, MADHYA PRADESH. - 462030			

1498. STANDARD MOTOCORP PVT LTD (-01), JABALPUR ROAD, OPP. NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR. -443001 PH :7771003774.	1509. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT -SEHORE, MADHYA PRADESH. -466115	1523. OCEAN MOTORS PVT LTD (5306-53-04), PLOT NO. 142 AND 151, SCHEME NO. 97, PART-4, COMMERCIAL MANDI, NEAR CAT SQUARE, INDORE. -452012 PH :7389936405.	1535. PATEL MOTORS (INDORE) PVT LTD (-01), SURVEY NO.165/1/1/2, GRAM BALKHEDA, TEHSILDIST.NEEMUCH, JAWAD, MADHYA PRADESH 458330 - 458330
GUWA	INDERGARH	1524. KTL AUTOMOBILE PRIVATE LIMITED (5309-53-C1), PLOT NO.5/R.C. SCHEME NO 134 MR 10,VILLAGE KHAJRANA, DIST INDORE-452010,MADHYA PRADESH - 452010 PH :6263455899.	JHABUA
1499. PREM MOTORS PVT LTD (-01), OPP R.T.O..A.B. ROAD, GUWA. - 473001 PH :268015.	1510. PREM MOTORS PVT LTD (-01), NEAR KHERAPATI GARDEN, INDERGARH, MP - 475675 . - 475675 PH :9926809818.	1525. RUKMANI MOTORS PVT LTD (-53-05), 109, BHAWRASLA NEAR PRATAP AUTO, FRONT OF VINAYAK TOL KANTE, SANWER ROAD, INDORE, PIN-453111, MADHYA PRADESH - 453111 PH :9109978301.	1536. PATEL MOTORS (INDORE) PVT LTD (-01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA, MADHYA PRADESH. - 457661 PH :9826634449.
GWALIOR	INDORE	INGORIYA	JIRAPUR
1500. PREM MOTORS PVT LTD (3003-30-01), M. L. B. ROAD, GWALIOR. - 474002 PH :9926809803.	1511. PATEL MOTORS (INDORE) PVT LTD (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010	1526. YUG CARS (A UNIT OF RUKMARAN CARS INDORE PVT. LTD) (-01), SURVEY NO.589,, NAGDA ROAD,VILL.INGORIYA, - 456222	1537. UNITARA MOTORS PVT LTD (-01), KHLCHIPUR ROAD, JIRAPUR DIST- RAJGARH MADHYA PRADESH - 465961 - 465961
1501. PREM MOTORS PVT LTD (3005-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH :9926809803.	1512. RUKMANI MOTORS PVT LTD (5304-53-01), 2-3,,A.B. ROAD,INDORE - 452001	JABALPUR	JOBAT
1502. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (3006-30-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 - 474005 PH :9407067974.	1513. PATEL MOTORS (INDORE) PVT LTD (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017	1527. SHUBH MOTORS PVT LTD (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001 PH :9755545540.	1538. RUKMANI MOTORS PVT LTD (-01), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP - 457590. - 457590 PH :6262505181.
HANSA KHEDI	1514. RUKMANI MOTORS PVT LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001	1528. STANDARD MOTOCORP PVT LTD (5405-54-02), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002	KACHROD
1503. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (-01), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GANJ), TEHSIL -SANWER, DISTRICT -INDORE, MADHYA PRADESH. - 453551 PH :9479952490.	1515. OCEAN MOTORS PVT LTD (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001	1529. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3/A, 156/3/KHA, 156/3/GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002 PH :9755595496.	1539. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), MOHALLA PATEL COLONY, BARNAGAR RD, KACHROD, MP. - 456313
HARDA	1516. OCEAN MOTORS PVT LTD (5306-02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017	1530. STANDARD MOTOCORP PVT LTD (5405-03), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001	KANNOD
1504. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331	1517. PATEL MOTORS (INDORE) PVT LTD (5303-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006 PH :7314293919.	1531. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (5404-54-01), MOUZA KARMETA N.B. 497, P.H. NO 23/26, KHASRA NO. 497 & DIV. KHASRA NO. 484/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. - 482002 PH :7489901021.	1540. UNITARA MOTORS PVT LTD (-01), KANNOD,DISTRICT-DEWAS, MADHYA PRADESH -455332 - 455332
HATOD	1518. OCEAN MOTORS PVT LTD (5306-53-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAJESHWARI EXTENSION, PIPLIYAHANA, INDORE - 452001	1532. STANDARD MOTOCORP PVT LTD (5405-54-04), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. - 482003	KARELI
1505. OCEAN MOTORS PVT LTD (-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111 PH :7389936477.	1519. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (5307-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002 PH :7471111132.	1533. KIRAN MOTORS LIMITED (1118-11-01), 75, JHOTWARA INDUSTRIAL AREA JAIPUR - 302001	1541. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT. LTD) (-01), NEAR KRISHNA HOTEL,, NARSINGHPUR-KARELI BYPASS,KARELI, - 487221
HATPIPLIYA	1520. RANA MOTORS PVT LTD (-01), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009 PH :9109975566.	JAIPUR	KARERA
1506. UNITARA MOTORS PVT LTD (-01), OPPOSITE UNWIND RESORT, HATPIPLIYA, DEWAS, MADHYA PRADESH - 455223 - 455223	1521. PATEL MOTORS (INDORE) PVT LTD (5303-53-05), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH. - 452012	1534. PATEL MOTORS (INDORE) PVT LTD (-04), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRICO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226	1542. PREM MOTORS PVT LTD (-01), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660. - 473660 PH :9926823596.
HATTA	1522. RUKMANI MOTORS PVT LTD (-04), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 15/1, PIPLIYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. - 452010	JAORA	KATNI
1507. ADINATH CARS PVT LTD (-01), NEAR NAVODAYA SCHOOL, DAMOH ROAD, HATTA, DISTT. DAMOH (M.P.) - 470775. - 470775 PH :9009787562.			1543. SHUBH MOTORS PVT LTD (-01), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501 PH :9755515839.
HOSHANGABAD			KHANDWA
1508. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001 PH :8898282222.			1544. NIMAR MOTORS PVT LTD (-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001
ICHHAWAR			KHARGONE
			1545. NIMAR MOTORS PVT LTD (-01), JETAPUR.SANAWAD ROAD,KHARGAONE, - 462026

Dealer Workshop (AS ON 31.01.2026)

1546. NIMAR MOTORS PVT LTD (-06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001	MAJHAULI	1567. PREM MOTORS PVT LTD (-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH :9926002791.	1577. KAMTHI MOTORS LLP (-01), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334. - 480334 PH :9111535777.
KHATEGAON		NAGDA	PANNA
1547. UNITARA MOTORS PVT LTD (-01), NEMAWAR-INDORE ROAD, KHATEGAON, M.P - 455336 - 455336 PH :9993406993.	1547. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), WARD NUMBER 14, NAGAR PARISAD MAJHAULI, DIST. SIDHI (M.P.) - 486666. - 486666 PH :7970003171.	1568. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), PLOT NO. 17, STATE HIGHWAY NO.17, INDOIYA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456335	1578. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), KHASRA NO. 378, MOHAN RAJ VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH. - 488001 PH :7354252525.
KOTMA	1548. SHUBH MOTORS PVT LTD (-01), WARD NO.7, ANNUPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336 PH :9755581441.	1569. PATEL MOTORS (INDORE) PVT LTD (-01), SURVEY NO.200/1,205/1/208., VILLAGE MANKI NAGDA,MHOW ROAD, - 454660	PARANDA
KUKSHI	1549. OCEAN MOTORS PVT LTD (-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331	1570. STANDARD MOTOCORP PVT LTD (-01), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJAJ SHOW ROOM, NAINPUR, DISST MANDLA, MADHYA PRADESH -481776. - 481776 PH :7771003374.	1579. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), 691/1/190, PARANDA BARSHI ROAD, PARANDA, TAL-PARANDA, DIST-DHARASHIV - 413502
KURWAI	1550. SRISATYASAI AUTOMOBILES PVT LTD (-01), SH-14, MAIN ROAD,,KURWAI,VIDISHA,,MADHYA PRADESH 464224 - 464224	1571. PATEL MOTORS (INDORE) PVT LTD (-01), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. - 458553 PH :9977703907.	PARASIA
LAKHNADON	1551. KAMTHI MOTORS LLP (-01), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480886 PH :9285506128.	1572. STANDARD MOTOCORP PVT LTD (-01), KH. NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT – NARSINGHPUR, MADHYA PRADESH. - 487001	1580. KAMTHI MOTORS LLP (-01), KHIRSAODOHMAL, PARASIA, CHHINDWARA, MP - 480441 PH :9285506109.
LATERI (VIDISHA)	1552. SRISATYASAI AUTOMOBILES PVT LTD (-01), KHASRA NO.572., ANANDPUR ROAD,, LATERI,MADHYA PRADESH 464114 - 464114	NARSINGHPUR	PAT
LOHARI	1553. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (-01), SINGHANA-KUKSI ROAD, LOHARI, DHAR, PIN-454335, MADHYA RPADESH - 454335	1573. JEEWAN MOTORS PVT LTD (-01), KHASRA NO. 458, VILLAGE – RALA, TEHSIL – NASRULLAGANJ, DISTRICT – SEHORE, MADHYA PRADESH. - 466331	1581. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), WARD NO. 9, UJJAIN -KOTA ROAD, OPPOSITE GOVT MIDDLE SCHOOL, PAT, DISTT UJJAIN , MP - 416522
MAHESHWAR	1554. NIMAR MOTORS PVT LTD (-01), OPPOSITE DEVRAJ HOTEL, MAIN MANDLESHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224 PH :9669569504.	NASRULLAGANJ	PATAN
MAHIDPUR	1555. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), 264/3, BHIMAKHEDA, MAHIDPUR, UJJAIN - 456443 PH :9109130402.	1574. PATEL MOTORS (INDORE) PVT LTD (-02), MHOW-NEEMUCH ROAD,NEEMUCH(MP), - 458441 PH :9977703907.	1582. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119 PH :9770415141.
MAIHAR	1556. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH :7354252525.	NEEMUCH	PAWAI
	1557. OCEAN MOTORS PVT LTD (-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441	1575. ADINATH CARS PVT LTD (-01), ATKHASRA NO 2017/1, NEAR HDPC BANK MAIN ROAD, NIWARI, MADHYA PRADESH –472442. - 472442 PH :9009787562.	1583. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. – PANNA, MP- 488446 - 488446 PH :9754301199.
	1558. PREM MOTORS PVT LTD (-01), MOHANA, DISTRICT GWALIOR, MADHYA PRADESH - 475330. - 475330	NIWARI	PETLAWAD
	1559. PATEL MOTORS (INDORE) PVT LTD (-01), RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. - 458110 PH :9644405368.	1576. STANDARD MOTOCORP PVT LTD (-01), OPP. INDIAL OIL PETROL PUMP, NIWAS, DISTRICT MANDLA, MADHYA PRADESH – 483001. - 483001	1584. PATEL MOTORS (INDORE) PVT LTD (-01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773 PH :9111160868.
	1560. OCEAN MOTORS PVT LTD (-01), PLOT NO – 40, BAKANER ROAD, MANAWAR, DISTRICT – MANAWAR, MADHYA PRADESH. - 454335 PH :7389936477.	NIWAS	PICHHORE
	1561. STANDARD MOTOCORP PVT LTD (-01), KATARA ROAD, MANDLA, DIST. MANDLA MP - 481661	1577. STANDARD MOTOCORP PVT LTD (-01), ATKHASRA NO 2017/1, NEAR HDPC BANK MAIN ROAD, NIWARI, MADHYA PRADESH –472442. - 472442 PH :9009787562.	1585. PREM MOTORS PVT LTD (-01), NEAR OF BACHRON CHAURAHA, PICHHORE, DIST, DIST. SHIVPURI, PIN-475300, MADHYA PRADE - 475300
	1562. PATEL MOTORS (INDORE) PVT LTD (-02), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001	PANDHURNA	PIPARIYA
	1563. PATEL MOTORS (INDORE) PVT LTD (-01), KHASRA NO. 302/1/3, AB ROAD, MANPUR, DIST- INDORE - 453661 PH :9826360699.		1586. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775
	1564. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), NEAR SENGAR PETROL PUMP ,CHACK MODE WARD NUMBER 03,NH 7 ,MAUGANJ, DISTT – REWA, MADHYA PRADESH – 486331. - 486331 PH :975301199.		PITHAMPUR
	1565. OCEAN MOTORS PVT LTD (-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441		
	1566. PREM MOTORS PVT LTD (-01), MOHANA, DISTRICT GWALIOR, MADHYA PRADESH - 475330. - 475330		
	1567. OCEAN MOTORS PVT LTD (-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441		

1587. PATEL MOTORS (INDORE) PVT LTD (5303-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH :9826360699.	1599. OCEAN MOTORS PVT LTD (-01), JAIN SHRI SUPER MARKET, SERVICE ROAD, MHOW-NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P.) - 454001. - 454001 PH :7389936423.	1609. STANDARD MOTOCORP PVT LTD (-01), KHASARA NO. 172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH :7771000392.	1619. RUKMANI MOTORS PVT LTD (-01), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020 PH :9109978301.
1588. KTL AUTOMOBILE PRIVATE LIMITED (-01), WARD NO 18, VILLAGE - AKOLIA, PITHAMPUR, MP. - 454775 - 454775	SAGAR	1610. STANDARD MOTOCORP PVT LTD (-01), NEAR SAI PETROLEUM, SHARDA NAGAR, JABALPUR ROAD, SHAHPURA, DIST -DINDORI, MP. - 481990	SINGHOLI
PUSHPRAJGARH	1600. ADINATH CARS PVT LTD (-01), STATION ROAD, TILAK GANJ, SAGAR (M.P). - 470001 PH :9009780030.	SHAJAPUR	1620. PATEL MOTORS (INDORE) PVT LTD (-01), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP - 458228 - 458228 PH :9977703907.
1589. SHUBH MOTORS PVT LTD (-01), WARD NUMBER 8, SHIVRICHANDAS KARAUNDI TIRAHA, AMARKANTAK ROAD RAGENDRAGRAM DISTRICT ANUPPUR (M.P.) - 484224	SANWER	1611. UNITARA MOTORS PVT LTD (-01), LAL GHATI, A B ROAD, SHAJAPUR, MP. - 465001 PH :9993406993.	SINGRAULI
RAISEN	1601. RANA MOTORS PVT LTD (-01), S.NO. 356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. - 453551 PH :9109975566.	SHAMGARH	1621. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE, WAIDHEN, DISTRICT, SINGRAULI, MADHYA PRADESH KHASARA NO-3721/1 &3721/2, GRAM- NAVGARH, SIDHI-REWA ROAD, WAIDHAN , DISTRICT- SINGROULI (MADHYA PRADESH)-486887. - 486886 PH :7354252525.
1590. JEEWAN MOTORS PVT LTD (-01), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551 PH :9826017799.	SATNA	1612. PATEL MOTORS (INDORE) PVT LTD (-01), KHASARA NO. 1179/1, MOHALLA MAROTH, TEHSIL - SHAMGARH, DISTRICT - MANDSAUR, MADHYA PRADESH. - 458883 PH :9753088222.	SIRONJ
1591. RAJURP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551 PH :7869755501.	SAUSAR	1613. PREM MOTORS PVT LTD (3003-04), A B ROAD,SIVPURI., - 473551 PH :9926809976.	1622. RAJURP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), OPPOSITE BALAJI PHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228 PH :7909997585.
RAJGARH	1603. KAMTHI MOTORS LLP (-01), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P - 480106. - 480106 PH :9111535777.	SHUJALPUR	SITAMAU
1592. RUKMANI MOTORS PVT LTD (-01), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116 PH :9755549200.	SEHORE	1614. UNITARA MOTORS PVT LTD (-01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P - 465333 - 465333 PH :9575650883.	1623. PATEL MOTORS (INDORE) PVT LTD (-01), MAUKHEDA, TEHSIL - SITAMAU, DISTRICT - MANDAU, MADHYA PRADESH - 458990 - 458990 PH :9826360699.
RAJOD	1604. JEEWAN MOTORS PVT LTD (-02), 869/1/2, OFFICERS COLONY, IN FRONT OF CHURCH GROUND, BHOPAL, INDORE ROAD - 466001	SHYAMPUR	SUTHALIA
1593. RUKMANI MOTORS PVT. LTD. (-01), NEAR POLICE STATION, SARDARPURA BADNAWARROAD, RAJOD, DIST. DHAR, MADHYA PRADESH 454 - 454660	SENDHWA	1615. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-01), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT - SEHORE, MADHYA PRADESH - 466651. - 466651 PH :7909997570.	1624. UNITARA MOTORS PVT LTD (-01), MAKSUDANGARH ROAD, NEAR POLICE STATION SUTHALIYA - 465677
RATLAM	1605. NIMAR MOTORS PVT LTD (-01), KHASARA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL - SENDHWA, DISTRICT - BARWANI, MADHYA PRADESH. - 451666	SIDHI	TARANA
1594. PATEL MOTORS (INDORE) PVT LTD (-01), 76 C,D&E, INDUSTRIAL AREA, RATLAM - 452001	SEONI	1616. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), ADHIYAR KHOSH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. - 486661	1625. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH. - 456665
1595. PATEL MOTORS (INDORE) PVT LTD (-03), 181/17/18, DOSHI GOAN, INDUSTRIAL AREA ,JAORA ROAD, RATLAM - 457001	SEONI MALWA	SIHORA	TENDUKHEDA
REWA	1606. KAMTHI MOTORS LLP (-01), IN FRONT OF MVM SCHOOL, JABALPUR ROAD, RTO BYPASS, SEONI - 480882	1617. SHUBH MOTORS PVT LTD (-01), KHASARA NO. 31/1, P.H. - 11, MOUZA - GHAT SIMARIYA, TEHSIL - SIHORA, DISTRICT - JABALPUR, MADHYA PRADESH.. - 483440	1626. STANDARD MOTOCORP PVT LTD (-01), KHASARA NO. 49/8, MOUZA - TENDUKHEDA, DISTRICT - NARSINGHPUR. - 470880
1596. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-03), NYPASS CHURHATA, DIST. REWA - 482001 PH :7354252525.	SEONI MALWA	SILWANI	THIKRI
1597. SHUBH MOTORS PVT LTD (5403-05), VILLAGE - RATHARA, TEHSIL - HUZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003 PH :975582351.	1607. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-01), NEAR AXIS BANK, SEONI MALWA, MP. - 461223 - 461223 PH :8889281113.	1618. RAJURP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), MAHAVIR COLONY, SAI KHEDA ROAD, SILVANI, DIST. RAISEN, MP - 464886. - 464886 PH :9174000501.	TIKAMGARH
SABALGARH	SHAHDOL	SIMROL	
1598. PREM MOTORS PVT LTD (-01), NR. INDIAN OIL PETROL PUMP, SABALGARH, DIST. - MORENA, MP. - 476229 - 476229	1608. SHUBH MOTORS PVT LTD (-01), JAMUA, NEAR GYAN GUPTA, BUDHAR ROAD, SHAHDOL. - 484771 PH :9755595423.		
SADALPUR	SHAHUPURA		

Dealer Workshop (AS ON 31.01.2026)

1628. ADINATH CARS PVT LTD (-01), NEAR NEW BUS STATION, OPPOSITE OF BANKE BIHARI COLONY, MAURANIPUR ROAD,TIKAMGARH, MADHYA PRADESH - 472001 PH :9200888454.	1638. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), SARDA MILLS,SAVEDI ROAD,AHMEDNAGAR, MAHARASHTRA - 414001 PH :7410024227.	1650. MANRAJ MOTORS PVT LTD (-01), PRASAD MOTORS, RAVI NAGAR, NEAR NAYARA PETROL PUMP. DHULE ROAD, AMALNER, DIST.JALGAON-425401. - 425401	1661. PAGARIYA AUTO PVT LTD (2103-21-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KALASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005
TULJAPUR	1639. KANKARIYA AUTOMOBILES PRIVATE LTD (-05), MIDC, AHMEDNAGAR - 414003 PH :7447700029.	AMBERNATH	1662. PAGARIYA AUTO PVT LTD (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001
1629. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), 684/2, PLOT NO 16, VISHWAS NAGAR, BEED ROAD, TULJAPUR DIST. DHARASHIV - 413601	1640. MAHALAXMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 248/249, MANMAD RD, SAVEDI, AHMEDNAGAR. - 414003	1651. AHER AUTOPRIME LLP (-01), PLOT NO-24.26.27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVLI, AMBERNATH - 421501 PH :8422871720.	BALLARPUR
UDAIPURA	AHMEDPUR	AMRAVATI	1663. TRISTAR CARS PVT LTD (-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMBNI, TAH. BALLARPUR - DIST. - 442701 PH :7447473304.
1630. JEEWAN MOTORS PVT LTD (-01), WARD NO. 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770 PH :9826017799.	1641. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), SURVEY NO-56/1/2, VILLAGE-MARSHIVANI, NH-361, PO & TALUKA -AHMEDPUR, DIST-LATUR, PIN-413515. - 413515	1652. ASPA BANDSONS AUTO (P) LTD (-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASHTRA. - 444607 PH :9423123665.	BARAMATI
UJJAIN	AJARA	1653. ASPA BANDSONS AUTO (P) LTD (-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASHTRA. - 444607 PH :9423339601.	1664. MAHALAXMI AUTOMOTIVES PVT LTD (-01), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102 PH :9881370310.
1631. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), SURVEY NO. 59/3, DEWAS ROAD,UJJAIN - 456010	1642. SAI SERVICE PRIVATE LIMITED (-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT - KOLHAPUR. - 416505	ARAG	BARSHI
1632. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURAHA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH. - 456001 PH :9425067979.	AKLUJ	1654. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO.1, VILL-ARAG, TALUKA: MIRAJ, DIST: SANGLI - 416401	1665. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401
UMARIA	AKOLA	ARVI	BEED
1633. SHUBH MOTORS PVT LTD (5403-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH :9755502882.	1644. KHANDELWAL AUTOWHEELS PVT LTD (-01), TIRUPATI CHAMBERS,CONVENT ROAD,AKOLA - 444005	1655. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO-7, SURVEY NO-327, MAUZA -AHMADNAGAR, WARDHA ROAD, NAGAR PARISHAD-ARVI, TEHSIL-ARVI, DIST-WARDHA- 442201 PH :8494988769.	1666. PAGARIYA AUTO PVT LTD (-01), GUT NO. 61, VILLAGE - GHOSAPURI, TALUKA AND DISTRICT - BEED, MAHARASHTRA. - 431122
UNHEL	1645. KHANDELWAL AUTOWHEELS PVT LTD (-02), PLOT NO E/12-13-MIDC PHASE-2, AKOLA - 444001	ASHTA	BHANDARA
1634. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), 15/ 35, STATION ROAD, UNHEL, UJJAIN - 456221	AKOT	1656. SIDDIHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), GATE NO: 328/9, NEAR S R HOTEL, ASHTA -ISLAMPUR ROAD, ASHTA - 416301	1667. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904
VIDHISHA	1646. KHANDELWAL AUTOWHEELS PVT LTD (-01), PLOT NO 18 & 19, SURVEY NO 600/3, AKOT - AKOLA ROAD, AKOT, AKOLA (MAHARASHTRA) - 444101 - 444101	ATPADI	BHIGWAN
1635. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-01), PLOT NO 59/1, VILLAGE RANGAL, VIDISHA, MADHYA PRADESH - 464001 PH :9109900374.	ALEPHATA	1657. SIDDIHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), GAT NO. 2774, MAYAKKA NAGAR . NEAR BDS BANK . ATPADI. TAL- ATPADI . DISTRICT SANGLI . PIN 415301 - 415301	1668. MAHALAXMI AUTOMOTIVES PVT LTD (-01), GAT NUMBER 342, NEXT TO HOTEL SAGAR, PUNE-SOLAPUR HIGHWAY, BHIGWAN - 413130. - 413130 PH :9922979653.
VIDISHA	1647. KOTHARI AUTO WHEELS PVT LTD (-01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, A/P - ALEPHATA, TALUKA - JUNNAR, DISTT. PUNE, PIN-412411 - 412411 PH :8421753278.	AURANGABAD	BHILAWADI
1636. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001 PH :7869755501.	ALIBAUG	1658. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH :9155000046.	1669. SIDDIHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SURVEY NO-1721, AT POST - MALWADI, BHILAWADI, TAL-PALUS, DIST-SANGLI, PIN-416303.
VIJAY RAGHAVGARH	1648. SIMRAN MOTORS PVT LTD (-05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE - VESH-VIL, ALIBAUG, DISTRICT - RAIGAD, MAHARASHTRA - 402201	1659. PAGARIYA AUTO PVT LTD (2103-21-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD - 431005	BHIWANDI
1637. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), KARITALAI- VIJAYRAGHAVGARH ROAD, VIJAYRAGHAVGARH, DISTT. - KATNI, MP- 483775 - 483775	ALLAPALLY	1660. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-21-03), C-27, MIDC, CHIKALTHANA, N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006 PH :9158000059.	1670. NAVNIT MOTORS PVT LTD (3908-03), SURVEY NO. 422, 45/1, GUPTA WAREHOUSE, DAPODE, TALUKA-BHIWANDI, DIST-THANE. - 421302
MAHARASHTRA	1649. TRISTAR CARS PVT LTD (---), SHIVAJI SQUARE ETAPALLI ROAD, WARD NO 2, MOUZA- ALLAPALLI, HOUSE NO 1465, TAH-AHERI, DIST- GADCHIROLI-442703. - 442703		1671. AHER AUTOPRIME LLP (-03), NEXT TO K N PARK, RAJNOLI VILLAGE, KALYAN BYPASS ROAD, BHIWANDI - 421302
AHMEDNAGAR	AMALNER		BHOR
			1672. SEHGAL AUTORIDERS PVT LTD (-01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA - BHOR, DISTRICT - PUNE, MAHARASHTRA. - 412206 PH :952771016.

BHUSAWAL	1673. MANRAJ MOTORS PVT LTD (-02), NATIONAL HIGHWAY 6, NEAR KHADKA ROAD CROSSING, BHUSAWAL 425201. - 425201 PH :9422867242.	1683. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY, AT-KALAMBASTE, TAL-CHHPLIN, DIST-RATNAGIRI, MAHARASHTRA - 415605	1694. FORT POINT AUTOMOTIVE CARS PVT LTD (3906-02), SURVEY NO.13, NEAR PIMPLESHWAR TEMPLE, OPP. MAHANAGAR CNG PUMP, KALYAN-SHILPHATA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. - 421203	1705. PAGARIYA AUTO PVT LTD (-01), PLOT NO.5,7 & 8, SURVEY NO.29/2, AKOLA BY PASS ROAD, HINGOLI - 431513 PH :8411961177.
BOISAR	1674. SHIVAM AUTOZONE INDIA PVT LTD (-01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARASHTRA - 401501 PH :8082551155.	CHOUK	GADCHIROLI	HUPARI
BRAMHAPURI	1675. TRISTAR CARS PVT LTD (-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAMHAPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206 PH :7745883000.	1684. SIMRAN MOTORS PVT LTD (-01), SIMRAN MOTORS PVT LTD STOCKYARD , AT WAVANDAL ,SURVEY NO- 62/2A POST- CHOWK, NEAR ARUN HOTEL ,MUMBAI-PUNE HIGHWAY, TALUKA - KHALAPUR, DISTRICT - RAIGAD - 410206 PH :8691988895.	1695. BARBATE AUTOMOTIVE INDIA PVT LTD (-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARASHTRA - 442702 PH :8669929188.	1706. SAI SERVICE PRIVATE LIMITED (-01), GAT NO.925/8K/2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT - KOLHAPUR. - 416203 PH :9923208454.
BULDHANA	1676. MANRAJ MOTORS PVT LTD (-01), GAT NO. 94, PLOT NO. 11, SUNDERKHEDE, BULDHANA, MAHARASHTRA - 443001 PH :7875051521.	COLVALE	1696. TRISTAR CARS PVT LTD (-01), PLOT NO 29, SURVEY NO 125/10PP SBI NAVEGAON BRANCH, MUL ROAD+ NAVEG - 442605	ICHALKARANSI
CHALISGAON	1677. MANRAJ MOTORS PVT LTD (-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA - 424101 PH :8408889861.	1685. SAI SERVICE PVT. LTD. (-08), PLOT NO.S-11, COLVALE INDUSTRIAL ESTATE, COLVALE, BARDEZ COLVALE - 403507	GANDHIGLAJ	1707. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 107, KOLHAPUR ROAD, KABNOOR, ICHALKARANJI - 416122
CHANDGAD	1678. SAI SERVICE PRIVATE LIMITED (-01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA - 416507 PH :9673339103.	DAHANU	1697. SAI SERVICE PRIVATE LIMITED (3802-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502	INDAPUR
CHANDRAPUR	1679. TRISTAR CARS PVT LTD (-01), NR. HOTEL KUNDAN PLAZA, NAGPUR ROAD, CHANDRAPUR - 442401 PH :77220688612.	1686. SAI SERVICE PRIVATE LIMITED (-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602	GARGOTI	1708. MAHALAXMI AUTOMOTIVES PVT LTD (-02), STATE HIGHWAY NO. 151, INDAPUR - 412219 PH :8308807314.
CHIMUR	1680. TRISTAR CARS PVT LTD (-03), NAGPUR ROAD, CHANDRAPUR - 442401 PH :77220688603.	DAHIWADI	1698. KR MOTORS KOLHAPUR PVT LTD (-01), 230 & 231, KOLHAPUR GARGOTI ROAD, KHANAPUR, TALUKA BHUDARGAD, DISTRICT KOLHAPUR, MAHARASHTRA. - 416209	ISLAMPUR
CHIPLUN	1681. ARYA CARS (A UNIT OF BARBATE AUTOMOTIVE PVT. (-01), ARYA CARS (A UNIT OF BARBATE AUTOMOTIVE, WORKSHOP /BODY SHOP- PLOT NO X-7 - 442401	1687. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-483/13/2, VILLAGE-DAHIWADI, DAHIWADI-SATARA ROAD, TALUKA-MAN, DIST-SATARA, MAHARASHTRA. - 415102	GEORAI	1709. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GATE NO.905/A/3, NEAR BOMBAY RAYAN, PUNE-BANGALOE HIGHWAY (NH-4), ISLAMPUR TALUKA : WALVA, DIST:SANGLI - 415409
	1682. TRISTAR CARS PVT LTD (-01), SHOP NO 1-2, OPP. RTM COLLEGE, CHIMUR, DIST-CHANDRAPUR, MAHARASHTRA - 442903 - 442903	DAPOLI	1699. PAGARIYA AUTO PVT LTD (-01), SHRI SIDDIHI VINAYAK COMPOUND, SURVEY NO 556, JALNA ROAD, GEORAI, DISTRICT - BEED, MAHARASHTRA (431127) - 431127	JALGAON
		DEHUGAON	GONDIA	JALNA
		1689. SUMANKIRTI CARS PVT LTD (-01), GAT NO 359, DEHU - ALANDRI ROAD, DEHUGAON, PUNE, MAHARASHTRA (412109) - 412109	1700. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-02), ITI ROAD, NR. FULCHUR NAKA, OPP LAXMI FLOUR MILL, GONDIA - 441601	1710. MANRAJ MOTORS PVT LTD (-01), AJINTA ROAD, MIDC INDL AREA, JALGAON - 425003
		DHAMANGAON	1701. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-03), ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441601	1711. KHANDESH MOTORS LLP (-01), GAT 248/2, TARSOD-SHIVAR, TAL & DIST - JALGAON, PIN - 425002, MAHARASHTRA - 425002
		DHULE	GONDIPURI	JATH
		1691. SEVA AUTOMOTIVE PVT LTD (-01), GATE NO. 90, AWADHAN, MUMBAI AGRA ROAD, DHULE - 424001	1702. TRISTAR CARS PVT LTD (-01), SURVEY NO. 338 , OPP. POLICE STATION , AHERI CHANDRAPUR ROAD, GONDIPURI PIN 442702 (MAHARASHTRA) - 442702	1712. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-02), PLOT NO. 4 & 5, CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA - 431203 PH :9158000063.
		DINDORI	GUHAGAR	1713. CHOWGULE INDUSTRIES PRIVATE LIMITED (-05), PLOT NO. 12, SAWANT ESTATE, MORE COLONY, OPP. CATTLE BAZAR, SATARA ROAD, JATH, DISTRICT SANGLI, MAHARASHTRA - 416404
		1692. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), S.NO.753, NEAR PANDAV PETROL PUMP, NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202 PH :9673000822.	1703. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703	1714. SIDDIHI WHEELS (A UNIT OF TAREALKAR MOTORS PVT LTD) (-01), GAT NO- 27/1B, POST-RAMPUR, JATH-SANGLI ROAD, TALUKA-JATH, DISTRICT-SANGLI - 416404 PH :8956454526.
		DOMBIVLI	HINGANGHAT	JAYSINGPUR
		1693. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-02), PLOT NO. B-43, PHASE-1, DOMBIVLI INDUSTRIAL AREA, DOMBIVLI, DISTT-THANE, MAHARASHTRA. - 421201	1704. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK - HINGANGHAT, DISTRICT - WARDHA, MAHARASHTRA. - 442301 PH :7722067843.	1715. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGGAON (JAYSINGHPUR), TALUKA-SHIROL, DIST: KOLHAPUR - 416134 PH :9673339762.
			HINGOLI	JEJURI

Dealer Workshop (AS ON 31.01.2026)

1716. EXCELL AUTOVISTA PRIVATE LIMITED (-01), GAT NO - 224, AT POST-SAKURDE, JEJURI, TALUKA-PURANDHAR, DISTRICT-PUNE, PIN-412303. - 412303 PH :9146052851.	1727. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), KARJAT-NAGAR ROAD, KARJAT, MAHARASHTRA - 414402 PH :9890843771.	KOLHAPUR	1749. JAGRUT MOTORS PRIVATE LIMITED (-01), GAT NO-863, TALUKA-LANJA, DIST - RATNAGIRI, MAHARASHTRA - 416701 - 416701 PH :8108718346.
KADEGAON	KARMALA	1738. SAI SERVICE PRIVATE LIMITED (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR - 416008	LASALGAON
1717. CHOWGULE INDUSTRIES PRIVATE LIMITED (- 01), GAT NO-248, KARAD ROAD, KADEGAON, TAL-KADEGAON, DIST-SANGLI, MAHARASTRA - 415304	1728. CHAVAN MOTORS DIVISION INDIA PVT LTD (- 01), GAT NO. 105, SURVEY NO. 3961, KARMALA-NAGAR ROAD, A/P- KARMALA, TALUKA - KARMALA, DIST.-SOLAPUR. - 413202 PH :80066565691.	1739. SAI SERVICE PRIVATE LIMITED (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122	1750. SHAAN CARS PVT LTD (-01), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA - NANDGAON, DISTRICT - NASHIK. - 422306
KALWAN	KATOL	1740. SAI SERVICE PRIVATE LIMITED (3802--06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. - 416012	LATUR
1718. SHAAN CARS PVT LTD (-01), GAT NO. 189, PLOT NO. 7, MALEGAON ROAD, A/P KALWAN, NASHIK. - 423501	1729. SEVA AUTOMOTIVE PVT LTD (-01), SURVEY NO-241/1, PLOT NO 03, THOMA LAYOUT JALALKHEDA ROAD,KATOL, MAHARASHTRA - 441302	1741. KR MOTORS KOLHAPUR PVT LTD (3804-38-01), PLOT NO. 216/2, 216/3, 216/5, NH-4, GOKUL SHIRGAON, KOLHAPUR. - 416234	1751. AUTOMOTIVE MANUFACTURERS PVT LTD (- 02), C-4/1319/1, SURVEY NO. 89/C, RING ROAD BETWEEN NANDED NAKA AND BABHALGAON NAKA, LATUR, PO & DIST-LATUR,PIN-413512. - 413512
KALYAN	KAVATE MAHANKAL	KONGAON	LOANAND
1719. AHER AUTOPRIME LLP (-01), SURVEY NO.53 & 54, HIND MILK, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI - 421301	1730. CHOWGULE INDUSTRIES PRIVATE LIMITED (- 01), MAHANKALI BAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 418405	1742. PRAKASH AUTO PVT LTD (3903--02), SURVEY NO.126/127,98/38,AT & POST KONGAON, - 421302	1752. SIDDIH WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SR NO - 353/2, NEAR RAILWAY BRIDGE, PUNE-SATARA ROAD, LOANAND, SATARA, MAHARASHTRA - 415521. - 415521
1720. AHER AUTOPRIME LLP (-02), SURVEY NO.31B,MOHANE ROAD ,NEAR SHAHAD RAILWAY STATION,SHAHAD,KALYAN. - 421103	KHAMGAON	1743. SHAAN CARS PVT LTD (-01), SURVEY NO. 15/36 GAWARE PATIL ESTATE, NAGAR MANMAD HIGHWAY, NEAR ASHOKA HOTEL, KOPARGAON. - 423601 PH :9075028780.	LONAVALA
KAMSHET	1731. MANRAJ MOTORS PVT LTD (-01), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON , MAHARASHTRA - 444303	KOPARGAON	1753. SEHGAL AUTORIDERS PVT LTD (-01), GATE NO. 120/1, VILLAGE - WAKSAI, TALUKA - MAVAL, LUNAVALA, DISTRICT - PUNE, MAHARASHTRA. - 410405
1721. SEHGAL AUTORIDERS PVT LTD (-01), AT NAYGAON, POST KAMSHET, TALUKA MAVAL, DISTRICT PUNE, MAHARASHTRA (410405). - 410405 PH :8888881358.	KHANAPUR (SANGLI)	KOREGAON BHIMA	LONI
KANKAVALI	1732. CHOWGULE INDUSTRIES PRIVATE LIMITED (- 01), KHANAPUR VITA ROAD, KHANAPUR, TAL-KHANAPUR, DIST-SANGLI - 415307 PH :9767899653.	1744. SAI SERVICE PRIVATE LIMITED (-01), GAT NO-373, VILLAGE-KOREGAON BHIMA, TALUKA-SHIRUR, DIST-PUNE. - 415501 PH :7774997005.	1754. MAHALAXMI AUTOMOTIVES PVT LTD (-01), GAT NO. 55/5, SANGAMNER LONI ROAD, LONI, TALUKA-RAHATA, AHMEDNAGAR MAHARASHTRA - 413736
1722. JAGRUT MOTORS PRIVATE LIMITED (-05), PLOT NO.32-33,SURVEY NO. -1886/1,,MUMBAI-GOA HIGHWAY (NH-17),JANAVLI,KANKAVLI,MAHARASHTRA - 416002	KHARGHAR	KUDAL	MAHAD
KANNAD	1733. EXCELL AUTOVISTA PRIVATE LIMITED (-01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210	1745. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA - KUDAL, DISTRICT - SINDUDURG, MAHARASHTRA - 416520	1755. SIMRAN MOTORS PVT LTD (-04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301 PH :9870404323.
1723. AUTOMOTIVE MANUFACTURERS PVT. LTD. (- 01), SURVEY NO 208/2, NEAR DEEPAK PETROL PUMPCHALISGAON ROAD , KANNAD - 431147	KHED	KUDITRE	MALEGAON
KARAD	1734. JAGRUT MOTORS PRIVATE LIMITED (-01), GAT NO - 43/B, MAUZA-BHARNE NAKA, TALUKA-KHED, DIST-RATNAGIRI. - 415709 PH :9689533472.	1746. SAI SERVICE PRIVATE LIMITED (-01), KUDITRE FACTORY PHATA, A/P -KOPARDE, TALUKA-KARVEER, DIST-KOLHAPUR-416205. - 416205 PH :9923208460.	1756. SHAAN CARS PVT LTD (3703--02), GAT NO. 273, POST-TEHARE, MALEGAON, AB HIGHWAY, NH-3, DISTRICT-NASHIK - 422303
1724. CHOWGULE INDUSTRIES PRIVATE LIMITED (- 02), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110 PH :9922569835.	KHED SHIVAPUR	KURJUDWADI	MALKAPUR
KARANJA	1735. SEHGAL AUTORIDERS PVT LTD (-01), GATE NO. 763A, PUNE BANGALORE HIGHWAY, VELU VILLAGE, TEHSIL BHOR, OPP. INDIAN - 412205	1747. CHAVAN MOTORS DIVISION INDIA PVT LTD (- 01), GAT NO.256, BYPASS ROAD, A/P KURDA, TALLUKA-MADHA, DISTT. SOLAPUR. - 413208 PH :88066565691.	1757. KR MOTORS KOLHAPUR PVT LTD (-01), AT PO - MALKAPUR, YELANE-SAHUWADI, KOLHAPUR-RATNAGIRI ROAD, DIST- KOLHAPUR, PIN-416105. - 416105
1725. ASPA BANDSONS AUTO (P) LTD (-01), MAA GODAVARI NAGAR, NAGPUR-AURANGABAD HIGHWAY, KARANJA, DISTRICT - WASHIM, MAHARASHTRA - 444104. - 444104	KHOPOLI	KURUNDWAD	MANCHAR
KARJAT	1736. KIRAN MOTORS LIMITED (-01), PLOT NO-68, VILLAGE-MULGAON, KHOPOLI INDUSTRIAL ESTATE, KHOPOLI, TALUKA-KHALAPUR DIST-RAIGARH - 410204	1748. SAI SERVICE PRIVATE LIMITED (-01), GAT NO. 250, AT POST - KURUNDWAD, TALUKA - SHUROO, DIST.-KOLHAPUR - 416106 PH :9673339695.	1758. KOTHARI AUTO WHEELS PVT LTD (-01), SOHAMI NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, A/P MANCHAR, TALLUKA- AMBEGAON, DISTT: PUNE, MAHARASHTRA - 410503 PH :8411003608.
1726. SIMRAN MOTORS PVT LTD (-03), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201	KOLAD	LANJA	MANGALVEDHA
	1737. EXCELL AUTOVISTA PVT LTD (-01), GATE NO.154,AT BHUVAN KOLAD,, MUM-GOA HIGHWAY,RAIGAD. - 402112		

1759. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), NEAR SWARAJYA HOTEL, PANDHARPUR ROAD, CHOKAMELANAGAR, MANGALWEDHA, MAHARASHTRA, PIN-413305 - 413305 PH :8805778881.	1770. CHOWGULE INDUSTRIES PRIVATE LIMITED (-03), 42C ,OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410	1785. KIRAN MOTORS LIMITED (-01), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, CHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086 - 400086	1798. ARUN MOTORS PRIVATE LIMITED (2008--01), PLOT NO-9&10, PATNI PLAZA, KHAMLA RING ROAD, SAVARKAR NAGAR, NAGPUR, MAHARASHTRA - 440025
MANGAON	MORGAON	1786. MY CAR (PUNE) PVT LTD (-01), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072 PH :8104907081.	1799. ARUN MOTORS PRIVATE LIMITED (2008--02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028 PH :7757988900.
1760. SIMRAN MOTORS PVT LTD (-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOIA HIGHWAY, MANGAON, RAIGAD, MAHRASHTRA. - 402104 PH :9223181120.	1771. MAHALAXMI AUTOMOTIVES PVT LTD (-01), GAT NO-179, MORGAON, - TALUKA- BARAMATI, DIST-PUNE - 412304 PH :9850994014.	MURGD	1800. SEVA AUTOMOTIVE PVT LTD (2009-20-01), P.S.K 14, REVENUYE CIRCLE, KH NO.84, NEAR KORADI POLICE STATION, PANJARA - 480115
1761. SIMRAN MOTORS PVT LTD (-02), GAT NO-65/2K, NANORE GAON, - 402104	MUMBAI	1787. SAI SERVICE PRIVATE LIMITED (-01), R.S. NO. 188/4, A/P MURGD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219	NALASOPARA
MANMAD	1772. SAI SERVICE PRIVATE LIMITED (-01), 462 SENAPATI BAPAT MARG,WORLI NAKA,LOWER PAREL,MUMBAI - 400013	MURTIZAPUR	1801. SHIVAM AUTOZONE INDIA PVT LTD (-01), SURVEY NO. 91.92 , PLOT NO. 7, VILLAGE-DHANIV, NALASOPARA, DIST. PALGHAR, MAHARASHTRA - 401209
1762. SHAAAN CARS PVT LTD (-01), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104	1773. SAI SERVICE PRIVATE LIMITED (-02), ARVIND CHAMBERS,194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069	1788. KHANDELWAL AUTOWHEELS PVT LTD (-01), SURVEY NO 38, MAUJA SONORI, NH 06, NEAR HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA - 444107 PH :8484063274.	NANDED
MANOR	1774. VITESSE PRIVATE LIMITED (-01), SHAH INDLESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058	NAGOTTHANE	1802. SEVA AUTOMOTIVE PVT LTD (6801-68-01), GAT NO-126, NEAR SUNDER PETROL PUMP, A/P PIMPALGAON MAHADEO, TQ-ARDHAPUR, NAGPUR-NANDED HIGHWAY,NANDED, MAHARASHTRA-431704 - 431604 PH :7447415607.
1763. SAI SERVICE PRIVATE LIMITED (-01), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST - TAKVAHAL, DISTRICT - PALGHAR, MANOR. - 401403 PH :9167980005.	1775. VITESSE PRIVATE LIMITED (-02), 77 AF PALKY GULLY,OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025	1789. SIMRAN MOTORS PVT LTD (-01), SURVEY NO.241, PLOT NO. 11, MOUJE CHIKANI, ROHA, RAIGADH. - 402106	NANDURBAR
MARKAL	1776. SAH & SANGHI AUTO AGENCIES PVT LTD (-01), PRAKASH MILLS COMPOUND,OFF. GLOBE MILLS PASSAGE, WORLI,MUMBAI - 400013	NAGPUR	1803. SEVA AUTOMOTIVE PVT LTD (-02), P. NO.-324, BASILAL NAGAR SHAHADA BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFULLY NANDURBAR-425412 - 425412 PH :7720017528.
1764. MY CAR (PUNE) PVT LTD (-01), SRV NO 1283/2 & 1284, KAMALAJI WASTI, OPP. ENPRO INDUSTRIES, ON ALANDI MARKAL ROAD, A/P MARKAL, TEHSIL-KHED, DIST PUNE, PIN CODE NO. 412105. - 412105	1777. SAI SERVICE PRIVATE LIMITED (-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND,DATTA PADA ROAD,BORIVILI (EAST)MUMBAI - 400066	1790. SEVA AUTOMOTIVE PVT LTD (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR - 440023	NARAYANGAON
MAUDA	1778. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAI - 400070	1791. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-20-02), 575 KAMPTEE ROAD,NAGPUR-26,, - 440026	1804. KOTHARI AUTO WHEELS PVT LTD (-01), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :8411003608.
1765. ARUN MOTORS PVT LTD (-01), NEAR NIRMAL UJJWAL BANK, MAIN ROAD, - 441104	1779. FORT POINT AUTOMOTIVE CARS PVT LTD (-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096	1792. SEVA AUTOMOTIVE PVT LTD (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA - 440018	NASHIK
MAYANI	1780. SHIVAM AUTOZONE INDIA PVT LTD (-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA - 400067	1793. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD,NAGPUR - 440035	1805. AUTOMOTIVE MANUFACTURERS PVT LTD (3702-37-01), P-1-12,ADDITIONAL NASIK INDL. AREA,AMBAD,NASIK - 422010
1766. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO - 2101/1, 560/1, MAYANI VADUJ ROAD, A/P- MAYANI, TAL-KHATAV, DIST-SATARA-415102. - 415102 PH :8888666659.	1781. VITESSE PRIVATE LIMITED (-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067	1794. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-20-05), PLOT NO. 38/1, NEAR BOODDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001	1806. SEVA AUTOMOTIVE PVT LTD (3701-37-01), PLOT NO. X - 46,MIDC, AMBAD, NASIK - 422010
MEDHA	1782. FORT POINT AUTOMOTIVE CARS PVT LTD (-03), C/O VARUN STEEL INDUSTRIES.AAM TOOL COMPOUND,BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI - 400010	1795. BARBATE AUTOMOTIVE INDIA PVT LTD (2007-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASHTRA - 440018 PH :8888859542.	1807. SHAAAN CARS PVT LTD (3703-37-01), E-3 MIDC AREA,SATPUR , NASIK,MAHARASHTRA - 422007
1767. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-76-24/25,OPP.PWD OFFICE,A/P-JAWALWADI(MEDHA),TAL-JAOLI,DI ST- SATARA, MAHARASHTRA-415012 - 415012	1783. SHIVAM AUTOZONE INDIA PVT LTD (-02), PLOT NO. 485, RAMCHANDRA LANE EXTN., OFF LINK ROAD, KANCHPADA, MALAD-WEST, MUMBAI. 400064 - 400064	1796. BARBATE AUTOMOTIVE INDIA PVT LTD (2007-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASHTRA. - 441202 PH :8888820312.	1808. SHAAAN CARS PVT LTD (3703-37-04), 03/8/10, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011
MHASLA	1784. VELOX MOTORS PVT LTD (-01), PLOT NO.115/116/117 MIVERVA INDUSTRIAL ESTATE, MULLUND-WEST, MUMBAI - 400080	1797. SEVA AUTOMOTIVE PVT LTD (2002--04), PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED, KH NO.45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027 PH :8390446644.	1809. SEVA AUTOMOTIVE PVT LTD (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH :9146000709.
1768. EXCELL AUTOVISTA PRIVATE LIMITED (-01), SURVEY NO-27, VILL- SAVAR, TALUKA- MHASLA, DIST- RAIGAD - 402105			1810. SEVA AUTOMOTIVE PVT LTD (-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006
MHASWAD			1811. SEVA AUTOMOTIVE PVT LTD (-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004
1769. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO 287/5, SATARA-PANDHARPUR ROAD, A/P-MHASWAD(MASAIWADI), MAHARASHTRA - 415509			
MIRAJ			

Dealer Workshop (AS ON 31.01.2026)

1812. SHAAN CARS PVT LTD (3703-37-05), SURVEY NO / PLOT NO. 02, ADGAON, D-MART, MUMBAI AGRA HIGHWAY, NASHIK - 423101	OTUR	1835. ASPA BANDSONS AUTO (P) LTD (-01), SURVEY NO. 26/4A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA - ACHALPUR, DISTRICT - AMRAVATI. - 444805 PH :8888897629.	1845. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO. 33, MOJUA - CHITKI, MOJUA NO - 2/33, HINDUSTAN COLONY, WARDHA ROAD, GRAM PANCHAYAT - LAXMINARAYANPUR, AT POST - PULGAON, TEHSIL - DEOLI, DISTRICT - WARDHA. - 442302
1813. SHAAN CARS PVT LTD (-06), SURVEY NO.772, VHIHTGAON-VADNER ROAD, DEOLALI, NASHIK - 422401	1825. KOTHARI AUTO WHEELS PVT LTD (-01), GAT NO-184/3/B, ALEPHATA-KALYAN ROAD, OPP HP PETROL PUMP, VILLAGE-OTUR, TALUKA-JUNNAR, DIST-PUNE - 412409 PH :8411003608.	PARBHANI	PUNE
NASRAPUR	PABAL	1836. PAGARIYA AUTO PVT LTD (-01), SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI - 431401 PH :9511868433.	1846. SAI SERVICE PRIVATE LIMITED (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012
1814. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-152/2, PUNE SATARA HIGHWAY, AT POST: NASRAPUR CHELADI, TALUKA - BHOR, PUNE, MAHARASHTRA - 412213	1826. MAHALAXMI AUTOMOTIVES PVT LTD (-01), 3733, SHINALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403 PH :8956288087.	PARGAON	1847. SAI SERVICE PRIVATE LIMITED (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004 PH :9923208347.
NAVI MUMBAI	PADGHA	1837. MAHALAXMI AUTOMOTIVES PVT LTD (-01), PARGAON PHATA, KEDGAON PARGAON ROAD, PARGAON, PUNE, MAHARASHTRA - 412203. - 412203	1848. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-02), S.NO 53 PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046
1815. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-01), D-234 MIDC TTC INDL AREA,SHIRVANE NERUL,NEW BOMBAY, - 400706	1827. SHIVAM AUTOZONE INDIA PVT. LTD. (-01), SHOP NO 7/8,TRADE CENTRE., MUMBAI NASHIK HW,NEAR PADGHA TOLL PLAZA, - 421101	PATAN	1849. SAI SERVICE PRIVATE LIMITED (1901-19-03), S.NO.15A GIOWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH :9923208345.
1816. EXCELL AUTOVISTA PRIVATE LIMITED (-02), PLOT NO-9,MIDC,NAVADE,TALOJA, TAL-PANVEL ,DIST-RAIGAD - 410208	PAITHAN	1838. CHOWGULE INDUSTRIES PVT. LTD. (-01), GAT NO 1543/PLOT NO 2., A/P-MHAVSHI,PATAN-MANDURE ROAD. - 415206	1850. WONDER CARS PVT LTD (1903-19-02), 12, NPS LINES,SOLAPUR ROAD, OLD POOL GATE,CAMP, PUNE - 411001
1817. SIMRAN MOTORS PVT LTD (3913-01), CAMEO FABRIC COMPANY, GEN 16, NEAR SOLZER COMPANY, DIGHA, TTC AREA, AIROLI - 400701	1828. PAGARIYA AUTO PVT LTD (-01), GAT NO-277, MAUZA- PAITHAN, TALUKA- PAITHAN, DIST - AURANGABAD 431107. - 431107 PH :9922994237.	PATAS	1851. KOTHARI AUTO WHEELS PVT LTD (1984-19-11), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH :7498272309.
1818. MY CAR (PUNE) PVT LTD (-01), A-7512, MIDC TTC, TURBHE MAHAPE ROAD, PAWANE, NAVI MUMBAI - - 400071	PALGHAR	1839. MAHALAXMI AUTOMOTIVES PVT LTD (-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH :8888890957.	1852. MY CAR (PUNE) PVT LTD (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057
1819. SAI SERVICE PRIVATE LIMITED (-06), D 42, TTC INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 - 400705	1829. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404	PEN	1853. CHOWGULE INDUSTRIES PRIVATE LIMITED (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046
NERAL	PALUS	1840. SIMRAN MOTORS PVT LTD (-01), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107 PH :9503381198.	1854. SAI SERVICE PRIVATE LIMITED (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019
1820. EXCELL AUTOVISTA PRIVATE LIMITED (-01), NEAR OLD JAKAT NAKA, GANESH NAGAR, PAYARMAL, NERAL, TALUKA - KARJAT, DISTRICT - RAIGAD, MAHARASHTRA (410101). - 410101	1830. CHOWGULE INDUSTRIES PRIVATE LIMITED (-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308 PH :8888870122.	PHALTAN	1855. CHOWGULE INDUSTRIES PRIVATE LIMITED (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046
NESARI	PANDHARPUR	1841. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO 83/1B/1, LONAND-PUNE ROAD, PHRANANDIWADI, TALUKA-PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523 PH :8888886301.	1856. SAI SERVICE PRIVATE LIMITED (1901-19-06), SURVEY NO.244/1, HINGE-WII, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057 PH :9923208302.
1821. KR MOTORS KOLHAPUR PVT LTD (-01), S.NO. 2452, SUNDAR NAGAR, A/P NESARI, TAL-GADINLAJ, DIST- KOLHAPUR-416504. - 416504	1831. CHAVAN MOTORS DIVISION INDIA PVT LTD (-05), 410/A/3, A/P- WAKHARI, PHALTAN ROAD,PANDHARPUR, DIST-SOLAPUR.	PIMPLEGAON	1857. KOTHARI AUTO WHEELS PVT LTD (1984-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019 PH :9186662302.
NEVASA	GAT NO.56, ESABAVI, PUNE ROAD, TAL-PANDERPUR, SOLAPUR - 413001 PH :7774997005.	1842. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202	1858. MAHALAXMI AUTOMOTIVES PVT LTD (1912-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH :8888874980.
1822. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA - NEVASA, DISTRICT - AHMEDNAGAR. - 414603 PH :9420494601.	PANVEL	1843. MY CAR (PUNE) PVT LTD (-01), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108. - 412108 PH :9325424613.	
NIPHAD	1832. SIMRAN MOTORS PVT LTD (-01), PLOT2-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBAI PUNE HIGHWAY,PANVEL - 410206	POYNAD	
1823. SHAAN CARS PVT LTD (-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT - NASHIK, MAHARASHTRA. - 422303 PH :9075028780.	1833. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206	1844. MY CAR (PUNE) PVT LTD (-01), SURVEY NO-52/2, SUBASH NAGAR, MUMBAI-GOA HIGHWAY, A/P-AMBEPUR, POYNAD, TALUKA-LIBAUG, DIST-RAIGAD, PIN-402108. - 402108	
OSMANABAD	1834. K.T.S. AUTOMOTORS PVT LTD (-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207	PULGAON	
1824. CHAVAN MOTORS DIVISION INDIA PVT LTD (-03), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501 PH :8888867861.	PARATWADA		

1859. SAI SERVICE PRIVATE LIMITED (1901-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. - 411048 PH :9923208358.	1871. MAHALAXMI AUTOMOTIVES PVT LTD (1912-19-05), LANE NO 9, SANT NAGAR, BEHIND IOCL PETROL PUMP, LOHEGAON, PUNE, MAHARASHTRA-411047 - 411047 PH :8956045026.	SAKOLI 1883. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), PLOT NO. 7, GAT NO. : 271/1/4, MOUZA - JAMBHALI, TAHASIL - SAKOLI, DIST : BHANDARA, PIN - 441802. - 441802	1893. BARBATE AUTOMOTIVE INDIA PVT LTD (-01), PLOT NO.2, MADANE LAYOUT, MOUZA GUJARKHEDI, NR. INDIAN PETROL PUMP, NAGPUR ROAD, SAVNER DIST. NAGPUR, - 441107 PH :8898859546.
1860. WONDER CARS PVT LTD (1903-03), PLOT NO.52/1 BLOCK F, MIDC, PIMPRI, PUNE. - 411018	1872. MY CAR (PUNE) PVT LTD (1918-19-02), GAT NO. 624, HISSA NO. 5/2, VILLAGE-KURULLI, CHAKAN, TAL. KHED, DIST. PUNE, NEAR SAI EXPRESS WAY PETROL PUMP, PIN-410501. - 410501	SANGAMNER 1884. SHAAN CARS PVT LTD (-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605	SAWANTWADI 1894. JAGRUT MOTORS PRIVATE LIMITED (-01), SHIVSHAMBHO APARTMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. - 416510
1861. MAHALAXMI AUTOMOTIVES PVT LTD (1912-04), NO 485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016 PH :8888842887.	1873. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-07), SURVEY NO 245/6,7,9/1, KHARABWADI CHAKAN - 410501	SANGLI 1885. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH :9850966805.	SHAHAPUR 1895. SHIVAM AUTOZONE INDIA PVT LTD (-01), DR. DESHPANDE COMPOUND, NEAR BHATSA COLONY, VILLAGE - GOTHEGHAR, TALUKA - SHAHPUR, DISTRICT - THANE, MAHARASHTRA - 421601 PH :7718893483.
1862. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033	1874. EXCELL AUTOVISTA PRIVATE LIMITED (1917-19-02), S.NO. 41/2B/1 PART CHOUDHARI VASTI, KHARADI, PUNE - 411014	SANGOLA 1887. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA - SANGOLA, DIST. -SOLAPUR, - 413307 PH :8806665691.	SHAHUWADI 1896. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 1213, RIAT DONOLI, TALUKA - SHAHUWADI, DIST. -KOLHAPUR - - 416213 PH :9923208448.
1863. SAI SERVICE PRIVATE LIMITED (1901-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT - PUNE, MAHARASHTRA. - 411041 PH :9923208312.	PUSAD 1875. HIMALAYA CARS (-01), OPP P N COLLEGE, GAIMLUKH NAGAR,YAVATMAL / DIGRAS ROAD, PUSAD - 445204 (DIST YAVATMAL, MAHARASHTRA) - 445204	SANKH 1888. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO-394/5, VILLAGE- SANKH, TALUKA-JATH, DIST- SANGLI, MAHARASHTRA - 416413	SHILTPATA 1897. VELOX MOTORS PVT LTD (-01), SURVEY NO- 99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTA MANDIR, POST-PADALE, DIST-THANE, PIN-421204. - 421204 PH :8419984188.
1864. KOTHARI AUTO WHEELS PVT LTD (1984-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028	RAHATA 1876. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), SHIRDI ROAD, SAKORI, RAHATA, - 423107 PH :8275033313.	SAPHALE 1889. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (-01) H.NO.1137/1138/1139., NUTAN NAGAR,MAKNE THEMHIKODAWA ROAD, MAHARASHTRA - 401102	SHIRUR 1898. MAHALAXMI AUTOMOTIVES PVT LTD (1912-02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJURUR, DIST: PUNE, MAHARASHTRA - 412120
1865. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-06), SR. NO.- 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE. SATARA ROAD, PUNE. - 411009	RAHURI 1877. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH :9420036767.	SASWAD 1890. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301	SHIRWAL 1899. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH :9637399003.
1866. EXCELL AUTOVISTA PRIVATE LIMITED (1917-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE -WADKI, TAL - HAVELI, DIST. PUNE. - 412308	RAJAPUR 1878. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702	SATANA 1891. SHAAN CARS PVT LTD (-01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 - 423301 PH :9922969656.	SHRIRAMPUR 1901. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709 PH :9420494543.
1867. KOTHARI AUTO WHEELS PVT LTD (1984-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH :8411003631.	RAJGURUNAGAR 1879. MY CAR (PUNE) PVT LTD (-01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH :9112231553.	SATANA 1892. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO. B-2,OLD MIDC,SATARA - 415002	SIKRAPUR
1868. SUMANKIRTI CARS PVT LTD (1915-19-02), SURVEY NO.9, NEAR BALEWADI SPORTS STADIUM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH :8551990106.	RAMTEK 1880. SEVA AUTOMOTIVE PVT LTD (-01), MOUZA NO 275, P H NO 24, GRAM PANCHAYAT - MANSAR,TEHSIL - RAMTEK, DISTRICT - NAGPUR, MAHARASHTRA. - 441401 PH :7758028060.	SATANA 1891. SHAAN CARS PVT LTD (-01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 - 423301 PH :9922969656.	
1869. MY CAR (PUNE) PVT LTD (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE - KURULLI, TALUKA - KHED, CHAKAN, DISTRICT - PUNE. - 410501 PH :7755900000.	RATNAGIRI 1881. JAGRUT MOTORS PRIVATE LIMITED (-01), D-25, MIDC MIRJOLE,MAHARASHTRA,RATNAGIRI - 415639	SATARA 1892. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO. B-2,OLD MIDC,SATARA - 415002	
1870. WONDER CARS PVT LTD (1903-04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA - MULSHI, DANGE CHOWK, PUNE - 411 033. - 411033 PH :7887883311.	ROHA 1882. EXCELL AUTOVISTA PRIVATE LIMITED (-01), SHOP NO. 1 & 2, PANCHARATNA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109 PH :9209200073.		

Dealer Workshop (AS ON 31.01.2026)

1902. EXCELL AUTOVISTA PRIVATE LIMITED (-01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PH-412208, PUNE - 412208 PH :9146194973.	1914. NAVNIT MOTORS PVT LTD (3908-39-02), B R T PLOT ,THANE (W), MAHARASHTRA - 400607	1925. EXCELL AUTOVISTA PRIVATE LIMITED (-01), GAT NO-244, VILLAGE-SORTAPWADI, TALUKA -HAVELI, URULIKANCHAN, DIST-PUNE, PH-412201 - 412201 PH :8097452280.	WADA
SILLOD	1915. VELOX MOTORS PVT LTD (-02), NEW SURVEY NO. 17/1B, NEAR BLUE ROOF CLUB, VILLAGE - OWALE, GHODBUNDER ROAD, THANE (W), - 400615	VADUJ	1936. SHIVAM AUTOZONE INDIA PVT LTD (-01), SHIVAM SURVEY NO-133/7/1, SAIKRUPA BUILDING, WADA-BHIWANDI ROAD, VILLAGE-GANDHARE, TAL-WADA, DIST -PALGHAR 421303. - 421303
1903. PAGARIYA AUTO PVT LTD (2103-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213.	1916. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (3915-39-01), BRILLIANT COMPLEX, WESTERN EXPRESS HIGHWAY, MIRA ROAD, THANE- 401107. - 401107 PH :8591942704.	1926. CHOWGULE INDUSTRIES PRIVATE LIMITED (-03), KALEVASTI, VADUJ DAHIWADI ROAD , VADUJ - 415506 PH :8888866659.	WAGHOLI
SINNAR	1917. VELOX MOTORS PVT LTD (3914-39-01), PLOT NO: A-66, ROAD NO 21, NEHRU NAGAR, WAGLE INDUSTRIAL ESTATE, THANE WEST, MAHARASHTRA - 400604	VAIJAPUR	1937. SAI SERVICE PRIVATE LIMITED (1901-04), GAT NO 2408/1440, VILLAGE- WAGHOLI, TAL- HAVELI, DIST- PUNE - 412207
1904. SHAAH CARS PVT LTD (3703-03), A-24, MIDC AREA MALEGAON, SINNAR TAL- SINNAR, - 422103	TITWALA	VASAI	WAI
SOLAPUR	1918. AHER AUTOPRIME LLP (-01), SURVEY NO. 23/2, SHOP NO. 3, NEAR GOVELI, TITWALA ROAD, GHOTSAL, TITWALA, PIN-421301, MAHARASHTRA - 421301 PH :18008334369.	1927. PAGARIYA AUTO PVT LTD (-01), NEAR SUBHASH BUNGLOW, STATION ROAD, VAJAPUR, AURANGABAD. - 423701 PH :9922994237.	1938. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL - WAI, DISTT. SATARA - 412803 PH :8380080501.
1905. CHAVAN MOTORS DIVISION INDIA PVT LTD (-02), 150, AKALKOT ROAD, OPP. SVCS HIGH SCHOOL, SOLAPUR, - 413006	TRIMBAK	1928. SAI SERVICE PRIVATE LIMITED (-01), ANDRADESH BHAVANI, SURVEY #27 A, NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASHTRA - 401202	WALUJ
1906. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), 18, 39, INDUSTRIAL ESTATE, HOTAGI ROAD, SOLAPUR, - 413224 PH :880577881.	1919. SHAAH CARS PVT LTD (-01), SURVEY NO. 260/3, OPPOSITE MSEB OFFICE, NEAR GOVT. GEST HOUSE; SWAMI SAMARTH BUS STOP; TRIMBAKESHWAR-NASHIK HIGHWAY; AT POST/TAL: TRIMBAKESHWAR DIST: NASHIK PH : 422212 - 422212	1929. SAI SERVICE PRIVATE LIMITED (-03), C/O MR. KENNETH NICHOLAS D'SOUZA, SURVEY NO-89, SATIVALI ROAD, VILLAGE-WALIV, VASAI (EAST), DIST-PALGHAR, MAHARASHTRA, PIN-410208 - 401208	1939. PAGARIYA AUTO PVT LTD (2103-03), E-16, WALUJ, AURANGABAD - 431001 PH :9860999466.
1907. CHAVAN MOTORS DIVISION INDIA PVT LTD (-06), PLOT NO.95, IND. ESTATE, HOTAGI ROAD, SOLAPUR, - 413003 PH :8805986826.	TUMSAR	1930. SAI SERVICE PRIVATE LIMITED (-04), SURVEY NO. 152, VASAI MUMBAI HIGHWAY, BEHIND INDIA OIL PETROL PUMP, SASUNAVGARH - 401208	WARANANAGAR
TALASARI	1920. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), GAT NOS. 1350/149 & 1350/150, VILLAGE TUMSAR, TQ TUMSAR, DIST.- BHANDARA, STATE-MAHARASHTRA - 441912 PH :7391075992.	VASIND	1940. SAI SERVICE PRIVATE LIMITED (-01), GAT NO :1122/A, KODOLI, TALUKA: PANHALA, DIST. KOLHAPUR - 416114 PH :9923204173.
1908. SHIVAM AUTOZONE INDIA PVT LTD (-01), SURVEY NO. 191/1 PLOT NO. 5, AT-POST - VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606	ULWE	1931. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (-01), NISARG GARDEN RESORT, MUMBAI NASHIK HIGHWAY NH3, VASIND WEST, - 421601	WARDHA
TALEGAON DABHADE	1921. MY CAR (PUNE) PVT LTD (-01), SURVEY NO-97/8, HOUSE NO-1498, A/P JASAI, ULWE, TEHSIL-LURAN, DIST-RAIGAD, PIN NO-410206. - 410206	VELHE	1941. SEVA AUTOMOTIVE PVT LTD (2002-02), GOPURI CHOWK ,OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001
1909. MY CAR (PUNE) PVT LTD (-01), SR.NO.113, HISSA NO.1/3/2/A, MUMBAI PUNE OLD HIGHWAY, MAVAL, TALEGAON - 410506 PH :9730855855.	UMADI	VIKRAMGADH	1942. SEVA AUTOMOTIVE PVT LTD (2002-05), PLOT NO. 177, WARDHA-NAGPUR HIGHWAY, AT. PAVNAR, TEHSIL - WARDHA, DIST.-WARDH, PIN-442111, MAHARASHTRA - 442111 PH :772009444.
TASGAON	1922. SIDDIH WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), 1822, INDRAYANI SANKUL, JATH ROAD, UMADI, TALUKA-JATH, PIN-416413. - 416413	1932. SUMANKIRTI CARS PVT LTD (-01), MAUZA NO-492/2, A/P-VELHA, TAL- VELHA, DIST-PUNE-412212 - 412212	WARUD
1910. SIDDIH WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SHETKARI MARKET, NEAR ISHA HOTEL, TASGAON-SANGLI ROAD, TALUKA - TASGAON, DIST.-SANGLI - 416312 PH :82759030748.	UMBRAJ	1933. SHIVAM AUTOZONE INDIA PVT LTD (-01), NEAR GOVERNMENT DISPENSARY HOSPITAL, DAHANU ROAD, TEHSIL-VIKRAMGADH, DIST-PALGHAR-401605 - 401605 PH :8082551080.	1943. ASPA BANDSONS AUTO (P) LTD (-04), SURVEY NO. 50/3, SETURJANAGATH ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906 PH :7248925687.
TEMBHURNI	1923. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SHOP-4,5,6 - GANRAJ COMPLEX, GAT NO. -213, UMBRAJ, TAL-KARAD, DIST-SATARA - 415109	VIRAR	WASHIM
1911. CHAVAN MOTORS DIVISION (I) PVT LTD (-01), GAT NO.5602/A, OLD PUNE ROAD, NEAR SUMAN THEATRE, TEMBHURANI - 413221	UNDRI, PUNE	1934. SAI SERVICE PRIVATE LIMITED (-02), SURVEY NO.16, AGASHI ROAD, PADMAN NAGAR, VIRAR-WEST, DISTT. PALGHAR. - 401301	1944. ASPA BANDSONS AUTO (P) LTD (-02), NEAR RAILWAY CROSSING, HIGOLI ROAD, WASHIM, - 444505
THANE	1924. KOTHARI AUTO WHEELS PVT. LTD. ,OPP. 312/1/11, KATRAJ BYPASS ROAD, -07P. INDIAN OIL PETROL PUMP, URALI - 412307	VITA	1945. ASPA BANDSONS AUTO (P) LTD (-06), B-31, HINGOLI ROAD, MIDC-WASHIM, PIN-444505. - 444505
1912. PRAKASH AUTO PVT LTD (3903-39-01), U NO-3, SHEET NO. 30, VITHALWADI STATION ROAD, ULHASNAGAR - 421003	URALI KANCHAN	1935. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO. 900, HISSA NO. 1.2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA - KHANAPUR, DISTRICT - SANGLI, MAHARASHTRA - 415311 PH :8888870120.	YAVATMAL
1913. FORT POINT AUTOMOTIVE CARS PVT LTD (3906-39-01), KOTHARI WAREHOUSE NO. 111, POKHRAN ROAD NO. 11, MANPADA, CHATALSAR, THANE - 400607			1946. HIMALAYA CARS (-01), OPPOSITE RAUT PETROL PUMP, DARIWHA ROAD, YAVATMAL, MAHARASHTRA - 445001

1947. SEVA AUTOMOTIVE PVT LTD (-01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA - YEOLA, DISTRICT - NASHIK, MAHARASHTRA. - 423401
PH :9130033944.

YEWAT

1948. MAHALAXMI AUTOMOTIVES PVT LTD (-01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). - 412202
PH :8308818946.

MANIPUR

BISHNUPUR

1949. EASTERN MOTORS (-01), BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR DISTT. MANIPUR. - 795126

CHANDEL

1950. EASTERN MOTORS (-01), KAKCHING LAMKHAI, AH1 (INDO BURMA ROAD), CHANDEL (MANIPUR) - 795103

IMPHAL

1951. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795001
PH :8415945626.

1952. EASTERN MOTORS (7401-74-02), NH.39, CHINGMEIRONG, WEST, IMPHAL - 795010
PH :8415945626.

1953. SAMADON ENTERPRISE (-01), 82 GHARI MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795140
PH :7005987123.

JIRIBAM

1954. EASTERN MOTORS (-01), AT HILGHAT, IMPHAL SILCHAR ROAD, JIRIBAM - 788104
PH :8415945626.

MAYANG

1955. EASTERN MOTORS (-01), MAYANG IMPHAL, THANA-AWANG, LEIKAI, OPPOSITE PRAVABATI COLLEGE, PIN-795132, MANIPUR - 795132

SENAPATI

1956. EASTERN MOTORS (-01), DIST.-COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI, SENAPATI, MANIPUR. - 795106
PH :8415945626.

THOUBAL

1957. EASTERN MOTORS (-01), THOUBAL, ATHOKPAM KHUNOLI, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138

UKHRUL

1958. SAMADON ENTERPRISE (-01), KAMPHASOM, UKHRUL, MANIPUR - 795142
PH :9774216305.

MEGHALAYA

BHAITBARI

1959. RANI MOTORS (-01), NEW BHAITBARI, WEST GARO HILLS, MEGHALAYA. (PATTA NO - 89 SONG - NEKEKONA, MOZUZA NO - VI- 3 LOT) - 794104

BHOIRYMBONG

1960. RANI MOTORS (-01), VILLAGE - UMROI MADAN, DISTRICT - RI BHOI, MEGHALAYA. - 793103
PH :9774478281.

JOWAI

1961. RANI MOTORS (-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150
PH :7085849525.

KHLIEHRIAT

1962. BANALARI WORLD CARS (8502-03), JOWAI-SICRAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150

MAWKYRWAT

1963. RANI MOTORS (-01), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGHALAYA - 793114
PH :9856005544.

MAWNGAP

1964. BANALARI WORLD CARS (-01), LAITPYNTER, SHILLONG NONGTUNG ROAD, MAWNGAP, DIST. -EAST KHASI HILLS, MEGHALAYA. - 793121

MOIRANG

1965. SAMADON ENTERPRISE (-01), MOIRANG LAISHANGBAM LEIKAI, PO AND PS: MOIRANG, DIST. BISHNUPUR, MANIPUR - 795133
PH :7005987122.

MYLTIEM

1966. BANALARI WORLD CARS (-01), MADANIENG SYIEM, MYLTIEM, SHILLONG CHERRAPUNJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009

NONGPOH

1967. RANI MOTORS (8501-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT. - 793102
PH :9774478281.

NONGSTON

1968. RANI MOTORS (8501-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119
PH :9856005544.

PYNURSULA

1969. BANALARI WORLD CARS (-01), PHLANGSHLAIN MAIN ROAD, SHILONG DAWKI, PYNURSULA, DISTRICT - EAST KHASI HILLS, MEGHALAYA - 793110 - 793110
PH :8415942700.

SHILLONG

1970. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014
PH :9862099400.

1971. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021
PH :8014734780.

1972. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017

TURA

1973. RANI MOTORS (-01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101
PH :7005563791.

UMSAW

1974. BANALARI WORLD CARS (-01), UMSAWKHWAN RAID MAWBHU, MYLTIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA - 793123

MIZORAM

AIZWAL

1975. GIG MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001
PH :8974559065.

LUNGLEI

1976. GIG MOTORS (-01), RAMTHAR VILLAGE, LUNGLEI, DISTRICT-LUNGLEI, MIZORAM - 796701
PH :8974559065.

NAGALAND

DIMAPUR

1977. PROGRESSIVE MOTORS (3201-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112
PH :7005254089.

1978. SEIYE AUTO (-02), 6TH MILE, NEAR ESAF BANK, CHUMOUKEDIMA, DIMAPUR, NAGALAND - 797112

KOHIMA

1979. SEIYE AUTO PRIVATE LIMITED (-01), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001

MOKOKCHUNG

1980. PROGRESSIVE MOTORS (-01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601
PH :87877325534.

TUENSANG

1981. PROGRESSIVE MOTORS (-01), YUNPHANG , TUENSANG - 798612

TULI

1982. SEIYE AUTO PRIVATE LIMITED (-01), TULIYONGWARD TULI TOWN NEAR CO. OPERATIVE BANK - 798618

WOKHA

1983. PROGRESSIVE MOTORS (-01), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111
PH :9774070707.

ODISHA

ANANDPUR

1984. JYOTE MOTORS PVT LTD (-01), KHATA NO. 246/407, PLOT NO. 76, P.S. - GHASIPURA, MOUZA - SUDUSUDIA, DISTRICT - KEONJHAR, ANANDPUR, ODISHA. - 758021

ANGUL

1985. ODYSSEY MOTORS PVT LTD (-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145

ATTABIRA

1986. APARNA MOTORS (A UNIT OF APARNA VAHAN PVT LTD) (-01), LADERPALLI MAIN ROAD., ATTABIRA, DIST.BARGARH, - 768027

ATTAGARH

1987. TUSHI MOTORS PVT LTD (-01), KHATA NO 212/420,MOUZA :BIRAKISHOREPUR ATHAGARH, DISTRICT: CUTTACK - 754029
PH :7504890838.

BALASORE

1988. JYOTE MOTORS PVT LTD (-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019

BALIGUDA

1989. SKY AUTOMOBILES (-01), KHATA NO.-370/451, TEHSIL-K NUAGAN, GEGURPADAR, BALIGUDA - 762103

BALUGOAN

1990. JYOTE MOTORS PVT LTD (-01), M/S PLOT NO 758/31,KHATA NO 350/30,MOUZA-GOBARDHANPUR,BALUGOAN, DISTRICT-KHORDA,ODISHA-752030 - 752030
PH :9776615001.

BAMRA

1991. ODYSSEY MOTORS PVT LTD (-01), M/S ODYSSEY MOTORS,NEAR SATSANG KENDRA, DUMERMUNDA COLLEGE ROAD, BAMRA,GOVINDPUR-768221 - 768221
PH :9439314464.

BANEI

1992. ORBIT MOTORS PVT LTD (-01), PLOT NO -1683/2508, BBABUNJAGAON, KHATA NO-177766,UPARGADA-08,ODISHA - 770038

BARBIL

Dealer Workshop (AS ON 31.01.2026)

1993. JYOTE MOTORS PVT LTD (-01), PLOT NO. 507,SUNDARA , UNIT NO. 13,P.S. BARBIL, ODISHA - 759035	2007. JYOTE MOTORS PVT LTD (-01), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-751003 - 751003	JAGATSingHPUR	2031. LEGEND CARS PRIVATE LIMITED (-01), KHATA NO 204/155, PLOT NO 202, DHARABADDA MOUZA, NABRANGPUR ODISHA - 764059
BARGARH	2008. NARAYANI MOTORS PVT LTD (-03), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUANESHWAR - 751025	2020. NARAYANI MOTORS PVT LTD (-01), KHATTA NO. 827/221 & 827/222, PLOT NO. 1197 & 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSingHPUR, ODISHA - 754103	NAYAGARH
1994. ODYSSEY MOTORS PVT LTD (-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028 PH -8908944206.	2009. JYOTE MOTORS PVT LTD (-05), PLOT NO. 219/1088, AT-BADADHANPUR, PO-SISHUPALGARH, PURI BYPASS ROAD, BHUBANESWAR, KHURDHA - 751002	JAUPUR	2032. JYOTE MOTORS PVT LTD (-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069
BARIPADA	BOLANGIR	2021. SKY AUTOMOBILES (6701-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAUPUR, ORRISSA - 7553019	NETAJI NAGAR,CUTTACK
1995. JYOTE MOTORS PVT LTD (-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001	2010. ODYSSEY MOTORS PVT LTD (-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001 PH -8895418122.	JALESWAR	2033. TUSHI MOTORS PVT LTD (-02), PLOT NO-819/1021, MOUZA-UNIT 39, ,NETAJI NAGAR - 753014
BELPAHAR	BOUDH	2022. JYOTE MOTORS PVT LTD (-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST. - BALASORE, ODISHA. - 756032	NIMPARA
1996. APARNA MOTORS (A UNIT OF APARNA VAHAN PVT LTD) (-01), NH 49,, MAHIMA CHOWK, - 768217	2011. ODYSSEY MOTORS PVT LTD (-01), BOLANGIR MAIN ROAD,BJU PATNAIK CHOWK, NEAR SARASWATI PETROL PUMP,BOUDH - 762014	JEYPORE	2034. NARAYANI MOTORS PVT LTD (-01), PLOT NO. 345/1344, GANESH BAZAR, NIMPARA, DISTRICT - PURI, ODISHA. - 752106
BERHAMPUR	CHANDIKHOLE	2023. LEGEND CARS PRIVATE LIMITED (-03), SOURAGUDA,JEYPORE,DISTT-KORAPUT,ORISSA A,INDIA - 764001	NIRGUNDI
1997. SKY AUTOMOBILES (-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002	2012. SKY AUTOMOBILES (-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAUPUR, ODISHA, - 755044	JHARSUGUDA	2035. NARAYANI MOTORS PVT LTD (-04), KHATA NO 251/255, PLOT NO 233,MALGOWDINI-MOUZA BLITERUA, NIRGUNDI,DISTRICT-CUTTACK, ORISSA, - 754025
1998. SKY AUTOMOBILES (-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE - KONISI, BERHAMPURE, GANJAM, ODISHA - 761008	CUTTACK	2024. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201	PADAMPUR
BHADRAK	2013. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011	KAMAKHYANAGAR	2036. ODYSSEY MOTORS PVT LTD (-01), M/S ODYSSEY MOTORS, CHARPALLI,PADAMPUR, NEAR REGENCY HOTEL,DISTRICT-BARGARH, ORISSA - 770039 PH -9439314464.
1999. JYOTE MOTORS PVT LTD (-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK , ODISHA - 756101	2014. TUSHI MOTORS PVT LTD (6702-01), PLOT NO. C-14, PLOT NO.C-13 ,INDUSTRIAL ESTATE ,KHAPURIA,TAHASIL - CUTTACK SADAR ,CUTTACK DISTRICT,BHUBANESWAR - 753001 PH -9692912345.	2025. SKY AUTOMOBILES (-01), ALUTAMA, KAMAKHYANAGAR, DHENKANAL ODISHA - 759018	PALLAHARA
BHAWANIPATNA	BHUBANESHWAR	KANTABANJHI	2037. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119
2000. LEGEND CARS PRIVATE LIMITED (-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001	2015. SKY AUTOMOBILES (6701-67-07), LAXMINAGAR BIDANASI - 753014	2026. ODYSSEY MOTORS PVT LTD (-01), SH-42, UDING, KANTABANJHI, ODISHA-767039 - 767039	PANCHGAON
BHUBANESHWAR	DEOGARH	KARANJIA	2038. ODYSSEY MOTORS PVT LTD (-01), KHATA 66/136 BEARING PLOT NO 565/980 (4 SHOPS) KISAM -GHARABARI,MOUZA PANCHGOAN ,TAHSIL -LAKHANPUR ,DIST-JHARSUGUDA, ODISHA - 768226
2001. NARAYANI MOTORS PVT LTD (-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006	2016. ORBIT MOTORS PVT LTD (-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108	2027. JYOTE MOTORS PVT LTD (-01), KARANJIAGOLEI., KARANJIA,MAYURBHANJ, - 757037	PANIKOLI
2002. JYOTE MOTORS PVT LTD (-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003	DHENKENAL	KENDRAPARA	2039. TUSHI MOTORS PVT LTD (-01), PLOT NO. 3211/3776, AT-SOTI, PO-PANIKOLI - 755043
2003. SKY AUTOMOBILES (-01), PLOT NO.-435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022	2017. SKY AUTOMOBILES (6701-04), PLOT NO-136/103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKANAL. - 759001	2028. JYOTE MOTORS PVT LTD (-01), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. - 754208 PH -9776615001.	PARADEEP
2004. NARAYANI MOTORS PVT LTD (-02), PLOT NO 56 AND 57,RASULGARH, BHUBANESHWAR, ODISHA - 751010	DUNGURIPALI	KEONJHAR	2040. NARAYANI MOTORS PVT LTD (-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA - 754141
2005. JYOTE MOTORS PVT LTD (-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010	2018. APARNA MOTORS (A UNIT OF APARNA VAHAN PVT LTD) (-01), NH-26, BARGARH-BOLANGIR HIGHWAY, , DUNGURIPALI, DIST.SONEPUR, ODISHA - 767023	2029. JYOTE MOTORS PVT LTD (-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001	PARLAKHEMUNDI
2006. SKY AUTOMOBILES (-02), KHATA NO. 457/675, PLOT NO. 543, 756, 789 AND 546, SRIVIHAR, INFROONT OF IOCL OFFICE, P.S. -CHADRASHEKARPUR, BHUBANESHWAR, ODISHA. - 751024	GANDAI	KUCHINDA	2041. SKY AUTOMOBILES (-01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211 PH -9776999977.
	2019. SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES ,WARD NO - 7, NEAR KRISHI UPAJ MANDI, GANDAI RAJNANDGAON ROAD, GANDAI - 491888 - 491888 PH -9926626662.	2030. ODYSSEY MOTORS PVT LTD (-01), /S ODYSSEY MOTORS, PLOT NO 146,KHATA NO 76/9,MOUZA-KUNDAPOSHI,NEAR KUNDESHWAR MANDIR,KUCHINDA,SAMBULPUR. - 768222 PH -9439314464.	PHULBANI
		NABRANGPUR	2042. SKY AUTOMOBILES (-01), PLOT NO. 54/533, GUDRISAH, KHAJURIAAPADA,DISTRICT - KANDHAMAL ODISHA. PIN CODE: 762001 - 762001 PH -9776900333.

PURI	TANGI	2065. SWANI MOTORS PVT LTD (-01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102 PH :8872001731.	2075. LOVELY AUTOS (3503-03), NAWASEHAR-JALANDHAR ROAD, BANGA - 144505 PH :9915028625.
2043. NARAYANI MOTORS PVT LTD (-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODISHA - 752002	2055. SKY AUTOMOBILES (-01), KHATA NO 731/18, PLOT NO.107,CHAMPAGARH NH 5,TANGI, DISTRICT - KHORDHA, - 752023 PH :9776900333.	AMRITSAR	BANUR
RAIRANGPUR	TIRTOL	2066. SWANI MOTORS PVT LTD (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001	2076. TRICITY AUTOS (-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601 PH :9988882330.
2044. JYOTE MOTORS PVT LTD (-01), PLOT NO.1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046	2056. NARAYANI MOTORS PVT LTD (-01), TIRTOL ,JADATIRA - 754137	2067. JAYCEE MOTORS PVT LTD (1704-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH :9780038335,	BARNALA
RAYAGADA	TITLAGARH	2068. RISHABH FOURWHEELS PVT LTD (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH :9914841577.	2077. MAX AUTOMOBILES (-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001
2045. LEGEND CARS PRIVATE LIMITED (-01), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001 PH :7008771180.	UDALA	ANANADPUR SAHIB	BATALA
ROURKELA	2058. JYOTE MOTORS PVT LTD (-01), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA. - 757041 PH :8249877935.	2069. CM AUTO SALES PVT LTD (-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANADPUR SAHIB,TEHSIL ANANADPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123 PH :9915022897.	2078. PATHANKOT VEHICLEADES PVT LTD (-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505
2046. ORBIT MOTORS PVT LTD (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041	PUDUCHERRY	APRA	BEGOWAL
SAMBHALPUR	KARAIKAL	2070. LOVELY AUTOS (-01), SAMRAI CHOWK PHILLAUR ROAD, VILLAGE - APRA, TEHSIL - PHILLAUR, DIST.-JALANDHAR, STATE - PUNJAB. - 144416 PH :9915020515.	2079. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH :9779166004.
2047. ODYSSEY MOTORS PVT LTD (-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH :7381083571.	2059. SHENBAKA CARS PVT LTD (-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL. - 609602	AUR	BHADSON
2048. APARNA MOTORS (A UNIT OF APARNA VAHAN PVT LTD) (-01), PLOT NO 969/4497,PANCHGACHIA SAMBALPUR - 768019 PH :8260966698.	2060. SHENBAKA CARS PVT LTD (-02), SURVEY NO # RS.NO:252, DOOR NO:192, VARICHIKKUDY VILLAGE, PORAYAR SALAI,KARAIKAL, PONDICHERY-609 609 - 609609	2071. LOVELY AUTOS (-01), KHATUNI NO. 479/568, KHASRA NO. 27/20/04(2-18), 21/2(2-10), VILLAGE - AUR, TEHSIL - NAWASHAR, DIST.-SBS NAGAR, STATE - PUNJAB. - 144417 PH :9915020510.	2080. HIRA AUTOMOBILES LTD (-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202
2049. ODYSSEY MOTORS PVT LTD (-05), ODYSSEY MOTORS, AINTHAPALI, SAMBALPUR	MADAGADIPET	BAGHA PURANA	BHAGTA BHAI KA
SEMILIGUDA	2061. SHENBAKA CARS PVT LTD (-01), SURVEY NO. 129/4/A/2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERY - 605107 PH :8220046178.	2072. REMIRA MOTORS PVT LTD (-01), BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH :7087025009.	2081. TARA AUTOMOBILES (-01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT - BHATINDA. - 151206 PH :8437030666.
2050. LEGEND CARS PRIVATE LIMITED (-01), 1231/2076,KHATA NO 113/1503, MOUZA:LUNGURI,SEMILIGUDA. - 764036	PONDICHERY	BALACHAUR	BHATINDA
SOHELA	2062. SHENBAKA CARS PVT LTD (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERY - 605010	2073. LOVELY AUTOS (-01), NEAR MCDONALD - GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521	2082. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001
2051. ODYSSEY MOTORS PVT LTD (-01), KHATA NO 325/892, PLOT NO 396.7579, KISAM-GHARABARI, MOUZA-SOHELA, DIST-BARGARH, ODISHA - 768033	PUNJAB	BALBEHRA	BHIKHIWIND
SORO	ABOHRAR	2074. DIVINE AUTOWORLD LLP (-01), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA - 147101 PH :9888341118.	2083. RISHABH FOURWHEELS PVT LTD (-01), KHASRA NO. 67/3/2, 4/1, 7/2, 8/1, 8/2, PIND BHIKHIWIND, TEHSIL - PATTI, DISTRICT - TARN TARAN, PUNJAB. - 143303 PH :9914708577.
2052. JYOTE MOTORS PVT LTD (-01), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE. - 756045 PH :9776815001.	2063. TARA AUTOMOBILES (-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHRAR, PUNJAB - 152116 PH :9876047847.	BANGA	BHOGPUR
SUBARNAPUR	ADAMPUR		2084. LOVELY AUTOS (-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201
2053. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 32, MOUZA - SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT - SUBARNAPUR, ODISHA - 767017	2064. LOVELY AUTOS (-01), KHASRA NO.10/771, JALANDHAR-HOSHIARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102		BHULATH
SUNDERGARH	AJNALA		2085. LOVELY AUTOS (-01), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT - KAPURTHALA, PUNJAB.
2054. ORBIT MOTORS PVT LTD (-01), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH :8249354447.			BILGA

Dealer Workshop (AS ON 31.01.2026)

2086. LOVELY AUTOS (-01), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLAUR, JALANDHAR. - 144036 PH :9815069814.	2097. PLUTON DREAMWORKS PRIVATE LIMITED (-01), MOGA ROAD, NEAR HARYALI PETROL PUMP FERAZPUR PUNJAB. - 152001	2108. TARA AUTOMOBILES (-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH :9876047847.	2119. JAYCEE MOTORS PVT LTD (-01), KHASRA NO.1220/2, 2/1/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502
CHUNNI KALAN	GARHSHANKAR	JALLANDHAR	KHANNA
2087. HOSHIARPUR AUTOMOBILES (-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307	2098. HOSHIARPUR AUTOMOBILES (-02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527	2109. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :9915020515.	2120. HOSHIARPUR AUTOMOBILES (-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. - 141401 PH :9888716261.
DASUA	GHANAUR	2110. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (3506-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH :9779166004.	KHARAR
2088. HOSHIARPUR AUTOMOBILES (-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205	2099. DIVINE AUTOWORLD LLP (-01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401 PH :9217048437.	2111. LOVELY AUTOS (-35-01), KHASRA NO. 24/20/4, B D ENCLAVE, VILLAGE - JALANDHAR, DIST. -JALANDHAR, PUNJAB. - 144001	2121. CM AUTO SALES PVT LTD (-03), NH-95, MORINDA ROAD,KHANPUR, KHARAR, DIST. MOHALI - 140301 PH :9915022878.
DERABASSI	GHAROTA	JANDIALA GURU	KOTKAPURA
2089. AUTOPACE NETWORK PVT LTD (-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507	2100. PATHANKOT VEHICLEADES PVT LTD (-01), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT - 143533. - 143533 PH :8264105000.	2112. BABA AUTOS (-01), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115	2122. MAPSO AUTO INDIA PVT LTD (-01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT - FARIDKOT - 151204 PH :7347000518.
DEVIGARH	GHOMAN	JANDIALA MANJKI	LALRU
2090. HIRA AUTOMOBILES LTD (-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111	2101. PATHANKOT VEHICLEADES PVT LTD (-01), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11/25 (7-18), VILLAGE - BALRAMPUR ADDA, KHASBA - GHOMAN. - 143514 PH :8054500130.	2113. LOVELY AUTOS (-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE - JANDIALA MANJKI, TEHSIL - NOORMAHAAL, DISTRICT - JALANDHAR, PUNJAB. - 144033 PH :7087439797.	2123. AUTOPACE NETWORK PVT LTD (-01), VILLAGE - LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501 PH :9815011669.
DHARAMKOT	GORAYA	JHANJERI	LUDHIANA
2091. REMIRA MOTORS PVT LTD (-01), JOSAN MARKET, DHARAMKOT, MOGA - 142042	2102. LOVELY AUTOS (-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH :9417804049.	2114. AUTOPACE NETWORK PVT LTD (-01), STATE HIGHWAY 12A, JHANJERI, SAHIBZADA AJIT SINGH NAGAR, - 140307	2124. GULZAR MOTORS PVT LTD (6204-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARM, LUDHIANA - 141003 PH :9814160099.
DHILWAN	GURDASPUR	KAHNUWAN	2125. SANDHU AUTOMOBILES PVT LTD (6206-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141203 PH :9815600095.
2092. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), MIANI BAKARPUR,AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA - 144804 PH :9779166004.	2103. PATHANKOT VEHICLEADES PVT LTD (-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521	2115. PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. - 143528 PH :8288993301.	2126. LOVELY AUTOS (6209-01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FERAZEPUR ROAD, LUDHIANA - 141001 - 141001
DORAHA	2104. PATHANKOT VEHICLEADES PVT LTD (-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH :9417900870.	KALA SANGHIAN	2127. LOVELY AUTOS (-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB
2093. GULZAR MOTORS PVT LTD (-01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHA, DISTT. LUDHIANA, PUNJAB. - 141421 PH :9814191122.	HOSHIARPUR	2116. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), MAIN CHOWK, KALA SANGHIAN, DISTRICT KAPURTHALA, PUNJAB - 144623 PH :9779166004.	2128. LOVELY AUTOS (6209-03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001 PH :9815089814.
FARIDKOT	2105. HOSHIARPUR AUTOMOBILES (-01), SINGRIWALA, JALANDHAR ROAD, HOSHIARPUR. - 146001	KALANAUR	2129. LOVELY AUTOS (6209-62-04), EURO MART COMPLEX, HAMBRAH ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008 PH :9815089814.
2094. MAPSO AUTO INDIA PVT LTD (-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204	JAGRAON	2117. PATHANKOT VEHICLEADES PVT LTD (-01), KALANAUR-GURDASPUR ROAD, VILLAGE KALANAUR, TEHSIL AND DISTRICT GURDASPUR, PUNJAB - 143512 PH :94717900879.	2130. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-62-01), GT ROAD, OPPOSITE GOYAL HYUNDAI, VILLAGE DHANDHARI KHURD, LUDHIANA, DISTRICT - LUDHIANA, PUNJAB - 141010 PH :8054399990.
FATEHGARH CHURIAN	2106. SANDHU AUTOMOBILES PVT LTD (6206-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :8437025969.	KAPURTHALA	
2095. PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO. 17 R, DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSIL - BATALA, DIST. -GURDASPUR, STATE - PUNJAB. - 143602	JAITU	2118. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602 PH :9779166004.	
FAZILKA	2107. MAPSO AUTO INDIA PVT LTD (-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT - FARIDKOT - 151202 PH :7347000520.	KATHU NANGAL	
2096. TARA AUTOMOBILES (-03), NH-10, NEAR SARVHIKARI BAL VIDYA MANDIR, FAZILKA - 152116 PH :9876047847.	JALALABAD-PB		
FEROZPUR			

2131. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-62-02), OPP SBI BANK - JAMALPUR, CHANDIGARH ROAD, LUDHIANA - 141010	MUKTSAR 2144. PLUTON DREAMWORKS PRIVATE LIMITED (-01), NEAR SSP OFFICE, BATHINDA ROAD/SRI MUKTSAR SAHIB - 152026	2158. DIVINE AUTOWORLD LLP (-63-02), BHARAT NAGAR,PATIALA-NABHA ROAD, PATIALA - 147001	2170. HIRA AUTOMOBILES LTD (-01), KEWAT NO. 948/850, KHATUNI NO. 1427, KHASRA NO. 101/27(4-7), PATIALA SAMANA ROAD, SAMANA, DIST.-PATIALA, STATE PUNJAB. - 147101 PH :9217048236.
2132. LOVELY AUTOS (6211-62-01), 2716/1, GURDEV NAGAR, NEAR FER0Z GANDHI MARKET, LUDHIANA, PUNJAB - 141001	MULLANPUR 2145. SANDHU AUTOMOBILES PVT LTD (-01), OPPOSITE DHAKA ROAD, FER0ZEPUR ROAD, MULLANPUR - 141101	2159. EKANSHI WHEELS PVT LTD (6305-63-01), KHASRA NO. 11/13/1, RAJPURA ROAD, PATIALA, 147001, PUNJAB - 147001	SANGRUR 2171. MAX AUTOMOBILES (-01), DHURI ROAD, SANGRUR, - 148024
MACHIWARA 2133. HOSHIARPUR AUTOMOBILES (-01), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH :9875900147.	MULLANPUR GARIBDASS 2146. NAVDESH AUTOS LLP (-01), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE - PUNJAB. - 140901 PH :8872004676.	PATRAN 2160. HIRA AUTOMOBILES LTD (6302-02), NARWANA ROAD, PATRAN, PUNJAB. - 147105	SHAHKOT 2172. LOVELY AUTOS (-01), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT -- JALANDHAR, PUNJAB. - 144702
MAHILPUR 2134. HOSHIARPUR AUTOMOBILES (-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105 PH :9914720424.	NABHA 2147. HIRA AUTOMOBILES LTD (6302-06), RADHA SWAMI ROAD, NABHA - 147201	PATTI 2161. JAYCEE MOTORS PVT LTD (-01), KHASRA NO. 64/19/2/1 KA 16/49 & KHASRA NO. 64/20 KA 29/94, NEAR RADHA SWAMI, TARN TARAN ROAD, VILLAGE - PATTI, DIST.-TARN TARAN, PUNJAB. - 143416 PH :9780038335.	SIRHIND 2173. HOSHIARPUR AUTOMOBILES (-01), KHEWAT KHATONI NO. 802/1049 & 821/1070 KHEWAT KHAS NO. 43/1/2/1 (1-0), BESIDE SBI BANK, BASSI ROAD, SIRHIND, TEHSIL AND DISTRICT -- FATEHGARH SAHIB - 140406
MALERKOTLA 2135. MAX AUTOMOBILES (-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023	NAKODAR 2148. LOVELY AUTOS (3503-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040	PHAGWARA 2162. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH :9779166004.	SULTANPUR LODHI 2174. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), NEAR TALWADI BRIDGE, TALWADI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA - 144626 PH :9779166004.
MANDI GOBINDGARH 2136. HOSHIARPUR AUTOMOBILES (-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301	NANGAL 2149. CM AUTO SALES PVT LTD (-02), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NIPA NANGAL ,PUNJAB - 140126 PH :9592916811.	PHILLAUR 2163. LOVELY AUTOS (-01), OLD NAWANSHAHR ROAD CIVIL LINE, PHILLAUR, DISTRICT JALANDHAR - 144410 PH :9815069814.	SUNAM 2175. MAPSKO AUTO INDIA PVT LTD (-01), BHATINDA ROAD, SUNAM, DISTRICT - SANGRUR SUNAM, PUNJAB - 148028
MANSA 2137. TARA AUTOMOBILES (7002-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA , PUNJAB - 151505	NAWANSHAHR 2150. LOVELY AUTOS (3503-02), NAWANSHAHR CHANDIGARH ROAD, VILL.- LANGROHA, DISTT.- NAWANSHAHR, PUNJAB - 144514 PH :9915028682.	POHIR 2164. LOVELY AUTOS (-01), LUDHIANA-MALERKOTLA ROAD, NEAR SODHI MARRIAGE PALACE, POHIR, DISTRICT LUDHIANA, PUNJAB. - 141204 PH :9915020513.	TALWADI BHAJ 2176. PLUTON DREAMWORKS PRIVATE LIMITED (-01), MOGA ROAD, NEAR FUN ISLAND, - 142050
MOGA 2138. REMIRA MOTORS PVT LTD (-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001 PH :7087025402.	NIHAL SINGH WALA 2151. REMIRA MOTORS PVT LTD (-01), BARNALA ROAD, NEAR DEAR BABA SEWA DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA. - 142055 PH :7087025009.	RAIKOT 2165. GULZAR MOTORS PVT LTD (-01), BARNALA BY PASS ROAD, RAIKOT - 141109 PH :9814160099.	TALWADI SABO 2177. TARA AUTOMOBILES (-01), TALWADI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWADI SABO, BHATINDA - 1551302
MOHALI 2139. NAVDESH AUTOS LLP (-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH :8872016453.	PATHANKOT 2152. PATHANKOT VEHICLEADES PVT LTD (-01), NEAR MAAMON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001	RAJPURA 2166. DIVINE AUTOWORLD LLP (-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA - 140401	TALWARA 2178. HOSHIARPUR AUTOMOBILES (-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216
2140. CM AUTO SALES PVT LTD (-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI -- PUNJAB - 140110	2153. PATHANKOT VEHICLEADES PVT LTD (-04), NEAR A. B. COLLEGE, PATAHANKOT - 145001	RAMPURA PHUL 2167. TARA AUTOMOBILES (-01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103	TANDA 2179. HOSHIARPUR AUTOMOBILES (-06), VILL.PULPUKHATA, MIANI ROAD, TANDA - 144203
MOONAK 2141. MAPSKO AUTO INDIA PVT LTD (-01), PATRAN ROAD, MOONAK, PUNJAB - 148028	2154. PATHANKOT VEHICLEADES PVT LTD (-07), PLOT NO. 58-C, 59-C, INDUSTRIAL GROWTH CENTRE, VILLAGE- CHACHELI, TEHSIL & DIST - 145001	RAYYA 2168. RISHAB FOURWHEELS PVT LTD (-01), NH-1, GT ROAD RAYYA, TEHSIL -- BABA BAKALA, DISTRICT -- AMRITSAR. - 143112 PH :9914708577.	TAPA 2180. MAPSKO AUTO INDIA PVT LTD (-01), BHATINDA ROAD, TAPA, DISTRICT -BARNALA, TAPA, PUNJAB - 148108
MORINDA 2142. CM AUTO SALES PVT LTD (-01), KHASRA NO. 1092, CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140101 PH :9915022811.	PATIALA 2155. HIRA AUTOMOBILES LTD (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001	ROOPNAGAR 2169. CM AUTO SALES PVT LTD (-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH :9915022802.	TARAGARH
MUKERIAN 2143. HOSHIARPUR AUTOMOBILES (-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN - 144211	2156. HIRA AUTOMOBILES LTD (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001	SAMANA	
	2157. HIRA AUTOMOBILES LTD (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001		

Dealer Workshop (AS ON 31.01.2026)

2181. PATHANKOT VEHICLELEADS PVT LTD (-01), VILLAGE - RAHIPUR, VPO-FARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534 PH :9988639963.	2193. AJMER AUTO AGENCIES PVT LTD (-05), KHASRA NO 343/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER. - 305001 PH :9314955201.	2204. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), MAIN CHITTOR ROAD, NEXT TO HP PETROL PUMP, BHOPATPURA, BARI SADRI, DIST. CHITTORGARH, PIN-312403, RAJASTHAN - 312403	2215. L M J SERVICES LTD (-01), NH#68, OPP. SADAR THANA - 344001 PH :8005898360.
TARN TARAN	AJMER ROAD, JAIPUR	BAGRU	BASSI
2182. JAYCEE MOTORS PVT LTD (-01), VILLAGE - KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401 PH :9780038039.	2194. KTL AUTOMOBILE PRIVATE LIMITED (-06), PLOT NO.-39-40,MAA KARNI NAGAR-E PANCHAY, PANCHAYAWALA NEAR VAISHALI NAGAR, SIRSI - 302017	2205. PREM MOTORS PVT LTD (-01), KHASRA NO. 1185, NH 8 AJMER ROAD, BAGRU, JAIPUR DISTRICT, RAJASTHAN - 303007	2216. PREM MOTORS PVT LTD (-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301
TARSIKKA	AKLERA	BAJUJ	BAYTU
2183. BABA AUTOS (-01), NEAR HDFC BANK, MAIN BAZAAR, TARSIKKA, PUNJAB - 143116	2195. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NH-52, RAM NAGAR COLONY, AKLERA, JHALAWAR, PIN-326033, RAJASTHAN - 326033 PH :9799299971.	2206. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), BAJJU, DISTT BIKANER, RAJASTHAN - 334305	2217. L M J SERVICES LTD (-01), NH-8 NEAR JAGDAMBA PETROL PUMP , BAYTU - 344034 PH :8094011126.
ZIRA	ALWAR	BALESAR	BEAWAR
2184. PLUTON DREAMWORKS PRIVATE LIMITED (-01), MAKHU ROAD, NEAR HARBIR PETRO. - 142047	2196. M G MOTORS (-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001 PH :9001795520.	2207. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHASRA NO. 2167 JODHPUR JAISALMER ROAD, VILL.- BALESAR SATTA, TEN- BALESAR , DISTT- JODHPUR (RAJ.) - 342203 PH :7412087344.	2218. RELAN MOTORS PVT LTD (-01), PLOT NO 1, INDIRA GANDHI UDYOGPURI , AJMER ROAD ,BEAWAR, RAJASTHAN - . 305202 PH :9587687000.
ZIRAKPUR	AMET	BALOTRA	BEGUN
2185. TRICITY AUTOS (-01), PATIALA HIGHWAY, VILLAGE - NABHA, ZIRAKPIR, PUNJAB - 140603 PH :9988882330.	2197. M G MOTORS (-02), KHASRA NO.803/198, BHUGORE TIRAHA, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001 PH :9001795520.	2208. L M J SERVICES LTD (6502-05), JODHPUR BALOTRA ROAD, BALOTRA, RAJASTHAN - 344022 PH :8005898360.	2219. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), BHATIA & CO. (A UNIT OF BHATIA CORPORATION PVT LTD), IN FRONT OF GURUKUL, CHITTOR ROAD, BEGUN, TEHSIL - BEGUN, DISTRICT CHITTORGARH, 312023
RAJASTHAN	2198. M G MOTORS (-03), VAISHALI NAGAR, OLD DELHI ROAD, ALWAR, PIN-301001, RAJASTHAN - 301001	BANDANWARA	BEHROR
AANDHI	ANOOPGARH	2209. RELAN MOTORS PVT LTD (-01), SHOP NO. 9 & 10, AJMER HIGHWAY, BANDANWARA, DIST. AJMER, PIN-305622 - 305622	2220. M G MOTORS (-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701 PH :9001795520.
2186. K.P. AUTOMOTIVES PVT LTD (-01), KHASRA NUMBER 11 25 , VILL AANDHI , DISTT JAIPUR, RAJASTHAN- 303001 - 303001 PH :9549656559.	ANTA	BANSUR	BHADRA
ABU ROAD	2201. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KOTA-BARAN ROAD, ANTAH, DIST.-BARAN. - 325502 PH :9413379001.	2210. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402 PH :8875005116.	2221. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), CHAK NUMBER-8, BARANI, NEAR HISAR BYEPASS BHADRA -BALSAMAND ROAD ,BHADRA. - 335501
2187. NAVNEET MOTORS (-01), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026 PH :7665000644.	ASIND	BANSWARA	BHARATPUR
ACHROL	2202. CHAMPION CARS (PREM CARS PVT LTD) (-01), DEV TOWERS, BEAWAR ROAD, ASIND, DISTRICT - BHILWARA, RAJASTHAN - 311302 - 311302 PH :9887063862.	2211. NAVNEET MOTORS (-01), NEAR J.C. MILL, OPPOSITE AKASHWANI, DAHOD ROAD, BANSWARA - 327001	2222. TM MOTORS PVT LTD (-01), BRIJ VIHAR COLONY, MADARPUR ROAD, BHARATPUR, RAJASTHAN - 321001 PH :9251423392.
2188. KTL AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO. 37/1522, GRAM ANI, ACHROL, DELHI ROAD, TEHSIL - ACHROL, DISTRICT - JAIPUR, 303002 - 303002 PH :7412077022.	ATRU	BAORI	BHAWANI MANDI
AHORE	2203. SUWALKA MOTORS PRIVATE LIMITED (-01), SALPURA ROAD, ATRU, NEAR DEPUTY OFFICE, PIN-325218, RAJASTHAN - 325218 PH :8306333731.	2212. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), SHOP NO. 04, SHRI BALAJI NAGAR, NEAR SBI, BAORI, DIST. JODHPUR, PIN-342037, RAJASTHAN - 342037	2223. SUWALKA MOTORS PRIVATE LIMITED (-01), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI, JHALAWAR- 326502 - 326502 PH :9414242256.
2189. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), MADHOPURA, NEAR KARNAWATI HOSPITAL, AHORE, DISTRICT - JALORE, RAJASTHAN PIN CODE: 307029 - 307029	BADI SADRI	BARAN	BHILWARA
AJMER	2204. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (-02), ARATI NO.255-258, GRAM JODHRAS, BHILWARA. - 311011	2213. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-03), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205 PH :8929854244.	2224. CHAMPION CARS (PREM CARS PVT LTD) (-01), CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001
2190. AJMER AUTO AGENCIES PVT LTD (-01), SRINAGAR ROAD, AJMER (RAJASTHAN) - 305001 PH :9314955201.		BARMER	2225. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO. 1/316/2, AJMER ROAD, BHILWARA, RAJASTHAN - 311001
2191. RELAN MOTORS PVT LTD (-01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001		2214. L M J SERVICES LTD (6502-06), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001 PH :8005898360.	2226. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (-02), ARATI NO.255-258, GRAM JODHRAS, BHILWARA. - 311011
2192. RELAN MOTORS PVT LTD (-02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001			

BHINDER	2240. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), 42/34, GOTAN ROAD, BORUNDA, DIST- JODHPUR, PIN-342604, RAJASTHAN - 342604 PH :9413311745.	DAUSA	2251. VIPUL MOTORS PVT LTD (1102–03), AGRA JAIPUR ROAD, DAUSA - 303303 PH :9672211333.	2262. L M J SERVICES LTD (–01), OPPOSITE PRAKASH DINING HOTEL, FALNA - 306116 FATEHNAGAR
2227. TECHNOY MOTORS INDIA PVT LTD (–01), NEAR RAILWAY STATION,SALUMBAR CHOURAHA, BHINDER - 313603 PH :8306111337.	BUNDI	DECHU	2252. L M J SERVICES LTD (–01), OPP INDIAN OIL PUMP, JODHPUR ROAD, DECHU - 342314	2263. TECHNOY MOTORS INDIA PVT LTD (4903–03), PLOT NO.15, FATENAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHNAGAR-313205 DISTT. UDAIPUR - 313205 FATEHPUR (RJ)
BHINMAL	2241. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101–02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSITE ICICI ATM, BUNDI - 323001 PH :8929853245.	DEGANA	2253. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), PLOT NUMBER -189 , NEAR NAGAU RAILWAY STATION ROAD, DEGANA - 341503 PH :7230055955.	2264. JAMU AUTOMOBILES PVT LTD (–01), NH-52, RATANGARH ROAD,, DISTT SIKAR - 332301 FATHEGARH
2228. SHRI KRISHNA AUTOSALES PVT LTD (–01), KHASRA NO. 2281, KARADA CROSSING, BHINMAL, DISTRICT - JALORE, RAJASTHAN. - 343029 PH :9610242790.	CHAKSU	DEOLI	2254. K.P. AUTOMOTIVES PVT LTD (–01), KOTA-JAIPUR HIGHWAY, NH-12, DEOLI - 304804 PH :8696925259.	2265. L M J SERVICES LTD (–01), NEAR POLICE STATION, FATEHGARH, DIST. - JAISALMER, RAJASTHAN - 345027 - 345027 GANGAPUR CITY
BHIWADI	2242. K.P. AUTOMOTIVES PVT LTD (1104–03), TONK ROAD, CHAKSU - 303901	DESURI	2255. L M J SERVICES LTD (–01), MAHADEV MARKET, CHARBHUJA ROAD, DESURI, DISTT PALI , RAJASTHAN - 306703	2266. PREM MOTORS PVT LTD (–01), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201 PH :8058794122.
2229. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (–01), OPP. INDAG RUBBER,MAIN ROAD ,BHIWADI - 301019	CHANDAN	DHARIYAWAD	2256. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (–01), PRATAPGARH ROAD, DHARIYAWAD , DIST. - PRATAPGARH, RAJASTHAN - 313605 - 313605 PH :9829736081.	GHARASNA
2230. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (–02), F-458-C,RIICO,INDUSTRIAL AREA,BHIWADI - 301019	2243. L M J SERVICES LTD (–01), JAISALMER ROAD ,CHANDAN , DISTT JAISALMER, RAJASTHAN - 345031 PH :8094011126.	DHOLPUR	2257. TM MOTORS PVT LTD (–01), TM MOTORS PVT. LTD., GT ROAD DHOLPUR, RAJASTHAN. - 328001 PH :8094777862.	2267. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (–01), NH-11,BIKANER ROAD,, ABHISHEK(MEENA)FILLING STATION KE PASS. - 335707 GOGUNDA
2231. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (–04), KHASRA NO. 656431, ALWAR ROAD, BHIWADI. - 301019	CHIRAWA	DHOLPUR	2258. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA , DISTRICT – NAGAU R. KHASRA NO. 2778, DIDWANA BYPASS, DIDWANA, DISTRICT NAGAU R, RAJASTHAN - 341303 PH :7230055924.	2268. TECHNOY MOTORS INDIA PVT LTD (–01), NH 27, GOGUNDA, DISTRICT-UDAIPUR - 313705 GOVINDGARH
BIJAYNAGAR	2244. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026	DIDWANA	2259. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), NEAR POLICE STATION, DOONI, DIST. TONK, RAJASTHAN - 304802 - 304802 DOONI	2269. VIPUL MOTORS PVT LTD (–01), JAI BHAWANI MARKET, NH-2, GOVINDGARH, DIST. JAIPUR, PIN-303712, RAJASTHAN - 303712 2270. M G MOTORS (–01), SIKRI ROAD,GOVINDGARH, - 301604 GUDAMALINI
2232. AJMER AUTO AGENCIES PVT LTD (–01), KHASRA NO 39 , AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT – AJMER ,RAJASTHAN - 305624 PH :8890902472.	CHITTORGARH	DIDWANA	2260. PREM MOTORS PVT LTD (–01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008 PH :805841181.	2271. L M J SERVICES LTD (–01), KHASRA NO. 1360/5, RATHORO KI DHANI, JODHPUR ROAD, GUDAMALANI, DISTRICT – BARMER, RAJASTHAN – 344031. - 344031 PH :8094011126.
BIKANER	2245. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (–01), PLOT NO. 1001/1-1002/1,NIMBAHERA ROAD,CHITTORGARH - 312001	DIDWANA	2261. NAVNEET MOTORS (4902–02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001 FALNA	2272. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), BHORKI ROAD, GUDHAGORJI, DISTRICT – JHUNJHUNUN, RAJASTHAN. - 333022 PH :7412059848. HANUMANGARH
2233. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-01), OPP. URMUL DAIRY PLANT,GANGANAGAR ROAD,BIKANER - 334004	CHOMU	DIDWANA	2273. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101–03), JUNCTION TOWN ROAD,HANUMANGARH - 335512	2274. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101–06), PLOT NUMBER 134, INDUSTRIAL AREA, HANUMANGARH, RAJASTHAN. - 335512 PH :9413311745.
2234. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-04), JAIPUR BYE PASS,BIKANER , - 334004	2246. KTL AUTOMOBILE PRIVATE LIMITED (–01), KHASRA NO.695, JAIPUR SIKAR BYPASS ROAD, CHOMU, RAJASTHAN. - 303702 PH :7412077034.	DIDWANA		
2235. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-05), OPP. AVYYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003	2247. SATNAM MOTOCORP PVT LTD (–01), NEAR CM CHOPRA HOSPITAL, JAIPUR ROAD, CHOMU, DISTRICT – JAIPUR, RAJASTHAN - 303702 PH :8302090000.	DIDWANA		
2236. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (7102-71-01), KHASRA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. - 334001 PH :8929834417.	CHURU	DIDWANA		
2237. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-07), ROAD NO.-4, IND. AREA, RANI BAZAAR,, RANI BAZAAR, BIKANER - 340323	2248. T R SAWHNEY MOTORS PVT LTD (–01), KHASRA NO. 913/54, JAIPUR ROAD, VILLAGE RAMSARA, CHURU, PIN-331001, RAJASTHAN - 331001 PH :9782078531.	DIDWANA		
BILARA	DABI	DIDWANA		
2238. L M J SERVICES LTD (–01), BANGANGA MOD, JODHPUR ROAD, BILARA. RAJASTHAN - 342602 PH :8104689935.	2249. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (–01), KARITALAI-MAHADEV MARKET, CHARBHUJA ROAD, DESURI (DISTRICT PALI) - 323022 DANTA RAMGARH	DIDWANA		
BONLI	2250. JAMU AUTOMOBILES PVT LTD (–01), KHASRA NO.1106/256, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR. - 332703 PH :9116816905.	DIDWANA		
2239. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), OPP. GOPAL AGRO PETROL PUMP NIWARI RD, BONLI, RAJASTHAN - 322023	BORUNDA	DIDWANA		

Dealer Workshop (AS ON 31.01.2026)

HINDAUN	2275. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KHASRA NO. 737, VILLAGE - PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN - 322230	2289. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-04), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR JDCAH, BILCHOHYAN MOHALLA, TRANSPORT NAGAR, DELHI ROAD, JAIPUR - 302002 - 302002 PH :9772210922	JHALAWAR	2312. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301 PH :9413379001.
ITAWA	2276. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NAHER KE PASS, KHATOLI ROAD, ITAWA, ITAWA, RAJASTHAN - 325004	2290. K.P. AUTOMOTIVES PVT LTD (1104-11-G2), PLOT NO. 4, RAJIV COLONY, RPA ROAD, OPP. RADHA SWAMI SATSANG BHAWAN, SHASTRI NAGAR, JAIPUR 302016 - 302016 PH :9549656559.	2300. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6102-02), OPP. BALAJI KI CHHATRI, KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001 PH :9413350336.	KEKRI
JAIPUR	2277. VIPUL MOTORS PVT LTD (1102-11-01), F-124A, MALVIYA INDUSTRIAL AREA, MALVIYA NAGAR, JAIPUR - 302017	2291. SANGA AUTONATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (1117-11-01), SECTOR 35, PRATAP NAGAR, SANGANER, JAIPUR, PIN-302023, RAJASTHAN - 302033 PH :9929365847.	JHUNJHUNUN	2313. AJMER AUTO AGENCIES PVT LTD (-03), KOTA SAWAR ROAD, KEKRI - 305404 PH :9314955201.
	2278. K.P. AUTOMOTIVES PVT LTD (1104-11-01), E-198, SANGANER INDUSTRIAL AREA, MANSAROVAR, JAIPUR - 302020	2292. K.P. AUTOMOTIVES PVT LTD (1104-11-09), KHASRA NO. 74/4 & 75/1, NEW KHANDELWAL NAGAR, GONER ROAD, NEAR JAIPUR AGRA HIGHWAY, JAIPUR, RAJASTHAN 302031 - 302031	2301. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001	KHAJUWALA
	2279. PREM MOTORS PVT LTD (1112-11-02), 12 13, SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006	2293. K.P. AUTOMOTIVES PVT LTD (-08), PLOT NO. 280, RAJENDRA NAGAR A, NIRMAN NAGAR, JAIPUR - 302031	2302. PREM MOTORS PVT LTD (-01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL - PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303328 PH :8059411181.	2314. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), DANTOR ROAD, KHAJUWALA, DIST. -BIKANER, RAJASTHAN. - 340323 PH :9982299866.
	2280. VIPUL MOTORS PVT LTD (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR - 302012	JAISALMER	JODHPUR	KHANDAR
	2281. PREM MOTORS PVT LTD (1112-11-01), PLOT NO. E101A, VKI, JAIPUR - 302039	2294. L M J SERVICES LTD (-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY, HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) - 345001 PH :8005898360.	2303. L M J SERVICES LTD (6502-65-01), PRATAP NAGAR, JODHPUR - 340002 PH :9950496202.	2315. PREM MOTORS PVT LTD (-01), SAWAI MADHOPUR-KHANDAR RD., KHANDAR, RAJASTHAN - 322025 - 322025 PH :8058989960.
	2282. SATNAM MOTOCORP PVT LTD (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR - 302 022, RAJASTHAN. - 302022	JAITARAN	2304. L M J SERVICES LTD (6502-65-04), OPP TO RFC OFFICE, NEW POWER HOUSE ROAD, JODHPUR - 342003 PH :8094011127.	KHANPUR
	2283. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR - 302012 PH :7412077022.	2295. L M J SERVICES LTD (-01), KHASRA NO. 784, JAIPUR, JODHPUR BYE PASS ROAD, JAITARAN, DIST.-PALI - 306302 PH :9269971266.	2305. SHRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A HEAVY INDUSTRIAL AREA, NR FCI GODOWNS, JODHPUR - 342005	2316. SUWALKA MOTORS PRIVATE LIMITED (-01), BYPASS CHORAYA, MEGA HIGHWAY BARAN-JHALAWAR, KHANPUR, TEHSIL - KHANPUR, DISTRICT - JHALAWAR, RAJASTHAN PIN CODE: 326038 - 326038 PH :8306333731.
	2284. PREM MOTORS PVT LTD (1112-11-03), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR. - 302017	JALORE	2306. L M J SERVICES LTD (6502-09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008 PH :8094011147.	KHERLI
	2285. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-02), KHASRA NO 1210-1216/2959 , BHANKROTA , TEH SANGANER , DISTRICT JAIPUR. - 302026 PH :7412077007.	2296. SHRI KRISHNA AUTOSALES PVT LTD (-01), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001	2307. L M J SERVICES LTD (6502-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002 PH :7230057721.	2317. M G MOTORS (-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606 PH :9001795520.
	2286. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-03), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD ,JAIPUR. - 302006 PH :7412077007.	JAMWA RAMGARH	2308. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-65-01), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005 PH :7412059839.	KHERWARA
	2287. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (1116-11-C1), COMMERCIAL PLOT NO. J4, COMMERCIAL BELT B, VT ROAD, NEW SANGANER ROAD, MANSAROVAR SCHEME, JAIPUR, RAJASTHAN 302020 - 302020 PH :9571105651.	2297. K.P. AUTOMOTIVES PVT LTD (-01), KHASRA NUMBER -228/169, OPP UDAY AUTOMOBILES, JAIPUR ALWAR ROAD -JAMWA RAMGRAH. - 303109	2309. L M J SERVICES LTD (6502-65-0D), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342001 PH :8696916455.	2318. TECHNOY MOTORS INDIA PVT LTD (-01), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8, KHERWARA, TEHSIL - KHERWARA, DISTRICT - UDAIPUR, RAJASTHAN PIN CODE: 313803
	2288. K.P. AUTOMOTIVES PVT LTD (1104-11-G1), B-1, GOVIND MARG, ADARSH NAGAR, JAIPUR - 302004 - 302004 PH :9549656559.	JAWAL	2310. L M J SERVICES LTD (6502-65-10), KHASRA NO. 357/5, BANAR ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342003 PH :7222002424.	KISHANGARH
		JHADOL	KAPASAN	2319. AJMER AUTO AGENCIES PVT LTD (-01), R K LINK ROAD. - 305802 PH :9314391011.
		2298. TECHNNOY MOTORS INDIA PVT LTD (-01), OPP. HP PETROL PUMP, SIROHI-JALORE ROAD, JAWAL, DIST. - SIROHI, RAJASTHAN - 307801 - 307801	2311. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), OLD RASHMI ROAD, KAPASAN , DISTT. CHITTORGARH, RAJASTHAN - 312202	KISHANGARH BAS
		2299. TECHNNOY MOTORS INDIA PVT LTD (-01), KHASRA NO. 186/1, NH # 8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, PIN-306104, RAJASTHAN - 306104 PH :8890673099.	KAPRAIN	2320. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405

2322.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-61-01), 13-16 B, INDUSTRIAL ESTATE, KOTA - 324007 PH :8929400447.	LOSAL	2335.	JAMU AUTOMOBILES PVT LTD (-01), LOSAL-SALASAR-DIWANA ROAD, OPPOSITE SHIV MANDIR, WARD NO. 1, LOSAL, RAJASTHAN - 332025. - 332025 PH :9057400761.	2345.	SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NUMBER 1679, NH-89,MERTA RAJASTHAN. - 341510 PH :9116007201.	NIWAI	2355.	K.P. AUTOMOTIVES PVT LTD (-01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT - TONK. - 304021 PH :8696925262.		
2323.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6102-61-01), AUTO MOBILE ZONE, G-11/12 INDUSTRIAL AREA, KOTA - 324005	LUNI	2336.	L M J SERVICES LTD (-01), NEAR SBI BANK, SALAWAS ROAD,LUNI, TEHSIL - LUNI,DISTRICT - JODHPUR,RAJASTHAN PIN CODE: 342802 - 342802 PH :8094011126.	NADOTI	2346.	FORTUNE CARS (-01), SH-25,VPO,NADAUTI ALWAR, GANGAPUR CITY STATE HIGHWAY - 322215	NOHAR	2356.	AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523	
2324.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007 PH :8929400447.	LUNKARANSAR	2337.	DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), VISWAKARMA MARKET, BIKANER ROAD, LUNKARANSAR, BIKANER, RAJASTHAN - 334603. - 301026	NAGAUR	2347.	SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUR. - 341001 PH :9116008624.	NOKHA	2357.	AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803 PH :7412059805.	
2325.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101--05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH :8929400447.	MAHWA	2338.	VIPUL MOTORS PVT LTD (-01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H. -11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608 PH :9672211333.	NAINWA	2348.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), UNIARA ROAD, OPP: PETROL PUMP, NAINWA, DIST. KOTA - 323801 PH :9413379001.	PADAMPUR	2358.	DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 - 335041	
2326.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101--06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324005	MAKRANA	2339.	SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRANA, DISTRICT - NAGAUR. - 341505 PH :7230055934.	NARAYANPUR	2349.	FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KHASRA NO. 2848, JAIPUR ROAD,NEAR NARAYANPUR BYPASS VILLAGE, NARAYANPUR TEHSIL - NARAYANPUR, DISTRICT - ALWAR,RAJASTHAN PIN CODE: 301024. - 301024 PH :8875004375.	PALI	2359.	L M J SERVICES LTD (6502--03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH :9269971266.	
2327.	SUWALKA MOTORS PRIVATE LIMITED (-01), RIDDIH SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN. - 324008	KOTPUTLI	2340.	K.P. AUTOMOTIVES PVT LTD (-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH :8696925262.	NASIRABAD	2350.	AJMER AUTO AGENCIES PVT LTD (-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601 PH :9314955201.	PARBATSAR	2361.	SHRI MANGALAM AUTO PRIVATE LIMITED (-01), NEAR IFL HOUSING FINANCE CO., KISHANGARGH ROAD, PARBATSAR, DISTRICT - NAGAUR, RAJASTHAN - 341512. - 341512 PH :8740990996.	
2328.	SUWALKA MOTORS PRIVATE LIMITED (6104-02), PLOT NO. A172 (B-1) INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324003	MALPURA	2341.	CHAMPION CARS (PREM CARS PVT LTD) (-01), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT - BHLWARA, PIN-311604, RAJASTHAN PH :9837325267.	NAWALGARH	2351.	AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHATA NO. 76, PUNIA KI DHANI, SIKHAN ROAD, NAWALGARH, DISTRICT - JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042 PH :9928720360.	PARTAPUR	2362.	NAVNEET MOTORS (-01), AAASHAPURA CHAURAHA, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024 PH :9001550644.	
KOTPUTLI	2329.	PREM MOTORS PVT LTD (-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108	MANDALGARH	2342.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NH-27, PAL KHERI, MANGALWAD, CHHITORGARH. - 312024	NASIRABAD	2352.	JAMU AUTOMOBILES PVT LTD (-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713	PHALODI	2363.	SHRI KRISHNA AUTOSALES PVT LTD (-01), OPP. RCP GUEST HOUSE, NAGAUR KHICHAN ROAD, PHALODI, RAJASTHAN - 342301 PH :9116011958.
2330.	PREM MOTORS PVT LTD (-02), KHASRA NO-636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108	MANGALWAD	2343.	L M J SERVICES LTD (-01), 1-2 KRISHNA KUNJ,OPP ROADWAJ BUS STAND, MARWAR JUNCTION, PALI - 306001	NARAYANPUR	2353.	FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705	PHULERA	2364.	RTL AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, NANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338 PH :7412077022.	
KUCHAMAN	2331.	SHRI MANGALAM AUTO PRIVATE LIMITED (-01), SUDARSHAN NAGAR, BURSU ROAD, KHASRA NO.148, KUCHAMAN. - 341508 PH :7230055928.	MARWAR JUNCTION	2344.	RELAN MOTORS PVT LTD (-01), BANDANWARA ROAD, MASUDA, RAJASTHAN- 305623 - 305623	NEEM KA THANA	2354.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601			
LADNU	2332.	SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 1011, SUJANGARH ROAD, LADNUN - 341306 PH :7412044506.	MASUDA	2345.	MERTA						
LAHAR	2333.	NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (-01), WARD NO.09., BHIND BHANDER ROAD,LAHAR. - 477001	MERTA								
LALSOT	2334.	VIPUL MOTORS PVT LTD (-01), PLOT NO.22,23, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502 PH :9672211333.									

Dealer Workshop (AS ON 31.01.2026)

2365. KTL AUTOMOBILE PRIVATE LIMITED (-02), KHASRA NO. 21 TO 24 AND PLOT NO. 189, IN RAM VIHAR COLONY - 303338	2376. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, - 331023 PH :9602261977.	REVDAR 2387. TECHNOY MOTORS INDIA PVT LTD (-01), OPP. TIROPATI PETROL PUMP, KAROTI ROAD, REVDAR, DISTT. SIROHI, RAJASTHAN - 307514	2397. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN - 331403 PH :9799833995.
PILIBANGA 2366. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), HANUMANGARH ROAD, PILIBANGA, DISTRICT-HANUMANGARH, RAJASTHAN - 335803	RAJSAMAND 2377. TECHNOY MOTORS INDIA PVT LTD (-01), ARAJI NO 241 - 242, DHOINDA, RAJASMAND, RAJASTHAN - 313324	SABLA 2388. TECHNOY MOTORS INDIA PVT LTD (-01), NEAR BP PETROL PUMP, SABLA ASPUR ROAD, SABLA, TEHSIL-ASPUR, DUNGERPUR, PIN-314022, RAJASTHAN - 314022	SARWAR 2398. RELAN MOTORS PVT LTD (-01), CHAMAN CHOURAHA, AJMER ROAD, SARWAR, DISTRICT - AJMER, RAJASTHAN 305403 - 305403 PH :9587687000.
PINDWARA 2367. NAVNEET MOTORS (-01), OPPOSITE WOLKEM FACTORY, SIROHI ROAD, PINDWARA, DIST. - SIROHI. - 307022	RAMGANJMANDI 2378. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KHAIIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH :9414085790.	SAGWARA 2389. TECHNOY MOTORS INDIA PVT LTD (-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025	SAWAI MADHOPUR 2399. PREM MOTORS PVT LTD (-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001
PIPAR 2368. L M J SERVICES LTD (-01), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601 PH :9462616268.	RAMGARH 2379. M G MOTORS (-01), PLOT NO. 8, BALOT NAGAR, OLD DELHI ROAD, RAMGARH, ALWAR, RAJASTHAN - 301026	SALUMBAR 2390. NAVNEET MOTORS (-01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT - UDAIPUR. - 313027 PH :7665887444.	SAYALA 2400. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEAR PETROL PUMP, HANUMAN MANDIR SOUTH STYLE, MAIN ROAD SAYALA, SAYALA TEHSIL - SAYALA, DISTRICT - JALORE, RAJASTHAN PIN CODE: 343022 - 343022 PH :9460739993.
PIRAWA 2369. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO.19,NEAR KRISHI UPJAI MANDI,SOYAT ROAD,PIRAWA,DIST.,JHALAWAR, - 326034	RANIWARA 2380. SHRI KRISHNA AUTOSALES PVT LTD (-01), NEAR RAILWAY GATE, BHINMAL ROAD ,RANIWARA, TEHSIL - RANIWARA, DISTRICT - JALORE, RAJASTHAN,PIN CODE: 343040 - 343040 PH :9928377669.	SAMBHAR 2391. KTL AUTOMOBILE PRIVATE LIMITED (-01), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE , PHULERA ROAD , SAMBHAR 303604 - 303604 PH :7412077022.	SHAHJAHANUR 2401. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KHASRA NO. 1258, VPO SHAHJAHANPUR, DELHI-JAIPUR HIGHWAY, DISTRICT -ALWAR, RAJASTHAN - 301706. - 301706
PISANGAN 2370. AJMER AUTO AGENCIES PVT LTD (-01), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT - AJMER, RAJASTHAN - 305204 PH :9314955201.	RATANGARH 2381. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331022 PH :7412087301.	SAMRANIYA 2392. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KHASRA NO.857/394,GADRETA BYPASS, SANTOSHI NAGAR,SAMRANIYA, - 325217	SHAHJPURA 2402. K.P. AUTOMOTIVES PVT LTD (1104-05), VILLAGE RAJPURA,GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103
POKHRAN 2371. L M J SERVICES LTD (-01), SUNDER NAGAR, TEHSIL POKHRAN, DISTRICT - JAISALMER, RAJASTHAN. - 345021 PH :9610115660.	RAWATBHATA 2382. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA ,DIST. CHITTORGARH, RAJASTHAN. - 323307	SANCHORE 2393. SHRI KRISHNA AUTOSALES PVT LTD (-01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. - 343041 PH :9636224546.	SHEO 2403. L M J SERVICES LTD (-01), NEAR RIDDI SIDDIH HOTEL, OPPOSITE HP PETROL PUMP ,TEH SHEO, DISTT - BARMER - 335521 PH :8094011144.
PRATAPGARH (RAJASTHAN) 2372. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605 PH :9571274999.	RAWATSAR 2383. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), CHAK 21-22,DVD,PLOT NUMBER -10 & 11, RAWATSAR (RAJASTHAN) . - 335524	SANGARIA 2394. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), HANUMANGARH ROAD NEAR KARMA PETROL PUMP - 335035 PH :7412059827.	SHEOGANJ 2404. NAVNEET MOTORS (-01), F 132 ,OPP. 33/11 KV STATION, RIICO INDUSTRIAL AREA, SHEOGANJ, DISTRICT - SIROHI, RAJASTHAN - 307027 - 307027 PH :9414159146.
RAIPIUR 2373. L M J SERVICES LTD (-01), NATIONAL HIGHWAY, PALI ROAD, VILLAGE - RAIPIUR, DISTRICT - PALI. - 306304 PH :9269971266.	REENGUS 2384. JAMU AUTOMOBILES PVT LTD (-01), REENGUS HIGHWAY , REENGUS DISTT. SIKAR -332404 - 332404 PH :332404.	SANGOD 2395. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KHASRA NO 1637 , SANGOD BAPAPUR MAIN ROAD ,SANGOD - 325601 PH :9413353999.	SIKAR 2405. JAMU AUTOMOBILES PVT LTD (-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001
RAISINGHNAGAR 2374. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT - SRINGANGANAGAR. - 335051	RENWAL 2385. PREM MOTORS PVT LTD (-01), 193, JAIPUR CHOMU ROAD, NEAR 10 DUKAN , RENWAL KISHANGARH, JAIPUR, RAJASTHAN - 303904	SAPOTRA 2396. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), VPO SAPOTRA, NEAR PETROL PUMP DIST. KARAUJI, PIN-322218 - 322218	SIKRAI 2406. VIPUL MOTORS PVT LTD (-01), OPP NAYARA PETROL PUMP, MANPUR ROAD SIKRAI, DAUSA (RAJASTHAN) - 303508
RAJGARH 2375. M G MOTORS (-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH :9001795520.	RENWAL MANJHI 2386. PREM MOTORS PVT LTD (-01), KHASRA NUMBER 2286/110,OPP ROHINI NAGAR 1 ,JAIPUR BHILWARA HIGHWAY ,RENWAL,TEHSIL PHAGI JAIPUR ,RAJASTHAN (303904) . - 303904	SARDARSHAHAR	SIMALWARA

2407. NAVNEET MOTORS (-01), RAJPUR PEETH ROAD, SIMALWARA, DISTRICT - DUNGARPUR, RAJASTHAN - 314403 - 314403	2417. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHASRA NO.459/933, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507 PH :8875011561.	2427. PREM MOTORS PVT LTD (-01), VILLAGE GWALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL - BASSI, JAIPUR - 303302 - 303302 PH :8056998123.	2438. PLA MOTORS (-01), S. NO. 400/6-A-2, NO. 1/85, MANGALAPURAM, PUDDUKOTTAI TO ALANGUDI ROAD, NEAR KNP KALYANA MANDAPAM, ALANGUDI TOWN & TALUK, PUDDUKOTTAI DIST., TN - 622301 - 622301 PH :8870454466.
SINGHANA	SULTANPUR	UDAIPUR	ALANGULAM
2408. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NARNAUL ROAD, SINGHANA, DIST. JHUNJHUNU,, PIN-333516, RAJASTHAN - 333516	2418. SUWALKA MOTORS PRIVATE LIMITED (-01), KHASRA NUMBER 485, NEAR PETROL PUMP , SULTANPUR ROAD , SULTANPUR , DISTT KOTA - 325204 PH :7742121212.	2428. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD,UDAIPUR - 313001 PH :7230046375.	2439. AADHI CARS PVT LTD (-01), SURVEY NO. 495/7, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT, TN - 627851 PH :8754044143.
SIROHI	SUMERPUR	2429. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002	AMBASAMUNDRAM (AMBAI)
2409. NAVNEET MOTORS (4902-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH :779960989.	2419. L M J SERVICES LTD (6502-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHAREA GROUND, SUMERPUR - 306902 PH :8094002633.	2430. TECHNOY MOTORS INDIA PVT LTD (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002 PH :7073468292.	2440. AADHI CARS PVT LTD (-01), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAikulAM, AMBASAMUNDRAM. - 627401
SIVANA	SURATGARH	2431. TECHNOY MOTORS INDIA PVT LTD (4903-49-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL - BADGAON, UDAIPUR, RAJASTHAN. - 313001	AMBUR
2410. L M J SERVICES LTD (-01), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASTHAN. - 344044 PH :8005898360.	2420. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804 PH :8875012667.	UDAIPURWATI	2441. SRI AMMAN CARS INDIA PVT LTD (-01), 25/2A, 25/2B,26/1&26/2, PLOT NO.42, SIDCO INDUSTRIAL ESTATE VINNAMANGALAM, CHENGILLIKUPPAM VILLAGE, AMBUR TALUK, TIRUPATHUR DIST., TAMILNADU - 631005
SOJAT	SWAROOPGANJ	2432. AURIC MOTORS PVT LTD (-01), INFRONT OF FRAMA TRACTOR,SIKAR ROAD, POWER HOUSE UDAIPURWATI JHUNJHUNU - 333307	ANAMALAI
2411. L M J SERVICES LTD (-01), KHASRA NO. - 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104 PH :9269971266.	2421. NAVNEET MOTORS (-01), NEAR POLICE STATION, NAYI BHAWARI,, NATIONAL HIGHWAY 27, SWAROOPGANJ. - 307001	VATIKA	2442. ABT LIMITED (-01), SITE NO. 6/12, NEAR ABT SAMUGA KODDAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642104 PH :9788174244.
SRI DUNGARGARH	THANAGAZI	2433. SANGA AUTONATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (-01), PLOT NO.3 & 8, VINAYAK VIHAR, VATIKA, SANGANER, JAIPUR, PIN-303905, RAJASTHAN - 303905	ANDIPATTI
2412. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT - BIKANER, RAJASTHAN - 331803 PH :9414138511.	2422. M G MOTORS (-01), NEAR INDIA PETOL PUMP, THANAGAZI, ALWAR ROAD, DIST. ALWAR, PIN-301022, RAJASTHAN - 301022 PH :9799398200.	VRATNAGAR	2443. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 459/1A1, THENI MAIN ROAD, ANDIPATTI, THENI DISTRICT,TAMILNADU - 625512
SRI GANGANAGAR	TIBBI	2434. K.P. AUTOMOTIVES PVT LTD (-01), KHASRA NUMBER 1156, OPP HOTEL GULMOHAR ,JAIPUR ROAD ,VRATNAGAR,DISTT JAIPUR - 303102	ANJUGRAMAM
2413. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEW AUTOMOBILE MARKET,SURATGARH,HANUMANGARH ROAD, SRIGANGANAGAR - 335001	2423. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEAR KESARGARH PALACE, HANUMANGARH ROAD, TIBBI, DIST. HANUMNAGARH, PIN-335526, RAJASTHAN - 335526 PH :9413311745.	SIKKIM	2444. ATHEN CARS (-01), 994/6A, VARIYOOR, ANJUGRAMAM, AGASTHEESWARAM TALUK, . - 629401
2414. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001 PH :8875911503.	TINWARI	GANGTOK	ANNUR
SRI KARANPUR	2424. L M J SERVICES LTD (-01), OPPOSITE NEW TEHSIL OFFI CE, TIWARI, MATHANIA ROAD, TIWARI -342306 - 342306 PH :809011126.	2435. ENTEL MOTORS (-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102	2445. JAIKRISHNAA AUTOSALES PVT LTD (-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653 PH :8788850733.
2415. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR,TEHSIL - SRI KARANPUR, DISTRICT - SRI GANGANAGAR,RAJASTHAN, PIN CODE: 335073 PH :8875089989.	TODARAISINGH	2436. ENTEL MOTORS (-01), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121	ANTHYUR
SRI MADHOPUR	2425. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), JAKHAD COLONY, NEAR ESSAR PETROL PUMP, TODARAISINGH, DIST. - TONK, RAJASTHAN-304505. - 304505	TAMIL NADU	2446. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO.495/4, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD,ANTHYUR. - 638501 PH :8754086777.
2416. JAMU AUTOMOBILES PVT LTD (-01), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR. - 332715 PH :9116816905.	TONK	2437. AADHI CARS PVT LTD (-01), NO.69/1 A, SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) - 641101 PH :8754045816.	ARACHALUR
SUJANGARH	2426. K.P. AUTOMOTIVES PVT LTD (-01), F-84, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001 PH :9549651972.	ALANGUDI	2447. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF NO. 63/2, DOOR NO: 19, ST-1, NAGARAJAPURAM, KODUMUDI ROAD, ARACHALUR, ERODE DIST., TAMILNADU- 638101. - 638101

Dealer Workshop (AS ON 31.01.2026)

ARAKKONAM

2448. GANESH CARS PVT LTD (-01), SURVEY NO. 556A/3, VILLAGE - ICHIPUDHUR, TALUKA - ARAKKONAM, VELLORE. - 631003
PH :9842345399.

ARIYALUR

2449. PILLAI & SONS MOTOR COMPANY (-01), NO.1/1 NEAR ULAVAR SANTHALI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704

ARNI

2450. GANESH CARS PVT LTD (-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI, THIRUVANAMALAI, TAMIL NADU. - 632301
PH :9585553266.

ARUPPUKOTTAI

2451. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 205/1, 5/C, NEHRU NAGAR, ARUPPUKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKOTTAI, DIST.-VIRUDHUNAGAR. - 626101
PH :9944059911.

ATTUR

2452. S M CAR PVT LTD (-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108
PH :7094440057.

AVADI

2453. VISHNU CARS PVT LTD (-01), SURVEY NO. 146, 147/1F & 147/G, NO. 17 VILLAGE - KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT - THIRUVALLUR, CHENNAI, TAMIL NADU - 600054

AVINASHI

2454. SHASHTI CAR PRIVATE LIMITED (-01), SURVEY NO. 373/1E, THEEKU THOTTAM, NALLIGOUNDANPALAYAM, PALANGARAI, KUPUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654
PH :9942903319.

BHAVANI

2455. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316
PH :9597385777.

CHENGALPETTU

2456. AIE CARS PVT LTD (-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. - 603002

2457. AIE CARS PVT LTD (-02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU - 603202

CHENGAM

2458. GANESH CARS PVT LTD (-01), SURVEY NO. 293/3A, 3A1,VILLAGE - THUKAPETTAI, CHENGAM, DIST.-TIRUVANAMALAI. - 606701
PH :7397395289.

CHENNAI

2459. ABT LIMITED (1401-14-01) # 355-A, GST ROAD, ALANDUR, CHENNAI, TAMILNADU - 600032
2460. KHIVRAJ MOTORS PVT LTD (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006
PH :9043014530.

2461. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058
PH :9952000089.

2462. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020
2463. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-02), OLD NO.155, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117

2464. ABT LIMITED (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093
2465. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-03), 4/321, OLD MAHABALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040
2466. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-01), NEW DOOR NO.256 (OLD DOOR NO. 93), ARCOT ROAD, VIRUGAMBAKKAM, CHENNAI, TAMIL NADU-600092 - 600093

2467. ABT LIMITED (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106
2468. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-14-01), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107
PH :7305087055.

2469. ABT LIMITED (1411-14-01), 29, WALLS ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058
2470. VISHNU CARS PVT LTD (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600094

2471. VISHNU CARS PVT LTD (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043

2472. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099
2473. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-05), PLOT NO. - 89, BABU JAGADEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112
PH :9952000079.

2474. KHIVRAJ MOTORS PVT LTD (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032
PH :7299971978.

2475. ABT LIMITED (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. - 600041
2476. AIE CARS PVT LTD (1496-01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115

2477. RAJALAKSHMI CARS PVT LTD (1486-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI - 600060
2478. KHIVRAJ MOTORS PVT LTD (1480-02), PLOT NO. 119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI - 600096

2479. ABT LIMITED (1401-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT - CHENNAI, TAMIL NADU. - 600119
2480. VISHNU CARS PVT LTD (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089

2481. VISHNU CARS PVT LTD (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056
PH :9677127432.

2482. VISHNU CARS PVT LTD (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100
2483. VISHNU CARS PVT LTD (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM - THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI - 600117
PH :9940057775.

2484. VISHNU CARS PVT LTD (1427-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. - 600016
2485. RAJALAKSHMI CARS PVT LTD (1486-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI - 600095

2486. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058
PH :7305087033.

2487. POPULAR VEHICLES AND SERVICES LIMITED (-06), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1C, 88/1B & 88/2B, NOONBIAL MAIN ROAD, VANAKARAM, CHENNAI. - 600077
2488. AIE CARS PVT LTD (1496-14-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. - 600049

2489. VISHNU CARS PVT LTD (1427-14-07), SURVEY NO. 19/1A2, 83/1B, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. - 600069
2490. VISHNU CARS PVT LTD (-14-08), SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI , TAMIL NADU. - 600073
PH :8056260022.

2491. ABT LIMITED (1401-14-10), S. NO. 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI - 600089, TN. - 600089
2492. VISHNU CARS PVT LTD (1488-14-01), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTHANGAL, CHENNAI, TN - 600032
PH :7550360444.

2493. KHIVRAJ MOTORS PVT LTD (1404-14-G1), SURVEY NO.76/A, NO.27, PLOT NO. D-2, KEELAKOTTAYUR, VANDALUR TO KEELAMBAKKAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI, TN - 600127
PH :9841591558.

2494. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-G1), SURVEY NO: 18/1B2A1A, NAZARTHAPET VILLAGE, POONAMALLE, CHENNAI, TAMIL NADU- 600123
PH :7994449644.

2495. ABT LIMITED (1401-14-11), OLD SURVEY NO: 84/1A & 85/1A, NEW TOWN SURVEY NO-1, RACE COURSE ROAD, GUINDY, CHENNAI, TAMILNADU - 600032
PH :999437421.

2496. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (-14-05), NO. 273,(OLD NO.191), TAMBARAM- VELACHERY MAIN ROAD, NARAYANAPURAM, PALLIKARANI, CHENNAI, TN - 600100
2497. POPULAR VEHICLES AND SERVICES LIMITED (1410-07), NEW S NO.2/7B,3/2A3B, 3/7B & 4/8B (OLD S. NO.2/1B, 3/2,3/3B, 4/4), SEMBILUM- RED HILLS ROAD, NEAR AMBEDKAR STATUE, KATHIRVEDU, AAMBATTUR TALUK, THIRUVALLUR DIST., CHENNAI, TN-600066 - 600066

2498. INDUS MOTOR COMPANY PRIVATE LIMITED (1495-14-01), 51/1A, DOOR NO.6, NEARBY CHENNAI TRADE CENTRE, MOUNT POONAMALLE ROAD, NANDAMBAKKAM, CHENNAI, TAMILNADU-600089 - 600089	2510. ABT LIMITED (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1189/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001	2524. AADHI CARS PVT LTD (4108-41-06), SF NO: 14/78-A, RENUKA SHELTERS, VILANKURICHI MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL NADU-641048 - 641006 PH :8754045840	2535. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARMAPURAM - 638656 PH :9597550777
2499. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), NO.503/1, GNT ROAD, THANDALAKAZHANI, PUZHAI, REDHILLS, CHENNAI, TN-600066 - 600066	2511. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH :9047055667	2525. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-11), PLOT NO. 1, RAJA STREET, KALLIMADAI, NANJAPPA NAGAR, COIMBATORE, TAMIL NADU - 641005 PH :9344870035	2536. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF 13/4A/3, DINDIGUL BYPASS ROAD, NEAR INDIAN OIL PETROL PUMP, DHARMAPURAM TOWN AND TALUKA, TIRUPPUR DIST., TAMILNADU-638656 - 638656 PH :9787853000.
2500. ABT LIMITED (1401-14-12), SURVEY NO # NO: 27, VELACHERY MAIN ROAD, RAM NAGAR NORTH, MADIPAKKAM, CHENNAI, TAMILNADU-600091 - 600091	2512. ABT LIMITED (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043	2526. AADHI CARS PVT LTD (4108-41-07), SF NO: 404/1, VAIKALPALAM, PERUR MAIN ROAD, PERUR, COIMBATORE, TAMILNADU-641010 - 641010	DHARMAPURI
2501. AIE CARS PVT LTD (1496-14-03), SURVEY NO: 160/2A, 160/1C, 160/2A/1 A2 & 160/2B2, KRISHNA NAGAR, MUDICHUR ROAD, WEST TAMBARAM, TAMBARAM TALUK, CHENGALPET DISTRICT, CHENNAI, TAMILNADU-600045 - 600045	2513. JAIKRISHNA AUTOSALES PVT LTD (4107-41-01), 8/60-C88/62-D, METTUPALAYAM ROAD, G.N.MILLS POST , NEARJOHNBOSCO CHURCH,COIMBATORE - 641029	2527. ABT LIMITED (4101-41-12), D.NO 13/7-1 THONDAMUTHUR ROAD, BOMMANAPALAYAM, PN PUDUR - 641041	2537. SRI AMMAN CARS INDIA PVT LTD (-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTHALLI (PO), DHARMAPURI , TAMILNADU - 638607
2502. VISHNU CARS PVT LTD (1427-14-09), SURVEY NO:44/1,44/1B1A &44/1A1A, RAJESH NAGAR, IRUMBULIYUR VILLAGE, SERVICE ROAD-MADURAVOYIL BYPASS, WEST TAMBARAM, CHENNAI, TAMILNADU - 600045	2514. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027 PH :9655219900.	2528. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-12), 313/1H1, KARASAKADU THOTTAM, GANESH NAGA MALLUMICHAMPATTI, POLLACHI MAIN ROAD - 641001	DINDIGUL
2503. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-14-06), G-17, 1ST MAIN ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI, TAMILNADU-600058 - 600058	2515. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-08), SF-94, SATHY MAIN ROAD, VISVASAPURAM, SARAVANNAMPATTI, COIMBATORE, - 641013 PH :9585877775.	COONOOR	2538. P.L.A. MOTORS FIRE (-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL - 624001 PH :7010075200.
CHETPET	2516. JAIKRISHNA AUTOSALES PVT LTD (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004	2529. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGIRIS DIST - TN - 643102	EDAYARPALAYAM, COIMBATORE
2504. GANESH CARS PVT LTD (-01), DOOR NO: 35/C, CHETPET TOWN, CHETPET TALUKA, TIRUVANNAMALAI DIST., TAMILNADU, - 606801	2517. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4101-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE - 641004 PH :9655345775.	CUDDALORE	2539. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE, - 641025 PH :9047081914.
CHEYEAR	2518. AADHI CARS PVT LTD (4108-01), SURVEY NO.469/2,DOOR NO: 46-2,SATHY MAIN ROAD, RAMAKRISHNAPURAM, GANAPATHY, COIMBATORE - 641035	2530. ABT LIMITED (-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003	ERODE
2505. GANESH CARS PVT LTD (-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407 PH :9787669339.	2519. ABT LIMITED (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024	2531. VISHNU CARS PVT LTD (-01), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANANGAKUPPAM, CUDDALORE - 607001 PH :7338884131.	2540. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH :9677987777.
CHIDAMBARAM	2520. AADHI CARS PVT LTD (4108-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004	CUMBUM	2541. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-06), SURVEY NO. 1363/3, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP, OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE, - 638002 PH :6385805777.
2506. VISHNU CARS PVT LTD (-01), SURVEY NO. 1022 & 102/5, BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU, - 608602	2521. AADHI CARS PVT LTD (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041	2532. MEENAKSHI AUTO ZONE PVT LTD (-01), PATTA NO. 4388, SURVEY NO. 1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB DIST.-CUMBUM, TAMIL NADU - 625516 PH :9940094881.	2542. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-01), OLD G.S. NO. 337 (1 TO 4), RS NO. 259/11A, 10.9.8., SATHY ROAD, PERIYA SEMUR VILLAGE, ERODE, TAMILNADU - 638003 PH :9171791991.
CHINNAMANUR	2522. AADHI CARS PVT LTD (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE. - 641005	DENKANIKOTTAI	2543. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-08), RF. NO. 17/1, 2, CAVERI ROAD, KARUNGALPALAYAM, ERODE, TAMILNADU - 638003 PH :8098825000.
2507. ABT LIMITED (-01), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO.8/15, PERIYAKULAM TO CHINNAMANUR MAIN ROAD, KEELAPOOLANANDHAPURAM, CHINNAMANUR MUNICIPAL TOWN & TALUK, THENI DIST, TN- 625515 - 625515 PH :9715863213.	2523. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. - 641008	2533. SRI AMMAN CARS INDIA PVT LTD (-01), SURVEY NO:766/ 1B11, THABALGOUNDAN THOTTI, DENKANIKOTTAI , KRISHNAGIRI DISTRICT, TAMILNADU - 635107 PH :9585599935.	2544. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-09), SF:NO.245, KANDHAIYAN THOTTAM, SOOLAI, SATHY ROAD, VEEARPANCHATTIRAM, ERODE, TAMILNADU - 638004 PH :9655240486.
COIMBATORE	2509. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005 PH :8220862666.	DEVAKOTTAI	
		2534. SIVA AUTOMOTIVE TRADING PVT LTD (-01), SURVEY NO. 5/1A, MULLI IGUNDU (SOMANANTHAL VILLAGE), DEVAKOTTAI TALUK, SIVANGANGAI DISTRICT, TAMILNADU - 630303 PH :7094688870.	
		DHARAPURAM	

Dealer Workshop (AS ON 31.01.2026)

2545. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-02), R.S. NO:1098/3, VINAYAGAR KOVIL STREET, TELEPHONE NAGAR, POONDURAI MAIN ROAD, ERODE, TAMILNADU - 638002 PH :9626671444.	2556. ABT LIMITED (-01), SURVEY NO. 215/4,NEAR AKT SCHOOL, DURUGAM ROAD, NEAR DOORABAZHAN BLDG, NEELAMANGALAM VILLAGE, KALLAKURICHI TALUK & DIST., TAMILNADU - 606202 PH :9047514890.	2566. VISHNU CARS PVT LTD (-01), SURVEY NO. 6& 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOIL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301 PH :7358004555.	2576. PILLAI & SONS MOTOR COMPANY (-06), D. NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO, THIRUBHUVANAM TOWN & POST, KUMBAKONAM, THANJAVUR DISTRICT, TAMILNADU - 612103 PH :8489900136.
GANGAVALLI	2557. S M CAR PVT LTD (-01), SF: 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213 PH :7094440010.	KAWALKINARU	2577. PL.A MOTORS (-01), 139/2, 139/3, VELAPETTAI AGRAHARAM, CHENNAI BYPASS ROAD, KUMBAKONAM - 612501
2546. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO # SF NO. 22/3A1A, 106 ATTUR MAIN ROAD,GANGAVALLI,SALEM, TN - 636105 PH :9159722999.	KANCHEEPURAM	2567. AADHI CARS PVT LTD (-01), SURVEY NO:1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAVALKINARU JUNCTION, KAVALKINARU (VADAKANKULAM), TIRUNELVELI. - 627105 PH :7339111259.	LALGUDI
GOPICHETTIPALAYAM	2558. GANESH CARS PVT LTD (-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH :9842306061.	KELAMBAKKAM	2578. PILLAI & SONS MOTOR COMPANY (-01), SURVEY 98/4, ANGARAI VILLAGE, LALGUDI TALUK, TIRUCHIRRAPALLI VILLAGE,LALGUDI,TAMIL NADU - 621601
2547. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH :9597560777.	KANGAYAM	2568. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (-01), AGP MAHAAL, SURVEY NO.43, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU - 603103 PH :7305087002.	MADATHUKULAM
GUDALUR	2559. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU. - 638701 PH :7708531777.	KINATHUKADU	2579. ABT LIMITED (-01), SF NO:143/A/2D, 143/A/2B, NO-88,S.Y. NO. NH 209, NEAR UNION OFFICE, AGRAHARAKANNADIPUTHUR VILLAGE,UDUMALAI MAIN ROAD, MADATHUKULAM, TIRUPPUR DIST,TN - 642113
2548. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 112/294 B6- B9, SURVEY NO.297/3A, SULTHAN BATHERY- DEVARSHOLA- GUDALUR ROAD, GUDALUR, NILGIRIS, TN- 643212 - 643212	KARAIKUDI	2569. AADHI CARS PVT LTD (-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAAYATH, KINATHUKADAVU DIST.T. COIMBATORE (T.N.) - 642109	MADURAI
GUDIMANGALAM	2560. ABT LIMITED (4202-05), 42-43 KOVILLOOR ROAD, OPP. TNSTC DEPOT - 630302	KODUMUDI	2580. ABT LIMITED (4202-02), MADURAI-DINDIGAL BEE PASS ROAD, NEAR FATHIMA COLLEGE,MADURAI - 625018
2549. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO 347 7 347/1, GUDIMANGALAM, TAMIL NADU - 642201	2561. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO. 73, SUBRAMANIPURAM 9TH STREET, COLLEGE ROAD, KARAIKUDI, SIVAGANGA DIST, TAMILNADU-630002 - 630002 PH :7402710000.	2570. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI. - 638151 PH :8754756777.	2581. ABT LIMITED (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH :9600966164.
GUDIYATHAM	KARUMATHAMPATTI	KOTAGIRI	2582. SIVA AUTOMOTIVE TRADING PVT LTD (4205-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH :7402780000.
2550. GANESH CARS PVT LTD (-01), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM. - 635803	2562. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF: NO.281/B, NEAR BHARAT PETROL BUNK VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADAM, DISTT. COIMBATORE. - 641659 PH :9159210008.	2571. AADHI CARS PVT LTD (-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217	2583. ASIR AUTOMOBILES PVT LTD (4206-01), 9, CHAMBAKULAM, MELUR MAIN ROAD, MATTUTHAVANI, MADURAI, TAMIL NADU - 625007 PH :9944059911.
GUDUVANCHERY	KARUNGAL	KOVILPATTI	2584. SIVA AUTOMOTIVE TRADING PVT LTD (4205-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. - 625003
2551. VISHNU CARS PVT LTD (-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203	2563. ATHEN CARS (-01), SURVEY NO. 639/5, KARUNGAL TOWN, VILAVANCODE TALUK, KANYAKUMARI DISTRICT, TAMILNADU - 629157 PH :7094434179.	2572. ASIR AUTOMOBILES PVT LTD (-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501	2585. MEENAKSHI AUTO ZONE PVT LTD (4207-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALAR, MADURAI, TAMIL NADU. - 625008 PH :9442799581.
GUMMIDIPOONDI	KARUR	KRISHNAGIRI	2586. MEENAKSHI AUTO ZONE PVT LTD (4207-42-02), SURVEY NO. 238/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652014 PH :9940224881.
2552. RAJALAKSHMI CARS PVT LTD (-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE - PAPPANAKUPPAM, GUMMIDIPOONDI, THIRUVALLUR. - 601201	KATPADI	KULASEKHARAM	2587. SIVA AUTOMOTIVE TRADING PVT LTD (4205-42-03), PATA NO. 615, SURVEY NO. 32/2, 32/4, THENI MAIN ROAD, ACHAMPATHU, MADURAI, TN - 625019 PH :7402738888.
HARUR	2565. GANESH CARS PVT LTD (-04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH :9842313139.	2573. SRI AMMAN CARS INDIA PVT LTD (-03), NH-7,NR. AAVIN DAIRY,MOTTUR,SALEM BEE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001	MADURANTHAKAM
2553. SRI AMMAN CARS INDIA PVT LTD (-01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903	KATTUMANNARKOIL	2574. ATHEN CARS (-01), ITE NO : 409/17A - ARANIVILAI, NEAR RANGE OFFICE, CONVENT ROAD - KULASEKARAM, KALKULAM -TALUK,KANIYAKUMARI DIST. TN - 629161 PH :7094471569.	2588. AIE CARS PVT LTD (-01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. - 603306
HOSUR		KUMBAKONAM	
2554. SRI AMMAN CARS INDIA PVT LTD (-01), P.O.- PERANDAPALLI,NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109		2575. PILLAI & SONS MOTOR COMPANY (-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501	
IDAPPADI			
2555. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO.330/3B/1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101 PH :9003311488.			
KALLAKURCHI			

MALLASAMUDRAM

2589. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF NO. 194/3C, MALLASAMUDRAM MAIN ROAD, MALLASAMUDRAM TOWN, THIRUCHENGODE TALUK, NAMAKKAL DIST., TAMIL NADU. - 637503
PH :9894932019.

MALLUR

2590. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO.50/4A, AMANI AMMAPALAYAM VILLAGE, DISTT:- DADHAGAPATTY SUB REGISTRATION , MALLUR DISTT. SALEM - 636309

MANAMADURAI

2591. ABT LIMITED (-01), NO. 35, OLD RAMNAD ROAD, MANAMADURAI TOWN, DISTRICT - SIVANGAI. - 630606
PH :9994450331.

MANAPPARAI

2592. PILLAI & SONS MOTOR COMPANY (-01), PLOT NO.262, TRICHY DINDIGUL BYPASS ROAD, VENGAIKURUCHI VILLAGE,MANAPPARAI, TRICHY,TN. - 621307
PH :8489900908.

MANGALAPURAM

2593. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), DOOR NO. 1/518, SURVEY NO. 75/1, ATTUR MAIN ROAD, MANGALAPURAM (POST), TALUK - RASIPURAM, DISTRICT - NAMAKKAL - 636202
PH :7094447871.

MANNARGUDI

2594. PILLAI & SONS MOTOR COMPANY (-01), NO. 37, THIRUTHURAIPOONDI ROAD, MANNARGUDI, THIRUVAURUR DISTRICT, TAMIL NADU. - 614001
PH :7094411675.

MAYILADUTHURAI

2595. PILLAI & SONS MOTOR COMPANY (-04), 46,VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007

MECHERI

2596. S M CAR PVT LTD (-01), SURVEY NO. 139A/5, PATTA NO. 653, AMANI M.KALIPATTY VILLAGE, MECHERI TOWN, METTUR TALUK, SALEM DIST., TAMIL NADU. - 636453
PH :7094440010.

MELUR

2597. SIVA AUTOMOTIVE TRADING PVT LTD (-01), OLD SN. 138/1, SURVEY WARD C. BLOCK NO. 1, T.S. NO. 217, VILLAGE AND TOWN - MELUR, MELUR, DIST.-MADURAI. - 625109
PH :8098120000.

METTUPALAYAM

2598. ABT LIMITED (4101-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043

METTUR

2599. THRIVENI CAR COMPANY PVT LTD (-01), S.F. NO. 73/7A3C, METTUR TO BHAVANI ROAD, NEAR NATAMANGALAM BUS STOP, MADHAIYANKUTTAI (PO), METTUR TALUK, SALEM, TAMILNADU - 636452
PH :9159566999.

MINJUR

2600. RAJALAKSHMI CARS PVT LTD (-01), PLOT NO. 27, SRI JANAKI RATHINA NAGAR, VILLAGE AND TOWN - MINJUR, PONNERI - 601 203, DISTRICT - THIRUVALLUR. - 601203

NAGAPATTINAM

2601. PILLAI & SONS MOTOR COMPANY (-01), NO.181, KEELA ANTHANAPETTA ANTHANAPETTAI, P.O. - MANJUKOLLAI, PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU - 611106
PH :4365220250.

NAGERCOIL

2602. ATHEN CARS (-01), RESURVEY NO. G.3/9-7, BUILDING NO. 254-A/3 & 4 K.P ROAD ,PARAVATHIPURAM, NAGERCOIL ,KANYAKUMARI DISTRICT TAMILNADU - 629003
PH :8012029777.

2603. ATHEN CARS (-02), SURVEY NO. 54/1,2,4,6 & 11 KOTHAIGRAMAM OZHUGHANASERY, THERAKALPUTHUR VILLAGE, NAGERCOIL, KANYAKUMARI DISTRICT, TN-629001 - 629001

2604. AADHI CARS PVT LTD (-05), PLOT NO. 14, INDUSTRIAL ESTATE, KONAM, NAGERCOIL, PIN-629004 - 629003

NAMAKKAL

2605. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL - 637001
PH :937164888.

2606. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-03), 1/412/1 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001
PH :737192888.

NANGUNERI

2607. AADHI CARS PVT LTD (-01), DOOR NO : 38 / 1, BHASKAR NAGAR, THAMBUPURAM, NANGUNERI, TIRUNELVELI DISTRICT. PIN: 627108 - 627108

NATRAMPALLI

2608. GANESH CARS PVT LTD (-01), NO:8/12-1, NEAR ARJUNA SULOCHANA MAHAL, BENGALURU-CHENNAI MAIN ROAD,VELAKALNATHAM, NATRAMPALLI, TIRUPATTUR DIST. TAMIL NADU - 635854. - 635854

NAZARETH

2609. ASIR AUTOMOBILES PVT LTD (-01), OLD NO. 49B, 49C & 49D, NEW NO. - 194, 195 & 196, CHURCH STREET, NAZARETH, TUTICORIN DIST. TN- 628617 - 628617

NEGAMAM

2610. ABT LIMITED (-01), 68, 69, ABT BUS STAND, PALLADAM ROAD, PERIA NEGAMAM, PELLACHI, TAMIL NADU - 642120

NEYVELI

2611. VISHNU CARS PVT LTD (-01), SURVEY NO:5452A/IA, NH-45C, OPP. NATIONAL COLLEGE,KUMBakonam - CHENNAI HIGH WAY, NEAR NEYVELI ARCH GATE, NEYVELI T.S. KEELAKOLLA, MARUNGUR POST,PANRUTI,CUDDALORE DISTRICT, TAMILNADU - 607103
PH :9384059575.

OMALUR

2612. SRI AMMAN CARS INDIA PVT LTD (-04), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012

2613. THRIVENI CAR COMPANY PVT LTD (-01), PLOT NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT, NH-7, KAMALAPURAM VILLAGE, OMALUR, DISTRICT - SALEM, TAMIL NADU - 636309

OOTY

2614. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001

PADAPPAI

2615. VISHNU CARS PVT LTD (-01), SURVEY NO.368/2A/1, 368/2A/2, VANDALLUR-WALAJABAD MAIN ROAD, PADAPPAI EAST, CHENNAI. - 601301
PH :8754417168.

PALACODE

2616. SRI AMMAN CARS INDIA PVT LTD (-01), SURVEY NO 620/1A2, 620/1A2B KARAKATHAHALLI VILLAGE, PALACODE DHARMAPURAM DISTRICT,TAMIL NADU - 638808

PALANI

2617. PL.A MOTORS (-02), NO:13-1-11C-1, WEST AYAKUDI, DINDIGUL ROAD, PALANI, DINDIGUL DISTRICT, TAMIL NADU - 624613

PANRUTI

2618. VISHNU CARS PVT LTD (-01), SURVEY NO: 87/4, 87/7 R V NAGAR, LAKSHMI NARAYANAPUR AM VILLAGE-PANRUTI - 6387106

PARAMATHIVELUR

2619. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 171, NEAR KONGU SCHOOL, NAMAKKAL BYPASS ROAD, PADAMUDI PALAYAM, TALUKA - PARAMATHIVELUR, NAMAKKAL , TAMIL NADU. - 638182
PH :8870666999.

PATTUKKOTTAI

2620. PILLAI & SONS MOTOR COMPANY (-01), SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11, SRI JANAGALAKSHMI NAGAR, THANJAVUR ROAD, ALADIKUMULAI VILLAGE, TALUK PATTUKOTTAI, THANJAVUR. - 614615
PH :7094433074.

PAVITTHRAM

2621. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 102/1B, NAMAKKAL MAIN ROAD, PAVITTHRAM - 637021
PH :9600320888.

PENNAGARAM

2622. SRI AMMAN CARS INDIA PVT LTD (-01), SURVEY NO. 419/1, VILLAGE - PARUVADHANAALI, PENNAGARAM, DHARMAPURI. - 636810
PH :9715044700.

PERAMBALUR

2623. PL.A MOTORS (2305-04), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212
PH :8870004960.

PERNAMBUT

2624. SRI AMMAN CARS INDIA PVT LTD (-01), SURVEY NO:708,PLOT NO: 87.88 & 89, PERNAMBUT TO GUDIYATTAM ROAD, PERNAMBUT VELLORE DISTRICT, TAMIL NADU - 635810 - 635810
PH :7094403100.

PERUMBAKKAM

2625. KHIVRAJ MOTORS PVT LTD (-01), NO:1,VARALAKSHMI NAGAR, THIRUVALLUR ROAD, PERAMBAKKAM,KANCHIPURAM DIST, TAMILNADU- 631402 - 631402
PH :7338786693.

PERUNDURAI

2626. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF NO.542/1, KOVAI MAIN ROAD, PERUNDURAI VILLAGE, PERUNDURAI DISTT. ERODE, TAMIL NADU - 638052
PH :9597490777.

PN PALAYAM

Dealer Workshop (AS ON 31.01.2026)

2627. JAIKRISHNAA AUTOSALES PVT LTD (4107-04), NO.12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020	2638. SIVA AUTOMOTIVE TRADING PVT LTD (-01), SURVEY NO. 172/1B2C, 172/2C, VILLAGE - ACHUNTHAVAYAL, ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM, RAMANATHAPURAM. - 623502 PH :8098110000.	2649. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO.17/15B, KCK PLAZA, KACHERIDADI, DEPUTY COLLECTOR ROAD, SALEM, SANKAGIRI (TAMIL NADU) - 637301 SANKARANKOVIL	2657. RAJALAKSHMI CARS PVT LTD (-01), SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBUDUR, KANCHIPEPURAM DISTRICT, TAMIL NADU. - 602105 PH :8939995469.
2628. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), NO.: 12/90, TKV GARDEN, SRKV POST, MTP ROAD,P.N.PALAYAM, TAMIL NADU - 641020	2639. MEENAKSHI AUTO ZONE PVT LTD (-01), SURVEY NO: 458/4, MADURAI - RAMESHWARAM ROAD, NEAR RAMNAGAR BUS STOP, RAMANATHAPURAM, TAMIL NADU - 623503 - 623503	2650. AADHI CARS PVT LTD (-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. - 627756 PH :7397728025.	2658. SRIVILLIPUTHUR/RAJAPALAYAM 2658. ABT LIMITED (4202-03), NO. 10/32, PADIKKASUVAI/THANPATTI , NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125
POCHAMPALLI	RAMESHWARAM	SATHYAMANGALAM	SULUR
2629. SRI AMMAN CARS INDIA PVT LTD (-01), NEW SURVEY NO. 561/5, VILLAGE - JUMBUKUTTANPATTI, POUCHAMPALLI, KRISHNAGIRI - 635206	2640. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO:2307, SURVEY NO.279/3A, RAMNAD ROAD, ARIYANKADU, RAMESHWARAM, RAMANATHAPURAM DISTRICT, TAMILNADU PH :7402788899.	2651. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM - 638 401, DISTRICT - ERODE, TAMIL NADU - 638401 PH :9597592777.	2659. JAIKRISHNAA AUTOSALES PVT LTD (4107-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR - 641402
POLLACHI	RANIPET	SATTUR	TENKASI
2630. ABT LIMITED (-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLLACHI - 642003	2641. GANESH CARS PVT LTD (-01), SURVEY NO. 44/1, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET , TAMIL NADU. - 632403 PH :9842330388.	2652. MEENAKSHI AUTO ZONE PVT LTD (-01), SURVEY NO. 18/10,CHATRAPATTI VILLAGE, MADURAI KANYAKUMARI NATIONAL HIGHWAYS, SATTUR, VIRUDHUNAGAR DISTRICT,TAMILNADU - 626203 PH :9940094881.	2660. AADHI CARS PVT LTD (-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE - KUNARAMANALLUR, TENKASI - 627814 PH :9500991475.
POLLUR	RASIPURAM	SEYDUNGANALLUR	2661. AADHI CARS PVT LTD (-02), DOOR NO. 47, MADHALAMPARAI, TENKASHI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU. - 627814 PH :9500991475.
2631. GANESH CARS PVT LTD (-01), AZHAGO COMPLEX, SURVEY NO.77/1, CUDADALOR TO CHITTOOR ROAD, POLLUR, THIRUVANNAMALAI DISTRICT, TAMILNADU - 606803 PH :9842345200.	2642. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO:41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401	2653. ASIR AUTOMOBILES PVT LTD (-02), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK - SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU - 628509 PH :3844992220.	2662. THRIVENI CAR COMPANY PVT LTD (-01), S NO: 5/269,NEAR NATHANKARAI TOLL PLAZA, VADAKKU KADU, NATHANKARAI, THALAIVASAL, SALEM, TAMILNADU - 636122
PONNAMARAVATHY	REDHILLS	SHOLINGUR	THAMMAPATI
2632. PL.A MOTORS (-01), NO.4-1B2B & 4-1B3,PUDUKKOTTAI MAIN ROAD, PONNAMARAVATHI, PUDUKKOTTAI DIST., TAMILNADU-622407 - 622407	2643. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-04), NO. 503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066 PH :9952000078.	2654. GANESH CARS PVT LTD (-01), NO:401, ARAKKONAM MAIN ROAD,OPPOSITE TVS FOUNDARY, PANDIYANELLORE,SHOLINGHUR,WALAJA TALUK, RANIPET DISTRICT, TAMILNADU - 631102 PH :7397395259.	2663. S M CAR PVT LTD (-01), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI,SALEM DISTRICT, TAMILNADU - 636113. - 636113 PH :7094440010.
PONNERI	SALEM	SIVANGANGAI	THANJAVUR
2633. ABT LIMITED (-01), DOOR NO.18(S.F.NO42/1A-3), KRISHNA PURAM,PONNERI TALUK, - 601204	2644. ABT LIMITED (4101-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009	2655. ASIR AUTOMOBILES PVT LTD (-01), S. NO: 144/1, SIVANGANGAI-THONDI ROAD, PAIYAUPELLIAYAL, SIVANGANGAI,TAMILNADU - 630561 PH :9750372220.	2664. PILLAI & SONS MOTOR COMPANY (-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU - 613007
PUDUKOTAI	2645. THRIVENI CAR COMPANY PVT LTD (-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005	SIVAKASI	2665. PL.A MOTORS (-01), SURVEY NO. 173/6B4, TRICHY-THANJAVUR ROAD, NANJIKOTTAI BYPASS, THANJAVUR, TAMILNADU - 613005
2634. PL.A MOTORS (2305-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003	2646. S M CAR PVT LTD (-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202	2656. MEENAKSHI AUTO ZONE PVT LTD (-01), 372 D & E, ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. - 626123	THARAMANGALAM
PULIYANGUDI	2647. THRIVENI CAR COMPANY PVT LTD (-03), SURVEY NO. 57, VILLAGE - MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103	SRIPERUMBUDUR	2666. THRIVENI CAR COMPANY PVT LTD (-01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST. ,TAMIL NADU. - 638501
2635. AADHI CARS PVT LTD (-), TENKASI -PULIYANKUDI ROAD, PULIYANKUDI, DISTRICT-TENKASI, TAMILNADU - 627855	2648. S M CAR PVT LTD (-02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007 PH :7094440053.		THELLAR
PUNJAI PULIAMPATTI	SANKAGIRI		2667. SRI AMMAN CARS INDIA PVT LTD (-01), THIRUVANNAMALAI BYE-PASS ROAD, THELLAR - 604406
2636. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTU - 638459, SATHY THALUK, ERODE. - 638459 PH :6385810777.			THENI
RAJAPALAYAM			
2637. MEENAKSHI AUTO ZONE PVT LTD (-01), DOOR NO. 96, COTTON MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117 PH :9443785681.			
RAMANATHAPURAM			

2668. MEENAKSHI AUTO ZONE PVT LTD (-01), DOOR NO. 87/11, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT - THENI - 625631 PH :97889703881. THIRUKALUKUNDRAM	2679. PILLAI & SONS MOTOR COMPANY (-01), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 60116B1, SUNDARAVILLAGAM, NARSINGHAMPET, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001 PH :9442163509.	TIRUNELVELI	2698. SIVA AUTOMOTIVE TRADING PVT LTD (-01), SURVEY NO: 85/16, WARD 10/78, SOUTH THOPPU STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU - 623409 PH :7402788820.
2669. AIE CARS PVT LTD (-01), SURVEY NO.113/38, DOOR NO.61, MADRAS ROAD, MANGALAM VILLAGE, TIRUKALUKUNDRAM, CHENGALPATTU DISTRICT, TAMIL NADU- 603 107 - 603107	THISAYANVILLAI	2688. AADHI CARS PVT LTD (-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI , TAMIL NADU - 627357 PH :9500991610.	TRICHY
THIRUKOVILUR	2680. AADHI CARS PVT LTD (-01), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI. - 627657 PH :7339511187.	2689. AADHI CARS PVT LTD (-03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU. - 627011 PH :9500991610.	2699. ABT LIMITED (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY - 620001
2670. VISHNU CARS PVT LTD (-01), S.NO: 729/10, NO.45, SANDAPET, AANUR, THIRUKOVILUR, KALLAKURICHI DIST - 605757	THITTAKUDI	2690. AADHI CARS PVT LTD (-04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU - 627001	2700. PL.A MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009
THIRUMAZHISAI	THOPPUR	TIRUPATHUR	2701. ABT LIMITED (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005
2671. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), DP 30, SIDCO INDUSTRIAL ESTATE, THIRUMAZHISAI. - 600124 PH :9500064259.	2682. SRI AMMAN CARS INDIA PVT LTD (-01), SITE NO. 422 /2A, BANGALORE TO SALEM HIGH WAY, AMMANI, THOPPUR VILLAGE & TOWN,NALLAMPALLI TK, DHARMAPURI DISTRICT. - 636352 PH :9790004273.	2691. GANESH CARS PVT LTD (-01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601 PH :9842308909.	2702. PL.A MOTORS (2305-23-03), 10A & B, ALEXANDRIA ROAD, CANTONMENT, TRICHY - 620001
THIRUMULLAIVOYAL	THUCKALAY	TIRUPATTUR(SIVANGANGAI)	2703. PILLAI & SONS MOTOR COMPANY (2306-23-01), SURVEY NO. 10B, 1AD, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY - 620002
2672. CRESKO (A UNIT OF NEXGEN VENTURES PVT LTD) (-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULLAIVOYAL DISTT. CHENNAI - 600062 PH :7305087044.	2683. ATHEN CARS (-01), DOOR NO. 5/76B, (RE SURVEY NO-53077) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE - MUTHALAKURUCI, KALKULAM-TALUK, THUCKALAY, DISCTRICT - KANYAKUMARI, TAMILNADU - 629174 PH :8012029888.	2692. ABT LIMITED (-01), DOOR NO. 8/2/29A, KARAIKUDI ROAD, TIRUPATHUR, DISTRICT - SIVANGANGAI - 630211	2704. ABT LIMITED (2302-04), NO.46/3, 46/5A, AGARAM VILLAGE, TIRUVERAMBUR TOWN & TALUK, TIRUCHIRAPPALLI (TRICHY) DISTRICT, TAMIL NADU - 620013. - 620013
THIRUTHURAIPOONDI	THURAIYUR	TIRUPPUVANAM	TUTICORIN
2673. PILLAI & SONS MOTOR COMPANY (-01), NO.246/3, SRI KRISHNA LODGE COMPLEX, THIRUVARUR ROAD,THIRUTHURAIPOONDI, THIRUVARUR DIST., TAMILNADU- 614713. - 614713	2684. PL.A MOTORS (-01), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010 PH :9486763725.	2693. MEENAKSHI AUTO ZONE PVT LTD (-01), NO.21, BAKHYA NAGAR, WARD NO:1, MANDAPAM MAIN ROAD, TIRUPPUVANAM, SIVAGANGA DISTRICT, TAMIL NADU - 630611 - 630611 PH :9442799581.	2705. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 25/1B, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002 PH :7373501220.
THIRUVAIYARU	THINDIVARAM	TIRUPUR	UDUMALPET
2674. PILLAI & SONS MOTOR COMPANY (-01), NO.5, ODAURAI STREET, THIRUVAIYARU, 613204 - 613204	2685. VISHNU CARS PVT LTD (-01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM, TAMILNADU - 604102 PH :9500039023.	2694. ABT LIMITED (4101-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR - 641601	2706. ABT LIMITED (-01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MULL POST, UDUMALPET - 642126
THIRUVALLUR	TIRUCHENDUR	2695. SHASHTI CAR PRIVATE LIMITED (-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604	ULANDURPET
2675. KHIVRAJ MOTORS PVT LTD (1404-04), 2151, KARKKULUR ROAD, THIRUVALLUR - 602001	2686. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 220/1D/A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE,VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215 PH :7373900220.	TIRUTHANI	2707. ABT LIMITED (-01), S NO: 392/1A, DOOR NO: 2129/2020, ULANDURPET, KALLAKURICHI DIST, TAMIL NADU- 606107. - 606107
2676. KHIVRAJ MOTORS PVT LTD (1404-05), PLOT NOS.218,219,220,225,226,227,228 AND S.NOS. 18/5, 18/6, EMPIRE CITY PART-3, KARKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001	TIRUCHENGODE	2696. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI, TAMILNADU - 631209 PH :7358773860.	USILAMPATTI
THIRUVANNAMALAI	2687. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE - 637001	TIRUVANNAMALAI	2708. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO. 33/1B2A, USILAMPATTI - MADURAI HIGHWAY,POTTULUPATTI PANCHAYATH, USILAMPATTI, MADURAI DISTRICT, TAMILNADU-625532 - 625532 PH :7868088840.
2677. GANESH CARS PVT LTD (-03), NO.-5, NH-78, KRISHANAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601 PH :9842305072.	THIRUVARUR	2697. SRI AMMAN CARS INDIA PVT LTD (-01), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601 PH :7094471293.	UTHANGARAI
THIRUVARUR	2678. PILLAI & SONS MOTOR COMPANY (-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001	TONDI	2709. SRI AMMAN CARS INDIA PVT LTD (-01), SURVEY NO. 104/1, 104/1B, VILLAGE - THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304 PH :9715044600.

Dealer Workshop (AS ON 31.01.2026)

2710. AIE CARS PVT LTD (-01), SURVEY NO:383/3B-B2, UTHIRAMERUR MAIN ROAD, UTHIRAMERUR, KANCHEEPURAM DISTRICT, TAMILNADU - 603406	VENGAL	2730. VARUN MOTORS PVT LTD (-01), SURVEY NO:277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224 PH: 9052901888.	2740. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO. 177A, MANDAL - CHEVELLA, DISTRICT - RANGA REDDY, TELANGANA - 510101
UTHUKOTTAI		BANSWADA	DAMMAPETTA
2711. KHIVRAJ MOTORS PVT LTD (-01), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602026 PH :7299635536.	2720. VISHNU CARS PVT LTD (-01), NEW SURVEY NO:67/1B, 67/20, CHINMAYA NAGAR,THAMARAIPAKKAM VILLAGE, VENGAL,THIRUVALLUR DIST., TAMILNADU- 601103 - 601103 PH -9500121559.	2731. VARUN MOTORS PVT LTD (-01), #2-138/5,SOMESHWAR SHIVAR, NEAR BIKNOOR "X" ROAD, BANSWADA(M) - 503187	2741. VARUN MOTORS PVT LTD (-01), NEAREST H.NO 5-48 CPS SCHOOL,DAMMAPETA ,BADRI KOTHAGUDEM DT,TELANGANA
VALLIYUR	VEPPAMPATTU	BASARA	DORNAKAL
2712. AADHI CARS PVT LTD (-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002 PH :7373091462.	2721. POPULAR VEHICLES AND SERVICES LIMITED (-01), SNO. 35/2A2, CTH ROAD 89., VEPPAMPATTU,THIRUVALLUR DIST, TAMIL NADU - 602 024. - 602024	2732. ADARSHA AUTOMOTIVES PVT LTD (-01), URVEY NO 59/E, RAVINDRAPUR , BASARA, NIRMAL DISTRICT, TELANGANA - 504101 PH -8866092222.	2742. ADARSHA AUTOMOTIVES PVT LTD (-01), SY NO.150, BY PASS JUNCTION, NTR CIRCLE, DORNAL, MAHBUBABAD DIST., DOORNAKAL, TELANGANA - 506381
VANDAVASI	VILLUPURAM	BELLAMPALLY	DUBBAKA
2713. GANESH CARS PVT LTD (-01), SURVEY NO.272, KEELATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408 PH :7395802484.	2722. ABT LIMITED (-02), 284/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602	2733. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 5/31, PEDANAPALLI, BELLAMPALLY, MANCHERIAL DISTRICT, TELANGANA - 504251 PH -8886092222.	2743. ADARSHA AUTOMOTIVES PVT LTD (-01), ADARSHA AUTOMOTIVE PVT LTD, OPP. BUS DEPOT, BYPASS ROAD, SIDDIPEET, TELANGANA
VANIYAMBADI	VIRUDHACHALAM	BHADRACHALAM	ETUNAGARAM
2714. GANESH CARS PVT LTD (-01), NO. 197/1B/1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801 PH :9842327709.	2723. ABT LIMITED (-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT - CUDDALORE, TAMIL NADU. - 606101	2734. VARUN MOTORS PVT LTD (-01), H-NO 1-138/1B-OLD SARPAKA ROAD, BHADRACHALAM, BHADRADI-KOTHAGUDEM, TELANGANA - 507111 PH :9885576602.	2744. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), H.NO 12-412 & 12-413,AKULAVARI GHANPUR, ETURUNAGARAM, MULLUGU DISTRICT,TELANGANA - 506165 PH :8688828005.
VELLAKOVI	VIRUDHUNAGAR	BHEEMGAL	GADWAL
2715. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-01), SURVEY NO:502/C &371/D, NO. 196,197,KOVALI KARUR MAIN ROAD, VELLAKOVI, TIRUPUR DIST. , TAMILNADU - 638111 PH :9994606000.	2724. MEENAKSHI AUTO ZONE PVT LTD (-0A), DOOR NO:6/504, SURVEY NO. 11/6, PELAMPATTI VILLAGE,VIRUDHUNAGAR MADURAI HIGH WAY,OPPOSITE TO VVV COLLEGE. , TALUK & DIST. VIRUDHUNAGAR, TAMILNADU - 626001 PH :9940094881.	2735. VARUN MOTORS PVT LTD (-01), SURVEY NO. 398, MORTHAD ROAD, - 503307	2745. SRI JAYARAMA MOTORS PVT LTD (-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125
VELLORE	WALAJABAD	BHONGIR	GAJWEL
2716. GANESH CARS PVT LTD (-01), 91 NEW BY-PASS ROAD, VELLORE - 632004 PH :9842377110.	2725. AIE CARS PVT LTD (-01), SURVEY NO: 334, KANCHEEPURAM- CHENGALPET ROAD, VENGUDI, WALAJABAD VILL AND TOWN, KANCHIPURAM DIST.,TAMIL NADU651605 - 631605	2736. PAVAN MOTORS PVT LTD (-01), SURVEY NO 779, YADADRI BHONGIR DISTRICT, BHONGIR, TELANGANA - 508116	2746. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (-01), SURVEY NO. 220, VILLAGE - PRAGNAYPUR, GAJWEL, DISTRICT - MEDAK, TELANGANA. - 502311
2717. SRI AMMAN CARS INDIA PVT LTD (-01), DOOR NO. 68, SURVEY NO. 66/7, NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUKA, GANDHINAGAR, VELLORE DIST., TAMIL NADU. - 632006	ACHAMPET	BHUPALAPALLY	GHATKESAR
2718. SRI AMMAN CARS INDIA PVT LTD (-02), SURVEY NO. 316/3B2, 316/8A, 316/8B, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE,VELLORE TALUK & DIST. ON NH48 (CHENNAI - BENGALURU HIGHWAY), VELLORE, TAMILNADUR - 632010 PH :7094471320.	2726. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY :133/A/3/1 HYDERABAD ROAD ACHAMPET ,NAGARKURNOL DT - 509375	2737. ADARSHA AUTOMOTIVES PVT LTD (-04), SY NO.314, HANAMKONDA ROAD, MANDAL BHUPALAPALLY, TELANGANA 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169 PH :7799790526.	2747. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (-01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT - RANGA REDDY. - 501301
2719. GANESH CARS PVT LTD (-06), SY NO. 188/2B, EDAYANSATHU, ARANI ROAD, BAGAYAM, VELLORE - 632503	ADDANKI	BODHAN	2748. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY NO. 581/B, GHATKESAR VILLAGE & MANDAL, MEDCHAL-MALKAJIGIRI DIST - 501301
	ADILABAD	CHEGUNTA	HUSNABAD
	2728. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA - 504001 PH :9133307724.	2739. AUTOPIN LIMITED (-01), 145/3, CHEGUNTA, CHEGUNTA MANDAL, MEDAK DISTRICT, NATIONAL HIGHWAY NO - 44 FACING, TELANGANA - 502255	2749. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO. 202/E, H. NO. 12-1/4 & 12-1/A, VILLAGE & MANDAL - HUSNABAD, DIST. -SIDDIPEET, TELANGANA - 505467
	AMANGAL	CHEVELLA	HUZURABAD
	2729. THE MITHRA AGENCIES (-01), VIDHAYA NAGAR COLONY ROAD NO.5, OPPOSITE INDIAN OIL,MRO OFFICE,S NO:1439 - 509321		2750. ADARSHA AUTOMOTIVES PVT LTD (-01), SY NO 1687, ADJACENT TO KARIMNAGAR WARANGAL R&B ROAD, HUZURABAD - 505468
	ARMUR		HYDERABAD
			2751. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD,AZAMABAD INDUSTRIAL AREA, HYDERABAD - 500020 PH :9966838294.

2752.	POPULAR VEHICLES AND SERVICES LIMITED (1088-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482	2767.	VARUN MOTORS PVT LTD (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRANGUDA, GACHIBOWLI, HYDERABAD - 500008	2780.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE C6 SQUARE, VILAGE - GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032 PH :9100909401.	2791.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1085-10-01), SURVEY NO 886,UPPAL, MEDCHAL-MALKAGIRI DISTRICT, HYDERABAD, TELANGANA - 500013 PH :8142506866.
2753.	POPULAR VEHICLES AND SERVICES LIMITED (1091-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE UPPAL, HYDERABAD - 500039	2768.	POPULAR VEHICLES AND SERVICES LIMITED (1089-10-01), D.NO.1-10-1285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062	2781.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081 PH :7799916666.	2792.	PAVAN MOTORS PVT LTD (-10-02), PLOT NO 351,352,353,354,355,356,357 LEGALA CIRCLE ROAD, BHAGYALAKSHMI NAGAR, SERILINGAMPALLY, HYDERABAD - 500019
2754.	VARUN MOTORS PVT LTD (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD - 500037	2769.	SAI SERVICE PRIVATE LIMITED (1011-04), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD - 500059 PH :7799352000.	2782.	ADARSHA AUTOMOTIVES PVT LTD (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA RAO EXPRESSWAY), RAJENDRANAGAR, UPPERPALLY, ATTAPUR, RANGA REDDY, HYDERABAD, TELEGANA - 500048	2793.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-04), SURVEY NO 7,14,15,16,IPM BLOOD BANK COLONY,HAYATHNAGAR-HYDERABAD. - 501504
2755.	VARUN MOTORS PVT LTD (4603-10-08), ADITYA NAGAR COLONY, ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008	2770.	VARUN MOTORS PVT LTD (4603-0G), 1-10-28/1 SY. NO.285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH :7799600093.	2783.	KALYANI MOTORS PRIVATE LIMITED (1018--02), M/S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE - KARAMNGHAT, MANDAL - SAROORNAGAR, DISTRICT - RANGA REDDY, HYDERABAD. - 500079 PH :9100222377.	2794.	KALYANI MOTORS PRIVATE LIMITED (1018-10-05), SURVEY NO. 314/A/1, GOPANNAPALLY, SERILINGAMPALLY, HYDERABAD - 502032
2756.	VARUN MOTORS PVT LTD (1010-10-01), PLOT NO. VI- VII A & B, UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH :9885208555.	2771.	VARUN MOTORS PVT LTD (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH :8886322776.	2784.	THE MITHRA AGENCIES (1002-10-06), SURVEY NO 57, D NO 8-2-108, BIRAMAL GUJA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. - 500079 PH :8886621232.	2795.	VARUN MOTORS PVT LTD (1086-10-01), SY NO. 90, NH-44, BESIDE DOLA R DHANI, KOMPALLY, HYDERABAD, TELANGANA - 500100
2757.	VARUN MOTORS PVT LTD (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036	2772.	VARUN MOTORS PVT LTD (4603-10-0J), PLOT NO. 1-45, SY. NO.1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE - 500019 PH :8886067847.	2785.	VARUN MOTORS PVT LTD (4603-10-0M), KSN GARDENS, 5-162/6, BORABANDA MAIN ROAD, HYDERABAD - 500018 PH :9885579623.	2796.	KALYANI MOTORS PRIVATE LIMITED (1018-10-04), SURVEY NO 314/A/1, GOPANNAPALLY, RC PURAM, HYDERABAD - 500019
2758.	POPULAR VEHICLES AND SERVICES LIMITED (1091-10-01), 16-11-19/5/2/C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036	2773.	SAI SERVICE PRIVATE LIMITED (1011-07), PLOT NO.B-21 & B-34, BHEL ANCLINARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH :9703811411.	2786.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-03), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEEDIMETLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA). - 500055 PH :7799784567.	2797.	ADARSHA AUTOMOTIVES PVT LTD (-02), PLOT NO. 2B, 2C, 2D, 2E2F, VISHNU MARG, PARVATH NAGAR, MAIN ROAD MADHAPUR - 500081
2759.	THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10, NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081	2774.	ADARSHA AUTOMOTIVES PVT LTD (1014-01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005	2787.	ADARSHA AUTOMOTIVES PVT LTD (-03), SURVEY NO. 220/A, AMBEDKAR ROAD, OPP HERITAGE FRESH, NEAR AMBAEDKAR STATUE, NEAR ALWAL, SECUNDERABAD. - 500010 PH :9291859954.	2798.	THE MITHRA AGENCIES (1002-10-08), SY NO. 575/1/2 & 576/1/2, ADIBATLA TCS RD, NEAR HP PETROL PUMP BUNK, NADARGUL - 501510
2760.	POPULAR VEHICLES AND SERVICES LIMITED (1088-10-02), 11-6-19/1/192,OPP. HOTEL HARSHA PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD - 500001	2775.	POPULAR VEHICLES AND SERVICES LIMITED (1088-03), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072	2788.	KALYANI MOTORS PRIVATE LIMITED (-03), SURVEY NO. 305, NIZAMPET, MANDAL - QUTUBULLAPUR, DIST -RANGA REDDY, HYDERABAD. - 500072	2799.	VARUN MOTORS PVT LTD (-12), SURVEY NO.46, KEESARA MANDAL, NAGARAM, MEDCHAL, MALKAGIRI DIST., HYDERABAD - 500072
2761.	VARUN MOTORS PVT LTD (4603-10-0A), 1-11-200,SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016 PH :9885206555.	2776.	SAI SERVICE PRIVATE LIMITED (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018 PH :7799360003.	2789.	SAI SERVICE PRIVATE LIMITED (1011-09), SURVEY NO.499/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090 PH :7330771111.	IBRAHIMPATNAM	
2762.	THE MITHRA AGENCIES (1002-10-04), 8-18-13/8, PLOT NO. 8, NEAR MARGADARSI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074 PH :9963551265.	2777.	KALYANI MOTORS PRIVATE LIMITED (1018-01), PLOT NO. A-23 & A31/1, I.D.A, NACHARAM, HYDERABAD. - 500076 PH :9100114863.	2790.	THE MITHRA AGENCIES (1002-10-07), SURVEY NO.12,13,14& 15, MEDIPALLY, GHATKESAR MANDAL, RANGA REDDY DISTRICT, HYDERABAD, TELANGANA - 500098 PH :8886697954.	2800.	PAVAN MOTORS PVT LTD (-01), S.NO.123/E, MPP PATELGUDA, IBRAHIMPATNAM, RANGA REDDY - 501506 PH :8790144499.
2763.	GEM MOTORS (INDIA) PVT LTD (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR, HYDERABAD , ANDHRA PRADESH - 500084 PH :9912899128.	2778.	ADARSHA AUTOMOTIVES PVT LTD (1014-10-02), H. NO. 8-84/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218 PH :9603296833.			JAGTIAL	
2764.	GEM MOTORS (INDIA) PVT LTD (1009-10-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH :9912344538.	2779.	GEM MOTORS (INDIA) PVT LTD (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA. - 500089 PH :9912341524.			2801.	ADARSHA AUTOMOTIVES PVT LTD (-04), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, - 505327 PH :8886152222.
2765.	SAI SERVICE PRIVATE LIMITED (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, BALANAGAR, HYDERABAD - 500037 PH :9010827755.					JAMIKUNTA	
2766.	THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD - 500076					2802.	VARUN MOTORS PVT LTD (-01), SY NO. 794, KARIMNAGAR ROAD, AMMIKUNTA, DIST. KARIMNAGAR - 505152

Dealer Workshop (AS ON 31.01.2026)

2804. VARUN MOTORS PVT LTD (-01), #8-65/12/C MAIN ROAD YARD ANDOLE MANDAL, OPP. MARKET YARD, SANGAREDDY, TELANGANA - 502270	2816. ADARSHA AUTOMOTIVES PVT LTD (-01), SY. NO. 131, H.NO. 12-38, GAREPALLI, KATARAM(M), JAYASHANKAR(DIST.), TELANGANA. - 506169	2827. VARUN MOTORS PVT LTD (-01), SURVEY NO 289/E, NEAR BY SSR GARDENS, LUKETIPET, MANCHERIAL DISTRICT, TELANGANA - 504215 PH :8297848999.	MEDCHAL 2838. AUTOFIN LIMITED (-01), H. NO. 11-27/1, SURVEY NO.401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401 PH :8885040020.
JUKKAL	KEESARA	MADHIRA	METAPALLY
2805. VARUN MOTORS PVT LTD (-01), PLOT N9 OF SY NO 74/EE/3 AND 74/UU/I, KOWLAS VILLAGE, JUKKAL MANDAL, DIST-KAMAREDDY, TELANGANA - 503305	2817. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), H-NO 3-56/9/6A, SURVEY NO 5,KEESARA, MEDCHAL-MALKAJIGIRI, TELANGANA - 501301 PH :9676076666.	2828. SANTOSH AUTOMOTORS PVT LTD (-01), SURVEY NO 33/A, H -NO : 1-780/8, MCN COMPLEX, WYRA ROAD, MADHIRA, KHAMMAM,TELANGANA - 507203	2839. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO. 40U/2 CHOULAMADHI, METPALLY PIN CODE 505325 - 505325 PH :8886092222.
KADTHAL	KHAMMAM	MAHABUBABAD	MIRYALGUDA
2806. THE MITHRA AGENCIES (-01), S NO 8, KANDUKURU, KADTHAL, TELANGANA - 509358	2818. MITHRA AUTO AGENCIES PVT LTD (2604-02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003 PH :8886063527.	2829. ADARSHA AUTOMOTIVES PVT LTD (-01), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD - 506101	2840. PAVAN MOTORS PVT LTD (-01), SURVEY NO-940 &943, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD,MIRYALAGUDA ,NALGONDA DISTRICT,ANDHRA PRADESH - 508207 PH :8790900399.
KAGHAZNAGAR	2819. SANTOSH AUTOMOTORS PVT LTD (2607-03), SURVEY NO: 19, BESIDE ROYAL OAK FURNITUR, NEAR RTC BUS STAND, RAPARTHI NAGAR - 507318	MAHBUBNAGAR	MOINABAD
2807. ADARSHA AUTOMOTIVES PVT LTD (-01), H.NO :1-81/3,BORIGAON,KAGHAZNAGAR,KOMARAMB HEEM - 504296 PH :8886092222.	KHANAPUR	2830. SRI JAYARAMA MOTORS PVT LTD (-01), PLOT NO.C1 & C2, INDUSTRIAL ESTATE, METTUGUDA, MEHBOOBNAGAR - 504001 PH :8069986846.	2841. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO. 70, PLOT NO. 4, VILLAGE AND GRAM PANCHAYAT - HIMAYATHI NAGAR, MANDAL - MOINABAD, DISTRICT - RANGA REDDY. - 500075
KALWAKURTHY	2820. VARUN MOTORS PVT LTD (-01), NO:14-10A, NEAR SAI BABA TEMPLE, OPP. GIRLS HIGH SCHOOL, VILL & MANDAL: KHANAPOOR, DIST- NIRMAL	MAHESHWARAM	MOMINPET
2808. SRI JAYARAMA MOTORS PVT LTD (-01), D.NO.12-42, BESIDE INDIAN OIL, PETROL PUMP, DEVERAKONDA ROAD, KALWAKURTHY - 509324	KODAD	2831. ADARSHA AUTOMOTIVES PVT LTD (-01), (BEARING #5-187, SURVEY NO.:336/A1, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY - 501359	2842. VARUN MOTORS PVT LTD (-01), SY NO.242/A/3, MOMINPET (VILL & MDL) - 501202
KAMAREDDY	2821. PAVAN MOTORS PVT LTD (-01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD , DISTRICT - NALGONDA, TELANGANA - 508206 PH :8008899995.	MALL	MORTHAD
2809. VARUN MOTORS PVT LTD (-01), H.NO.11-107/61, BESIDE,GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111 PH :9985557570.	KODANGAL	2832. PAVAN MOTORS PVT LTD (-01), MALL HYDERABAD ROAD, YACHARAM MANDALAM,RANGA REDDY DIST. , - 501509	2843. VARUN MOTORS PVT LTD (-01), H.NO 16-1/3/B, KARIMNAGAR ROAD, MORTHAD, TELANGANA - 503225
KARIMNAGAR	2822. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO 1156/AA1/2, BESIDE EESAIR PETROL PUMP, KODANGAL, VIKARABAD, TELANGANA - 509338	MANCHERIAL	MUSTABAD
2810. ADARSHA AUTOMOTIVES PVT LTD (-01), H.NO. 8-6-313/1, HYDERABAD ROAD,BY-PASS JUNCTION,KARIMNAGAR - 505001	KOLLAPUR	2833. ADARSHA AUTOMOTIVES PVT LTD (-03), SURVEY NO 477 / 2, GARMILLA VILLAGE, MANCHERIAL, TELANGANA BEHIND MAHINDRA TRACTORS SHOWROOM,BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208 PH :8886302222.	2844. VARUN MOTORS PVT LTD (-01), OPP: NEW BUSTAND,MUSTABAD,RAJANNA SIRICILLA (D) - 521107
2811. ADARSHA AUTOMOTIVES PVT LTD (-05), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. - 905001	2823. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO 259/AA2, 259/E2,KOLLAPUR, NAGAR KURNOOL DISTRICT, TELANGANA - 509102 PH :9985880015.	MANTHANI	NAGARKURNOOL
2812. VARUN MOTORS PVT LTD (-01), BEARING NO. 1-81/3/102, SURVEY NO. 221 & 222, REKURTHY VILLAGE, KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR MANDAL & DIST. , TELANGANA. - 505001	KOSGI	2834. VARUN MOTORS PVT LTD (-01), SURVEY NO 1018, H NO 16-4/D2, PLOT NO 5, LAINGADDA STREET, MANTHANI, - 505184 PH :8886619373.	2845. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO.44/A AND 45/A, UYYALVADA VILLAGE, NAGARKURNOOL, TELANGANA - 509209
2813. VARUN MOTORS PVT LTD (-02), SURVEY NO. 277.278/B, AREPALLY VILLAGE, TEGALAGUTTAPALLI GRAM PANCHAYAT, KARIMNAGAR - 505001 PH :9885210555.	KOTHAGUDEM	MANUGURU	NALGONDA
2814. ADARSHA AUTOMOTIVES PVT LTD (-06), 1-81/3/102,JAGITYAL ROAD,REKURTHY, KARIMNAGAR - 505010	2825. VARUN MOTORS PVT LTD (2603-04), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM - 507101	2835. SANTOSH AUTOMOTORS PVT LTD (-01), MANUGURU MAIN RD, PILOT COLONY, MANUGURU (PT), TELANGANA - 507117	2846. PAVAN MOTORS PVT LTD (-01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001
2815. VARUN MOTORS PVT LTD (-03), PLOT NO. 12,5,3 & 4, SY NO. 793, BONMAKAL VILLAGE, KARIMNAGAR - 505001	LINGAMPET	MARIPEDA BUNGLOW	NARAYANKHED
KATARAM	2826. VARUN MOTORS PVT LTD (-01), 12-119, OPP:HONDA SHOWROOM, YELLAREDDY ROAD, LINGAMPET, DIST:KAMAREDDY - 503124	2836. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), KHAMMAM - WARANGAL HWY, MARIPEDA BUNGLOW, MARIPEDA, TELANGANA 506315 - 506315	2847. VARUN MOTORS PVT LTD (-01), D. NO. 1-6-111/25/B/5/A/1, SY NO. 57/2, BHUMAN COLONY, GRAM PANCHAYAT & MANDAL - NARAYANKHED, DISTRICT - MEDAK, TELANGANA. - 502286 PH :9885210555.
	LUXITTIPET	MEDAK	NARAYANPET
		2837. VARUN MOTORS PVT LTD (-01), SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK (MDL & TOWN) - 502110 PH :9154953337.	

2848. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO. 468/4, MAHABUBNAGAR ROAD, NARSAMPET TOWN, DIST. MAHABUBNAGAR, STATE - TELANGANA. - 509210	PEDEPALLY 2858. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 142, H NO 185, RANGAMPALLI VILLAGE, PEDDAPALLI , TELANGANA - 505172	2868. VARUN MOTORS PVT LTD (4693-01), 1-10-176/1, BEHIND VARUN TOWERS-1, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE - 500016 PH -9985552452.	2878. VARUN MOTORS PVT LTD (-01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA. - 501141 PH -8886619370.
NARSAMPET	PILERU 2859. VISHNU CARS PVT LTD (-01), VISHNU CARS PVT LTD, BESIDE NAGI REDDY FUNCTION HALL, PILERU, MUDUPULAVEMULA, ANDHRA PRADESH - 517214	2869. POPULAR VEHICLES AND SERVICES LIMITED (1088-04), PLOT NO. 207, TADBUND, SECUNDERABAD - 500009	THIMMAPUR 2879. KALYANI MOTORS PRIVATE LIMITED (-01), SY NO.51,LUU, THIMMAPUR VILLAGE , KOTHUR MANDAL, RANGAREDDY, TELANGANA - 509325
2849. ADARSHA AUTOMOTIVES PVT LTD (-01), OPP. TRIVENI JUNIOR COLLEGE, WARANGAL TO NARSAMPET HIGHWAY - 506132	RAMAGUNDAM 2860. ADARSHA AUTOMOTIVES PVT LTD (-01), 5-6-172 SURVEY NO. - 259/B, MEDIPALLY SHIVAR, RAMAGUNDAM MUNICIPALITY, DISTRICT - KARIM NAGAR, ANDHRA PRADESH - 505209 PH :8896144550.	2870. PAVAN MOTORS PVT LTD (-02), PLOT NO. 1-12, 749, 750, SURVEY NO. 751/2, VENKATADRI NAGAR, NEW MIRJALGUDA, MALKAJGIRI, SECUNDERABAD, TELANGANA - 500047 PH -9121293690.	THORRUR 2880. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163
NARSAPUR	RAMAYAMPET 2861. VARUN MOTORS PVT LTD (-01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT - MEDAK. - 502101	SHAD NAGAR 2871. SRI JAYARAMA MOTORS PVT LTD (-01), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH - 500216 PH -8096996671.	TOOPRAN 2881. ADARSHA AUTOMOTIVES PVT LTD (-01), PLOT NO 7&8, SY NO 185, 184, 179U, NAGULIPALLY VILLAGE, TOOPRAN MANDAL, TELANGANA STATE, TELANGANA CITY: TOOPRAN PIN : 502334 CITY CATEGO - 502334
2850. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO 66, BLOCK NO-19,NARSAPUR,DISTRICT.MEDAK, TELANGANA. - 534275 PH :9100067766.	SADASHIVA NAGAR 2862. VARUN MOTORS PVT LTD (-01), #17-48/C,NH-44,MAIN ROAD, BESIDE GEEENBAVARCHI, SADASHIVNAGAR - 503145	SHAMIRPET 2872. POPULAR VEHICLES AND SERVICES LIMITED (-01), SHED NO 2-242, MAJEEPUR CROSS ROADS, SHAMIRPET, MEDCHAL-MALKAJGIRI,TELANGANA - 500078	UTNOOR 2882. ADARSHA AUTOMOTIVES PVT LTD (-01), OPP., KB COMPLEX, UTNOOR, DISTT- ADILABAD
NELLAKONDAPALLI	SADASHIVPET 2863. SAI SERVICE PRIVATE LIMITED (-01), PLOT NO. 2, SY NO. 974, GURUNAGAR COLONY, OLD BOMBAY HIGHWAY ROAD, SADASHIVPET, SANGAREDDY DIST. 502291 - 502291 PH -9966377888.	SHANKARPALLY 2873. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203	VARNI 2883. VARUN MOTORS PVT LTD (-01), H.NO.9-54/1, SATYA NARAYANA PURAM,VARNI, - 503201
2851. VARUN MOTORS PVT LTD (-01), SY.NO. 211 2,12 AT KUSUMANCHI ROAD , NELLAKONDAPALLI, KHAMMAM DISTRICT, TELANGANA. - 507160	SANGAREDDY 2864. SAI SERVICE PRIVATE LIMITED (1011-05), H.NO.4-8-92/1/4/5, AHMED NAGAR, OPP.GOV.T.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH :7661811000.	SIDDIPET 2874. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY 1971A, VILLAGE - PONNALA, SIDDIPET, DISTRICT - MEDAK, TELANGANA. - 502103	VEMULWADA 2884. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 438,NAMPALLI, VEMULWADA VILLAGE, RAJANNA SIRCILLA-DISTRICT, TELANGANA - 505302
NIRMAL	SATUPALLI 2865. MITHRA AUTO AGENCIES PVT LTD (-01), SURVEY NO. 75 NEAR VIVEKANANDA STATUE,SATHUPALLI, KHAMMAM. - 507303 PH -9848988312.	SIRCILLA 2875. ADARSHA AUTOMOTIVES PVT LTD (-01), H. NO. 10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR ROAD, SIRCILLA, DISTRICT - KARIMNAGAR, TELANGANA - 505301	VIKARABAD 2885. GEM MOTORS (INDIA) PVT LTD (-01), SHOP NO. 3-2-93/2, VILLAGE - YENNPALLY, VIKARABAD MUNICIPALITY, VIKARABAD, DISTRICT - RANGA REDDY, TELANGANA. - 501101 PH :9912349840.
2852. ADARSHA AUTOMOTIVES PVT LTD (-02), SURVEY NO: 1246/1,1247 & 1248 , SHASTRI NAGAR, NIRMAL, TELANGANA. H. NO. 1-1-131, SHASTRINAGAR , MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106 PH :8886342222.	SECUNDERABAD 2866. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (-01), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, - 500015	SURYPET 2876. PAVAN MOTORS PVT LTD (-01), SURVEY NO. 493, THALLAGADDA, SURYPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213	VM BANJAR 2886. MITHRA AUTO AGENCIES PVT LTD (-01), DOOR NO 6-101/1, VM BANJAR VILLAGE, NEAR RTC BUS STAND, PENUBALLY MANDAL, KHAMMAM - 507302
NIZAMABAD	TALLADA 2877. MITHRA AUTO AGENCIES PVT LTD (-01), SURVEY NO 890/A, D.NO 7-8, NARAYANAPURAM, TALLADA, TELANGANA - 507167 PH -9848988312.	TANDUR	WANAPARTHY 2887. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103 PH :8096903879.
2853. VARUN MOTORS PVT LTD (-01), PLOT NO. GP 1-57/4/1,PANGARA BORGONAN,NIZAMABAD - 503230			WARRANGAL 2888. ADARSHA AUTOMOTIVES PVT LTD (-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007 PH :8886132222.
PALAKURTHY			
2854. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), SURVEY NO 537/B,MAIN ROAD, PALAKURTHY,JANGAON DISTRICT,TELANGANA. - 506317 PH :8688839005.			
PALWANCHA			
2855. VARUN MOTORS PVT LTD (-01), SURVEY NO.758 & 757, NEHRU NAGAR, PALWANCHA (NEW POLANCHA) MANDAL & TOWN, BHADRADRI KOTHAGUDEM DISTT., TELANGANA. - 507115 PH :8297163222.			
PARGI			
2856. VARUN MOTORS PVT LTD (-01), HOUSE NO. 2-356 JANGAIAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL - PARGI, DISTRICT - RANGA REDDY, - 510501			
PARKAL			
2857. ADARSHA AUTOMOTIVES PVT LTD (-01), SY.NO 946, H.NO 5-27, VIKAS NAGAR, PARKAL,WARANGAL - 506164 PH :8886742222.			

Dealer Workshop (AS ON 31.01.2026)

2889. ADARSHA AUTOMOTIVES PVT LTD (-03), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL - 506001 PH :8886492222.	2901. JAIN UDYOG (-01), SUKANTA NAGAR, S.B.C NAGAR, BANKAR, BELONIA, PIN-799155, TRIPURA - 799155	AGRA	2928. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (2905-29-02), 46, DANDI REWA ROAD, OPPOSITE H.P JANTA PETROL PUMP, PRAYAGRAJ, UTTAR PRADESH. - 211008
2890. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), SURVEY NO. 16, 16/A & 16/B, OPPOSITE KAKATIYA UNIVERSITY GATE-2, LASHKERSINGARAM REVENUE VILLAGE, HANAMKONDA MANDAL, WARANGAL - 506001 PH :8688828010.	DAMCHERA	2914. KTL PVT LTD (6606-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004	AMETHI
2891. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-02), PLOT NUMBER 9,10,11 & 13/A, SURVEY NUMBER 148/A&B OF BHEEMRAM VILLAGE, WARANGAL. - 506015 PH :8688828015.	2902. PALLAVI MOTORS PVT LTD (-01), DAMCHERRA, NARENDRA NAGAR NORTH TRIPURA - 799256	2915. PREM MOTORS PVT LTD (-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002 PH :9690010799.	2929. KTL AUTOMOBILE PRIVATE LIMITED (-01), PLOT NO - E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR - 227409 PH :7379557377.
2892. ADARSHA AUTOMOTIVES PVT LTD (-05), SY.NO742/A,753, 100FEETROAD,WADEPALLY,HANAMKONDA,WARANGAL, TELANGANA STATE - 506001	DHARMANAGAR	2916. KTL PVT LTD (6606-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001 PH :8449715099.	AMRITPUR
YELLANDU	KAMALPUR	2917. MERAK VEHICLES (A UNIT OF ONE 3 VENTURES) (6609-66-01), KHASRA NO 65 & 74, MAUZA MOHAMMADPUR, AGRA-DELHI ROAD (NH-2), SIKANDRA, AGRA UTTAR PRADESH-282007 - 282007 PH :9690486139.	2930. KULDEEP MOTORS KANPUR LLP (-01), TEHSIL ROAD NEAR TEHSIL BHAWAN, AMRITPUR, DISTRICT FARRUKHABAD, UTTAR PRADESH - 209622
2893. VARUN MOTORS PVT LTD (-01), 15-129, BESIDE SBI SUDIMALA BRANCH, MAIN ROAD, YELLANDU, BHADRADRI, - 507101	KANCHANPURA	AJITMAL	AMROHA
ZAHIRABAD	2903. JAIN UDYOG (6901-03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH) - 799250	2918. KULDEEP MOTORS PVT LTD (-01), MUGHAL ROAD AJITMAL, DIST : AURAIYA - 206121	2931. AKANKSHA AUTOMOBILES PVT LTD (-01), AMROHA - JOYA ROAD, NEAR PUNJAB NATIONAL BANK, AMROHA, UTTAR PRADESH, PIN CODE: 244221 - 244221 PH :7247800064.
2894. SAI SERVICE PRIVATE LIMITED (-01), PLOT NO-5,NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD,MEDAK (DIST),ANDHRA PRADESH - 502220 PH :7660052026.	KUMARGHAT	AKBARPUR	ANPARA
TRIPURA	2906. PALLAVI MOTORS PVT LTD (-01), UTTAR PABIA CHERRA KUMARGHAT, M/C WARD NO.06,UNOKOTI - 799264	2919. KTL PVT LTD (2801-03), KANPUR ROAD, AKBARPUR - 209206 PH :7408409348.	2932. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (-01), KAHUWA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT - SONEBHADRA. - 232101
AGARTALA	MANU	2920. SMARTWHEELS PRIVATE LIMITED (7201-08), TANDA ROAD, VILL-BUDHAEPPUR, PO-KATRIYA YAKOOPPUR, AKBARPUR, DIST-AMBEDKAR NAGAR (U.P.) - 224122 PH :7705803248.	ANUPSHAHAR
2895. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003 PH :9862149275.	NORTH LAKHIMPUR	ALIGANJ	2933. SKUNIVERSE AUTOMOBILE PVT LTD (-01), KHASRA NO. 341, BULANDSHAHR ROAD, ANOOPSHAHR, DIST. BULANSHAHR, PIN-203390, UTTAR PRADESH - 203390 PH :7055118430.
2896. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA - 799003	2908. VISHAL CAR WORLD PVT LTD (-01), VILL-CHARAIMORIA (MOIDOMIA), IST-NORTH-LAKHIMPUR, STATE-ASSAM - 787001	ALIGARH	AONLA
2897. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJA & TEHSIL - KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008	SABROOM	2922. DEV MOTORS PVT LTD (-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001	2934. KAVISHA MOTORS PVT LTD (-01), COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR MUNICIPALITY OFFICE, TEHSIL -AONLA, DIST., BAREILLY, STATE- UTTAR PRADESH. - 243301
2898. PALLAVI MOTORS PVT LTD (6902-69-01), 44 NH ROAD, DAG NO. 495, DAG NO. 1748, DAG NO. 867, POST OFFICE KHERPUR, AGARTALA (TRIPURA) - 799008 PH :9864052488.	SANTIBAZAR	2923. DEV MOTORS PVT LTD (-04), PLOT NO 97, VILLAGE SIKANDERPUR, BHUKRAVALI, GT ROAD BYE PASS, ALIGARH - 202002 PH :7351345577.	ATARRA
AMARPUR	2910. PALLAVI MOTORS PVT LTD (-01), SANTIBAZARM NEAR SDM OFFICE, SOUTH TRIPURA - 799144	ALLAHABAD	2935. MY CAR PVT. LTD. (-01), 14/292, AZAD NAGAR., ATTARA, BANDA, - 210201
2899. JAIN UDYOG (-01), NEAR MOTOR STAND, AMARPUR,TRIPURA - 799101	TELIAMURA	2924. AMITDEEP MOTORS PVT LTD (2901-29-01), 26 SULEM SARAI, G.T ROAD, ALLAHABAD - 211001	ATRAULI
AMBASSA	2911. PALLAVI MOTORS PVT LTD (-01), SOUTH KARAILONG., PACHIM TELIAMURA, TRIPURA, - 799201	2925. SARASWATI MOTORS LLP (2904-29-01), PLOT NO 24, INDUSTRIAL AREA MNIT COLLEGE, TELIYARGANJ, PRAYAGRAJ, UTTAR PRADESH. - 211004 PH :8090854053.	2936. DEV MOTORS PVT LTD (-01), GATA NO. 126 TEHSIL ATRAULI NEAR HARIYAL, CENTER MOJA MADHAULI NISFI ASHARABAD - 202280
2900. JAIN UDYOG (-01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289	UDAIPUR	2926. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (2905-29-01), ARAZI NO 390 AND 389 AT KATKA, ANDAWA SAHSON BYPASS, PRAYAGRAJ - 211002 PH :9415324201.	AURAI
BELONIA	2912. JAIN UDYOG (-01), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR,TRIPURA (SOUTH) - 799116 PH :9774020152.	2927. SARASWATI MOTORS LLP (2904-29-02), 342, BHAGIPUR, SARAI INAYAT, ANDWA,JHUNSI, PRAYAGRAJ - 211019	2937. VARANASI MOTORS PVT LTD (-01), KHATA / KHATAJUNI NO. 00045, GT ROAD (EHAQ BHATURA), OPP. CHINI MILL,VILLAGE & TEHSIL AURAI, DIST: BHADHOI, UTTARPRADESH, PIN 2221 301 - 2221301
	AFZALGARH		AURAIYA
	2913. SHAKUMBARI AUTOMOBILES PVT LTD (-01), VILL FATEHULLANAGAR,AFZAL GARH MARH., NH-74,AFZALGARH,TEHSIL DHAMPUR, - 246722		

2938. KULDEEP MOTORS PVT LTD (-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA - 206241
PH -9235358444.

AZAMGARH

2939. DEEP MOTORS (-01), HARBANSHPUR NARAULI, AZAMGARH - 276001
PH -9838072905.

2940. DEEP MOTORS (-04), VILLAGE - BALDEV MADURI, TEHSIL - SAGRI, DISTRICT - AZAMGARH, UTTAR PRADESH. - 276138

BABRALA

2941. AKANKSHA AUTOMOBILES PVT LTD (-01), CHANDAUSI ROAD, BABRALA, DISTRICT SAMBHAL, UTTAR PRADESH. - 243751
PH :7895600005.

BACHRAWAN

2942. KTL AUTOMOBILE PRIVATE LIMITED (-01), VISHNUPUR, PHARIWAN, RAEBARELLI-LUCKNOW ROAD, DIST. -RAEBARELLI - 229301
PH -9918451222.

BAH

2943. KTL PVT LTD (-01), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH. - 283104

BAHERI

2944. KAVISHA MOTORS PVT LTD (-01), KASRA NO. 530, 531, 532, 533, NAINITAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT - BAREILLY, UTTAR PRADESH - 243201

BAHRAICH

2945. ANAND MOTOR AGENCIES LTD (1301-05), LUCKNOW ROAD, BEHRAICH, UTTAR PRADESH - 271801
PH -9519596800.

BAKSHI KA TALAB

2946. BRIGHT 4 WHEEL SALES PVT LTD (1305-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020
PH -7317049000.

BALLIA

2947. DEEP MOTORS (-03), MAIDEYUPUR, RAJDHANI ROAD, BALLIA - 277001
PH -9838072917.

BALRAMPUR

2948. ANAND MOTOR AGENCIES LTD (-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD, BALRAMPUR-UTTAR PRADESH - 271201
PH -6307995976.

BANDA

2949. MY CAR PVT LTD (2803-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001
PH -9792971223.

2950. SUMITRA DS MOTORS PVT LTD (-01), PURANPUR ROAD, BANDA, TEHSIL BANDA, THANA BANDA, DISTT. SHAHJAHANPUR - U.P. - 242042

2951. MY CAR PVT LTD (-02), ARAZI NO 1180 & 1181, LADAKAPURWA, TINDWARI ROAD, BANDA, UTTAR PRADESH - 210001

BANSI

2952. ARBIT AUTOMOBILES PVT LTD (-01), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA: KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT : SIDARTHANAGAR - 272153

BANTHRA

2953. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (-01), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401
PH -9919101456.

2954. ONE UP MOTORS INDIA PVT LTD (1306-05), KHASRA NO. 1166, KHANDEDEV, KANPUR ROAD, BANTHRA, LUCKNOW - 226401

BARABANKI

2955. BRIGHT 4 WHEEL SALES PVT LTD (1305-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001
PH -9838075960.

BARAUT

2956. TANYA AUTOMOBILES PVT LTD (-01), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611
PH -7055300019.

BAREILLY

2957. CORAL MOTORS (P) LTD (5602-56-01), STATION ROAD, BAREILLY - 243001

2958. CORAL MOTORS (P) LTD (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002

2959. KAVISHA MOTORS PVT LTD (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502

2960. NANDINI MOTORS (A UNIT OF PARK LANE ENTERPRISES PRIVATE LIMITED) (5604-56-01), APEX MULTISPECIALITY SHOPPING PILIBHIT BYPASS RD BAREILLY - 243001

BARHAJ

2961. SMARTWHEELS PRIVATE LIMITED (-01), VILL. -LAWARCHHII., BARHAJ DEORIA ROAD, - 274601

BARHAN

2962. KTL PVT LTD (-01), VILLAGE BARHAN, ETMADPUR, AGRA, UTTAR PRADESH. - 283201

BASTI

2963. SMARTWHEELS PRIVATE LIMITED (7201-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002

2964. ARBIT AUTOMOBILES PVT LTD (7203-72-03), SANSARPUR FUTAHIA POST GANDHI NAGAR, DISTRICT BASTI UTTAR PRADESH - 272182
PH -9953412621.

BEHTA

2965. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (-01), KHASRA NO. 254, OPPOSITE SANGAM MOTORS, KURSI ROAD, BEHTA - 226026
PH -6388901514.

BELA

2966. KULDEEP MOTORS LUCKNOW PVT LTD (-01), TIRWA ROAD BELA, DISTRICT AURAIYA U.P. - 206251

BHADOHI

2967. VARANASI MOTORS PVT LTD (8402-02), VARNASI ROAD, BHADOHI - 221401
PH -9838360662.

BHARTANA

2968. KULDEEP MOTORS PVT LTD (-01), RAJA GANJ, BHARTANA, DISTRICT ETAWAH - 206242

BHINGA

2969. ANAND MOTOR AGENCIES LTD (-01), PATNAKHARGAURA, BHINGA, SHRIVASTI - 271831
PH -9415013059.

BHOGNIPUR

2970. KULDEEP MOTORS KANPUR LLP (-01), NEAR CHANDRA PETROL PUMP, KANPUR JHANSI ROAD, TEHSIL BHOGNIPUR, KANPUR DEHAT, UP - 209112

BHOJPUR

2971. MOTORCRAFT SALES PVT LTD (-01), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL - MODINAGAR, DISTRICT - GHAZIABAD. - 201204
PH -9410038456.

BIJNOR

2972. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (-01), KHASRA NO. 1573, NEAR GROUP CENTRE, CRPF, CAMP, BIJNORE, LUCKNOW, PIN-226002, UP - 226002

BIJNORE

2973. SHAKUMBARI AUTOMOBILES PVT LTD (-01), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELHI-BIJNOR HIGHWAY, BIJNOR, DIST. - BIJNOR, UTTAR PRADESH. - 246701
PH -8630881409.

BILARI

2974. AKANKSHA AUTOMOBILES PVT LTD (-01), 2KM-BILARI NH 509, NEAR SZO SCHOOL, BILARI, MORADABAD 244001 - 244001
PH -7900600008.

BILASPUR-UP

2975. AKANKSHA AUTOMOBILES PVT LTD (-01), NH-87 ,OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT - RAMPUR. - 244921
PH -9105370007.

BISALPUR

2976. CORAL MOTORS (P) LTD (-01), KHASRA NO. 668, VILLAGE : BISALPUR, DISTT: PILIBHIT, UTTAR PRADESH - 262201
PH -9837891846.

BISWAN

2977. CONCEPT CARS LIMITED (-01), BILJHARIYA, OPPOSITE-555, BRICK FIELD, BISWAN - 261201 - 261201
PH :7607966666.

BUDAUN

2978. CORAL MOTORS (P) LTD (5602-04), PLOT NO - 72, BAREILLY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103
PH -9837891846.

BUDHANA

2979. RADHA GOVIND AUTOMOBILES PVT LTD (-01), BARAUT ROAD, NEAR BALWALA POLICE STATION. - 251309

BULANDSHAHR

2980. SKUNIVERSE AUTOMOBILE PVT LTD (-01), KHASRA NO 561 , BHOOR, OPP PANDIT PETROL PUMP , BULANSHAHR - 203001
PH -9219694600.

2981. SKUNIVERSE AUTOMOBILE PVT LTD (-02), KHASRA NO.2261, NEAR T POINT , BYPASS SIKARPUR ROAD, BULANDSHAHR - 203001
PH :7055118430.

CHAIL

2982. SARASWATI MOTORS LLP (-01), MAUJA CHAIL, TEHSIL CHAIL, KAUSHAMBI, UTTAR PRADESH - 121202

CHAKARNAGAR

2983. KULDEEP MOTORS PVT LTD (-01), RAJPUR ROAD, CHAKARNAGAR, DISTT : ETAWAH - 206125

CHAKIA

2984. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (-01), KATHSILA NAHER, NEAR SAINT JOHN'S SCHOOL CHAKIA, DISTRICT - CHANDAUILLI. - 232101
PH -9430544961.

CHANDAUSI

2985. AKANKSHA AUTOMOBILES PVT LTD (-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412
PH :7248000002.

Dealer Workshop (AS ON 31.01.2026)

2986. AKANKSHA AUTOMOBILES PVT LTD (-02), PATHRA CHOWK, BADAUN ROAD (NEAR INDIAN OIL FILLINGSTATION), CHANDAUSI, DISTRICT SAMBHAL, UTTAR PRADESH - 202414, - 202414	2997. SMARTWHEELS PRIVATE LIMITED (-01), CFC BUILDING, INDUSTRIAL ESTATE, DEORIA, DISTRICT DEORIA, UTTAR PRADESH PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST.-DEORIA, UTTAR PRADESH. - 274001	FAKHARPUR 3008. ONE UP MOTORS INDIA PVT LTD (-01), GHASIPUR, FAKHARPUR, BAHRACH (UP) - 271902 PH :9935275786.	3020. REGENT AUTOLINKS PVT LTD (5902-59-01), A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001
CHAURE BAZAR			3021. ROHAN MOTORS LTD (5904-02), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD - 201102
2987. SMARTWHEELS PRIVATE LIMITED (-01), PLOT NO 366, GRAM CHAURE CHANDAULI, CHAURE BAZAAR, BIKAPUR TEHSIL, DISTT AYODHYA - 224209	2998. ARBIT AUTOMOBILES PVT LTD (-01), ARAZI NO 467 MI & 607 MAUJA SONUGHAT PARGANA SALEMPUR MAJHAULI, DEORIA, UTTAR PRADESH - 274001 PH :8953412821.	FARIDPUR 3009. KAVISHA MOTORS PVT LTD (-01), GATE NO. 216, KASBA SARAI, TEHSIL - FARIDPUR, DISTRICT - BAREILLY, UTTAR PRADESH. - 243503	3022. T R SAWHNEY MOTORS PVT LTD (5905-01), PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL AREA, MOHAN NAGAR, GHAZIABAD, DISTT. - GHAZIABAD, U.P. - 201007
CHAURI CHAURA		FARRUKHABAD 3010. MY CAR PVT LTD (2803-04), NEKPUR KALAN, FARRUKHABAD - 209625 PH :9792970093.	3023. SNV AUTOMOBILES PVT LTD (5906-59-01), PLOT NO. 15, SOUTH SIDE GT ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH - 201001 - 201001 PH :9650324325.
2988. ARBIT AUTOMOBILES PVT LTD (-01), ARAZI NO 561 DOMARI KHURD, CHAURI CHAURA, GORAKHPUR - 273201 PH :8953412821.	DERAPUR 2999. KTL PVT LTD (-01), VILLAGE - DERAPUR, KANPUR DEHAT, UTTAR PRADESH. - 209301	FATEHABAD 3011. KTL PVT LTD (-01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT - AGRA, UTTAR PRADESH - 283111 PH :3449710051.	3024. GLOBUS AUTO LLP (5907-59-01), 139, PANDAV NAGAR, GHAZIABAD, PIN-201001, UTTAR PRADESH - 201001 PH :8588872804.
CHIBRAMAU	DHAMPUR 3000. SHAKUMBARI AUTOMOBILES PVT LTD (-01), KHASRA NO. 205, OPPOSITE, UHSA SMARAK SCHOOL, MORADABAD ROAD, TEHSIL - DHAMPUR, MOJA - ALEHPUR, DIST.-BUNOR, UTTAR PRADESH. - 246761 PH :9675970960.	FATEHPUR 3012. KTL PVT LTD (2801-04), NH-2, OPP. RTO OFFICE, KANPUR ROAD, FATEHPUR - 212601	3025. GLOBUS AUTO LLP (-59-02), 139, PANDAV NAGAR, GHAZIABAD, PIN-201001 139, PANDAV NAGAR, GHAZIABAD, PIN-201001 - 201001
2989. KTL PVT LTD (-01), PLOT GHATA NO. 70, MAUJA - LALAKPUR, VILLAGE - CHIBRAMAU, DIST.-KANNAUJ, UTTAR PRADES. - 209721	DHAURAHARA 3001. SUMITRA DS MOTORS PVT. LTD. (-01), DHAKHERWA ROAD, NEAR HAMID PETROL PUMPBPCL, DHAURAHARA, LAKHIMPUR KHERI - 262723	FAZILNAGAR 3014. SMARTWHEELS PRIVATE LIMITED (-01), NEAR BAGHAUCH GHAT TURN FAZILNAGAR, UTTAR PRADESH - 274401	GHAZIPUR 3026. AGR AUTOMOBILES PVT LTD (8403-03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001 PH :2361136.
CHITRASENPUR	DIBYAPUR 3002. KULDEEP MOTORS PVT LTD (-01), AURAIYYA ROAD, DIBIYAPUR - 206244 PH :9235258425.	FIROZABAD 3015. DEV MOTORS PVT LTD (-01), GATE NO.435, MOUJA-DHOLPURA, - NEAR ST JOHNS CHAURAHA, AGRA ROAD, FIROZABAD UTTAR PRADESH - 283203	GHIROR 3027. KULDEEP MOTORS PVT LTD (-01), NEAR SSD COLLEGE, KARHAL ROAD, GHIROR, DISTRICT - MAINPURI, UTTAR PRADESH. KARHAL ROAD, TEHSIL - GHIROR, DISTRICT - MAINPURI, UTTAR PRADESH. PH :9536755555.
2990. AGR AUTOMOBILES PVT LTD (-01), KHASRA NO-194,CHITRASENPUR, KACHHUWA ROAD, VARANASI, PIN-221313 - 221313 PH :9889803355.	DOMARIAGANJ 3003. SMARTWHEELS PRIVATE LIMITED (-01), VILL & POST - CHAUKHARA, DOMARIAGANJ, DISTT - SIDHDHARTH NAGAR - 272193 PH :7705800602.	GAJRAULA 3016. AKANKSHA AUTOMOBILES PVT LTD (-01), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA - 244235 PH :7895400003.	GOLA 3028. SMARTWHEELS PRIVATE LIMITED (-01), NEAR KANYA INTER COLLEGE, BHARASADA, GOLA, DISTT - GORAKHPUR, UTTAR PRADESH - 273408 PH :7705800602.
COLONELGANJ	ETAH 3004. DEV MOTORS PVT LTD (-01), GATA NO 685/4 VILL GIRORA, ETAH-KASGANJ ROAD, ETAH, UP - 207001 PH :7351345577.	GARH MUKTESHWAR 3017. ROHAN MOTORS LTD (-01), "EAST WARD NO. 8, ADARSH NAGAR, GARH, MUKTESHWAR, DIST. HAPUR, PIN-245202 - 245202	GONDA 3029. SMARTWHEELS PRIVATE LIMITED (7201-07), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH ROAD, GONDA, UTTAR PRADESH. - 271001 PH :7705803261.
2991. SMARTWHEELS PRIVATE LIMITED (-01), OPPOSITE BHARAT PETROL PUMP, PIPRI, COLONELGANJ, DISTT- GONDA, UTTAR PRADESH - 271502	ETAWAH 3005. KULDEEP MOTORS PVT LTD (-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001 PH :257029.	GHATAMPUR 3018. MY CAR PVT LTD (-01), TRANSPORT NAGAR, NEAR INDIAN OIL PETROL, HAMIRPUR ROAD, GHATAMPUR, PIN-209206, - 208003	GORAKHPUR 3030. SMARTWHEELS PRIVATE LIMITED (7201-01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012 PH :7705803152.
DADRI	FAIZABAD 3006. SMARTWHEELS PRIVATE LIMITED (7201-02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001 PH :7705803245.	GHAZIABAD 3019. ROHAN MOTORS LTD (5904-59-01), 432 MUKAND NAGAR, G.T.ROAD, GHAZIABAD - 201001	GORAKHPUR 3031. SMARTWHEELS PRIVATE LIMITED (7201-06), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012 PH :7705803109.
2992. RANA MOTORS PVT LTD (-01), KHASRA NO -1242, KHATONI NO - 56, VILLAGE DHOOM MANIKPUR, DADRI, UTTAR PRADESH - 203207			
DALMAU			
2993. KTL AUTOMOBILE PRIVATE LIMITED (-01), DALMAU ROAD, OPPOSITE BHAGIRATHI GUEST HOUSE - 229203 PH :9918451222.			
DANKAUR			
2994. MOTORCRAFT SALES PVT LTD (-01), OPP. SHRI DRONACHARYA A DEGREE COLLEGE, DANKAUR, DIST. - GAUTAM BUDD NAGAR, HARYANA. - 203201 PH :9810289355.			
DEBAI			
2995. SK UNIVERSE AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO. 299/2, SABALPUR DEBAI DISTT, BULANDSHAHAR - 203393			
DEOBAND			
2996. ATELIER AUTOMOBILES (-01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001 PH :7500220011.			
DEORIA			

3032. SMARTWHEELS PRIVATE LIMITED (7202-01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. -273209	3044. DEV MOTORS PVT LTD (-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS - 204101 PH :9917435500.	3055. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (6002-01), PLOT NO.488, 487, 488, 489 AND 477 (PATTA NUMBERS), MAUZA - KOCCHABHANWAR, BLOCK - BADAGAON, TEHSIL AND DISTT - JHANSI. - 284128	3070. SMARTWHEELS PRIVATE LIMITED (-01), IN FRONT OF BHARAT PETROL PUMP, RAMKOLA ROAD, KAPTANGANJ, DISTT- KUSHINAGAR, PIN- 274301. - 274301
3033. ARBIT AUTOMOBILES PVT LTD (7203-72-01), ARAZI NO. 66/1/1 MI & 66/2/1MI, 66 MI, MAUZA - MAHEWA MUSTAKIL, NEAR FALMANDI CHOWK, TRANSPORT NAGAR, GORAKHPUR, UTTAR PRADESH - 273016	IGLAS 3045. DEV MOTORS PVT LTD (-01), MATHURA ROAD, IGLAS, DISTRICT ALIGARH. - 202124 PH :9837549000.	KAKOD 3056. SKUNIVERSE AUTOMOBILE PVT LTD (-01), GATA NO.1738.V-KAKORE DEHAT, TEHSIL SIKANDRABAD,DIST.BULANDSHAHR. - 203203	KARHAL 3071. KULDEEP MOTORS PVT LTD (-01), SAFAI KARHAL ROAD, KARHAL, - 205264
3034. ARBIT AUTOMOBILES PVT LTD (7203-72-1B), MEDICAL COLLEGE ROAD, NEAR SPORTS COLLEGE, GORAKHPUR, UTTAR PRADESH - 273016	ITUNJA 3046. BRIGHT 4 WHEEL SALES PVT LTD (-01), 90M GATA GRAM MANDOLI, ITTANUNJA, LUCKNOW, UTTAR PRADESH-226203. - 226203 PH :7011482503.	KANNAJU 3057. KTL PVT LTD (2801-05), PLOT NO. - 377, AKBARPUR, KANNAJU - 209725 PH :7408409305.	KARWI 3072. MY CAR PVT LTD (-01), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 210205
GOSAIGANJ 3035. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASRA NO. 24, VILLAGE - SHEKHANPUR, PARGANA MOHANLALGANJ, TEHSIL - MOHANLALGANJ, DIST.-LUCKNOW, UTTAR PRADESH - 226501 PH :9838075929.	JAGATPUR 3047. KTL PVT LTD (-01), GATA NO.331, JOGMAGDIPUR POORE TAYN, NEAR MADRASA ROAD, LUCKNOW PRAYAGRAAJ HIGHWAY, JAGATPUR, 229402 - 229402	KANPUR 3058. KTL PVT LTD (2801-28-01), 9/46, BENAJBHABAR ROAD, HARSH NAGAR, KANPUR - 208002 PH :7408409341.	KASIA 3073. ARBIT AUTOMOBILES PVT LTD (-01), MAUJA BHAISAHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206 PH :8953412821.
GREATER NOIDA 3036. ROHAN MOTORS LTD (-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH - 201306	JAGDISHPUR 3048. BRIGHT 4 WHEEL SALES PVT LTD (-01), KATHORA,MUSAFIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISHPUR-UTTAR PRADESH - 227817	KANPUR 3059. MY CAR PVT LTD (2803-28-01), 84/54 C, JARIB CHOWKI, G.T. ROAD, KANPUR - 208003 PH :9792970511.	KATRA 3074. SUMITRA DS MOTORS PVT LTD (-01), GRAM: SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL - TILHAR, SHAHJAHANPUR - 242301 PH :9336408074.
3037. VIPUL MOTORS PVT LTD (-01), PLOT NO. 64, ECOTECH 12, GREATER NOIDA (WEST), UP. - 201009 PH :9811233385.	JAGNER 3049. MERAK VEHICLES (A UNIT OF ONE 3 VENTURES) (-01), SHRI RAM GARDEN, AGRA ROAD, NEAR RADHA KRISHNA MANDHIR, JAGNER, UTTAR PRADESH, 283115 - 283115 PH :7896500400.	KANPUR 3060. KTL PVT LTD (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007 PH :7408409253.	KAUSHAMBI 3075. SARASWATI MOTORS LLP (-01), ARAZI NO 1228, KORRO MANJHANPUR, KAUSHAMBI, UTTAR PRADESH, PINCODE - 212207. - 212207 PH :8090854005.
HAIDERGARH 3038. BRIGHT 4 WHEEL SALES PVT LTD (-01), PROPERTY SHOP NO. 5, 6 AND 7, VILLAGE - GOTAUNA, PARGANA - HAIDERGARH, TEHSIL - HAIDERGARH, DISTRICT - BARABANKI. - 225124	JALALABAD 3050. SUMITRA DS MOTORS PVT LTD (-01), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSILL: JALALBAD, DIST. SHAHJHANPUR - 242221	KANPUR 3061. MY CAR PVT LTD (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022 PH :9792970086.	KAYAMGANJ 3076. MY CAR PVT LTD (-01), BYE PASS ROAD , NEAR KHAN PETROL PUMP, VILLAGE : KAYAMGANJ , DISTT: FARUKHABAD - 209502
HAMIRPUR 3039. KTL PVT LTD (-01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301 PH :7704907587.	JALALPUR 3051. SMARTWHEELS PRIVATE LIMITED (-01), SURHURPUR, TEHSIL - JALALPUR, UTTAR PRADESH - 224149	KANPUR 3062. S B CARS PVT LTD (2806-28-01), 77B , FAZALGANZ, KANPUR - 208012	KHAIR 3077. DEV MOTORS PVT LTD (-01), PLOT 117, ALIGARH PALWAL ROAD, VILLAGE CHAMAN NAGARIYA, KHAIR - 202138 PH :7351345577.
HAPUR 3040. ROHAN MOTORS LTD (-01), KHASRA NO - 2225 , BAHADUR DHARAM KANTA, NEAR SUPREME PETROL PUMP, GARH ROAD, HAPUR, UTTARPRADESH - 245101 - 245101	JALAUAN 3052. KULDEEP MOTORS KANPUR LLP (-01), PARSHURAM NAGR, JALAUAN KONCH ROAD,JALAUAN, UTTAR PARDESH - 285123	KANPUR 3063. MY CAR PVT LTD (2803-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017 PH :7408525252.	KHURJA 3078. SKUNIVERSE AUTOMOBILE PVT LTD (-01), OLD GT ROAD, KHURJA, DISTRICT- BULANDSHAHR, UTTAR PRADESH - 203131. - 203131 PH :7055118430.
HARDOI 3041. CONCEPT CARS LIMITED (-01), NANAK GANJ, LUCKNOW ROAD, HARDOI - 241001	JAUNPUR 3053. KIRTI KUNJ AUTOMOBILES PVT LTD (-01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001 PH :9554951026.	KANPUR 3064. KTL PVT LTD (2801-07), ARAZI NO. 1110, VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA NAGAR, KANPUR, UTTAR PRADESH - 208026 PH :7408409379.	KIRAOLI 3079. PREM MOTORS PVT LTD (-01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA - JAIPUR HIGHWAY, KIRAWALI, DISTRICT - AGRA, UTTAR PRADESH. - 283122 PH :9690010799.
HARGAON 3043. CONCEPT CARS LIMITED (-01), SITAPUR TO LAKHIMPUR ROAD, NEAR HARGAON DRAM KANTA KESHRUWA, TEHSIL, HARGAON, DIST. SITAPUR, UTTAR PRADESH. - 261121	JHANSI 3054. SURI AUTOMOBILES (6001-60-01), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN - 284002. - 284002 PH :8881811383.	KANPUR 3065. KULDEEP MOTORS KANPUR LLP (-28-02), PROPERTY NO. C-4 SITE-II, PANKI INDUSTRIAL AREA, KANPUR - 208020	KITHORE 3080. RADHAGOVIND AUTOMOBILES PVT LTD (-01), MANSAB PURA, ISLAMABAD, OPP. HP PETROL PUMP, KITHORE, MEERUT, UTTAR PRADESH - 250104
HATHRAS 3043. CONCEPT CARS LIMITED (-01), SITAPUR TO LAKHIMPUR ROAD, NEAR HARGAON DRAM KANTA KESHRUWA, TEHSIL, HARGAON, DIST. SITAPUR, UTTAR PRADESH. - 261121		KANPUR 3066. MY CAR PVT LTD (2803-28-06), PLOT NO.64A, PAHARPUR, NEAR INDIRA PETRO, HAMIRPUR ROAD, NAUBASTA, PIN-208021 - 209401	KONCH 3080. RADHAGOVIND AUTOMOBILES PVT LTD (-01), MANSAB PURA, ISLAMABAD, OPP. HP PETROL PUMP, KITHORE, MEERUT, UTTAR PRADESH - 250104
		KANTH 3067. KULDEEP MOTORS KANPUR LLP (-28-02), PROPERTY NO. C-4 SITE-II, PANKI INDUSTRIAL AREA, KANPUR - 208020	
		KANTH 3068. MY CAR PVT LTD (2803-28-06), PLOT NO.64A, PAHARPUR, NEAR INDIRA PETRO, HAMIRPUR ROAD, NAUBASTA, PIN-208021 - 209401	
		KAPTANGANJ 3069. AKANKSHA AUTOMOBILES PVT LTD (-01), GOSIPURA, HARIDWAR ROAD KANTH, DISTRICT - MORADABAD, UP - 244501	

Dealer Workshop (AS ON 31.01.2026)

3081. KULDEEP MOTORS KANPUR LLP (-01), NEW PATEL NAGAR, CITY KONCH, DISTRICT - JALAIUN, UTTAR PRADESH - 285205 PH :9839015046.	3093. T R SAWHNEY MOTORS PVT LTD (-G1), PLOT NO. 16, DELHI SAHARANPUR ROAD, KHANNA NAGAR, LONI, GHAZIABAD, UTTAR PRADESH - 201102 LUCKNOW	3108. ONE UP MOTORS INDIA PVT LTD (1314-13-01), KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJAJAGANJ, HARDOI ROAD, LUCKNOW - 226003	3120. SURI AUTOMOBILES (6001-02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH - 284001
KOSI		3109. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313--02), KHASRA NO. 614, VILLAGE: BHADRUKH, VIP CANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHSIL: SAROJINI NAGAR, LUCKNOW, UTTAR PRADESH 226002 - 226002 PH :6388901514.	3121. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (-01), BAURANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA - 210427 PH :9560998709.
3082. UMA MOTORS PVT LTD (-01), KHASRA NO. 245, CITY - KOSI, DIST.-MATHURA. - 281004	3094. ANAND MOTOR AGENCIES LTD (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105 PH :7080000462.	3110. KULDEEP MOTORS LUCKNOW PVT LTD (1315-13-01), PLOT NO F-01, SECTOR-B, PRIYADARSHINI, LUCKNOW, UTTAR PRADESH - 226006	MAHOLI
KUBERPUR		3111. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313-13-03), KHASRA NO 326, IIM ROAD, MUKATIPUR, LUCKNOW, UTTAR PRADESH - 226013	3122. CONCEPT CARS LIMITED (-01), MUSKAN TRACTORS, NEAR MELA MAIDAN, SHAHJHANPUR ROAD, MAHSUNIYAGANJ, MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. - 261141 PH :7607696666.
3083. KTL PVT LTD (6606-04), KHASRA NO.248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006 PH :8449715099.	3095. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-01), MATIYARI CHAURAHA, CHINNHTAT, FAIZABAD ROAD, LUCKNOW - 227105 PH :7408411453.	3112. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313--04), 671,BADRUK VIP ROAD, TELIBAGH, LUCKNOW, UTTAR PRADESH - 226010	MAINPURI
KUNDA		3113. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-09), CP-195, SITUATE AT VIRAJ KHAND, GOMTI NAGAR, LUCKNOW, PIN-226010 - 226010	3123. KULDEEP MOTORS PVT LTD (-02), SKP-4A, MAINPURI - 205001 PH :9232584444.
3084. SARASWATI MOTORS LLP (-01), ALLAHABAD-LUCKNOW HIGHWAY, KUNDA, DISTRICT PRATAFGARH. - 230204 PH :8090854005.	3096. ANAND MOTOR AGENCIES LTD (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW - 226016	MADHOGANJ	MALIHABAD
KURAWALI		3114. CONCEPT CARS LIMITED (-01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241302	3124. ONE UP MOTORS INDIA PVT LTD (-01), KHASRA NO. 326/1 AND 327, VILLAGE PARGANA, TEHSIL - MALIHABAD, DISTRICT - LUCKNOW, UTTAR PRADESH. - 227111 PH :9918100781.
3085. KULDEEP MOTORS PVT LTD (-01), GT ROAD,NEAR SWARAJ MEMORIAL PUBLIC SCHOOL. - 205265	3097. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-01), 11/CP- 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022	MADHOGARH	MANDI DHANORA
KURSI		3115. S B CARS PVT. LTD. (-01), MADHOGARH ORAI, JALAIUN HIGHWAY. - 285126	3125. AKANKSHA AUTOMOBILES PVT LTD (-01), CHANDPUR ROAD,NEAR NEEDARMAL SUGARCIMCRASHER,DHANORA - 244131
3086. BRIGHT 4 WHEEL SALES PVT LTD (-01), GATA NO. 261, VILLAGE BASARA, PARGANA KURSI, TEHSIL FATEHPUR, - 225302	3098. ONE UP MOTORS INDIA PVT LTD (1306-13-01), C-16A TRANSPORT NAGAR,KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012	MAHARAJGANJ	MATHURA
LAHARPUR		3116. SMARTWHEELS PRIVATE LIMITED (-01), BESIDES SHUBHAM HERO, RAMPUR, MAHARAJGANJ, UTTAR PRADESH. NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303	3126. UMA MOTORS PVT LTD (-01), 68, MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004
3087. CONCEPT CARS LIMITED (-01), KHASARA NO: 1639 VILLAGE LACHCHHAN NAGAR TEHSIL LAHARPUR DISTRICT SITAPUR UP - 261135	3099. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-02), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016 PH :7408411478.	MAHARAJGANJ	MATI
LAKHIMPUR		3117. KTL AUTOMOBILE PRIVATE LIMITED (-01), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL - MAHARAJGANJ, DISTRICT - RAIBAREILLY, UTTAR PRADESH. PH :9918451222.	3127. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (-01), GATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE- MATI, PARGANA- DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225003 PH :6388901514.
3088. SUMITRA DS MOTORS PVT LTD (-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001	3100. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-03), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005	MAHIRPURWA	MAU
3089. SUMITRA DS MOTORS PVT LTD (-01), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE - BHARDSARIYA, KHERI, LAKHIMPUR - 262702	3101. ANAND MOTOR AGENCIES LTD (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW - 226024	3118. ONE UP MOTORS INDIA PVT LTD (-01), NEAR KURWA RAILWAY CROSSING. , LAKHIMPUR BAHRACH ROAD, UTTAR PRADESH - 271855	3128. DEEP MOTORS (-01), DARI CHATTI , KHUKHUNDVA, MAU, UTTAR PRADESH. - 275305 PH :7704000552.
LALGANJ		MAHMUDABAD	MAUDAHA
3090. KTL AUTOMOBILE PRIVATE LIMITED (-01), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206	3102. ONE UP MOTORS INDIA PVT LTD (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH :9918500451.	3119. CONCEPT CARS LIMITED (-01), OPPOSITE INDIAN PETROL PUMP, MAHMUDABAD SIDAHULI ROAD, MAHMUDABAD, DISTRICT SITAPUR, UTTAR PRADESH. - 261203	MAURANIPUR
LALITPUR		MAHOBA	
3091. SURI AUTOMOBILES (6001-03), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH :9451496015.	3103. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH :9838075960.		
3092. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (-01), LALITPUR BYPASS ROAD, NH26 (LALITPUR-MEHRAUNI HIGHWAY), IN FRONT OF RMV COLLEGE ROAD, MAIN HIGHWAY, LALITPUR, UTTAR PRADESH - 284403 PH :9560998709.	3104. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW - 226001		
LONI			
	3105. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (-01), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW. - 226010		
	3106. KTL AUTOMOBILE PRIVATE LIMITED (-13-07), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. - 226008 PH :78000007376.		
	3107. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-06), KHASRA NO. 418, MISHRAPUR PARGANA MAHONA, KURSI ROAD, LUCKNOW. - 226022 PH :9935275786.		

3130. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (-01), BASERA CITY, MAURANPUR - GARUTHA ROAD, MAURANPUR, DISTT. JHANSI, UTTAR PRADESH - 284204 PH :8299202863.	3141. CONCEPT CARS LIMITED (-01), NEAR ARYA/VART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P. PINCODE: 261401 - 261401 PH :7607696666.	3152. SHAKUMBARI AUTOMOBILES PVT LTD (-01). RAIPUR ROAD, NEAR AKBARABAD CHOWK , NAGINA, DIST. BIJNOR, UTTAR PRADESH - 246762	3167. MOTORCRAFT SALES PVT LTD (5903-05), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST ,GB NAGAR ,UP - 201306 PH :8826312222.
MAWANA	MODINAGAR	NAJIBABAD	3168. DEV MOTORS PVT LTD (-01), GATA NO -582, VILLAGE SALARPUR, SECTOR-49, VISHWAKARMA ROAD, NOIDA, UTTAR PRADESH - 201304
3131. RADHAGOVIND AUTOMOBILES PVT LTD (-01), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401 PH :7456001002.	3142. MOTORCRAFT SALES PVT LTD (5903-02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204	3153. SHAKUMBARI AUTOMOBILES PVT LTD (-01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246701 PH :8630881459.	3169. COMPETENT AUTOMOBILES CO LTD (-01), KHASRA NO. C-12, SECTOR-85, NOIDA - 201301
MEERGANJ	MOHANLAL GANJ	NANPARA	ORAI
3132. KAVISHA MOTORS PVT LTD (-01), SINDHAULI CHAURAHA, ADJACENT TO OBC BANK, NH-24, MEERGANJ, TEHSIL & DISTT - BAREILLY, UTTAR PRADESH - 243504	3143. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305	3154. KTL AUTOMOBILE PRIVATE LIMITED (-01), GATA NO. 3730, NANPARA DEHAT, PARGANA TE, TEHSIL, NANPARA, DIST. BAHRACH - 271865	3170. S B CARS PVT LTD (2806-02), KANPUR ROAD, ORAI - 285001 PH :9307219303
MEERUT	MOOSANAGAR	NARWAL	3171. KTL PVT LTD (-01), KHASRA NO.155, MAUJA LAHARIYAPURWA, JALAIN, ORAI, PIN-285001, UTTAR PRADESH - 285001
3133. TANYA AUTOMOBILES PVT LTD (4802-48-01), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001 PH :9837077003.	3144. MY CAR PVT LTD (-01), VILL GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH. - 209208	3155. MY CAR PVT LTD (-01), GATA NO. 821 , KARIBGSWANA ROAD , NARWAL , KANPUR, UTTAR PRADESH. - 209401 PH :9792970005.	PADRONA
3134. TANYA AUTOMOBILES PVT LTD (4802-48-03), 90, NAUCHANDI GROUND,GARH ROAD, MEERUT - 250001 PH :9837077004.	MORADABAD	NAUGARH	3172. SMARTWHEELS PRIVATE LIMITED (-01), AARJI NO. 37 & 38, MAUJA - BELWA JAUBNA, TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL - PADRAUNA, DIST.-KUSHINAGAR, UTTAR PRADESH. - 274304 PH :7705803259.
3135. RADHAGOVIND AUTOMOBILES PVT LTD (4807-01), VILLAGE - BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002	3145. AKANKSHA AUTOMOBILES PVT LTD (-01), DELHI ROAD, 5TH KM, MORADABAD (U.P.) - 244001 PH :7247800008.	3156. SMARTWHEELS PRIVATE LIMITED (-01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHANAGAR - 272205 PH :7705803129.	PANWARI
3136. TANYA AUTOMOBILES PVT LTD (4807-01), VILLAGE - BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002	3146. AKANKSHA AUTOMOBILES PVT LTD (-03), LAKRI FAZALPUR MINI BYPASS, MORADABAD. 5TH KM DELHI ROAD, MORADABAD - 244001 PH :9568200001.	NAUTANWA	3173. SURI AUTOMOBILES (-01), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBA - 210429 PH :9452287690.
3137. TANYA AUTOMOBILES PVT LTD (4802-48-04), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE - ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001 PH :7900201515.	3147. AKANKSHA AUTOMOBILES PVT LTD (-04), KHASRA NO. 569-570, VILLAGE - KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001 PH :7895600007.	3157. SMARTWHEELS PRIVATE LIMITED (-01), OPP. RAJIV GANDHI DEGREE COLLEGE, BYPASS ROAD, NAUTANWA, DISTT - MAHARAJGANJ - 273164	PAPHUNDA
3137. T R SAWHNEY MOTORS PVT LTD (4808-48-01), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002 PH :9999163125.	MUGHALSARAI	NAWABGANJ	3174. TANYA AUTOMOBILES PVT LTD (4802-05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206 PH :9917547777.
MEHRONI	3148. AGR AUTOMOBILES PVT. LTD. (-01), ARAJI NO.23,MAUJA CHANDASHI., PARGANA RALHUPUR,DDU NAGAR,MUGHALSARAI. - 232101	3158. KAVISHA MOTORS PVT LTD (-01), VILLAGE - EIDH JAGIR NEAR GURJUDWARA AT NH-74, TEHSIL - NAWABGANJ, DISTRICT - BAREILLY.	PATIYALI
3138. VELOCITY CARS (-01), INDIRA CHAURAHA, MEHRONI MADWARA ROAD, - 284405	MURADNAGAR	3159. S B CARS PVT LTD (-01), NAWABGANJ (UNNAO), UTTAR PRADESH. - 209859	3175. KTL PVT LTD (-01), PATIYALI, KASGANJ, UTTAR PRADESH. - 207243
MEJA	3149. MOTORCRAFT SALES PVT LTD (-01), KHASRA NO. 317, ASHLAT NAGAR, BESIDE HOTEL SR GRAND, MURADNAGAR, PIN-201206, UTTAR PRADESH - 201206	NIGOHA	PATTI-UP
3139. SARASWATI MOTORS LLP (-01), MEJA ROAD, MEJA KHAS, PRAYAGRAJ, - 212302	MURATGANJ	3160. BRIGHT 4 WHEEL SALES PVT LTD (-01), GATA NO 146, VILL NIGOHA, TEHSIL MOHANLALGANJ, LUCKNOW - 226302 PH :7011482503.	3176. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (-01), KHASRA NO.65,WARD NO.7, . KUMHIYA,BYPASS ROAD, PATTI, UTTAR PRADESH - 230135
MIRZAPUR	3150. SARASWATI MOTORS LLP (-01), A-ONE MARKET, IN FRONT OF MELA GROUND, MURATGANJ, KAUSHAMBHI, 212201 - 212201	NOIDA	PAYAGPUR
3140. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (-01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001	MUZAFFARNAGAR	3161. ROHAN MOTORS LTD (-01), C-8/9, SECTOR -I, NOIDA - 201301	3177. KTL AUTOMOBILE PRIVATE LIMITED (-01), ACHAL COMPLEX, NEAR BANK OF BARODA, PAYAGPUR - 271871
MISHRIKH	3151. RADHAGOVIND AUTOMOBILES PVT LTD (-01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZZAFFARNAGAR - 251001	3162. ROHAN MOTORS LTD (-02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301	PEPPEGANJ
	NAGINA	3163. FAIR DEAL PREMIUM WHEELS PVT LTD (-01), D-39, SEC-10, NOIDA - 201301	3178. ARBIT AUTOMOBILES PVT LTD (-01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165
		3164. VIPUL MOTORS PVT LTD (-02), A-111, SECTOR 5, NOIDA - 201301	PILIBHIT
		3165. VIPUL MOTORS PVT LTD (-01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301	
		3166. MOTORCRAFT SALES PVT LTD (5903-04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) - 201305	

Dealer Workshop (AS ON 31.01.2026)

3179. CORAL MOTORS (P) LTD (-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001 PH :9837891846	3191. UMA MOTORS PVT LTD (-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204	SALON	3215. KTL PVT LTD (-01), YADAV MARKET, NEAR SURYA DHABA, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. - 209715 PH :9414113666.
3180. KAVISHA MOTORS PVT LTD (-01), OPP. ANKUR INDUSTRIES, PILIBHIT PURANPUR 1.5 KMS FROM ASSAM ROAD CHAURAHA, - 262001	RISIA BAZAR	3204. KTL AUTOMOBILE PRIVATE LIMITED (-01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH - 229127 PH :9918451222.	SIKANDRABAD
POOTH KHAS	3192. ONE UP MOTORS INDIA PVT LTD (-01), NANAPARA ROAD NEAR HP PETROL PUMP RISIA BAZAAR BAHRAICH PIN:- 271875 - 271875	SAMBHAL	3216. SKUNIVERSE AUTOMOBILE PVT LTD (-01), NEAR R K SCHOOL, VILLAGE - SANWALI SIKANDRABAD, DIST - BULANDSHAHR UTTAR PRADESH, PIN 203202 PH :7310106565.
3181. T R SAWHNEY MOTORS PVT LTD (-01), POOTH KHAS, ROHTA ROAD, MEERUT, UTTAR PRADESH - 250502 PH :9999790229.	ROBERTSGANJ	3205. AKANKSHA AUTOMOBILES PVT LTD (-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302 PH :7248000028.	SIRATHU
PRATAPGARH	3193. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (-01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231216	SANDILA	3217. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (-01), KHASRA NO 584, SAYARA MEETHEPUR, SIRATHU, DISTRICT & KAUSHAMBI, UTTAR PRADESH. - 212217
3182. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (-01), KHASRA NO 1390, VILL: GONDEY, CHILBILA, PRATAPGARH, DIST. PRATAPGARH - 230001	RUNKATA	3206. CONCEPT CARS LIMITED (-01), PLOT NO.371, SARAY MARUPPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204	SIRAULI GHAUSPUR
3183. AMITDEEP MOTORS PVT LTD (-01), CHILBILA PATTI ROAD, NEAR TALA MODE, PIPARI, KHALSA, PRATAPGARH - 230001	3194. PREM MOTORS PVT LTD (-01), ROYAL BANDHAN RESORT, KHASRA NO 108, NH-2, RUNKATA, AGRA. - 282101 PH :7060111245.	SARDHANA	3218. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASRA 77, GRAM GHUSEDIYA, POST & TEHSIL SIRAULI GAUSPUR, BARABANKI UTTAR PRADESH- 225207 - 225207 PH :7011482503.
PURANPUR	RUPAIDIHA	3207. RADHAGOVIND AUTOMOBILES PVT LTD (-01), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342 PH :7456001030.	SISWA BAZAR
3184. CORAL MOTORS (P) LTD (-01), KHASRA NO. 768 & 770, VILLAGE - KHAMRIYA PATTI, PURANPUR - PILIBHIT ROAD, TEHSIL AND PARGANA - PURANPUR, DIST. PILIBHIT. - 262124	3195. ANAND MOTOR AGENCIES LTD (-01), RAMLEELA CHAURAHA, RUPAIDIHA, UTTAR PRADESH - 271881	SHAHABAD	3219. ARBIT AUTOMOBILES PVT LTD (-01), WARD NO. 4, SAMRAT NAGAR SISWA BAZAR MAHARAJGANJ - 273162
PURWA	SADABAD	3208. CONCEPT CARS LIMITED (-01), VILLAGE MUJAGADH, SHAHABAD - 241124	SITAPUR
3185. KULDEEP MOTORS KANPUR LLP (-01), GAURAWA PURWA ROAD DURGAPUR, PURWA, DISTRICT - UNNAO, UTTAR PRADESH - 209825	3196. DEV MOTORS PVT LTD (-01), VILLAGE KUTKAI, AGRA ROAD SADABAD, DISTRICT HATHRAS, UTTAR PRADESH - 281306	SHAHJAHANPUR	3220. CONCEPT CARS LIMITED (-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001
RAIBAREILLY	SAHARANPUR	3209. SUMITRA DS MOTORS PVT LTD (-01), SITAPUR ROAD, NH-24, SHAHJAHANPUR - 242001	SIYANA
3186. KTL AUTOMOBILE PRIVATE LIMITED (-01), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303 PH :7800001601.	3197. ATELIER AUTOMOBILES (-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001 PH :7500250070.	SHAMLI	3221. SKUNIVERSE AUTOMOBILE PVT LTD (-01), BULANDSHAHR ROAD, SIYANA DIST- BULANDSHAHR, UTTAR PRADESH PIN CODE 203412
RAM SANEHI GHAT	3198. TANYA AUTOMOBILES PVT LTD (-01), AAWAS VIKAS YOJNA, DELHI ROAD, SAHARANPUR, UTTAR PRADESH - 247001 PH :9837077004.	SHAMSHABAD	SULTANPUR
3187. BRIGHT 4 WHEEL SALES PVT LTD (-01), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL - RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409 PH :9935275786.	SAHASWAN	3211. KTL PVT LTD (-01), BAKALPUR, TEHSIL SHAMSABAD, AGRA SHAMSHABAD ROAD , UTTAR PRADESH. - 283125	3222. KIRTI KUNJ AUTOMOBILES PVT LTD (-01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001
RAMNAGAR	3199. CORAL MOTORS (P) LTD (-01), OPP BHARAT PETROL PUMP, BADAUN ROAD, SAHASWAN, DISTT. BADAUN. - 243638 PH :9837891846.	SHIVRAJPUR	SWAR
3188. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASRA NO. 629, VILLAGE - BUDHAWAL, TEHSIL - RAMNAGAR, DIST- BARABANKI, UTTAR PRADESH. - 225205	SAHIBABAD	3212. KTL PVT LTD (-01), ARAZI NO. 67K, DUBIYANA, GT ROAD, SHIVRAJPUR, KANPUR, UTTAR PRADESH - 209205 PH :9414113666.	AKANKSHA AUTOMOBILES PVT LTD (-01), IN FRONT OF EIDGAH, TEHSIL - SWAR, DISTRICT - RAMPUR, UTTAR PRADESH. - 244924 PH :7900600041.
RAMPUR (UP)	3200. FAIR DEAL WHEELS PVT LTD (-01), 12/67 SITE 4, INDUSTRIAL AREA, SAHIBABAD, GHAZIABAD - 110095	SIDHAULI	TAMBOUR
3189. AKANKSHA AUTOMOBILES PVT LTD (-02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901 PH :7895500007.	3201. MOTORCRAFT SALES PVT LTD (5903-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010	3213. CONCEPT CARS LIMITED (-01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHDI, OPP. BLOCK, SIDHAULI, SITAPUR. - 261303 PH :7607596666.	3224. CONCEPT CARS LIMITED (-01), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR - 261208 PH :7607896666.
RATH	3202. T R SAWHNEY MOTORS PVT LTD (-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA, DISTT- GHAZIABAD, UTTAR PRADESH - 201010	SIDHOUR	THAKURDWARA
3190. MY CAR PVT LTD (-01), ETAYAL ORAI ROAD,, RATH,HAMIRPUR, - 210431	SALEMPUR	3214. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASRA NO.1632, VILLAGE SIDHAUR KHAS, TEHSIL HAIDERGARH, DISTRICT BARABANKI - 225413	
RAYA	3203. SMARTWHEELS PRIVATE LIMITED (-01), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509	SIKANDRA	

3225. AKANKSHA AUTOMOBILES PVT LTD (-01), KASHIPUR ROAD, THAKURDWARA, UTTAR PRADESH 2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHAB GANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH - 244601 PH :7248000040.	3236. NAINITAL MOTORS PVT LTD (-04), PAWAR BHAWAN, JOSHI KHOLA RAJAPURA, PITHRAGARH ROAD, ALMORA - 263601 PH :9957194132.	3249. SHAKUMBARI AUTOMOBILES PVT LTD (5708-57-01), KHASRA NO.15-ANA, MOHABEWALA, SAHARAIPUR ROAD, DEHRADUN, PIN-248001, UTTARAKHAND - 248001	3259. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712 PH :8192000724.
TIKAITGANJ	BAGESHWAR	DIDIHAT	KARANPRAYAG
3226. KTL AUTOMOBILE PRIVATE LIMITED (-01), KANAUIJA CITY, PHASE 2, MADARPUR, MOHAN ROAD, LUCKNOW. - 226013 PH :9918451222.	3237. NAINITAL MOTORS PVT LTD (-05), VILL. BILOMA,SERA, BAGESHWAR, UT, BAGESHWAR - 263642 PH :9557200522.	3250. NAINITAL MOTORS PVT LTD (-01), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T, DIDIHAT, DISTT PITHORAGARH, PINCODE: 262551 - 262551 PH :9634092692.	3260. ROHAN MOTORS LTD (-01), BADRINATH ROAD, KARANPRAYAG, DISTRICT - CHAMOLI, UTTARAKHAND. - 246444 PH :8126129148.
TILOI	BARKOT	DOIWALA	KASHIPUR
3227. KTL AUTOMOBILE PRIVATE LIMITED (-01), VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. - 229309 PH :9918451222.	3238. FUTURE AUTO WHEELS PVT LTD (-01), YAMNOTRI ROAD, BARKOT, DISTRICT UTTARAKASHI, UTTARAKHAND - PINCODE - 249141 - 249141	3251. FUTURE AUTO WHEELS PVT LTD (-01), 26, MISSARAWALA, DOIWALA, DISTRICT - DEHRADUN, UTTARAKHAND. - 248140 PH :7883473506.	3261. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), BAZPUR ROAD, KASHIPUR - 244713 KHAHATIMA
UNCHAHAAR	BAZPUR	GADARPUR	3262. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), VILLAGE. CHARUBETA, NEAR RTO CHECK POST, PILIBHIT ROAD KHAHATIMA, U.S NAGAR, UTTARAKHAND - 262308
3228. KTL AUTOMOBILE PRIVATE LIMITED (-01), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHAAR, DISTT: RAIBARELI - 229404 PH :9918451222.	3239. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), KHASRA NO. 96/2, VILLAGE - BHOONA, ISLAM NAGAR, TEHSIL - BAZPUR, UTTARAKHAND. - 262401	3252. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01) BHASIVA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152	KOTDWAR
UNNAO	CHAMPAPAWAT	GAIRSAIN	3263. SHAKUMBARI AUTOMOBILES PVT LTD (-02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITAPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTARAKHAND - 249001
3229. S B CARS PVT LTD (2806-04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.P. - 209801 PH :9839806451.	3240. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), TANAKPUR LOHAGHAT ROAD, CHAMPAPAWAT, UTTARAKHAND - 262523	3253. ROHAN MOTORS LTD (-01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIG GROUND, GAIRSAIN, DISTRICT - CHAMOLI, UTTARA KHAND. - 246428 PH :8126484626.	LAKSAR
UTRAULA	CHANDRAPURI	GANGLIHAT	3264. SHAKUMBARI AUTOMOBILES PVT LTD (-01), HARIDWAR ROAD, LAKSAR - 247664 PH :9927877715.
3230. KTL AUTOMOBILE PRIVATE LIMITED (-01), SH-9 , BESIDES SR PLOTTING OFFICE MANKAP, JOGIVEER - 271604	3241. SHAKUMBARI AUTOMOBILES PVT LTD (-01), KEDARNATH ROAD, BANASBARA, CHANDRAPURI, DISTRICT RUDRAPRAYAG, UTTARAKHAND - 246425	3254. NAINITAL MOTORS PVT LTD (-01), VILL- KHETIGARA, PITHORAGARH-GANGOLIHAH ROAD, GANGOLIHAH, DISTT: PITHORAGARH - 262522 PH :9997093043.	ANAKMATTA
VARANASI	CHAUKHUTIYA	GOPESHWAR	3265. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), KHAHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATTA, U.S. NAGAR, UTTARAKHAND. - 262311 PH :9012172084.
3231. VARANASI MOTORS PVT LTD (8402-84-01) THE MALL, CANTONMENT, VARANASI - 221001	3242. NAINITAL MOTORS PVT LTD (-01), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST. -ALMORA, UTTARAKHAND - 263656 PH :9997026565.	3255. ROHAN MOTORS LTD (5702-03), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028 PH :9634852898.	NARENDAR NAGAR
3232. AGR AUTOMOBILES PVT LTD (8403-84-01) B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010	CHINYALISOUR	HALDWANI	3266. SHAKUMBARI AUTOMOBILES PVT LTD (-01), MAIN MARKET, NARENDAR NAGAR, DISTRICT - TEHRI GARHWAL, UTTARAKHAND - PIN CODE - 249175 - 249175
3233. VARANASI MOTORS PVT LTD (8402-84-03), AARAJI NO.2 AND 48, G. T. ROAD, TODAPUR, MOHANSARAJ, RAJATALAB, VARANASI (U.P.) - 221311	DEHRADUN	3256. NAINITAL MOTORS PVT LTD (-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139 PH :7060201024.	NOORPUR
3234. AGR AUTOMOBILES PVT LTD (8403-84-04), ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112	3245. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (5709-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN	3257. NAINITAL MOTORS PVT LTD (-02), KALA DUMGI, NEAR ABDULLAH PETROL PUMP, HALDWANI - 263139 PH :8126359222.	PATI
VRINDAVAN YOJNA, LUCKNOW	3246. ROHAN MOTORS LTD (5702-57-02), 257/2, GMSL ROAD,VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001	HARIDWAR	3268. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), LOHAGHAT- HALDWANI MAIN ROAD, NEAR PITHORAGARH CO-OPERATIVE BANK, PATI-262528 - 262528 PH :9917467820.
3235. KTL AUTOMOBILE PVT. LTD (1311-13-08), PLOT NO 6&7 SARAWATIPURAM, NEAR SGGPI, RAI BARELI ROAD LUCKNOW - 226029	3247. FUTURE AUTO WHEELS PVT LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN. - 248001	JASPUR	PAURI
UTTARAKHAND	3248. FUTURE AUTO WHEELS PVT LTD (5706-57-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001 PH :9760444430.		3269. SHAKUMBARI AUTOMOBILES PVT LTD (-01), PAURI KOTDWAR ROAD NEAR GMO PETROL PUMP PAURI GARHWAL UTTARAKHAND - 246001
ALMORA			

PIPLAKOTHI

3270. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
BADRINATH ROAD, MAYAPUR,
BATULA, PIPALKOTI, - 246472

PITHORAGARH

3271. NAINITAL MOTORS PVT LTD (-03), VILLAGE
PANDA, ODSAINI, DHARCHULA ROAD,
PITHORAGARH - 262501
PH -9634092692.

PRATAPNAGAR

3272. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
NEAR AISHWARYA FILLING STATION,
LAMBGAON, PRATAPNAGAR, DISTRICT TEHRI,
UTTARAKHAND - 249165
PH -9527877715.

RAIWALA

3273. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
KHAND, GAON-1, RAIWALA, TEHSIL RISHIKESH,
- 249205

RAMNAGAR

3274. NAINITAL MOTORS PVT LTD (-01), BASAI,
KASIPUR ROAD, RAMNAGER - 244137

RANIKHET

3275. NAINITAL MOTORS PVT LTD (-01),
GANYADYOLI, NEAR DRUG FACTORY,
RANIKHET DISTT. ALMORA (UTTARAKHAND) -
263645
PH :9557243222.

RISHIKESH

3276. FUTURE AUTO WHEELS PVT LTD (-01), 640,
LAXMAN JHULA ROAD, RISHIKESH, DISTT.
DEHRADUN, UTTARAKHAND - 249201

ROORKEE

3277. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
3RD KM STONE, DELHI-ROORKEE HIGHWAY,
NEAR IOC PETROL BUNK, ROORKEE DISTT
HARDIWAR - 247667
PH :7055104191.

RUDRAPRAYAG

3278. ROHAN MOTORS LTD (-01),
GULABRAI-BADRINATH ROAD, RUDRAPRAYAG
- 246171
PH :8650876815.

RUDRAPUR

3279. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT
LTD (-01), KICHHA BYE PASS ROAD,
INDUSTRIAL AREA, RUDRAPUR - 263153

SELAQUI

3280. ROHAN MOTORS LTD (-01), KHASRA NO.783,
BAHADURPUR ROAD, NH-72, SELAKUI, DISTT.
DEHRADUN, UTTARAKHAND. - 248011
PH -8006000439.

SITARGANJ

3281. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT
LTD (-01), PLOT NO.228/5 AND 228/6 KHATIMA
ROAD, SITARGANJ, DISTT - RUDRAPUR,
UTTARAKHAND. - 262405

SRINAGAR

3282. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
SRICOT GANAGANALI , NEAR MEDICAL
COLLEGE, PO- SRICOT, SRINAGAR - 246174

TEHRI

3283. DD MOTORS (A DIVISION OF D.D. MOTORS
MOBILITY) (-01), PLOT NO. 541, SECTOR-8E,
DISTT. - NEW TEHRI - 249001

UTTARKASHI

3284. DD MOTORS (A DIVISION OF D.D. MOTORS
MOBILITY) (-01), HOTEL RAMOLA, BARETHI
CHUNGI, GANGOTRI NATIONAL HIGHWAY,
UTTARKASHI. - 249151

VIKAS NAGAR

3285. ROHAN MOTORS LTD (-01), KHASRA NO.
43379/2, JEEVANGARH, POST OFFICE-
AMBARI, CHAKRATA-BARKOT ROAD, VIKAS
NAGAR. - 248198
PH -9897507410.

WEST BENGAL

ALIPURDUAR

3286. PODDAR CAR WORLD PVT LTD (-01), BIRPARA
MORE, COOCH BEHAR ROAD, BESIDE
GOYENKA PETROL PUMP, ALIPURDUAR, WEST
BENGAL. - 736121

AMTALA

3287. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE - UDAYRAMPUR, P.O. - KANYANAGAR,
P.S. - BISHNUPUR, AMTALA, DIST.-24
PARGANAS SOUTH, WEST BENGAL - 743398
PH -9903850402.

ARAMBAGH

3288. SANEI MOTORS PVT LTD (-01), R.S. DAG NO.
1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO.
1233, MOUZA-PARUL, J.L.NO. 38, R.S.NO. 3111,
P.S. ARAMBAGH, DISTT. HOOGHLY, WEST
BENGAL - 712601
PH :8584050184.

ASANSOL

3289. BEEKAY AUTO PVT LTD (-01), CHANDA MORE,
N.H.-2, ASANSOL - 713301

ASHOKNAGAR

3290. STARBURST MOTORS PVT LTD (-03), JESSORE
ROAD, MANIKNAGAR, KHOSDELPUUR MORE,
P.S. - ASHOKNAGAR, NORTH 24 PARGANAS,
WEST BENGAL. - 743222

BADURIA

3291. PREMIER CAR WORLD PVT LTD (-01), VILL-
KIRTIPTIPUR, P.O- MANDRA, P.S -BADURIA, DIST
- NORTH 24 PARGANAS, WEST BENGAL. PIN -
743438 - 743438
PH -9831414956.

BAGDAH

3292. SANEI MOTORS PVT LTD (-01), C/O,
DINABANDHU TARAFDAR, S/O LATE
DINABANDRANATH TARAFDAR, VILLAGE -
HALENCHA SOUTH, P.O. - HALENCHA COLONY,
P.S. - BAGDAH, DISTRICT - NORTH 24
PARGANAS, WEST BENGAL. - 743270

BAHRAMPUR

3293. BEEKAY AUTO PVT LTD (-01), BOKULTALA
(PASCHIM GAMINI), NH-34, BAHARAMPUR,
DISTT. MURSHIDABAD. - 742101
PH :267340.

BAJKUL

3294. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE - KAPTYPARA BARI, P.O. - KAJLAGARH,
P.S. - BHAGWANPUR, BAIKUL, DISTRICT -
PURBA MIDNAPORE. - 721626

BAKSHIRHAT

3295. PODDAR CAR WORLD PVT LTD (-01),
JORAIMORE, BAKSHIRHAT, BALA
KUTHI, BAKSHIRHAT - 736131

BALAGARH

3296. SANEI MOTORS PVT LTD (-01), DAG NO. 671,
MOUZA - BARUIPARA, J.L NO. 100, P.O. -
BALAGARH, DIST.-HOOGLY, WEST BENGAL -
712501
PH :8584050184.

BALURGHAT

3297. J K WHEELS PVT LTD (-01), BARO
RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. -
BALURGHAT, DIST.-DAKSHIN DINAJPUR. -
733103
PH :9064301464.

BANDARGACHH

3298. PODDAR CAR WORLD PVT LTD (-01),
OPPOSITE COMMUNITY HEALTH CENTRE,
PHANSIDEWA, BANDAR GACHH, WEST
BENGAL 734014 - 734014

BANDEL

3299. SANEI MOTORS PVT LTD (-03), C/O G.S.
LAMINATOR, BANDEL STATION ROAD, HOOGLY
712123 - 712123

BANKURA

3300. BHANDARI AUTOMOBILE PVT LTD (-02), PLOT
NO.-156, KH NO.-173, MITHILA MOUZA,
AT/PO-BANKURA (WB) - 722101
PH :256766.

BARASAT

3301. PREMIER CAR WORLD PVT LTD (-01), R.S DAG
NO. 512 AND PARTY IN DAG NO. 513,
MOUZA-KHILKAPUR, P.O BARASAT, POLICE
STATION: DUTTA PUKUR, TOULI NO. 146, J.L
NO. 4, DISTRICT - NORTH 24 PARGANAS,
WEST BENGAL - 700125
PH :8420122407.

BARDDHAMAN

3302. BEEKAY AUTO PVT LTD (-03), NH-2, PAMRA
VILLAGE ROAD, CHANDNI MORE, SATTAR MILE,
BURDWAN, WEST BENGAL - 713101

BARJORA

3303. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE + P.O. + P.S. - BARJORA, MOUZA -
BARJORA, J.L NO. 46, KHATIAN NO. 3380, PLOT
NO. 2795, BARJORA DISTRICT - BANKURA,
WEST BENGAL. - 722202
PH :8016087297.

BAROBISHA

3304. PODDAR CAR WORLD PVT LTD (-01), NH-17,
BALAKUTHI, BAKSHIRHAT, COOCHBEHAR,
WEST BENGAL (NH 31C, ALIPIURDWAR ROAD,
BAROBISHA - 736131

BARRACKPORE

3305. STARBURST MOTORS PVT LTD (-02), NEAR
RAIL GATE, WARD NO. 24, WEST BARASAT
ROAD, P.S. - TITAGARH, BARRACKPORE,
DISTRICT - NORTH 24 PARGANAS, KOLKATA. -
700120
PH :8335061333.

BARSUNDARA

3306. BHANDARI AUTOMOBILE PVT LTD (-05), PLOT
NO. 610, BARSUNDARA, ISHWARDAHA, JALPA,
P.S. BHAWANIPUR, EAST MIDNAPORE, WEST
BENGAL - 721654
PH :9933055639.

BASIRHAT

3307. BHANDARI AUTOMOBILE PVT LTD (-03),
RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR.
INDIAN PERTOL PUMP, NORTH-24 PARGANAS. -
743428

BELACOBA

3308. PODDAR CAR WORLD PVT LTD (-01),
PRASANNA NAGAR, BELACOBA, BATTALA,
JALPAIGURI - 735133 - 735133
PH :8945533002.

BELDA

3309. BHANDARI AUTOMOBILE PVT LTD (-01), AT
VILLAGE BARAMATKATPUR, P.O
-LALNAGAR, BELDHA - 721424

BIDHANNAGAR

3310. SEVOKO MOTORS PVT LTD (-01),
MURALIGANG BIDHAN NAGER, OPP OF
MURALIGANG HIGH SCHOOL - 734426

BIRPARA

3311. SEVOKE MOTORS PVT LTD (-01), BHAGAT PARA, NH - 31, MADARIHAT ROAD, BIRPARA, BESIDE TASHI HOTEL, OPP - HIMALYAN HOTEL, P.S - MADARIHAT, DIST - ALIPURDUAR, PIN - 735204 - 735204 PH -9800069144.

BISHNUPUR

3312. BHANDARI AUTOMOBILE PVT LTD (-01), STATION ROAD, P.O+P.S- BISHNUPUR, DIST: BANKURA, WEST BENGAL - 722122 PH :9933055539.

BOLPUR

3313. SAINATH AUTOLINKS PVT LTD (4402-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM

BONGAON

3314. STARBURST MOTORS PVT LTD (-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235 PH -9748298939.

BUDGE BUDGE

3315. ONE AUTO PVT LTD (-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141

C K ROAD

3316. BHANDARI AUTOMOBILE PVT LTD (-01), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252

CANNING

3317. ONE AUTO PVT LTD (-01), SUSUMAPALLY, CANNING, DIST - SOUTH 24 PARGANAS, WB - 743329 PH :8442830001.

CHAKDAH

3318. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE - PUMLIA, P.O - CHAKDAHA, DISTRICT - NADIA, WEST BENGAL - 741222

CHANCHAL

3319. J K WHEELS PVT LTD (-01), CHANCHAL AZAD PALLY, OPPOSITE OF PWD 2ND GATE, P.O - CHANDRAPARA, P.S - CHANCHAL, DIST - MALDA - 732123 - 732123 PH -9734963360.

CHANDITALA

3320. BHANDARI AUTOMOBILE PVT LTD (-01), RS DAG NO.2986, LR DAG NO. 3150, UNDER L R KHATIAN NO.3859, MOUZA, KRISHNARAMPUR, J.L. 59, POLICE STATION- CHANDITALA, HOOGHLY, WEST BENGAL - 712702 PH :6296900498.

CHANDRAKONA

3321. BHANDARI AUTOMOBILE PVT LTD (-02), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, J.L NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201 PH :8945526833.

CHHATNA

3322. BHANDARI AUTOMOBILES PVT LTD (-01), VILLAGE: DUBRAJPUR, P.O. GORH, DUBRAJPUR, P.S. CHHATNA DIST: BANKURA - 722132

CONTAI

3323. BHANDARI AUTOMOBILE PVT LTD (-03), SERPUR BAMUNBAR, P.O.- MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401

COOCHBEHAR

3324. PODDAR CAR WORLD PVT LTD (-01), CHAKCHAKA, NEELKUTHI BAZAR, NEAR ADA FACTORY, NH-31, COOCH BEHAR, WEST BENGAL. - 736101

DARJEELING

3325. BEEKAY AUTO PVT LTD (4301-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101

DHUPGURI

3326. BEEKAY AUTO PVT LTD (-01), MOUZA - DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT - JALPAIGURI, WEST BENGAL. - 735210

DIAMOND HARBOUR

3327. ONE AUTO PVT LTD (-01), VILLAGE - CHEWRA, OPPOSITE - K.E. CARMEL SCHOOL, P.O. - SARISHA HAT, P.S. - DIAMOND HARBOUR, DISTRICT - 24 PARGANAS (S) , WEST BENGAL. - 743368 PH :8584862243.

DINHATA

3328. BEEKAY AUTO PVT LTD (-01), ADDRESS: VILLAGE - KARISHAL, MAIN ROAD, P.O- DINHATA, DIST - COOCHBEHAR, - 736135 PH :9932049347.

DUDHIA

3329. PODDAR CAR WORLD PVT LTD (-01), MIRIK ROAD, DUDHIA, WEST BENGAL - 722133

DURGAPUR

3330. SAINATH AUTOLINKS PVT LTD (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213

DURLAVPUR

3331. PODDAR CAR WORLD PVT LTD (-01), VILL+PO - DURLAVPUR, PS- GANGAJALGHATI, DIST- BANKURA, PIN- 722133 - 722133

FALAKATA

3332. PODDAR CAR WORLD PVT LTD (-01), DAKSHIN PARANGAPAR, KHATIAN NO. 167/1 J.L NO. 60, DAG NO. 652/1159, P.S. - FALAKATA , DISTT ALIPURDWAR - 735211 PH :8945533002.

GAZOLE

3333. J K WHEELS PVT LTD (-01), MOUZA- BAJEGAIRAL, RANIGANJ, PURBAPARA, KAMALDANGA, P.S- GAZOLE, DIST-MALDA, PIN - 732138 - 732138 PH -9734963360.

GHATAKPUKUR

3334. DEWARS GARAGE LTD (-01), BASANTI HIGHWAY,MOUZA NARAYANPUR , POLICE STATION,BHANGAR, WEST BENGAL - 743502

GHATAL

3335. BHANDARI AUTOMOBILE PVT LTD (-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL, WEST MIDNAPORE, WEST BENGAL - 721211

GOPIBALLAVPUR

3336. BHANDARI AUTOMOBILE PVT LTD (-01), J.L NO. 1103, KHATIAN NO. 1103, PLOT NO. 438, VILLAGE + P.O. + P.S. - GOPIBALLVPUR - MOUZA - GOPIBALLVPUR, WEST MIDNAPUR, WEST BENGAL - 721506

HALDIA

3337. BHANDARI AUTOMOBILE PVT LTD (-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657

HOWRAH

3338. BHANDARI AUTOMOBILE PVT LTD (-01), BANKRA THANA,DOMJUR,HOWRAH - 711403
3339. PREMIER CAR WORLD PVT LTD (-02), MOUZA - PRASASTHA, P.S. - DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYAT, ANKURHATI, HOWRAH, WEST BENGAL. - 711302

ILLAMBAZAR

3340. BEEKAY AUTO PVT LTD (-01), PLOT NO-615,616,618,JL NO-87,MOUZA-PAYER - 731214

JAGULI

3341. OSL MOTOCORP PVT LTD (-01), DAG NO-947,KHATIANNNO: 54/1,P.S HARINGHANTA - 741221

JALPAIGURI

3342. PODDAR CAR WORLD PVT LTD (-01), COLLEGE PARA, SIRISHITALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101 PH :8945533002.

JAYGAON

3343. SEVOKE MOTORS PVT LTD (-01), HOUSE NO.43, WARD NO.11/22, N.S ROAD DARAGAOON, P.S - JAYGAON, DISTT. ALIPURDUAR, WEST BENGAL - 736182 PH :9433825851.

JHARGRAM

3344. BHANDARI AUTOMOBILE PVT LTD (-01), DAG NO.383, KHATAN NO. J.L396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507

KADAMBAGACHI

3345. STARBURST MOTORS PVT LTD (-04), MOUZA - PURBA ICHAPUR, J.L NO. 111, RESUJ NO. 131, DAG NO. 385, KHATIAN NO. L R 754, KADAMBAGACHI, P.S - BARASAT, DIST.-NORTH 24 PARGANAS, WEST BENGAL. - 700125 PH :8336933410.

KALIMPONG

3346. BEEKAY AUTO PVT LTD (-01), 10TH MILE, GUMBA HATTA, PO&PS-KALIMPONG, DIST - KALIMPONG, WB - 734301 PH :9932049347.

KALNA

3347. BEEKAY AUTO PVT LTD (-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409 PH :9932251483.

KALYANI

3348. STARBURST MOTORS PVT LTD (-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. J I U C UDYOY, NEAR: J I S COLLEGE), KALYANI. - 741234

KHARAGPUR

3349. BHANDARI AUTOMOBILE PVT LTD (-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301
3350. PODDAR CAR WORLD PVT LTD (-01), RS DAG NO - 147, RS KHATIAN NO 7, MOUZA - MOBARRAKCHAK, J.L NO-210, PS - KHARAGPUR - 721301 PH :9831348626.

KHATRA

3351. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE - SENAPATI, P.O & P.S - KHATRA, MOUZA-SENAPATI, J.L NO.189, KHATIAN NO.659, PLOT NO.33/34, DISTT. BANKURA, WEST BENGAL. - 722140

KHORIBARI

Dealer Workshop (AS ON 31.01.2026)

3352. PODDAR CAR WORLD PVT LTD (-01), DOHAGURI, KHORIBARI, WEST BENGAL 734427 - 735222	3367. BHANDARI AUTOMOBILE PVT LTD (-02), PLOT NO.-1874, MOUZA-GOBINDSARAK, J.K. NO. 94, PS-KOTWAL, OLD WARD NO.20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 724011	3378. BHANDARI AUTOMOBILE PVT LTD (-01), L R DAG NO. 7271, UNDER L R KHATIAN NO. 6734, MOUZA - DEBAGRAM, J.L NO. 60, POLICE STATION - KALIGANJ, BLOCK - KALIGANJ, NAKASHIPARA, DIST.-NADIA, WEST BENGAL - 741138 PH: 9163314418.	3388. J K WHEELS PVT LTD (-01), J.L NO. 150, KHATIAN NO. 168/3 & 168/4, PLOT NO. 4158., P.S. - RAIGANJ, MUNICIPALITY - RAIGANJ, WARD NO. 11, HOLDING NO. 577/N, MOUZA - RAIGANJ, DISTRICT -UTTAR DINAJPUR, - 733134 PH: 9735008842.
KOLKATA	LALGARH	NAXALBARI	RAMPURHAT
3353. MACHINO TECHNO SALES LTD (-02), 48 A, TARATALA ROAD, KOLKATA - 700066	3368. BHANDARI AUTOMOBILE PVT LTD (-01), PO & PS- LALGARH, DISTRICT- JHARGRAM. - 721516	3379. BEEKAY AUTO PVT LTD (-01), MOUZA - GENI, KHATIAN NO.275, PARGANA-HATIGHISHA, P.S. NAXALBARI, DISTT. DARJEELING, WEST BENGAL - 734429	3389. BEEKAY AUTO PVT LTD (-01), PLOT NO 131, J.L NO 104, MOUZA -BATAIL,RAMPURAHAT - 731221
3354. DEWARS GARAGE LTD (-01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069	MADHYAMGRAM	OODLABARI	RANAGHAT
3355. MACHINO TECHNO SALES LTD (-01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA - 700017	3369. STARBURST MOTORS PVT LTD (-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJAPUR, MADHYAMGRAM - 700129	3380. PODDAR CAR WORLD PVT LTD (-01), PLOT NO : 1144, TOUZI NO -84, OODLABARI , 735222 - 735222	3390. STARBURST MOTORS PVT LTD (-01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULLI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741256
3356. PREMIER CAR WORLD PVT LTD (-01), AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058	MALBAZAR	PANCHLA	RUPNARAYANPUR
3357. BHANDARI AUTOMOBILE PVT LTD (-01), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL - 700143	3370. BEEKAY AUTO PVT LTD (-01), CALTEX MORE, VILLAGE + P.S. - MALBAZAR AND DISTRICT - JALPAIGURI . - 735221	3381. BHANDARI AUTOMOBILE PVT LTD (-01), L.R DAG NO 3274, UNDER L.R KHATIAN NO 3044, MOUZA-MALLICKBAGAN, J.L NO-7, POLICE STATION - PANCHLA, DIST- HOWRAH - 711310 PH :9073664926.	3391. BEEKAY AUTO PVT LTD (-01), P.S. - SALANOUR, UNDER MOUZA - JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHATIAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335
3358. SANEI MOTORS PVT LTD (-01), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION,KOLKATA - 700067	MALDA	PANDUA	SABANG
3359. ONE AUTO PVT LTD (-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA , WEST BENGAL - 700105	3371. J K WHEELS PVT LTD (-01), GABGACHHI, N.H. 34, MALDA. - 732103	3382. BHANDARI AUTOMOBILE PVT LTD (-01), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL. - 712149 PH :9073912566.	3392. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE - PAIKAN DAKSHINBARH, P.O. - DHANSWARPUR & P.S. - PINGLA, DIST. -PASCHIM MIDNAPORE, SABANG - 721 166, WEST BENGAL. - 721166 PH :9933055539.
3360. ONE AUTO PVT LTD (-01), J.L NO.3, MOUZA-JAGADIPOTA, P.S.:SONARPUR, KHEYADADA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099	MANGPOO	PANSKURA	SAINTHIYA
3361. SANEI MOTORS PVT LTD (-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059	3372. PODDAR CAR WORLD PVT LTD (-01), OPPOSITE QUININER FACTORY, MUNGPPOO , CINCHONA PLANTATION, WEST BENGAL - 734313	3383. BHANDARI AUTOMOBILE PVT LTD (-01), MOUZA - PASCHIM NEKRA, J.L NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL. - 721139 PH :9933055539.	3393. SAINATH AUTOLINKS PVT LTD (-01), SAINTHIA SURI ROAD, OPPOSITE YAMAHA SHOWROOM, - 731234
3362. OSL MOTOCORP PVT LTD (-01), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRING CLUB, E. M. BYE-PASS, KOLKATA - 700015	MATHABHANGA	PATASHPUR	SEORI
3363. STARBURST MOTORS PVT LTD (-05), R.S & L.R. DAG NO. 3434, MOUZA-GOPALPUR, J.L NO.-02, RS NO.-140, LR KHATIAN NO. -5638, NEW TOWN, RAJARHAT - 700136 PH :9681080301.	3373. BEEKAY AUTO PVT LTD (-01), SITAKULCHI ROAD, WARD NO.9,MATHABHANGA, DISTRICT - COOCHBEHAR. - 736146	3384. PODDAR CAR WORLD PVT LTD (-01), VILL - MOTIRAMPUR, PO MOTIRAMPUR, PS - PATASHPUR, DIST PURBA MIDNAPORE - 721439	3394. BEEKAY AUTO PVT LTD (-01), RAMBADANPUR, NEAR SP MORE, SIURI, BIRBHUM - WEST BENGAL - 731101
3364. BHANDARI AUTOMOBILE PVT LTD (-C1), PLOT NO. IID/15, ACTION AREA 2D, NEW TOWN, P.S. RAJARHAT, KOLKATA, WEST BENGAL PIN-700156 - 700156	MIDNAPORE	PEDONG	SHYAMPUR
3365. JYOTE MOTORS PVT LTD (-01), NAZIRABAD MAIN ROAD, NAZIRABAD, ANANDAPUR, NEAR BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150, WEST BENGAL - 700150	3374. BHANDARI AUTOMOBILE PVT LTD (-01), J.L NO.190, KHATIAN NO. 889 VILL + P.O. TALKUI, N.H.60. - 721101	3385. SEVOKE MOTORS PVT LTD (-01), TOPKHANDA, DOKYONG I, PEDONG, DIST: KALIMPONG, PIN:734311 - 734311	3395. SANEI MOTORS PVT LTD (-01), VILLAGE + P.O. - GOBINDPUR, P.S. - SHYAMPUR, DISTRICT - HOWRAH, WEST BENGAL. - 711314 PH :8584050184.
KOTULPUR	MOHANPUR	PURULIA	SILIGURI
3366. BHANDARI AUTOMOBILE PVT LTD (-01), KHATIAN NO.644, PLOT NO.373, J.L NO. 101, VILLAGE - MULDARA, P.S. + P.S. - KOTULPUR, DISTT -BANKURA, WEST BENGAL. - 722141	3375. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE-NAYAGAON, P.O.-PAROI, P.S. -MOHANPUR, MOUZA - NAYAGAON, J.L NO.395, KHATIAN NO.175/1, PLOT NO.895, DISTT. -PASCHIM MIDNAPUR,W.BENGAL. - 721436 PH :9933055539.	3386. SAINATH AUTOLINKS PVT LTD (4402-02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149	3396. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA,SILIGURI. - 734428
KRISHNANAGAR	NAGRAKATA	RAGHUNATHPUR	3397. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001
	3376. PODDAR CAR WORLD PVT LTD (-01), OPPOSITE HERO SHOWROOM, NEAR B.D.O OFFICE, SUKHANIBASTI, NAGRAKATA, WEST BENGAL - 735225	3387. BEEKAY AUTO PVT LTD (-01), MOUZA - BUNDLA, J.L. NO. 197, PLOT NO. 2656, KHATIAN NO. LR 207, P.O. - RAGHUNATHPUR, P.S. - RAGHUNATHPUR, DISTRICT - PURULIA. - 723133	3398. SEVOKE MOTORS PVT LTD (4302-43-01), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001 PH :9706010366.
	NAIHATI	RAIGANJ	3399. PODDAR CAR WORLD PVT LTD (-02), VILL. EAST DHANTALLA, FULBARI II G.P, P.O SATELLITE TOWNSHIP, DIST- JALPAIGURI - 734015 PH :8945533002.

3400. PODDAR CAR WORLD PVT LTD (-03),
OPPOSITE TO GANAPATI PETROL PUMP,
KHAPRAIL MORE, SILIGURI - 734005
- SINGUR
3401. ONE AUTO PVT LTD (-03), OPPOSITE TO TAPSI
MAILIK KRISHAK BAZZAR - 712409
- SITAI
3402. PODDAR CAR WORLD PVT LTD (-01), NETAJI
MORE, NEAR NETAJI BAJAR , P.S SITAI,
DISTRICT : COOCH BEHAR, PIN 736167 -
736167
- SONADA
3403. SEVOKE MOTORS PVT LTD (-01), RATO MATEY
DARA, NEAR PETROL PUMP,P.O- SONADA,
WEST BENGAL PIN - 734209 - 734209
PH :9800069144.
- SONAMUKHI
3404. BHANDARI AUTOMOBILE PVT LTD (-01), J L NO.
77, KHATIAN NO. 360, PLOT NO. 114/287,
SONAMUKHI BISHNUPUR ROAD, VILLAGE -
CHURAMANIPUR, P.O. & P.S. - SONAMUKHI,
WEST BENGAL. - 722207
PH :9933055539.
- SREERAMPUR
3405. BHANDARI AUTOMOBILE PVT LTD (-01),
BANGIHATI (MADPUR) DELHI ROAD,
SREERAMPUR, DISTT: HOOGHLY, WB - 712203
- SUNDARA
3406. PODDAR CAR WORLD PVT LTD (-01), NH 14,
SITARAMPUR, OPP. INDIAN OIL PETROL PUMP,
SUNDARA , PASCHIM MEDINIPUR - 488333
- TAMLUK
3407. BHANDARI AUTOMOBILE PVT LTD (-01),
MOUZA PADUMBASAN, WARD NO 10 ,JL
NO:144, DISTT: EAST MIDNAPUR, WEST
BENGAL - 721636
- TARAKESHWAR
3408. SANEI MOTORS PVT LTD (-01), MOUZA
BAIDYAPUR, UNDER BALIGORI(1), GRAM
PANCHAYET, TARAKESHWAR, DISTT. HOOGLY,
WEST BENGAL.
PH :8584050184.
- TOOFANGANJ
3409. PODDAR CAR WORLD PVT LTD (-01), POWER
HOUSE PARA, PO ANDARANFULBARI (WEST),
TUFANGANJ, COOCHBEHAR, PIN-736159, WEST
BENGAL - 736159
PH :8945533002.
- UDAYNARAYANPUR
3410. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE-JANGALPARA BELGRAM, PS-
UDAYNARAYANPUR, DIST- HOWRAH, WEST
BENGAL. - 711226
PH :9073664902.

- ULUBERIA
3411. BHANDARI AUTOMOBILE PVT LTD (2401-01),
HOLDING 1242A, BANITABLA, P.O+P.S:
ULUBERIA, NH-6, DISTT: HOWRAH, WEST
BENGAL - 711316

ANDHRA PRADESH	
ANANTAPUR	12. BHARGAVI AUTOMOBILES PVT LTD (A8NA-A8-01), SURVEY NO 2458, CHEMUDUJUNTA VILLAGE, NH-16, ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002 PH :8886682222.
1. JAYALAKSHMI AUTOMOTIVES PVT LTD (18NB-18-01), SY. NO. 239 - 2CIA, KAKALAPALLI, ANANTAPUR	
CHITTOOR	ONGOLE
2. BHARGAVI AUTOMOBILES PVT. LTD. (1CNA-1C-01), D.NO. 23-1/2, DR. JYOTHI REDDY NAGAR, CK PALLI, CHITTOOR, PIN-517001	13. JAYALAKSHMI AUTOMOTIVES PVT LTD (8YNA-8Y-01), SURVEY NO:194/2, BESIDE NH 5, MUKHTHINUTHALAPADU, ONGOLE, ANDHRA PRADESH - 523225 - 523225 PH :9492133433.
CUDDAPAH	PENDURTHI
3. ADARSHA AUTO WORLD PVT LTD (1DNA-1D-01), #30/205-1-1-2, REVENUE WARD 31, DUVUNI KA, #30/205-1-1-2, REVENUE WARD 31, DUVUNI KA	14. VARUN MOTORS PVT LTD (BAPN-BAP-01), Y.NO:204/2 D.NO:6-36/1,OPP AYYAPA SWAMY TEMPLE,PENDURTHI,VISHAKHAPATNAM,AP
GUDIVADA	RAJAHMUNDRY
4. VARUN MOTORS PVT LTD (CLNA-CL-01), SY.NO:75/2 & 75/3,BANTUMILI ROAD,GUDIVADA,AP	15. SB MOTOR CORP (C5NA-C5-01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDRY, ANDRAPRADESH-533106. - 533016 PH -9248727888.
GUNTUR	SRIKAKULAM
5. JAYALAKSHMI AUTOMOTIVES PVT LTD (GSNA-G5-01), D-NO:199/2, OPP.AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001 PH :9959844644.	16. VARUN MOTORS PVT LTD (W6NA-W6-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIKAKULAM DISTRICT, ANDHRA PRADESH - 532401 PH -9885317344.
6. JAYALAKSHMI AUTOMOTIVES PVT LTD (GSNA-G5-02), SURVEY NO 110 , AMRAVATHI ROAD , INNER RING ROAD , GUNTUR	17. VARUN MOTORS PVT LTD (W6NA-W6-S1) - 0
KAKINADA	TIRUPATI
7. VARUN MOTORS PVT LTD (W7NA-W7-01), BHASKARA GARDENS JAGANDHAPURAM ,KAKINADA - 533016	18. BHARGAVI AUTOMOBILES PVT LTD (N8NA-N8-01), D NO-9-91/1, BANGLORE BY PASS ROAD, DHAMINEDU VILLAGE, TIRUPATI RURAL, ANDHRA PRADESH - 517503
KURNOOL	19. VISHNU CARS PVT LTD (NS8N-N8-01), 150, TIRUPATI BYPASS ROAD, NEAR SOUTHERN SPICE HOTEL, TIRUPATI
8. MSA MOTORS (C2NA-C2-01), PLOT NO. 1, 1A, 2, 2A, WARD NO. 96, NH 44, AUTO NAGAR, KURNOOL, ANDHRA PRADESH 518003 - 518003	VIJAYAWADA
NANDYAL	20. VARUN MOTORS PVT LTD (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. - 521137 PH :6309955655.
9. MSA MOTORS (CKBN-CKB-01), SURVEY NO. 144, P.YKI, UDUMALAPURAM(V), NEAR VENKATESWARAPURAM, NANDYAL	21. VARUN MOTORS PVT LTD (26NA-26-02), DOOR NO1-1-153,REVENUE WARD NO.1,BLOCK NO3,VIDHYADARARPURAM,VIJAYAWADA - 0
NARASARAOPET	22. SANTOSH AUTOMOTORS PRIVATE LIMITED (26NC-26-01), TCR COLONY, KCP COLONY, PORANKI, VIJAYAWADA, ANDHRA PRADESH 521137 - 521137
10. JAYALAKSHMI AUTOMOTIVES PVT LTD (JUNA-JT-01), NH 167A, SRINIVASA NAGAR, NARASARAOPETA, ANDHRA PRADESH 522601	VISHAKHAPATNAM
NARSIPATNAM	23. VARUN MOTORS PVT LTD (46NA-46-S1) - 0
11. JAYABHERI AUTOMOTIVES (WTNA-WT-01), SY NO 133/1, PEDA BODDEPALLE, NARSIPATNAM,ANDHRA PRADESH - 531116	
NELLORE	
	24. VARUN MOTORS PVT LTD (46NA-46-01), DOOR NO 38-22-27, SURVEY NO 39, KAPARADA VILLAGE, INDUSTRIAL ESTATE, VISHAKHAPATNAM - 533016
	25. VARUN MOTORS PVT LTD (46NA-46-02), NO:88/B, D BLOCK, VARUN AUTO PARK, SRINAGAR, OLD GAJUWAKA, VISAKHAPATNAM-530026. A.P - 530026
	VIZAG
	26. JAYABHERI AUTOMOTIVES PVT LTD (46NB-46-01), D.NO:8-238; SY NO:7/1A; GOPALAPATNAM; VISAKHAPATNAM (AP) - 530027
	VIZIANAGARAM
	27. JAYABHERI AUTOMOTIVES PVT LTD (N8NA-N8-01), OPPOSITE RELIANCE MART, BALAJI JUNCTION, 100 FEET RING ROAD , VIZIANAGARAM - 535002
	VSKP (ADAVIVARAM)
	28. VARUN MOTORS PVT LTD (46NA-46-3), PLOT NO 47, BANGARUTHALLI NAGAR, DARA PALEM, ADAVIVARAM VISAKHAPATNAM.- 530028 - 530028
	ASSAM
	AIZWAL
	29. GIG MOTORS (91NA-91-01), ITI WORLD BANK ROAD, AIZAWL, MIZORAM - 796005
	BAIHATA CHAIRILI
	30. PALLAVI MOTORS PVT LTD (BNLN-BNL-01), DAG NO. 187, PATTNA NO.138, MAUZA-BAR-BANGSHAR, VILLAGE KSHUDRA PALAHA, BAIHATA CHARIALI, ASSAM - 781381
	BARPETA TOWN
	31. PODDAR CAR WORLD PVT LTD (SQTN-SQT-01), DEWRIKUCHI,HOWLY BARPETA ROAD,
	BIOJYNAGAR
	32. PODDAR CAR WORLD PVT LTD (09NA-IA-03), DAG NO. 1093/1598 PATTNA NO 709, BARTEZPUR PO KUKURMARA PS PALASHBARI , DIST KAMRUP
	BISWANATH CHARALI
	33. R D MOTORS (RAMLAL DURGADUTTI MOTORS PVT LTD) (BXIN-BXI-01), BRAHMAPUTRA CHAPORI, NEAR POWER GRID OFFICE,
	BAGHMARI, BISWANATH CHARALI, ASSAM 784176
	BONGAIGAON
	34. BHARATI MOTORS PVT LTD (7NNA-7N-01), CHAPAGURI RD, NEAR POST OFFICE, NORTH BONGAIGAON, AMGURI, BONGAIGAON, ASSAM 783380 - 783380 PH :7002350887.
	CHANGSARI
	35. PODDAR CAR WORLD PVT LTD (09NA-TED-04), DAG NO 640 K P PATTNA NO. 464 VILLAGE - CHANGSARI MOUZA - SILA SENDURI KAMRUP RURAL
	DIBRUGARH
	36. VISHAL CAR WORLD PVT LTD (C1NA-C1-01), MOHPUALIMORA GOHAN GAON, A.T ROAD, DIBRUGARH, ASSAM - 786008 PH :8009000008.
	GOLAGHAT
	37. R D MOTORS (RAMLAL DURGADUTTI MOTORS PVT LTD) (J3NA-J3-01), DAG NO-308,PATTA NO-53, VILLAGE RANGAJAN BAGAN GAON, MARANGI, MOUZA, MARANGI REVENUE CIRCLE, GOLAGHAT - 785702
	GUWAHATI
	38. BIMAL AUTO AGENCY (09NB-09-01), DREAMLAND APPARTMENT,NAHRANI PATH, DISPUR LASTE GATE, GUWAHATI - 781006 (ASSAM) PH :9864074525.
	39. PALLAVI MOTORS PVT LTD (09NC-09-01), NARENGI, KALITAKUCHI, SATGAON, GUWAHATI, ASSAM - 781026
	40. PODDAR CAR WORLD PVT LTD (09NA-09-01), AT ROAD ,KAMAKHYA GATE, GUWAHATI ,KAMRUP-781009 - 781009 PH :8085957586.
	HOJAI
	41. RD MOTORS (ARAN-ARA-01), DAG NO-665,PATTNA NO-467,VILLAGE DIMAPUR, DISTRICT HOJAI ASSAM- 782435
	JORHAT
	42. R D MOTORS (RAMLAL DURGADUTTI MOTORS PVT LTD) (GSNB-G9-01), M/S R D MOTORS PVT LTD ,DHAPAKTA, NEAR TINALI, JORHAT -785006 - 785006 PH :7002099547.
	MANGALDOI
	43. PODDAR CAR WORLD PVT LTD (09NA-YW-02), WARD NO 2 NH - 15, MANGALDOI TOWN, DARRANG - ASSAM
	NAGAON
	44. R D MOTORS (RAMLAL DURGADUTTI MOTORS PVT LTD) (7JNA-7J-S1) - 0
	NALBARI
	45. BIMAL AUTO AGENCY (92NA-92-01), BIMAL AUTO AGENCY NALBARI HAJO ROAD AMAYAPUR, ASSAM - 781334 - 781334
	NORTH LAKHIMPUR
	46. SAIKIA (7PNA-7P-01), NH - 15, CHARAIMORIA, NORTH LAKHIMPUR, ASSAM 787032

SIBSAGAR

47. JAINCO AUTOTECH PRIVATE LIMITED (L9NA-L9-01), DAG NO. 531 OF P.P. NO. 4, OF VILLAGE CHANGMAI GAON, MOUZA BETBARI, SIVASAGAR REVENUE CIRCLE, SIVASAGAR

SILCHAR

48. JAIN UDYOG (J2NA-J2-01), R.S. PATTA NO.149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH :9436121557.

SONARI

49. JAINCO AUTOTECH PRIVATE LIMITED (BFCN-BFC-01), NAMRUP SAFEKHATI ROAD, WARD NO-6, SONARI - 785690 - 785690

TEZPUR

50. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (T1NA-T1-01), SOLAGAN VILLAGE , GOROIMARI , SONABEEL, BEFORE MAA KALYANI PETROL PUMP, TEZPUR -784105 PH :9836872710.

TINSUKIA

51. VISHAL CAR WORLD PVT LTD (J4NA-J4-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD),A.T. ROAD, LAIPULI,TINSUKIA ,ASSAM -786183 PH :98642211022.

BIHAR

BEGUSARAI

52. GS MOTORS PVT LTD (1UNA-1U-01), NALA ROAD, BEGUSARAI, PIN-851101, BIHAR - 851101

BHAGALPUR

53. SEEMANCHAL MOTORS (G8NA-G8-S1)

DARBHANGA

54. RAJKRISHNA MOTORS LLP (1VNA-1V-S1) - 0
55. RAJKRISHNA (1VNA-1V-01), MADHPUR, KHATA NO. 28, KHASRA NO 107, 108 NH 57 - DARBHANGA (BIHAR)

GAYA

56. KARLO AUTOMOBILES PRIVATE LIMITED (Y6NA-Y6-01), GAYA DOBHI MAIN ROAD, NEAR DOMUHAN, BODHGAYA, PIN -824231, BIHAR.

PATNA

57. ALANKAR AUTO SALES & SERVICE PVT LTD (15NA-15-01), OPP.RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002 PH :926289366.
58. REESHAV AUTOMOBILES PVT LTD (15NB-15-01), MUKDUMPUR,DIGHA,90 NO GATE, PATNA - 800012 PH :7369944132.

59. SHREE GOPAL AUTO PVT LTD (15NC-15-01), BIKHACHAK ANISHABAD NEW BYPASS ROAD, OPPOSITE SITA RAM COMMUNITY HALL, PATNA, BIHAR - 800002 - 800002 PH :9262853333.

60. REESHAV AUTOMOBILES PVT LTD (15NB-15-02), MAULANA AZAD NAGAR, F.C.I MORE PHULWARISHARIF PATNA - BIHAR

PURNEA

61. SEEMANCHAL MOTORS PVT LTD (6VNA-6V-01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31,GUALBAGH,PURNEA,BIHAR - 854326 PH :9334710055.

SIWAN

62. SHREE GOPAL AUTO PVT LTD (05NA-05-01), KHATA NO 410, SURVEY NO 464 JASAUJI PAKULI CHHAPRA SIWAN ROAD NH 85, SIWAN BIHAR 841241 - 841241

SUPAUL

63. GS MOTORS PVT LTD (SKUN-SKU-01), KHATA NO. 216,218, KHESA NO. 500-504, PIPRA ROAD, SUPAUL

CHANDIGARH

CHANDIGARH

64. AUTOPACE NETWORK PVT LTD (07NA-07-01), PLOT NO. 37, INDUSTRIAL AREA - PHASE 1, CHANDIGARH - 160002 PH :7087119796.
65. AUTOVOGUE PVT LTD (07NC-07-S1) - 0

66. AUTOVOGUE PVT LTD (07NC-07-02), PLOT NO - 29/4 INDUSTRIAL AREA PHASE -2, CHANDIGARH - 160002 PH :8725098355.

67. NAVDESH AUTOS LLP (07NE-07-01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH - 160002 PH :8827057534.

CHHATTISGARH

AMBIKAPUR

68. MAHAMAYA AUTOCARS PRIVATE LIMITED (AENA-AE-01), AJAB NAGAR,MAHATHMA GANDHI ROAD,AMBIKAPUR - 497001 PH :9516609632.

BALODABAZAAR

69. SKY AUTOMOBILES (GJNA-GJ-01), AMBEDKAR CHOWK, RAIPUR RD, BALODA BAZAR, CHHATTISGARH 493332 - 493332

BEMETARA

70. CHOUHAN AUTOMOBILES LLP (CBCN-CBC-01), NEAR AK MULTISPECIALTY HOSPITAL, KRISHNA VIHAR, RAIPUR ROAD, BEMETRA, BEMETRA DISTRICT, CHHATTISGARH

BHILAI

71. SPARSH AUTOMOBILES PVT LTD (83NB-83-S1) - 0
BILASPUR-CG

72. SATYA AUTO PVT LTD (C3NB-C3-01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001 PH :6372803057.

DURG

73. CHOUHAN AUTOMOBILES LLP (7WNA-7W-01), KH NO 215/2, PLOT NO 6 BESIDES D MART DURG BY PASS PIN - 490020 - 490020

JAGDALPUR

74. SKY AUTOMOBILES (ECNA-EC-01), NEAR BR COLD STORAGE, GEEDAM ROAD, JAGDALPUR. (3S)

JANJIRI

75. SATYA AUTOMOBILES (9NNA-9N-01), NEAR KHOKSA RLY CROSSING, CHAMPA RD, JANJIRI, CHHATTISGARH - 495668

KAWARDHA

76. CHOUHAN AUTOMOBILES LLP (DINA-DI-01), KHASRA NO. 37/10, VILLAGE CHHIRAHA CHOWK,KAWARDHA, DISTRICT KABEERDHA

KORBA

77. SATYA AUTO PVT LTD (U7NB-U7-01), SHED NO 10, PART OF KHASRA NO 885, INDUSTRIAL AREA, RAJGAMAR ROAD, KORBA (C.G)

MUNGELI

78. SATYA AUTO PVT LTD (C3NB-BLE-02), BILASPUR ROAD , GIDHA , CHHATTISGARH - 495334

RAIGARH

79. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTOCORP PRIVATE LIMITED) (7YNA-7Y-01), BESIDE MSQUARE NEXA SHOWROOM,KOTRA ROAD BYPASS,RAIGARGH,CHATTISGARH,496001(C OPY OF LAYOUT ATTACHED AS ANNEXURE)

RAIPUR

80. SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI, G. E. ROAD, RAIPUR
81. SPARSH AUTOMOBILES PVT LTD (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDHI, TATIBANDH, RAIPUR, CHHATTISGARH - 492029 PH :9926262662.

82. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-01), SADDU RD, DALDAL SEONI, RAIPUR,CHHATTISGARH - 492001

83. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-S1) - 492010

84. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-02), MAIN ROAD DEOPURI, RAIPUR-DHAMTARI ROAD, 492001

RAJNANDGAON

85. SPARSH AUTOMOBILES (LQNA-LQ-01), MUMBAI - KOLKATA HWY, ATAL VIHAR COLONY, RAJNANDGOAN, CHHATTISGARH - 491441

DELHI

86. AAA VEHICLEADES PVT LTD (08NW-08-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH :8750611111

87. COMPETENT AUTOMOBILES COMPANY LIMITED (08NF-08-01), PLOT NO-34, RAJASTHAN UDYOG NAGAR, GT AKRNL ROAD ,DELHI - 110033 PH :9932049425.

88. JAGMOHAN AUTOMOTIVES PVT LTD (08NX-08-01), C133-136(PART, PHASE I, INDUSTRIAL AREA, MANGOLPURI S BLOCK, NEW DELHI, DELHI 110083 - 110083 PH :9812259000.

89. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (08NA-08-01), C15F GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH :9873052000.

90. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (08NA-08-S1) - 110075

91. PLATINUM MOTOCORP LLP (08NQ-08-01), PLOT NO-H4,BLOCK-B1,MOHAN CO-OPERATIVE INDEX,MATHURA ROAD,PIN-110044 - 110044

92. RANA MOTORS PVT LTD (08NE-08-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI

93. SHREYASH AUTOMOTIVES PVT LTD (08NA-08-S1), B-91 , PHASE 1 , MAYAPURI , DELHI - 110064

94. SHREYASH AUTOMOTIVES PVT LTD (08NA-08-01), B-91, MAYAPURI PHASE-1, NEW DELHI

95. TR SAWHNEY AUTOMOBILES PVT LTD (08NN-08-01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI PH :9953350008.

GOA

(TISWADI) GOA
96. SAI POINT (34NC-34-01), SR NO 183/13, MORGADO VADDO ROAD, NEAR INDIAN OIL PETROL PUMP, GOA VELHA, TISWADI, GOA - 403108

BICHOLIM

97. SAI SERVICE (BHNN-BHN-01), H. NO. 192, SURVEY NO. 103/1, ASHWAMED HEIGHTS, CARAPUR SARVANA VILLAGE, BICHOLIM, GOA - 403505 - 403505

GOA

Nexa Workshop (AS ON 31.01.2026)

98.	CHOWGULE INDUSTRIES PVT LTD (34NB-34-S1) - 0	111.	RAVIRATNA MOTORS PVT LTD (P9NA-P9-01), S. NO. 449 & 455, PLOT NO. 4 & 5, MAHAVIR TURNING POINT, ANKLESHWAR, GUJARAT - 393001 - 393001	122.	RB CARS (BKCN-BKC-01), SURVEY NO. 1684, PLOT NO124J5-7, HALOL, BYPASS, DISTRICT PANCHMAHAL, HALOL, GUJARAT - 389350 - 389350	PATAN		
99.	CHOWGULE INDUSTRIES PVT LTD (34NB-34-01), SY. NO. 267/11, NEXT TO ARLEM RTO, ARLEM, RAJA, SALCETE - (GOA) - 403720 - 403720 PH :9850966950.	BHARUCH	112.	RAVIRATNA MOTORS PVT LTD (F8NA-F8-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. - 392001 PH :9727700823.	HALVAD	133.	STARLINE CARS PVT LTD (Q9NA-Q9-01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT) - 382465 - 382465 PH :9909043244.	
100.	SAI POINT CARS PVT LTD (34NC-34-S1) - 0	BHAVNAGAR	113.	KIRAN MOTORS LIMITED (C9NB-C9-01), RAMDEV SOCIETY, CHITRA GIDC, BHAVNAGAR - GUJARAT	HIMATNAGAR	RAJKOT	134.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (65NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT - 360004 PH :9512035501.
MAPUSA		BHUJ	114.	K D MOTORS (P5NA-P5-01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPAR HIGHWAY, BHUJ - 370040 PH :9879898799.	JUNAGADH	RAJIPIPLA	135.	RAVIRATNA MOTORS PVT LTD (9XNA-9X-01), S.NO. 779, RAJIPIPLA VADODARA HIGHWAY, RAJIPIPLA, DISTRICT NARMADA
101.	SAI SERVICE PVT LTD (34NA-34-02), PLOT NO 41, TIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA BARDEZ GOA	BOTAD	115.	KATARIA AUTOMOBILES PRIVATE LIMITED (APNA-AP-01), PLOT NO. 30/2, PALIYAD ROAD, BOTAD, GJ	KADI	SURAT	136.	AMAR CARS PVT LTD (40ND-40-01), SURVEY NO 139, BLOCK NO-"218"*, OPPOSITE TO AWADH ARENA MALL, V.I.P ROAD ,BHARTHAMA, SURAT, GUJARAT - 395007 PH :9871389795.
102.	CHOWGULE INDUSTRIES PVT LTD (34NB-34-02), PLOT NO 23, TIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA GOA 403517. - 403517	DABHOI	116.	KATARIA AUTOMOBILES PRIVATE LIMITED (UJNA-UJ-01), SATYAM COMPLEX, NEAR VEGA BRIDGE, VEGA CHOKDI, DABHOI	126.	STARLINE CARS PVT LTD (URNA-UR-01), CHHALTRAL KADI HIGHWAY, IRANA ROAD, MONJE BUDASAN, TALUKA KADI, DIST MEHSANA - 382715	137.	KATARIA AUTOMOBILES PRIVATE LIMITED (40NA-40-01), OPP. KAMNATH MAHADEV TEMPLE, NEAR SOHAM CIRCLE, ALTHAN CANAL ROAD, ALTHAN, SURAT, GUJARAT - 395017 - 395017
PANAJI		DAHOD	117.	R B CARS PVT LTD (2CNA-PL-02), PLOT NO. 142, BAPUNAGAR, DAHOD-INDOR HIGHWAY ROAD, DAHOD.	MANDVI	138.	KIRAN MOTORS LIMITED (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJARAT -395009 - 395009 PH :7020569426.	
103.	SAI SERVICE PVT LTD (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521	DEHGAM	118.	NANDA AUTOMOBILES PVT LTD (NRNA-NR-01), SURVEY NO. 4536/2, BESIDES SHREENATH SOCIETY, OPP. SABARMATI GAS STATION, DEHGAM, GUJARAT-382305.	MEHSANA	139.	PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (40NE-40-01), TP NO 8,FP NO.380,CS NO 1207, DHAMANWALA COMPOUND, NEAR GAYWALA CHAMBERS, CANAL ROAD, KHATODARA UDHANA	
GUJARAT		GANDHIDHAM	119.	B M AUTOLINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD - GANDHIDHAM, KUTCH , GUJARAT - 370201 PH :7211120014.	MORBI	SURENDRANAGAR	140.	DREAM VEHICLES PVT LTD (LCNA-LC-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDRANAGAR, GUJARAT. - 363035 PH :8511104844.
AHMEDABAD		GANDHINAGAR	120.	NANDA AUTOMOBILES PVT LTD (2BNA-2B-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT. - 382421 PH :9867641974.	NADIAD	VADODARA	141.	AMAR CARS PVT LTD (22NB-22-01), SHED NO. 56, SARDAR INDUSTRIAL ESTATE, AJWA ROAD, VADDODARA - 390019 - 390019
104.	PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (01NG-01-01), PLOT NO 9, OPP RABARI COLONY BRTS STOP, CTM, NAROL - NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. - 380026 PH :9909023000.	GODHRA	121.	R B CARS PVT LTD (2CNA-2C-01), SURVEY NO. 38/2, PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001 PH :99255407666.	NAVARSARI	142.	KATARIA AUTOMOBILES PRIVATE LIMITED (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007 PH :9824701590.	
105.	POPULAR WHEELERS (INDIA) PVT LTD (01NC-01-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT - 380009 PH :9925203344.	HALOL	122.	TANU MOTORS PVT LTD (Q8NA-Q8-01), NR. MARUTI SUZUKI COMMERCIAL SHOWROOM, PALANPUR - DEESA HIGHWAY, PALANPUR-385001 - 385001	PALANPUR	VAPI		
106.	STARLINE CARS PVT LTD (01NE-01-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330 PH :7436003235.							
107.	PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (01NG-01-02), SURVEY NO. 407/1, FP NO. 308/1, VIP ROAD, SHELA, SOUTH BOPAL, AHMEDABAD							
108.	KATARIA AUTOMOBILES PRIVATE LIMITED (01NF-01-01), PLOT NO. 14-23, T.P SCHEME NO. 1, BOPAL, AHMEDABAD-380058 - 380058							
109.	KIRAN MOTORS LIMITED (01NB-01-01), RAUTHAL BANQUET, -SHILAJ ROAD,							
ANAND								
110.	AMAR CARS PVT LTD (F7NA-F7-01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT - 388001 PH :9925407666.							
ANKLESHWAR								

143. KATARIA AUTOMOBILES PRIVATE LIMITED (97NA-97-01), NEAR CROMA OUTLET, RATHOD CHAMBERS, DAMAN ROAD, CHALA VAPI - 396191 PH :9714799985.	GURGAON	156. PASCO AUTOMOBILES (95NA-95-01), SEC 17-18 DIVIDING ROAD, GURGAON- HARYANA, 122015 - 122015	KURUKSHETRA	180. JAGMOHAN AUTOMOTIVES PVT LTD (J5NB-35-01), SONIPAT MURTHAL ROAD, OPPOSITE ASR CNG PUMP, SONIPAT - 131001 YAMUNANAGAR
HARYANA		157. PREM MOTORS PVT LTD (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001 PH :1292565666.	MANESAR	181. PANDIT AUTOMOBILES PVT LTD (D2NA-D2-S1) - 0
AMBALA		158. TR SAWHNEY AUTOMOBILES PVT LTD (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001 PH :1274254441.	NARAINGARH	HIMACHAL PRADESH
144. EAKANSH WHEELS (18NA-18-01), AMBALA-CHANDIGARH HIGHWAY ADJOINING AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA PH :8395903111.		159. PLATINUM MOTOCORP LLP (2LNA-95-02), KHEVAT NO 406, KHATONI NO 411, ALMORA CHOWK, SPR RD, SEC 75 A GURGAON - 122012	NARAINGARH	BADDI
ASSANDH			NARNAUL	182. GOYAL MOTORS PVT LTD (CIFN-CIF-01), KHASRA NO. 968/800, OPP. HOTEL APEX, BHUD, BADDI, DISTRICT SOLAN, HIMACHAL PRADESH - 173205
145. KARNAL MOTORS PVT LTD (CSNA-CS-01), KAITHAL BYE-PASS, BEHIND CAR CREW CENTER, ASSANDH	HISSAR		NARNAUL	BILASPUR-HP
ATELI		160. SARAOGI AUTOMOBILES PRIVATE LIMITED (76NB-76-01), PLOT NO -180, SECTOR 27-28, SATROD INDUSTRIAL AREA, HISAR - 125001	NARWANA	183. COMPETENT AUTOMOBILES COMPANY LIMITED (6YNA-6Y-01), KHASRA NO. 259/76 & 261/77 KHATONI : 18 , VILLAGE BEHAL PO BAMBTA TEHSIL SADAR
146. PLATINUM MOTOCORP LLP (9QNA-9Q-02), OPP. ANARKAUR HOSPITAL, WARD NO.-11, KANINA ROAD, ATELI (HR)	JHAJJAR		NUH	CHAMBA
BHIWANI		161. COMPETENT AUTOMOBILES COMPANY LIMITED (0BNA-0B-01), PLOT NO - 309 , OFFICER COLONY , BADLI ROAD , NEAR ANAJ MANDI , JHAJJAR , HARYANA	172. EAKANSH MOTORS PVT LTD (CWNA-CW-01), KHEWAT & KHATA NO 441/626, OPPOSITE MAHINDRA SHOWROOM, HISSAR UKLANA ROAD, NARWANA, HARYANA.	184. PATHANKOT VEHICLELEADS PVT LTD (JFNA-JF-01), KHASRA NO. 780/3702, GHOTI, PO- SAROL, TEH AND DISTT- CHAMBA, HIMACHAL PRADESH
147. PASCO AUTOMOBILES (X3NA-X3-01), NEAR HINNAMAL PIAYU, ROHTAK ROAD, BHIWANI- HARYANA-127021 - 127021 PH :9289192582.	JIND		173. PASCO AUTOMOBILES (7LNA-7L-01), KHATAUNI NO. 550, KILA NO. 141, SADDIK NAGAR, ALWAR ROAD, NUH (HARYANA).	HAMIRPUR
CHARKHI DADRI		162. EAKANSH MOTORS PVT LTD (2KNA-2K-01), KHEWAT NO. - 155, KHASRA NO. - 142, MURRABA NO. - 210 OPP. HP LPG BOTTLING PLANT, ROHTAK-JIND ROAD, JIND. PIN - 126102 - 126102	PALWAL	185. COMPETENT AUTOMOBILES COMPANY LIMITED (W9NA-W9-01), KHEWAT 13 MIN, KHATUANI 13 MIN, KHASRA NO. - 492,493, MOHAL CHATTER MOUZA, UGIALTA TEH. DIST. HAMIRPUR.
148. JAGMOHAN MOTORS PVT LTD (A6NA-CT-02), PLOT NUMBER 1142, KHATAUNI NUMBER 1206, CHARKHI DADRI, HARYANA	KAITHAL		174. AUTONATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (EENA-EE-01), KILA NO.-15/2 & 16/1, 57 MILESTONE, NEAR ECHS HOSPITAL, MATHURA ROAD, PALWAL	NAGROTA
FARIDABAD		163. EAKANSH MOTORS PVT LTD (U8NA-U8-01), NH-65, OPP RKM FARM, AMBALA ROAD, KAITHAL - 136027	PANIPAT	186. KANGRA VEHICLELEADS (A UNIT OF PATHANKOT VEHICLELEADS PVT LTD) (D9NA-D9-01), VILL HATWAS, PATHANKOT - MANDI HIGHWAY, NAGROTA BAGWAN DISTT. KANGRA - 176047 PH :7018145653.
149. BVA AUTO PRIVATE LIMITED (58NC-58-01), 2J/53-54, NH-2, NIT FARIDABAD, HARYANA PH :9911259288.		164. EAKANSH MOTORS PVT LTD (U8NA-U8-02), KHEWAT NO -458, KHATONI - 563, KITTAS - 20/87K 01M ADJOINING NEXA SHOWROOM, AMBALA HISAR ROAD, KAITHAL - 136027 PH :8813038777.	PATAUDI	PALAMPUR
150. PASCO AUTOMOBILES (58NB-58-S1) - 0			176. PLATINUM MOTOCORP LLP (BYNB-BY-01), 422/2 , MITTAL & SONS. HAILYMANDI , WARD NO. 4 KULALNA ROAD , PATAUDI	187. KANGRA VEHICLELEADS (2TNA-2T-01), VPO BHATTU SAMULA, SUB. TEHSIL SULAHA (PALAMPUR), DISTT. - KANGRA, HIMACHAL PRADESH - 176064 - 176064
151. PASCO AUTOMOBILES (58NB-58-01), 144, MATHURA ROAD, FARIDABAD, HARYANA - 121003 PH :9999790229.	KARNAL		REWARI	PAONTA SAHIB
152. VIPUL MOTORS PVT LTD (58NA-58-01), SUB DIVISION NO-3, INDUSTRIAL PLOT NO. -34, N.I.T, FARIDABAD HARYANA - 121001 PH :8562019252.		165. KARNAL MOTORS PVT LTD (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA - 132001	177. DINCO 4 WHEELS LLP (AUTO VIBES) (U1NA-U1-01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401	188. GOYAL MOTORS PVT LTD (8GNA-8G-01), SHAMSHERPUR, NH-72, POANTA SAHIB, HIMACHAL PRADESH.
FARIDABAD	KHARKODA		ROHTAK	RAMPUR (HP)
153. AUTONATION (58NC-58-E1) - 121006		166. JAGMOHAN AUTOMOTIVES PVT LTD (BUNA-BU-01), KHEWAT NO 885, KHATA NO 1151-53, KILA NO 153/162/2/4-11, SERVICE ROAD, KHARKHODA BYPASS, KHARKHODA SONIPAT.	178. JAGMOHAN MOTORS PVT LTD (A6NA-A6-01), NORTHERN BYEPASS, SUKHPURA CHOWK, JIND ROAD, ROHTAK, HARYANA PH :8754045446.	189. GOYAL MOTORS PVT LTD (CEZN-CEZ-01), VILLAGE NIRSU, PO DUTT NAGAR, NEAR NEW RELIANCE PETROL PUMP, RAMPUR BZSHAHR, HP - 172001
FARRUKH-NAGAR	KOSLI		SIRSA	ROHRU
154. PLATINUM MOTOCORP LLP (KENA-KE-01), KHEWAT NO. 4/21/8 & 21/6 PTAUDI ROAD, FARRUKH-NAGAR, HARYANA		167. DINCO 4 WHEELS LLP (AUTO VIBES) (CANN-CAN-01), KHEWAT NO - 857& 900, RECT. NO-75/2/2, KOSLI, DIST.-REWARI (HARYANA).	179. SHAKTI MOTORS PVT LTD (E4NA-E4-01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSA - 125055	190. GOYAL MOTORS PVT LTD (JZNA-JZ-01), VILLAGE MEHENDLI, ROHRU - SHIMLA ROAD, ROHRU, HIMACHAL PRADESH - 171207
GOHANA			SONEPAT	

SHIMLA

- 191. MODERN AUTOMOBILES (A9NA-A9-S1) - 0
- 192. GOVAL MOTORS PVT LTD (A9NB-A9-01),
RANJEET NAGAR ,BHATTAKUFER , NEAR
APPLE MARKET, SHIMLA - 171010

SOLAN

- 193. GOVAL MOTORS PVT LTD (7DNA-7D-S1) - 0
- 194. GOVAL MOTORS PVT LTD (7DNA-7D-01),
DEONGHAT ,SOLAN, HIMACHAL PRADESH

UNA

- 195. COMPETENT AUTOMOBILES CO LTD
(QDNA-QD-01), VILLAGE LAL SINGHI (OPPOSITE
PRAKASH HONDA), NH 503, UNA, HIMACHAL
PRADESH.

JAMMU AND KASHMIR

AKHNOOR

- 196. JAMMU MOTORS PVT LTD (2XNA-2X-01),
KHASRA NO 680 MIN/52 KHEWAT NO 5/34
KHATA NO 90/203 MIN/204 MIN, BANGTI
DASKAL, AKHNOOR, JAMMU

BARAMULLA

- 197. JAMKASH VEHICLEADES (KASHMIR) PVT LTD
(8CNA-8C-01), KHUSHAL PORA, CHANAD,
SANGRAMA, BARAMULLA, PIN-193202, JAMMU
& KASHMIR - 193202

JAMMU

- 198. JAMKASH VEHICLEADES PVT LTD (33NB-33-01),
NH-1A BYE PASS OPPOSITE CHANNI HIMMAT,
JAMMU (J&K)
- 199. JAMMU MOTORS PVT LTD (33ND-33-01),
KHASRA NO. 421, TOPE SHERKHANIA,
AKHNOOR ROAD, OPPOSITE BEST PRICE,
JAMMU, JAMMU & KASHMIR - 180016

KATHUA

- 200. JAMMU MOTORS PVT LTD (3BNA-3B-01),
KHASRA NO 406/213/73, KHATA NO 1, KHEWAT
NO 1, NATIONAL HIGHWAY, KALIBARI CHOWK,
JAMMU AND KASHMIR

RAJOURI

- 201. JAMKASH VEHICLEADES PVT LTD (AINA-AI-01),
449/1, MAIN CHOWK MURADPUR - TEHSIL,
RAJOURI

SRINAGAR

- 202. PEAKS AUTO PVT LTD (12NA-12-01), DR. ALI
JAN ROAD, SOURA, SRINAGAR PIN - 190001 -
190001
PH -7006285604.
- 203. JAMKASH VEHICLEADES (KASHMIR) PVT LTD
(12NB-12-S1) - 190001
- 204. COMPETENT KASHMIR AUTOMOBILES PVT LTD
(12NC-12-01), KHASRA NO. 2745/1593/638 ,
KHEWAT NO. 352, MOUJA, BATAMALOO,
SRINAGAR, J&K

JHARKHAND

BOKARO

- 205. HINDUSTAN AUTO AGENCY (B5NA-B5-01),
KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS,
BOKARO. - 827013
PH -9304807318.

CHATRA

- 206. HINDUSTAN AUTO AGENCY (B5NA-B5-02), PLOT
NO - 1110, 1111, 1112 ; KHATA NO 112,163,22
THANA - CHATRA, DIST - CHATRA JHARKHAND

CHIRKUNDA

- 207. RELIABLE INDUSTRIES (52NA-CQT-02), NEHRU
ROAD, CHIRKUNDA - 828202

DALTONGANG

- 208. PREMSONS MOTOR UDYOG PVT LTD
(MPNA-MP-01), RANCHI ROAD, NORTH REDMA
MEDININAGAR PS DALTONGANJ, DIST PALAMU
- 822102

DEOGHAR

- 209. PREMSONS MOTOR UDYOG PVT LTD
(SGWN-SGWN-01), PLOT NO 318/319 UNDER
THANA NO 583,MAHESHMARA MOUJA
,DEOGHAR - 814112
PH :9835507004.

DHANBAD

- 210. RELIABLE INDUSTRIES (52NA-52-01), RELIABLE
INDUSTRIES NEXA WORKSHOP AMAGHATA, BY
PASS ROAD SUGIADIH, PIN -828109 - 828109
PH -7992470853.

DUMKA

- 211. RELIABLE INDUSTRIES (L7NA-L7-01), TATA
CHOWK,

GIRIDIH

- 212. RELIABLE INDUSTRIES (3DNA-3D-01), KHATA
NO-51, PLOT NO-596,598 & 599, PO -
PACHAMBA, GIRIDIH , JHARKHAND-815316

HAZARIBAGH

- 213. PREMSONS MOTOR UDYOG PVT LTD
(Y9NA-Y9-01), PREMSON MOTOR UDYOG PVT LTD
LTD ,NEXA SHOWROOM NEXT TO GST
OFFICE, ARYA
NAGAR, HURHURU, HAZARIBAGH, JHARKHAND
825301 - 825301
PH -9835507004.

JAMSHEDPUR

- 214. MOTOR WORLD (A UNIT OF KALIMATI MOTORS
PVT LTD) (31NB-31-01), NS-6, 2ND PHASE,
ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR -
831013
- 215. PESCO MOTORS LTD (31NA-31-01), KANDRA
ROAD, ADITYAPUR INDUSTRIAL AREA,
JAMSHEDPUR - 831013
PH -9334183260.

RAMGARH

- 216. HINDUSTAN AUTO AGENCY (AVNA-AV-01),
KHATA NO -01, PLOT NO 195 MURRAMKALAN
NEAR RAMGARH BAZAAR , RAMGARH
JHARKHAND

RANCHI

- 217. PREMSONS MOTOR UDYOG PVT LTD
(51NC-51-01), PLOT NO 2651/2652, KHATA NO
239, MAUJA,
VILLAGE BARAGAI , BARIATU MAIN ROAD,
RANCHI, JHARKHAND - 834009
PH -9334811248.
- 218. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PRIVATE LIMITED) (51ND-51-01), PLOT
NO. 967, 972, 973, 974, 975, BIRSA CHOWK,
VILLAGE HINOO, RANCHI
- 219. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PRIVATE LIMITED) (51ND-51-02),
KATHALMORE, OPP. MANER DHABA, RANCHI -
834005

KARNATAKA

ANEKAL

- 220. PRATHAM MOTORS PVT LTD (FANA-FA-01),
SY.NO.36/5,KAVALA
HOSAHALLI, ANEKAL-CHANDAPURA MAIN
ROAD, SIDDIHOSAKOTE POST, ANEKAL
TALUK, ANEKAL-562106. - 562106

BANGALORE

- 221. BIMAL AUTO AGENCY INDIA PVT LTD
(02NL-02-01), NO.1, 3RD BLOCK, 2ND STAGE,
NAGARABHAVI, OUTER RING ROAD,
BANGALORE - 560072 - 560072
- 222. BIMAL AUTO AGENCY INDIA PVT LTD
(02NC-02-01), SY.NO.9/04, NEAR
KATAMANALLUR GATE, KANNAMANGALA,
KADUGODI MAIN ROAD, BANGALORE - 560067
PH -9742289137.
- 223. BIMAL AUTO AGENCY INDIA PVT LTD
(02NC-2-03), SY NO. 2/2, MARATHAHALLI TO KR
PURAM OUTER RING ROAD, MAHADEVAPURA,
K R PURAM HOBLI, BANGALORE
KALYANI MOTORS PVT LTD (02NI-02-01),
SURVEY NO.1772, KENCHENAHALLI VILLAGE,
RAJARAJESHWARI NAGAR, MYSORE
ROAD, BANGALORE, KARNATAKA - 560032
PH -9845049626
- 225. KALYANI MOTORS PVT LTD (02NH-02-01), 152/7,
OUTER RING ROAD, DODDA BANASWADI,
HORAMAVU, KR PURAM HOBALI, BANGALORE
-560043 - 560043
PH -9900020454.
- 226. MANDOVI MOTORS PVT LTD (02NJ-02-01),
SURVEY NO.33/2, ALLALASANDRA, YELAHANKA
NORTH, BANGALORE, KARNATAKA - 560064
PH -9513729888.

- 227. PRATHAM MOTORS PVT LTD (02NK-02-01),
120, SARJAPUR MAIN ROAD, DODDAKANAHALLI,
VARTHUR HOBLI, BANGALORE EAST,
KARNATAKA- 560035. - 560035
PH -8884000579.
 - 228. SURAKSHAA CAR CARE PVT LTD (02NF-02-01),
2/6, BERTEN AGRAHARA, OPP TO METRO
CASH & CARRY, HOSUR MAIN ROAD,
ELECTRONIC CITY, BANGALORE, KARNATAKA -
560100
PH -9845047393.
 - 229. VARUN MOTORS PVT LTD (02NG-02-01),
NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE,
TUMKUR ROAD, YESHWANTPUR, BANGALORE,
KARNATAKA- 560022. - 560022
PH -8971888885.
 - 230. VARUN MOTORS PVT LTD (02NM-02-01), 37/56
NAGAVARA VILLAGE, HEBBAL RING ROAD
, BANGALORE - 560024
PH -9513394753.
 - 231. KALYANI MOTORS PVT LTD (02NA-02-01),
MUNICIPAL NO 1, EVEREST TALKIES, NEW
WARD NO 78, PID NO 91-4-1, KENCHAPPA
ROAD, FAZER TOWN, BANGALORE - 560005
 - 232. SURAKSHAA CAR CARE PVT LTD (02NP-02-01),
SY. NO.16/3, THALAGHATTAPURA VILLAGE,
UTTARAHALLI HOBLI, BANGALORE,
KARNATAKA
 - 233. SURAKSHAA CAR CARE PVT LTD (02NP-02-02),
#47/2, 80FT ROAD, BANASHANKARI 6TH STAGE,
4TH BLOCK, TURAHALLI, BANGALORE -56006 -
56006
 - 234. VARUN MOTORS PVT LTD (02NO-02-01), OPP
TO SOUTH EAST ASIAN TRUST, AYAPPA
NAGAR, HOODI, KR PURAM, BANGALORE
 - 235. KALYANI MOTORS PVT LTD (02NQ-02-01),
SURVEY NO. 23/6, CHIKKABIDARAKALU
VILLAGE, ANCHAPALYA,
DASANAPURA-HOBLI, BANGALORE NORTH
TALUK BANGALORE - 560073, KARNATAKA.
- BANGARPET**
- 236. SURAKSHA (ORNA-OR-01), OPP TO SUGAR
FACTORY, AMARAVATHI LAYOUT BUS STOP,
KGF MAIN ROAD, BANGARPET - 563114
- BELGAUM**
- 237. SHANTESHA MOTORS PVT LTD (E8NA-E8-01),
PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD,
KANGRALI B K, BELGAUM, KARNATAKA-590010 -
590010
PH -9538195381.
- BELLARY**
- 238. KPF PVT LTD (G2NA-G2-01), DOOR NO. 14&15,
1ST CROSS, GANDHI NAGAR, BELLARY- 583103
- 583103
- BIJAPUR**
- 239. CHAVAN MOTORS (KTK) PRIVATE LIMITED
(T7NA-T7-S1) - 586109

240. CHAVAN MOTORS (KTK) PRIVATE LIMITED (77NA-T7-01), R SY NO. 26/D1, KASABA VIJAYAPURA, BYE PASS CROSS, NH50 HIGHWAY ROAD, VIJAYAPURA (BIJAPUR) - 586109 PH :8799957100.	251. MUNEEER ENTERPRISE PRIVATE LIMITED (MUNEEER NEXA) (N7NA-N7-01), 7TH WARD, A.S. GUDI, HAMPI ROAD, HOSPET ROAD, HOSPET, KARNATAKA	263. RNS MOTORS PVT LTD (MQNA-MQ-01), SY NO.280/A5, SHIVA COMPLEX,NEJJUR COMPO, BANAVASI ROAD, TALUK SIRSI, KARNATAKA	274. KVR AUTO MALL PVT LTD (K1NA-K1-01), SURVEY NO. 54/2, BYE PASS ROAD, KANNUR-KOZHIKODE, ELAYAVOOR VILLAGE, KUZHUTHALY DESAM, KANNUR TALUK
CHICKBALLAPUR	HUBLI	UDUPI	KASARGOD
241. BIMAL AUTO AGENCY INDIA PVT LTD (KJNA-KJ-01), SY NO. 158 & 159, KANDAVARAKERE KASABA HOBLI, - 503224	252. RNS MOTORS PRIVATE LIMITED (73NC-73-01), SITE NO. 415/2A, P.B. UNKAL ROAD, HUBLI, KARNATAKA	264. ABHARAN MOTORS PVT LTD (G6NA-G6-01), SY NO. : 94/35 & 94/18B, UPPOR VILLAGE, UDUPI, KARNATAKA. - 576105	275. INDUS MOTOR COMPANY PVT LTD (3LNA-3L-01), SURVEY NO.384/3C,10, MUTTATHODY VILLAGE, INDIRA NAGAR, CHENGALA POST, KASARGODE, KERALA- 671541 - 671541
CHITRADURGA	KOLAR	KERALA	
242. SAKETH AUTOMOBILES (ALNA-AL-01), SITE NO.4181/4024/10782/2, SAROJABHAI KALYANA MATAPA, NH-04 SERVICE ROAD, CHITRADURGA - 577501 - 577501	253. MANDОВI MOTORS PVT LTD (02NJ-QJ-02), KATHA NO2790,2790/1,PETECHAMANAHALI,KASABA HOBLI,KOLAR, KARNATAKA.	ALLEPPEY	KATTAPPANA
DAVANGERE	MANGALORE	265. POPULAR VEHICLES & SERVICES LTD (E5NB-E5-01), 12/287A, PARAVOOR, ALLEPPEY - 0	276. BIMAL AUTO (Z2NA-ZN-01), SERIAL NO. 53/14, OPP. VELLAYAMKUDI POST OFFICE, THODUPUZHA - PULIYANMALA ROAD, VELLAYAMKUDI, KATTAPPANA, KERALA - 685515
243. SHRUTI MOTORS PRIVATE LIMITED (S1NB-S1-01), AVARAGERE ROAD, OLD, PB RD, DAVANAGERE, KARNATAKA 577003 - 577003	254. MANDОВI MOTORS PVT LTD (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142 PH :9845133077.	CALICUT	KAYAKULAM
DEVANHALLI	255. BHARATH AUTOCARS PVT LTD (45NB-45-01), GODOWN 17-106/P. V.S KUDVA ROAD,MAROLI, MANGALORE - 575005	266. A M MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EYE HOSPITAL,SRAMBICKAL PARAMBAMINI BYPASS JAIL ROAD JUNCTION,PUTHIYARA POST,CALICUT, KERELA-673004. - 673004 PH :7708833966.	277. SAI SERVICE PVT LTD (8LNA-8L-01), SAI SERVICE PVT LTD, WEST OF RAILWAY BRIDGE, K P ROAD, KAYAMKULAM, PIN : 690502 - 690502 PH :9288024222.
244. BIMAL AUTO AGENCY INDIA PVT LTD (02NL-WH-02), SURVEY NO 113,113/A, HISREAMANIKERE VILLAGE, KASABA HOBLI, DEVANAHALLI, BANGALORE RURAL DISTRICT - 562110	MOODBIDRI	267. POPULAR VEHICLES & SERVICES LTD (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017 PH :9946104660.	KODANGALLUR
DHARWAD	256. BHARATH AUTO CARS PVT LTD (HNNA-HN-01), BHARATH BEEDI COMPOUND, NEAR ALVA'S HOSPITAL, MOODBIDRI, KARNATAKA.	268. BIMAL AUTO AGENCY INDIA PVT LTD (47NC-47-01), KTC NAGAR (OLD FORD SHOWROOM), CALICUT ROAD, MEENCHANDA, KOZHIKODE, KERALA 673018	278. SAI SERVICE PVT LTD (8KNA-8K-01), SURVEY NO. 506/3-2, KODUNGALLUR, THRISSUR
245. RNS MOTORS PRIVATE LIMITED (B1XN-B1X-01), CTS NO. 29A/1, 29A/2, 29A/3, ASHOK NAGAR, GOA ROAD OPPOSITE PAVAN PARK, DODDINAYAKANA KOPPA DHARWAD - 580021	MYSORE	COCHIN	KOLLAM
GADAG	257. KALYANI MOTORS PVT LTD (25NC-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016	269. INDUS MOTOR COMPANY PVT LTD (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106 PH :9747508822.	279. SARATHY CARS PVT LTD (C7NA-C7-01), NH-47 BYE PASS ROAD, AYATHIL.P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021 PH :9848659456.
246. RNS MOTORS PRIVATE LIMITED (RKNA-RK-01), SY NO. 48, BINKADAKATTI VILLAGE,GADAG, KARNATAKA.	258. MANDОВI MOTORS PVT LTD (25NA-25-01), SURVEY NO. 90/7, RT NAGAR, RING ROAD, DATTAGALLY, MYSORE, KARNATAKA -570023 - 570023	270. SAI SERVICE PVT LTD (27NA-27-01), 723/7.6,18,OPP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. - 682021 PH :9645106193.	KOTTAYAM
GOKAK	NEELAMANGALA	271. GEORGE MAIJO AUTOMOBILES PVT LTD (27ND-27-01), 32/1219,THIRAKKAKARA MUNICIPALITY, CIVIL LINE ROAD,VAZHAKALA JUNCTION, COCHIN	280. AVG MOTORS LTD (B8NA-B8-01), SY. NO. 182/3,182/4, WARD NO.10, PEROOR VILLAGE, ETTUMANOOR MUNICIPALITY, KOTTAYAM - 686630
247. SHANTESHA MOTORS PVT LTD (IRNA-IR-01), SY NO 106/3D/2 GOKAK- BELGAUM HIGHWAY	259. RNS MOTORS PVT LTD (BBHN-BBH-01), SY NO. 216/9, KASABA HOBLI, KUNIGAL BYPASS ROAD, NEELAMANGALA TALUK,BANGALORE RURAL DISTRICT. -562123	272. POPULAR VEHICLES AND SERVICES (27NB-27-01), MANAKKAPPADY JN, IRUPANAM, COCHIN	281. SAI SERVICE PVT LTD (8LNA-B8-01), SY. NO. 341/11, 341/12, PERUR VILLAGE, MC ROAD, THELLAKOM, KOTTAYAM - 686630
GULBARGA	PUTTUR	KAIPAMANGLAM	MUVATTUPUZHA
248. LAHOTI MOTORS PVT LTD (E9NA-E9-01), #7-1211/A, OPP GUNJ BUS STAND HUMNABAD ROAD, GULBARGA - 585104	260. BHARATH AUTOCARS PVT LTD (CZNA-CZ-01), PLOT NO. 5-28/4, NEAR GOWDA BSNJ HALL, BYEPASS ROAD, TENKLA, PUTTUR -574201.	273. SAI SERVICE PRIVATE LIMITED (RPNA-RP-01), EDAMUTTOM, EDAMUTTOM, P.O, KAIPAMANGALAM RD, THRISSUR	282. INDUS MOTOR COMPANY PVT LTD (7ENA-7E-01), NELLIPILLIL HOUSE, ADOOPARAMBU, MUVATTUPUZHA P.O., ERNAKULAM. - 686661
HASSAN	SAGARA	KANNUR	PALA
249. VENKAT MOTORS (C8NA-C8-01), KHATA NO 200-201, DM HALLY, BANGALORE - MANGALORE ROAD, HASSAN, KARNATAKA - 0	261. SHRUTI MOTORS PRIVATE LIMITED (WFNA-WF-01), NEAR INDIAN OIL PETROL BUNK,BASAVANA HOLE, JAMBAGARU, SAGARA, KARNATAKA - 577401	283. AVG MOTORS LTD (GNNA-GN-01), SURVEY NO 11/37,BLOCK NO -80, PULIYANNOOR VILLAGE, PALA MUNICIPALITY, KOTTAYAM DISTRICT, KERALA.	PALAKKAD
HOSKOTE	SHIMOGA	284. INDUS MOTORS (Y2NA-Y2-01), SURVEY NO. 133,135, NEARBY MOYANS SCHOOL, PALAKKAD CITY, KERALA.	TALIPARAMBA
250. BIMAL AUTO AGENCY INDIA PVT LTD (SMNA-SM-01), SY NO. 102, NO.56, HOSAKOTE SANTE GATE FLYOVER, KAMMAVARI PETE, HOSKOTE, KARNATAKA - 562114	262. SHRUTI MOTORS PRIVATE LIMITED (B7NB-B7-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA,KARNATAKA - 577201		
HOSPET	SIRSI		

Nexa Workshop (AS ON 31.01.2026)

285. POPULAR VEHICLES & SERVICES LTD (9WNA-9W-01), SY NO. 34/196 & 34/207, NH-66, TALIPARAMBA, KERALA - 670141	300. ADINATH CARS PVT LTD (RDNA-RD-01), KHASRA NO. 39/11/2/2, GRAM HIRDAYAPURA, SAGAR NAKA, DAMOH, MADHYA PRADESH - 470861 - 470861	314. RUKMANI MOTORS PVT LTD (53NC-53-S1) - 0	327. ADINATH CARS PVT LTD (G1NA-G1-01), KHASRA NO 155, P H NO. -77, BAHERIA GADGAD, SAGAR JABALPUR ROAD, SAGAR - 470004, MADHYA PRADESH, INDIA - 470004 PH :9752447690.
THIRUVANANTHAPURAM			
286. INDUS MOTOR COMPANY PVT LTD (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND ALUMOOD JN,NH 47,KANNIYAPURAM, TRIVANDRUM - 695301 - 695301 PH :9656685678.	DATIA	JABALPUR	SANWER
287. POPULAR VEHICLES & SERVICES LTD (16NC-16-01), SURVEY NO 39,40,59 & 75, NEAR LOURDE FORANE CHURCH, NEAR PMG JN, TRIVANDRUM - 695004	301. PREM MOTORS (WENA-WE-01), NEAR TATA COMMERCIAL SERVICE STATION, JHANSI ROAD, DATIA (MADHYA PRADESH) - 475661	316. SHUBH VEHICLES LLP (54ND-54-S1) - 0	328. RANA MOTORS PVT LTD (CWXN-CW-01), SURVEY NO. 217, KUDANA ROAD BYPASS, SANWER (MP).
THRISSUR	DEPALPUR	317. SHUBH VEHICLES LLP (54ND-54-01), 2997/1 4 MILE LAL BUNGLOW TILHARI JABALPUR - 482020	SATNA
288. BRD CARWORLD LIMITED (A4NA-A4-S1) - 0	302. OCEAN MOTORS PVT LTD (WBNA-WB-01), SURVEY NO. 27/1 TAKIPIURA, BETMA ROAD, DEPALPUR, INDORE, MADHYA PRADESH - 453115	318. STANDARD MOTOCORP PVT LTD (54NC-54-01), KHASRA NO-529/1/1, NEAR TRIPURI CHOWK GARHA JABALPUR M. P - 482003 PH :9773543358.	329. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (D7NA-D7-01), BEHIND NEXA SHOWROOM, 666/2, AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001 PH :6262230999.
289. POPULAR VEHICLES & SERVICES LTD (A4NB-A4-01), SURVEY NO 62/P, CHUNGAM,OLLARI, KANJANI ROAD, ARANATTUKARA VILLAGE, THRISSUR - 680618 - 680618	DEWAS	319. STANDARD MOTOCORP PVT LTD (54NC-54-03), UKHARI TIRAHA, OPPOSITE TO RAMESHWARAM WATER TANK, MR-4 ROAD, VIJAY NAGAR, JABALPUR (M.P.)	SHAHDOL
290. BRD CARWORLD LIMITED (A4NA-A4-01), CHIYYARAM VILLAGE , VILLAGE THRISSUR	303. UNITARA MOTORS PVT LTD (3QNB-3Q-01), 3, YAMUNA NAGAR, AB ROAD, DEWAS 455001 - 455001	KATNI	330. STANDARD MOTOCORP PVT LTD (SFAN-SAF-01), KHASRA NO-459, VILLAGE JAMUI NEAR BAGHEL DHABA, BUDHAR ROAD, SHAHDOL (M.P.)
MADHYA PRADESH	304. UNITARA MOTORS PVT LTD (3QNB-3Q-S1)	320. SHUBH VEHICLES LLP (FKNA-FKN-01), KHASARA NUMBER 24/2, 25/1 PANNA MOD, MAIHAR ROAD, NEAR JOHN DEER REACTOR AGENCY, KATNI (MP)	SINGRAULI
ASHOK NAGAR	DHAR	KHARGONE	331. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (JUNA-JJ-01), KHASRA NO- 3055, NAUGARD TEHSIL, SINGRAULI (MP)
291. PREM MOTORS PVT LTD (DSNA-DS-01), WARD NO 1 , KHASRA NO 67/2/3 , NEAR RAJMATA CHAURAHA , GUNA BYPASS ROAD , AKSHARDHAM COLONY , ASHONAGAR	GUNA	321. NIMAR MOTORS PRIVATE LIMITED (NEXA DIVISION) (AUNA-AU-01), SANAWAD ROAD ,JETAPUR KHARGONE - 451001	UJJAIN
BHOPAL	GWALIOR	KUKSHI	332. YUG CARS (A UNIT RUKMARANI MOTORS PVT LTD) (3WNA-3W-01), 59/1, DEWAS ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN - 456664 PH :9755512100.
292. JEEWAN MOTORS PVT LTD (03NB-03-S1) - 0	307. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT. LTD.) (30NB-30-01), MAHARANA PRATAP CHOWRAHA, GOLE KA MANDIR, GWALIOR, MADHYA PRADESH. - 474005	322. OCEAN MOTORS PVT LTD (BION-BI-01), PLOT NO 464 , WINAYAK COMPLEX INDORE KUKSHI ROAD	333. YUG CARS (A UNIT RUKMARANI MOTORS PVT LTD) (3WNA-3W-02), 1/2/3, UJJAIN DEWAS ROAD, UJJAIN, MADHYA PRADESH. - 456001
293. OCEAN MOTORS PVT LTD (03ND-03-S1) - 0	308. PREM MOTORS PVT LTD (30NA-30-S1) - 0	MANDLA	VIDISHA
294. OCEAN MOTORS PVT LTD (03ND-03ND-01), PLOT NO-54 & 55, SECTOR-A, GOVINDPURA INDUSTRIAL AREA, JK ROAD, BHOPAL	309. PREM MOTORS PVT LTD (30NA-30-01), SURVEY NO 442/2 , JHANSI ROAD , MAHAGAON , GWALIOR	323. STANDARD AUTO (WDNA-WD-01), KHASRA NO-44/1, BINJHIA, JABALPUR ROAD, MANDLA, MADHYA PRADESH-481661.	334. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (AYNA-AY-01), PLOT NO.349-3 (RG.NO.239/1, 240,242), AHMADPUR CHAURAHA, WARD NO. 29, VIDISHA (MP)
295. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-01), 42, 6 BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSHANGABAD ROAD, BHOPAL (M.P.)	INDORE	MANDSAUR	MAHARASHTRA
296. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-S2)	310. OCEAN MOTORS PVT LTD (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001	324. PATEL MOTORS (INDORE) PVT LTD (WCNA-WC-01), SURVEY NO 362/6, OPP KRISHI UPJAI MANDI, MHOW NEEMUCH ROAD, MANDSAUR (MP).	AHMEDNAGAR
297. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-S1) - 0	311. PATEL MOTORS (INDORE) PVT LTD (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJURANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.)- 452016 PH :7771002581.	MORENA	335. KANKARIYA AUTOMOBILES PVT LTD (ASNA-A5-01), SH-60,NEWASA ROAD ,NAGARDEOLE,AHEMDANAGAR,MAHARASHTRA - 414601 PH :9403961522.
BIAORA	312. RANA MOTORS PVT LTD (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 - 452010 PH :9933055539.	325. PREM MOTORS PVT LTD (RGNA-RG-01), OPP. SHREE BAJRANG DHARAMKANTA, A B ROAD, MORENA, MP - 476001	AKOLA
298. UNITARA (OFNA-OF-01), 38/9/3, GRAM PADONIYA, OLD A.B ROAD, BIAORA (M.P.) - 465674	INDORE	NEEMUCH	336. ASPA BANDSONS AUTO PVT LTD (F1NA-F1-01), SHIVANI AIRPORT AREA, AKOLA - MAHARASHTRA (444001) - 444001
CHHINDWARA	313. RUKMANI MOTORS PVT LTD (53NC-53-01), RUKMANI MOTORS NEXA SERVICE,FOOTH OTHI SQUARE,OPP.DASTOOR GARDEN,INDORE - 452002 PH :9755512100.	326. PATEL MOTORS (INDORE) PVT LTD (3TNA-3T-01), KHASRA NO -1973/1&1975/2, MHOW - NEEMUCH ROAD, NEEMUCH - MADHYA PRADESH - 458441	ALANDI
299. KAMTHI MOTORS LLP (U5NA-U5-01), WARD NO.16, MAHATMA GANDHI WARD, SEONI PRAN MOTI, SEONI ROAD, CHHINDWARA (M.P.) - 480001		SAGAR	337. MY CAR (PUNE) PVT LTD (GJPN-GJP-01), SURVEY NO 214/1, PUNE ALANDI ROAD, KALE WASTI , VILLAGE CHARHOLI BURDUK , ALANDI - 412105
DAMOH			

ALIBAG	INDAPUR	361. MY CAR (PUNE) PVT LTD (05NK-05-01), PLOT NO- GEN-25 & GEN-25 B/1, TTC INDUSTRIAL AREA, PAWANE, NAVI MUMBAI, MAHARASHTRA (400709) - 0	376. SAI SERVICE PVT LTD (TENA-TE-01), MAHAVIR NIRMAN, RAILWAY STATION ROAD, PALGHAR, PANDARPUR
338. SIMRAN MOTORS PVT LTD (3XNA-3X-01), 31/1/B MOUJE VESHVI , GRAM PANCHAYAT VESHVI, TALUKA ALIBAG, DISTT RAIGAD	349. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (NQNA-NQ-01), GAT NO 212/1/B, PUNE SOLAPUR ROAD , INDAPUR, DISTRICT PUNE	362. MY CAR (PUNE) PVT LTD (05NK-05-S1) - 0	377. CHAVAN MOTORS DIVISION INDIA PVT LTD (0HNA-0H-01), GAT NO. 94/1/42 & 94/1/43, ISBVAI, WAKHARI ROAD, PANDHARPUR, DISTRICT SOLAPUR, MAHARASHTRA - 413304 - 413304
AMRAVATI	JALGAON	363. MY CAR (PUNE) PVT LTD (05NL-05-01), PLOT NO. B-21 & B-24/1, THANE INDUSTRIAL AREA, THANE, MAHARASHTRA - 400604	PARBHANI
339. ASPA BONDSONS AUTO PVT LTD (F2NA-F2-01), F32/1 MIDC , AURANGABAD NAGPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444607 PH -9130041513.	350. MANRAJ AUTOMOBILES PVT LTD (C4NB-C4-01), P 93, MIDC, R.L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA - 425003 - 425003	364. SAI SERVICE PVT LTD (05NB-05-01), JOSEPH CARDIUN TECHNICAL SCHOOL , KHASHABA JADHAV MARG , OFF DR. AMBEDKAR ROAD , DADAR (EAST) MUMBAI, MAHARASHTRA - 400014	378. PAGARIYA AUTO PVT LTD (LNNA-LN-01), PLOT NO. 857, OPPOSITE IOC PUMP, BASMAT ROAD, PARBHANI
AURANGABAD	JALNA	365. SHIVAM AUTOZONE INDIA PVT LTD (05ND-05-S1) - 0	PHALTAN
340. AUTOMOTIVE MANUFACTURERS PVT LTD (21NB-21-01), PLOT NO :- L- 3 / 1 , BETWEEN GARWARE & WOCKHARDT LTD, JALGAON ROAD, MIDC CHIKALTHANA AURANGABAD PIN : - 431006, MAHARASHTRA - 431006 PH -9970499273.	351. AUTOMOTIVE MANUFACTURERS (BCNA-BC-01)	366. SHIVAM AUTOZONE INDIA PVT LTD (05NE-05-01), PLOT NO. 1 & 2, RAMCHANDRA LANE EXTN , KANCHPADA, OFF LINK ROAD, MALAD-WEST. - 400064	379. CHOWGULE INDUSTRIES PVT LTD (KHNA-KH-01), SR NO 83/2A/A2 , PUNE PANDHARPUR ROAD , PHALTAN, DIT SATARA
341. PAGARIYA AUTO PVT LTD (21NA-21-01), OPP AIRPORT, NEXT TO INDIAN OIL PETROL PUMP, JALNA ROAD, AURANGABAD, MAHARASHTRA - 431006 PH -8888859502.	KALYAN	367. SHIVAM AUTOZONE INDIA PVT LTD (05ND-05-01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA - 400069	PUNE
BADLAPUR	KHARGHAR	NAGPUR	380. EXCELL AUTOVISTA PVT LTD (19NG-19-01), SURVEY NO 98/2AP, NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM, BANER TALUKA, PUNE - 411045
342. AHER AUTOPRIME LLP (90NA-90-01), MUKTA AUTOMOBILES, BHARAT COLONY, NEAR SHANTI NAGAR, WATER TANK ROAD, BADLAPUR WEST 421503 - 421503	353. SIMRAN MOTORS PVT LTD (AACN-AAC-01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA. - 410209	368. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-20-01), 37/2, MANISH NAGAR, BESA T POINT, BESA ROAD NAGPUR 440025 - 440025	381. KOTHARI AUTO WHEELS PRIVATE LIMITED (19NU-19-01), GATE NO 1605, OLD 1099, KESNAND ROAD, WAGHOLI, TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA - 412207
BARAMATI	KOLHAPUR	369. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-20-02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA. - 440028	382. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (19NI-19-01), NEAR SADGURU PETROL PUMP, PUNE NASHIK HIGHWAY, AT KURALI, KHED TALUKA, CHAKAN, PUNE - 410501 PH :9923589214.
343. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (7RNA-7R-01), BHIGWAN ROAD, SHIV NAGAR, BARAMATI (MAHARASHTRA) PH :9850994014.	355. SAI SERVICE PVT LTD (38NA-38-02), PLOT NO. C-6, SHIROLI MIDC, KOLHAPUR, MAHARASHTRA.	370. ARUN MOTORS PRIVATE LIMITED (20ND-20-01), PATNI ARCADE , C-48/1, MIDC HINGNA MAIN ROAD , NAGPUR - 440028	383. MY CAR (PUNE) PVT LTD (19NA-19-S1) - 0
CHANDRAPUR	LATUR	NANDED	384. SAI SERVICE PVT LTD (19NC-19-01), SINHAGAD ROAD, NEAR NANDED CITY , VADGAON KHURD, PUNE,(MAHARASHTRA) PH :9923308333.
344. BARBATE AUTOMOTIVE (INDIA) PVT LTD (H3NA-H3-01), PLOT NO 15-18, OUT OF SURVEY NO 144, 15/5, MAUZA BADOLI, NAGPUR CHANDRAPUR HIGHWAY, CHANDRAPUR, MAHARASHTRA - 440025 PH :8380887666.	356. AUTOMOTIVE MANUFACTURERS PVT LTD (V8NA-V8-01), C-4/1319/1, SURVEY NO. 89/C, RING ROAD BETWEEN BAMBHALGAON CHOWK AND GARUD CHOWK, PO & DIST LATUR, MAHARASHTRA - 413512 - 413512	371. SEVA AUTOMOTIVE PRIVATE LIMITED (68NA-68-01), AIRPORT ROAD,SANGVI - 431605 PH :7065026520.	385. SEHGAL AUTORIDERS PVT LTD (19NE-19-01), SURVEY NO 63/2, SHEWALEWADI, MANJARI BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHTRA - 412307 PH :9158000049.
345. BARBATE AUTOMOTIVE (INDIA) PVT LTD (H3NA-H3-S1) - 0	LONAVALA	NARAYANGAON	386. WONDER CARS PVT LTD (19ND-19-S1) - 0
CHIKHLI	357. SEHGAL AUTORIDERS PVT LTD (CGAN-CG-01), GALI NO. 735/1, WAKSAI,LONAVALA, TALUKA MAVAL, DISTRICT PUNE , MAHARASHTRA-410405 - 410405	372. KOTHARI AUTO WHEELS PRIVATE LIMITED (FVNA-FY-01), WARULWADI, NH-50, NARAYANGAON - 410504	387. WONDER CARS PVT LTD (19ND-19-01), PLOT NO 52/1 BLOCK F2, MIDC PIMPRI, PUNE - 411019 PH :9850094151.
346. KATARIA AUTOMOBILES (BCBN-BCB-01), SURVEY NO. 678/5 AND 7, NEAR SHIV KRUPA HOTEL, NH 48 HIGHWAY, THALA, CHIKHLI, GUJARAT - 396521	MANGAON	NASHIK	388. CHOWGULE INDUSTRIES PVT LTD (19NH-19-01), 43/1, OFF KARVE ROAD, KOTHRUD, OPPOSITE LILAVATI APARTMENT, PUNE - 111045
DHULE	358. MY CAR (PUNE) PVT LTD (BAMN-BA-01), SHOP NO 17,18,19,20, SURVEY NO 55/1 , 55/2 MUMBAI GAO HIGHWAY, TAHSIL MANGAON, DISTRICT RAIGAD	373. SEVA AUTOMOTIVE PRIVATE LIMITED (37NA-37-01), PLOT B-17, MIDC, AMBAD, NASIK, MAHARASHTRA - 422010 PH :8975762303.	PUNE (AMBEGAON)
347. SEVA AUTOMOTIVE PRIVATE LIMITED (P3NA-P3-01), PLOT NO. F-1, ADDITIONAL DHULE INDUSTRIAL AREA, DHULE, MAHARASHTRA - 424006	MUMBAI	374. SHAAN CARS PVT LTD (37NB-37-01), PLOT E-2, MIDC SATPUR, NASHIK, MAHARASHTRA - 422010	389. MY CAR (PUNE) PVT LTD (19NM-19-01)
GONDIA	359. FORTPOINT AUTOMOTIVE (CARS) PVT LTD (05NJ-05-S1) - 0	375. AUTOMOTIVE MANUFACTURERS LIMITED (37NC-37-01), PLOT NO P/1/2 , MIDC , AMBAD ,NASHIK - 422010	RATNAGIRI
348. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-4C-03), HIMGIRI LAYOUT , KAWLEWADA ROAD , GONDIA - 795140	360. KTS AUTOMOTORS PVT LTD (05NH-05-01), UNIT NO A1, PANNALAL COMPOUND, LBS KANTILAL MAGANLAL ESTATE, L.B.S MARG, BHANDUP (W), MUMBAI - 400078	PALGHAR	

Nexa Workshop (AS ON 31.01.2026)

390. JAGRUT MOTORS PVT LTD (G3NA-G3-01), 4106/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612 PH :9820039626.	402. AUTOMOTIVE MANUFACTURERS PVT LTD (39NB-39-S1) - 400706	BERHAMPUR	AMRITSAR
SANGAMNER	403. EXCELL AUTOVISTA PVT LTD (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD , THANE, MAHARASHTRA - 400607 PH :9867331726.	414. SKY AUTOMOBILES (E2NA-E2-01), PLOT NO 373/2229 & 373/1204, AMABAPUA MOUZA, BRAHMAPUR (ODISHA) - 760007	427. JAYCEE MOTORS PRIVATE LIMITED (17NC-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501
391. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (HENA-HE-01), AHMADNAGAR	404. EXCELL AUTOVISTA PVT LTD (39NA-39-02), NEAR ARIHANT COMPOUND, KALHER, BHIWANDI, THANE - 400607 PH :9867331726.	BHUBANESHWAR	BATALA
SANGLI	405. KIRAN MOTORS MAHARASHTRA (A DIVISION OF KIRAN MOTOS LIMITED) (39ND-39-01), BHOIR COMPOUND, FOUNTAIN JUNCTION, OFF NATIONAL HIGHWAY 8, VILLAGE - VARSOVA, GHODBUNDER, DISTRICT - THANE (MAHARASHTRA) 401104 - 401104	415. JYOTE MOTORS PVT LTD (04NA-04-S1) - 0	428. PATHANKOT VEHICLEADES PVT LTD (V5NA-V5-01), HARDO JANDE , GT ROAD, BATALA
392. CHOWGULE INDUSTRIES PVT LTD (J1NA-J1-01), 118/2/1 KUBERA CHAMBERS, MAHAVIRNAGAR, SANGLI (MAHARASHTRA) - 416416	406. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (39NE-39-01)	416. NARAYANI MOTORS PVT LTD (04NC-04-01), PLOT NO 140/2004, KHATA NO -1152/364, UNIT-20, JAGAMARA, KHANDGIRI, CHAWAK, BHUBANESHWAR - 0	BHATHINDA
393. CHOWGULE INDUSTRIES PVT LTD (J1NA-J1-S1) - 0	WADA	417. NARAYANI MOTORS PVT LTD (04NC-04-S1) - 0	429. TARA AUTOMOBILES (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB - 151001 PH :8437019666.
SASWAD	407. SHIVAM AUTOZONE INDIA PVT LTD (BXDN-BXD-01), NO. 417/15, NEAR SNEH GARDEN, VILLAGE GANDHARE, WADA KUDUS BHIWANDI ROAD, WADA, DISTRICT PALGHAR, MAHARASHTRA - 421303	418. SKY AUTOMOBILES (04NB-04-01), BAPUJI NAGAR, SHREE VIHAR CHANDRASEKHARPUR ROAD, BHUBANESWAR - 751017 - 751017	GURDASPUR
394. CHOWGULE INDUSTRIES PVT LTD (PHNA-PH-01), SURVEY NO. 611/1, NEAR INDIAN OIL PETROL PUMP, VILLAGE SASWAD, PUNE, MAHARASHTRA - 412301	YAVATMAL	BHUBANESWAR	430. PATHANKOT VEHICLEADES (4XNA-4X-01), KHASRA NO. 24/1, 24/2, 25/1, KHEWAT NO. 54/55, SITUATED AT BABRI NATIONAL HIGHWAY, GURDASPUR, PUNJAB.
SATARA	408. HIMALAYA CARS (4MNA-4M-01), PLOT NO. 14, MIDC, YAVATMAL INDUSTRIAL AREA, YAVATMAL	419. TUSHI MOTORS PRIVATE LIMITED (04ND-04-01), IDCO SHED NO.: B/18, UNIT NO.: 12, BOMIKHAL, PS.: RASULGARGH - 751010	HOSHARPUR
395. CHOWGULE INDUSTRIES PVT LTD (F3NA-F3-01), GATE NO 158/1/5B, PROPERTY NO.823, NEAR VIGHANHARTA SOCIETY COLONY B, MEDHA ROAD, AT/POST-KONDAVE, TALUKA-SATARA	MANIPUR	JEYPORE	431. HOSHIARPUR AUTOMOBILES (H4NA-H4-S1) - 0
SHIKRAPUR	IMPHAL	420. LEGEND CARS PRIVATE LIMITED (SWNA-SW-01), NH26, OFFSITE HOTEL HELLO, INDUSTRIAL ESTATE, JEYPORE, ODISHA	432. HOSHIARPUR AUTOMOBILES (H4NA-H4-01), SHED NO 11 A & 12 A, INDUSTRIAL ESTATE JALANDHAR ROAD HOSHIARPUR, 14602 - 14602
396. KOTHARI AUTO WHEELS PRIVATE LIMITED (GKJN-GKJ-01), GAT NO. 1491/1B, PUNE NAGAR ROAD, SHIKRAPUR, TALUKA SHIRUR, PUNE - 412208 - 412208	NAGALAND	421. ODYSSEY MOTORS PVT LTD (D4NA-BJU-02), POWER HOUSE ROAD, SARBAHAL,JHARSUGUDA-768201 (ODISHA) - 768201	JALANDHAR
SHILPHATA	DIMAPUR	PARADEEP	433. LOVELY AUTOS (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALANDHAR PUNJAB
397. VELOX MOTORS PRIVATE LIMITED (SGJN-SGJ-01), PLOT NO. 99, KALYAN SHIL SINNER, SHILPHATA - 410203	410. PROGRESSIVE MOTORS (32NA-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, - 797115 PH :7669223736.	422. NARAYANI MOTORS PVT LTD (OENA-OE-01), DO-CHHAKI, PARADEEP - CHANDIKHOL RD, PARADEEP, ODISHA 754141	434. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (35NC-35-01), KHASRA NO - 16450, SITUATED AT RAJA GARDEN, KAPURTHALA ROAD, JALANDHAR CITY, - 144003 PH :9915944600.
SINNAR	KOHIMA	ROURKELA	KAPURTHALA
398. SHAAN CARS PVT LTD (FUNA-FU-01), SURVEY NO 932/2, NEAR UDYOG BHAVAN, SINNAR, MAHARASHTRA - 422103 - 422103	411. SEYIE AUTO (4NNB-4N-01), NEAR IG STADIUM, MARIEMA, KOHIMA, NAGALAND - 797001	423. ORBIT MOTORS PVT LTD (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041 PH :9165071234.	435. LOVELY AUTOS (4ZNA-4Z-01), KEVAT KHATA NO. 1140/1400, KHASRA NO. 2362/2/73-19, OPPOSITE NEW SABJI MANDI, SULTANPUR ROAD, KAPURTHALA CITY, PUNJAB
SOLAPUR	ODISHA	SAMBHALPUR	KHANNA
399. CHAVAN MOTORS DIVISION INDIA PVT LTD (B1NA-B1-01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224 PH :8888881314.	BALASORE	424. ODYSSEY MOTORS PVT LTD (D4NA-D4-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006	436. HOSHIARPUR AUTOMOBILES (N3NA-N3-01), H B NO. 221, KHAWAT NO. 231, ALOUR, KHANNA LUDHIANA
TALEGANJ DABHADE	412. JYOTE MOTORS (BALASORE) PVT LTD (LSNA-LS-01), PLOT NO: 385, GANESHWARPUR, RENUJANA, JANUGANJ,BALASORE, ODISHA 756019 - 756019	ORISSA	437. GULZAR MOTORS PVT LTD (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003 PH :9814839777.
400. MY CAR (PUNE) PVT LTD (4KNA-4K-01), SR. NO. 408/8, OLD MUMBAI FUNE HIGHWAY, LIMB PHATA , TALEGANJ DABHADE, TAL - MAVAL, DIST. - PUNE	BARIPADA	JAJPUR	438. HOSHIARPUR AUTOMOBILES (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003 PH :8872501234.
THANE	413. JYOTE MOTORS PRIVATE LIMITED (RQNA-RQ-01), KARTABASHA , WARD NO 32 BALASORE JHARPOKRIA ROAD , BAGDIHA , BARIPADA - 757001	426. SHENBAKA CARS (CCFN-CC-01), RESY. NO. 38/16-A, POOVAM VILLAGE, KARAIKAL, PUDUCHERRY. - 609609	439. NAVY AUTOS (62NF-62-01), 287/1, MOTI NAGAR, SHERPUR BYPASS, GT ROAD, LUDHIANA - 141010 PH :9875999161.

440.	MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (62NH-62-01), OPP. MEDIWAYS HOSPITAL, FEROPZUR ROAD, LUDHIANA - 141015 PH -8872000357.	AJMER	462.	KTL AUTOMOBILE (JMNA-JM-01), KHASRA NO. 2937, TONK ROAD CHAKSU, JAIPUR - 303901	477.	AURIC MOTORS PRIVATE LIMITED (FNNA-FN-01), NEAR TVS TWO WHEELER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001 PH :7970006402.		
MANSA			CHIRAWA		JODHPUR			
441.	TARA AUTOMOBILES (TLNA-TL-01), NEAR TEENKONI ,SIRSA MANSA FLY OVER , MANSA, PUNJAB.	ALWAR	463.	AURIC MOTORS PRIVATE LIMITED (SYNA-SY-01), WARD NO.-15, NEAR DOBI, CHIRAWA (RAJASTHAN)	478.	AURIC MOTORS PRIVATE LIMITED (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLC, SARASH DAIRY ROAD, JODHPUR - 334001 PH :7300077394.		
MOGA			CHITTORGARH		479.	LMJ SERVICES LTD (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1 JODHPUR - 342009 PH :7412087320.		
442.	REMIRA AUTOS PVT LTD (H6NA-H6-S1) - 0	ANGUL	464.	TECHNOY MOTORS INDIA PVT LTD (K9NA-K9-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001	480.	LMJ SERVICES LTD (65NB-65-02), PLOT NO.-61, GERU MARKET, BHADWASIA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001 PH :8094011126.		
MOHALI			DAUSA		KOTA			
443.	CM AUTOSALES PRIVATE LIMITED (L1NA-L1-01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI	BAGRU	465.	TECHNOY MOTORS INDIA PVT LTD (K9NA-03-S1) - 0	481.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPIA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005 PH :8094011126.		
NABHA			HINDAUN		NAGAUER			
444.	DIVINE AUTOWORLD LLP (UFNA-UF-01), RADHA SWAMI BYPASS ROAD, ADJOINING PUNJAB FURNITURE PALACE, NABHA, DIST. PATIALA, PUNJAB - 147201	454.	PREM MOTORS PVT LTD (USNA-US-01), KHASRA NO. 64/1104, NH-8, AJMER ROAD, NEAR SANSKAR COLLAGE, BAGRU (RAJASTHAN)	467.	FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S0NA-S0-01), (KHASRNA NO 771,772, SH 1 , ROAD WAYS BUS STAND , PHULWARA , HNDDAUN CITY , KARAU LI	482.	SHRI MANGALAM AUTO PVT LTD (HLNA-HL-S1) - 0	
NAKODAR		BARAN	455.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (FMNA-FM-01), ATRU ROAD, BARAN, RAJASTHAN. - 325205	468.	KP AUTOMOTIVES PVT LTD (11NB-11-01), PLOT NO 3-4,MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION,SIRSI ROAD - 302034 PH :7412059823.		
445.	LOVELY AUTOS (35NA-5B-02), KHASRA NO. 46/26 SHOWROOM NO. 1, NEAR ST. JUDE'S CONVENT SCHOOL, OPP. THE PALM, NAKODAR, JALANDHAR - 144040	BARMER	456.	LMJ SERVICES LTD (SHNA-SH-01), KHASRA NO. -1665/4/2, NH-68, OPP. CHOWDHARY PETROL PUMP, BARMER, RAJASTHAN.	469.	PREM MOTORS PVT LTD (11NC-11-01), PLOT NO- 12,13,14, SUDARSHANPURA INDUSTRIAL AREA, NEAR 22 GODAM, JAIPUR	483.	LMJ SERVICES LTD (J9NA-J9-01), PLOT NO. 21, SUMERPUR ROAD, PALI, RAJASTHAN. - 306401
NAWANSHAHR		BHARATPUR	457.	TM MOTORS PVT LTD (5JNA-5J-S1) - 0	470.	PREM MOTORS PVT LTD (11NC-11-S1) - 0	484.	TECHNOY MOTORS INDIA PVT LTD (X2NA-X2-01), P.NO. F-28,29,30, RICCO INDUSTRIAL AREA, DHOINDA, RAJSAMAND (RAJ)
446.	LOVELY AUTOS (J7NA-J7-01), VILL. LANGROYA, CHANDIGARH-NAWANSHAHR ROAD, DIST. NAWANSHAHR (S.B.S. NAGAR) - 144516 PH :9915028682.	BHILWARA	458.	CHAMPION CARS (A UNIT OF PREM CARS PVT LTD) (E3NA-E3-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001 PH :9001027933.	471.	SATNAM MOTOCORP PVT LTD (11ND-11-S1) - 0	SAWAI MADHOPUR	
PATHANKOT		BHIWADI	459.	FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9HNA-9H-01), KHASRA NO 990/1329 VILLAGE KHUIURIWAS, OPP MATILA POLICE CHOWKI, BHIWADI (RJ) - 301019	472.	SATNAM MOTOCORP PVT LTD (11ND-11-01), D-27, K/L/M, ROAD NO-3,SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA ,JAIPUR, RAJASTHAN-302023. - 302023 PH :9649373311.	485.	PREM MOTORS PVT LTD (FYNA-FY-01), PLOT NO 9 & 10 , RAMNAGAR VANJYAK YOJNA, OPPOSITE INDIAN PETROL PUMP , KHERDA , JEENAPUR,SAWAI MADHOPUR
447.	PATHANKOT VEHICLELEAS PVT LTD (A7NA-A7-01), PLOT NO.-C-30, INDUSTRIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023 PH :7527006800.			473.	VIPUL MOTORS PVT LTD (11NA-11-S1) - 0	SHAHPURA		
RAJPURA				474.	KTL AUTOMOBILE PVT LTD (11NF-11-01), PLOT NO. - F-13,14, RIICO, MALVIYA NAGAR, JAIPUR (RAJ) - 302034	486.	K.P. AUTOMOTIVES PVT LTD (NHNA-NH-01), 1876/715, DHANI HANUMAN SAGAR, WARD NO. -23, NH-48, SHAHPURA (RAJASTHAN).	
448.	DIVINE AUTOWORLD LLP (HKNA-HK-01), VILLAGE BHADAK, RAJPURA -PATIALA HIGHWAY, RAJPURA, PATIALA	BIKANER		475.	SATNAM MOTOCORP PVT LTD (11ND-11-02), E-50, ROAD NO.3, SIKAR ROAD, VKIA, JAIPUR, PIN-302013	SIKAR		
SANGRUR				JHALAWAR		487.	JAMU AUTOMOBILES PVT LTD (K7NA-K7-01), THAR PETROL PUMP,JAIPUR ROAD,SIKAR - 332001 PH :9414037515.	
449.	MAX AUTOMOBILES (G4NB-G4-01), VILL. BHINDRAN, PATIALA ROAD, SANGRUR PIN - 148001 - 148002			JHUNJHUNU		SUJANGARH		
TARN TARAN				466.	VIPUL MOTORS (71NB-71-01), E-62, PHASE -1, BICHHWAL INDUSTRIAL AREA, BIKANER (RJ) - 334001	488.	AURIC MOTORS PRIVATE LIMITED (BRBN-BRB-01), NEAR AABKAN THANA, CHAPPAR ROAD, SUJANGARH	
450.	JAYCEE MOTORS PRIVATE LIMITED (BLPN-BL-01), KHASRA NO 22/2/2(1-6), 22/9(3-4) 22/15/1(1-8) 22/12(0-8) 22/15/1(2(3-4) 21/17(0-16) SARHALI- AMRITSAR ROAD, NEAR MAIJA PUBLIC SCHOOL, TARN TARAN, PUNJAB	CHAKSU				SURATGARH		

RAJASTHAN

Nexa Workshop (AS ON 31.01.2026)

489.	AURIC MOTORS PVT LTD (LGNA-LG-01), PLOT NO. S-6, VRINDAVAN VIHAR, IN FRONT SURATGARH PG COLLEGE, OPP. GSS, MAIN GANGA NAGAR ROAD, SURATGARH, RAJASTHAN	501.	VISHNU CARS PVT LTD (14NG-14-02), POONAMALLEE HIGH ROAD, ARUMBAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056 PH :7550333622	514.	VISHNU CARS PVT LTD (BADN-BAD-01), SY NO. 5/2B & 6/3, GST ROAD, POTHERI, GUDUVANCHERY, CHENGALPATTU DISTRICT, TAMIL NADU	525.	SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (X4NA-X4-01), SURVEY NO. A, 96/5, SALEM - NAMAKKAL ROAD, NAMAKKAL, TAMIL NADU 637001 - 637001
TONK		502.	CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD), (14NK-14-01), SY NO. 56/2, PERIYAR E.V.R SALAI (POONAMALLEE HIGH ROAD), PERIYAMET, CHENNAI-600003.	HOSUR		OOTY	
490.	KP AUTOMOTIVES PVT LTD (GMNA-GM-01), PLOT NO - 36-39 , NEAR KAMDHENU CIRCLE , JAIPUR ROAD , TONK	503.	KALYANI MOTORS PVT LTD (14NM-14-S1)	515.	SRI AMMAN CARS INDIA PVT LTD (7QNA-7Q-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44,OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109 PH :9841033464.	526.	SREE SARADHAMBAL AUTOMOBILES PVT LTD (14NA-Y1-02), DOOR NO 155/A IN ASSESSMENT NO 60466,UDHAGAMDALAM(OOTY),TAMIL NADU
UDAIPUR		504.	VISHNU CARS PVT LTD (CPKN-CPK-01), TS NO: 1375/5A & 5B, RAJALAKSHMI NAGAR, CHIDAMBARAM BY-PASS LINK ROAD, CHIDAMBARAM -608001.	KARAIKUDI		527.	SHENBAKA CARS PVT LTD (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMAMBAKKAM, BAHOR COMMUNE,PONDICHERY - 607402 PH :7338322220.
491.	TECHNOY MOTORS INDIA PVT LTD (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS , UDAIPUR	COIMBATORE		516.	MEENAKSHI AUTO ZONE PRIVATE LIMITED (HXNA-HX-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIPURAM, KARAIKUDI, TAMIL NADU - 630001 PH :9940094881.	RAJAPALAYAM	
492.	NAVNEET MOTORS (49NA-49-01), NEAR MEGNUS HOSPITAL, BHUVANA, UDAIPUR (RAJASTHAN)- 31	505.	AADHI CARS PRIVATE LIMITED (41NB-41-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKAL PURAM, TRIVANDRUM ROAD,KOKKARAKULAM VILLAGE, PALAYAMKOTTAI, TIRUNELVELI,TAMILNADU - 627007 PH :9003977577.	KARUR		528.	ABT (5VNA-5V-01), NO.490/3, OPPOSITE TO N.A MANUAMMAL POLYTECHNIC COLLEGE, IDYANKULAM PANCHAYAT, RAJAPALAYAM MAIN ROAD, MAMSAAPURAM, RAJAPALAYAM – 626110. - 626110
ATTUR		506.	ABT LIMITED (41NC-41-S1) - 0	517.	AADHI CARS PRIVATE LIMITED (K4NA-K4-01), SF NO. 364, SALEM BYPASS, KARUR, TAMIL NADU - 639006	SALEM	
493.	SM CAR PVT LTD (QTNA-QT-01), APPAMASAMUDRAM, ATTUR MAIN ROAD, TAMIL NADU. - 636010	507.	ABT LIMITED (41NC-41-01), 56, BHARATHI NAGAR, SATHY MAIN ROAD, GANAPATHY, COIMBATORE - 641006	KATPADI		529.	SM CAR PVT LTD (A2NB-A2-01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM - 636010 PH :7094440010.
CHENGALPET		508.	JAIKRISHNA AUTOSALES PVT LTD (41ND-41-01), NO. 656, TRICHY ROAD, NEAR ORTHO ONE HOSPITAL, COIMBATORE, TAMIL NADU- 641012 - 641012	518.	GANESH CARS PVT LTD (C6NA-C6-3), SYNO 613/SA3, CHENNAI ROAD, KATPADI, VELLORE	530.	THRIVENI CAR COMPANY PVT LTD (A2NA-A2-01), 2/6, KANDHAMPATTY,BYE PASS ROAD, SALEM, TAMILNADU - 636005 PH :9786022272.
CHENNAI		509.	SREE SARADHAMBAL AUTOMOBILES PVT LTD (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. - 641004 PH :9790004271.	KRISHNAGIRI		SRIPERUMBADUR	
495.	ABT LIMITED (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU - 600032 PH :9994444303.	CUDDALORE		519.	AMMAN CARS (QLNA-QL-01), SY NO.410/5, 410/3B1, CHENNAI BYEPASS ROAD, BOGANAPALLI, KRISHNAGIRI. - 635501	531.	VISHNU CARS PVT LTD (7BNA-7B-01), SURVEY NO 147/2A, NEW SR. NO : 147/10, CHENNAI -BANGALORE HIGHWAY, SRIPERUMBUDUR, TAMIL NADU 602105. - 602105
496.	KHIVRAJ MOTORS PVT LTD (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058. - 600058 PH :9626099999.	510.	VISHNU CARS PVT LTD (5QNA-SQ-01), SY NO. 1898 & 1909/4, WARD NO.5, BLOCK NO. 50, RAMAKRISHNA AVENUE, CUDDALORE - 607002	KUMBAKUNAM		532.	VISHNU CARS PRIVATE LIMITED (TKNA-TK-01), 3/147-4C, ASHWINI MAHAL COMPLEX, TRICHY MAIN ROAD, SULLUR, 641401
497.	KHIVRAJ MOTORS PVT LTD (14NA-14-02), OLD S.N. NO. 11/1 & 2, NEW S.NO.11/2 - B. NO.100, NERKUNDRAM VILLAGE, SAIDAPET TALUK, CHENNAI - 600107	DHARMAPURI		520.	PILLAI & SONS MOTOR COMPANY (N4NA-N4-01), 3133/A, CRESANT NAGAR, CHENNAI BYPASS ROAD, KORANATTU KARUPPUR, KUMBAKONAM – 612501. - 612501	SULLUR	
498.	PILLAI & SONS MOTOR COMPANY (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117 PH :9994950505.	511.	SRI AMMAN CARS INDIA PVT LTD (5RNA-5R-01), SY NO. 5/1 & 11/2, KRISHNAGIRI MAIN ROAD, DHARMAPURI, TAMILNADU.	MADURAI		533.	AADHI CARS PRIVATE LIMITED (BXRN-BXR-01), D.NO. 186/4 & 166/5, KUTHUKKALVALASAI, TENKASI
499.	POPULAR VEHICLES & SERVICES LTD (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI,TAMILNADU- 600116. - 600116 PH :9842389111.	DINDIGUL		521.	ASIR AUTOMOBILES PVT LTD (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001	THANJAVUR	
500.	VISHNU CARS PVT LTD (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLEE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056 PH :7339359111.	512.	PL.A MOTORS FIRM (S4NA-S4-01), SEELAPADI, TRICHY HIGHWAY, DINDIGUL, TAMIL NADU - 624001	MAYILADUTHURAI		534.	PILLAI & SONS MOTOR COMPANY (E7NA-E7-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403 PH :9443264165.
		ERODE		522.	SIVA AUTOMOTIVE TRADING PVT LTD (42NB-42-01), 4-113/H,RING ROAD, UTHANGUDI, MADURAI, TAMILNADU	THENI	
		513.	SREE SARADHAMBAL AUTOMOBILES ERODE PVT LTD (H7NA-H7-01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011 PH :9786022272.	NAGERCOIL			
		GUDUVANCHERY		524.	ATHEN CARS (S5NA-S5-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU - 629003 PH :9751196436.		
				NAMAKKAL			

535. MEENAKSHI AUTO ZONE PRIVATE LIMITED (9UNA-9U-01), SURVEY NO. 120, EAST RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI-625531	546. VARUN MOTORS PVT LTD (K6NA-K6-02), SURVEY NO 63, PEERZADIGUDA, BODUPPAL, MEDCHAL MALKAGIRI DISTRICT, HYDERABAD	561. VARUN MOTORS PVT LTD (10NB-10-02), H.NO. 8-2/120/117/A/2, PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD - TELANGANA - 500033 PH :9885610555	573. AUTOFIN LIMITED (CIDN-CID-01), OPP BHARATH PETROLEUM HYDERBAD-KAMREDDY HIGHWAY, MEDCHAL
TIRUNELVELI	HYDERABAD	562. KALYANI MOTORS PVT LTD (10NE-10-02), NO.611 PEDDA AMBERPET MUNICIPALITY, PEDDA AMBERPET, TELANGANA, HYDERABAD - 501505	NIRMAL
536. AADHI CARS PRIVATE LIMITED (A3NA-A3-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKALPURAM, TRIVANDRUM ROAD, C1 KOKKARAKULAM	547. ADARSHA AUTO WORLD PVT LTD (10NG-10-01), PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI NAGAR, BALANAGAR, KUKATPALLY, HYDERABAD - 500072	IBRAHIMPATNAM-TL	574. ADARSHA AUTO WORLD PVT LTD (10NG-AA-03), SY 79.80,83/A,KADTHAL VILLAGE,M/O SOAN,NIRMAL
TIRUPUR	548. ADARSHA AUTO WORLD PVT LTD (10NG-10-02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA - 501218 - 501218 PH :8297116633.	563. KALYANI MOTORS PRIVATE LIMITED (CSFN-CSF-01), PLOT NO. 3, 4, 11 & 12, SHERIGUDA, IBRAHIMPATNAM, TELANGANA	NIZAMABAD
537. SHASHTI CAR PVT LTD (Y7NA-Y7-01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604 PH :9942903310.	549. ADARSHA AUTO WORLD PVT LTD (10NG-10-S1) - 0	JANGAON	575. VARUN MOTORS PVT LTD (1HNA-1H-01), 1-514/1/DA MADAHAVA NAGAR,HYDERABAD ROAD,NIZAMABAD,TELANGANA,503230 - 503230 PH :954222486.
TIRUVALLUR	550. ADARSHA AUTO WORLD PVT LTD (10NM-10-01), SY NO 382 TO 385, RAMAPALLY, HYDERABAD - 500051	564. ADARSHA AUTO WORLD PVT LTD (KINA-KI-01), SY NO:289,HYDERABAD ROAD,JANGOAN	SANGAREDDY
538. KHIVRAJ MOTORS PVT LTD (HHNA-HH-01), 173 A, POONAMALLEE HIGH ROAD, VENGATHUR, TIRUVALLUR - 602002	551. GEM MOTORS (INDIA) PVT LTD (10NH-10-01), D.NO.8-96, SURVEY NO.128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA - 500084 PH :9912345899.	KAMAREDDY	576. SAI SERVICE (OINA-OI-01), SY NO 772/A,HYDERABAD TO MUMBAI HIGHWAY, SANGAREDDY
TIRUVANNAMALI	552. JAYABHERI AUTOMOTIVES PVT LTD (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032	KARIMNAGAR	SECUNDERABAD
539. GANESH CARS PVT LTD (C6NA-LX-02), SURVEY NO. 63/1A, VENGIKKAL, VELLORE MAIN ROAD, TIRUVANNAMALI, PIN-606604, TAMILNADU - 606604	553. JAYABHERI AUTOMOTIVES PVT LTD (10NN-10-01), STALL NO MI-1, MIYAPUR, HYDERABAD -500049 - 500049	565. VARUN MOTORS PVT LTD (1HNA-KX-02), BESIDES SK FUNCTION HALL , KAMAREDDY - 507125	577. AUTOFIN LIMITED (K6NB-K6-01), PLOT NO.6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDERABAD, TELANGANA - 500011 PH :8886144551.
TRICHY	554. KALYANI MOTORS PVT LTD (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHARMANGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079 PH :9347121212.	566. ADARSHA AUTO WORLD PVT LTD (N6NA-N6-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001 PH :9847073265.	578. VARUN MOTORS PVT LTD (K6NC-K6-01), VARUN MOTORS,2ND CROSS ROAD,SAINIKPURI,SECUNDERABAD PH :779960094.
540. PLA MOTORS (23NA-23-01), TS NO.29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017 - 620017 PH :8110099991.	TUTICORIN	KHAMMAM	SHADNAGAR
541. ASIR AUTOMOBILES PVT LTD (S6NA-S6-S1) - 0	555. THE MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDERABAD, ANDRAPRADESH-500020 - 500020	568. PARAMASHIVA MOTORS PVT LTD (1GNA-1G-01), SY NO. 507,VELUGUMATLA, VILLAGE, KHAMMAM, TELANGANA	579. SRI JAYARAMA MOTORS PRIVATE LIMITED (WSNA-WS-01), SY.NO 204,BESIDE VIVA HOSPITALS,SHADNAGAR
VELLORE	556. POPULAR VEHICLES & SERVICES LTD (10NO-10-S1) - 0	KOTHAGUDEM	SIDDIPET
542. GANESH CARS PVT LTD (C6NA-C6-01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI,VELLORE, TAMILNADU - 632009 PH :9884722126.	557. POPULAR VEHICLES & SERVICES LTD (10NO-10-01), KOMPALLY,BASHIRABAD, JEEDIMETLA, SECUNDERABAD, TELANGANA 500010 - 500014	569. VARUN MOTORS PVT LTD (26NA-HF-03), TALLADA - KOTHAGUDEM RD, BABUCAMP, KOTHAGUDEM, TELANGANA 507125 - 507125	580. ADARSHA AUTO WORLD PVT LTD (10NM-CA-02), SY.NO.1944 PONNALA CROSS, BESIDE HP PETROL, SIDDIPET - 502375
VILUPPURAM	558. POPULAR VEHICLES & SERVICES LTD (10NO-10-02), PLOT NO 8 MINI INDUSTRIAL ESTATE,SERILINGAMPALLY, HAFEZPET, HYDERABAD - 500050	MAHBUBNAGAR	WARRANGAL
543. ABT LIMITED (QQNA-QQ-01), NO. 526, 1, MAMBALAPATTU ROAD, NEAR ES SCHOOL, MOOVENDU NAGAR, VILUPPURAM, TAMILNADU. - 605602	559. SAI SERVICE PVT LTD (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046 - 500046 PH :9966377888.	570. SRI JAYARAMA MOTORS PRIVATE LIMITED (WPNA-WP-01), CHRISTIANPALLY, BHOOTPOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001 PH :8978944414.	581. ADARSHA AUTO WORLD PVT LTD (D5NA-D5-01), H.NO. 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007 PH :8978944414.
ARMUR	560. VARUN MOTORS PVT LTD (10NB-10-01), B-54, CO.INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, TELENGANA - 500037	MANCHERIAL	ZAHEERABAD
544. VARUN MOTORS PVT LTD (1HNA-BBN-03), CHIKKABALLAPUR, KARNATAKA - 562101.		571. ADARSHA AUTO WORLD PVT LTD (CMNA-CM-01), SURVEY NO-417,BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL,TELANGANA - 504208 PH :9133329709.	582. JAYABHERI AUTOMOTIVES PVT LTD (BATN-BAT-01), SITE AT SY NO. 271 & 275, MAIN ROAD, ZAHIRABAD
ATTAPUR (HYDERABAD)		MEDAK	UTTAR PRADESH
545. ADARSHA AUTO (10NM-10-03), H.NO 13-6-434/C/1,PILLAR NO 85,ATTAPUR,HYDERABAD - 500048		572. VARUN MOTORS PVT LTD (KHFNA-KF-01), PLOT NO 74,SY NO 248/3, NEAR CWHC GODOWNS,MEDAK	AGRA
BODUPAL (SECUNDRABAD)		MEDCHAL	583. KTL PVT LTD (66NC-66-01), KHASRA NO - 246/1, 249/1, 251 , KUBERPUR, AGRA - 282006

Nexa Workshop (AS ON 31.01.2026)

586. MERAK VEHICLES LLP (66NE-66-01), 30, MUNRO ROAD, SADAR BAZAAR, AGRA CANTT, 282001 - 282001	589. SHAKUMBARI AUTOWHEELS PVT LTD (6DNA-6D-01), 4TH KM. MILESTONE, BIJNOR - NAJIBABAD RD, NEAR DPS SCHOOL, BIJNOR, UTTAR PRADESH 246701 - 246701	GORAKHPUR	625. SUMITRA DS MOTORS PVT. LTD. (M3NA-M3-01), KHASRA NO - PLOT NO. 706, VILLAGE BHANDSARIYA, SH 730, LAKHIMPUR KHERI, UTTAR PRADESH
AKBARPUR	BULANDSHAHR	614. SMARTWHEELS PVT LTD (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH - 273009 PH: 8222002147.	LUCKNOW
587. KTL PVT LTD (LHNA-LH-01), GRAM BARA TEHSIL, AKBARPUR, NEAR PRABHAT ENGINEERING COLLEGE. KANPUR DEHAT, (UTTAR PRADESH)	600. SKUNIVERSE AUTOMOBILES PVT LTD (M5NA-M5-01), 578M, DELHI ROAD, TRANSPORT NAGAR, BULANDSHAHR-203001 - 203001	615. ARBIT AUTOMOBILES PVT LTD (72NB-72-01), PLOT NO - A & B, BUDDH VIHAR YOUNA, PART-B, TARAMANDAL ROAD, GORAKHPUR - 273009	626. KTL AUTOMOBILE PVT LTD (13ND-13-S1) - 0
AKBARPUR-A NAGAR	ECOTECH (NOIDA)	GREATER NOIDA	627. KTL AUTOMOBILE PVT LTD (13ND-13-S2) - 0
588. SMARTWHEELS (BINA-BI-01), PLOT NO 486 MI MAJJA BAI RAMPUR BARWAN , AKBARPUR DISTT, AMBEDKAR NAGAR, UTTAR PRADESH	601. J J IMPEX (MSM) (T283-T2-S1) - 421503	616. MSM (JJ IMPEX) (T283-T2-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009	628. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT NO - 513, VILL. HARIHARPUR BIJNAUR, OPP ANSAL API, AMAR SHAHEED PATH, LUCKNOW - 227105 PH: 7311190503.
ALIGARH	ETAH	617. RANA MOTORS PVT LTD (T2NB-T2-01), PLOT NO.26, SECTOR ECOTECH-12, GREATER NOIDA, GAUTAM BUDDH NAGAR, GREATER NOIDA, PIN-201310, UTTAR PRADESH	629. KTL AUTOMOBILE PVT LTD (13ND-13-02), GODAWARI ESTATE, SITAPUR ROAD, LUCKNOW
589. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOOL, ALIGARH, UTTAR PRADESH. - 202002 PH :9639775522.	602. DEV MOTORS PVT LTD (XGNA-XG-01), GATA NO.164, VIRAMPUR, ETAH DELHI G.T ROAD, IN FRONT OF MAHINDRA SHOWROOM, ETAH, UTTAR PRADESH, PIN CODE - 207001 - 207001	HARDOI	630. KULDEEP MOTORS (LUCKNOW) PVT LTD (13NE-13-S1) - 0
590. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 - 202140 PH :9358373099.	ETAWAH	618. CONCEPT CARS LIMITED (QENA-QE-01), PLOT NO. 1609 & 1605, GUNGABUX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001 PH :7607696666.	631. MEGA MOTORS (A UNIT OF AKM MOTORS PRIVATE LIMITED) (13NF-13-01) - B-107, SECTOR-C, MAHANAGAR, LUCKNOW - 226006
591. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-S1)	603. KULDEEP MOTORS PVT LTD (6ENA-6E-01), PILKHAR, KANPUR-ETAWAH ROAD, ETAWAH. - 206001	HATHRAS	632. ANAND MOTOR AGENCIES LTD (13NC-13-01), GATA NO. 1062 PARGANA RAJA BILLI PASI VILLAGE AURANGABAD, SHAHEED PATH (OPPOSITE TO RAMABAI AMBEDKAR MAIDAN), LUCKNOW, UTTAR PRADESH - 226012
ALLAHABAD	FATEHPUR	619. DEV MOTORS PVT LTD (LPNA-LP-01), NAGLA UMMED, NEAR COCA COLA FACTORY, BANNA DEVI, ALIGARH ROAD, HATHRAS	633. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-S2)
592. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (29NC-29-01), PLOT NO. C-23, INDUSTRIAL AREA - NAINI, PRAYAGRAJ - 211009	604. KULDEEP MOTORS KANPUR LLP (TMNA-TM-01), 466, G.T ROAD, NAUWA BAGH, FATEHPUR, UTTAR PRADESH - 212601 - 212601	JHANSI	634. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-S1) - 0
593. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (29NC-29-S1) - 0	FIROZABAD	620. SURI AUTOMOBILES (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003 PH :7705000558.	635. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-01), PLOT NO - D10, SARJINI NAGAR INDUSTRIAL AREA, LUCKNOW. PIN - 226008 - 226008
594. AMITDEEP MOTORS (29NA-29-S1)	605. DEV MOTORS PVT LTD (DFNA-DF-01), DHOLPURA, NEAR ST. JOHNS CHAURAHA, AGRA ROAD, FIROZABAD - 282303	621. BASERA VELOCITY CARS (A UNIT OF BASERA HOTELS AND RESORTS LLP) (60NB-60-01), 329, BUDHA, BADAGAON, GWALIOR ROAD, JHANSI	636. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-02), KHASRA NO. 197, 198, 200, 201, 202 SEMRA, FAIZABAD ROAD, LUCKNOW.
ALMORA	GAJRAULA	KANNAUJ	637. ONEUP MOTORS INDIA PRIVATE LIMITED (13NG-13-01), KHASRA NO. 1040, MUBARAKPUR, LUCKNOW, UTTAR PRADESH 226201 - 226201
595. NAINITAL MOTORS PVT LTD (SQNA-SQ-01), NH109, PALTAN BAZAR, DHARANAUULA, ALMORA, UTTARAKHAND	606. AKANKSHA AUTOMOBILES PVT LTD (XDNA-XD-01), KHASRA NO. 1411F, ADJ. HYUNDAI SHOWROOM, OPP. RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA	622. KTL PVT LTD (EMNA-EM-01), ARAZI GATA NO. 1247, NEAR MAA GAYATRI FILLING STATION, ASHOK NAGAR, SARAIMEEERA, KANNAUJ, UTTAR PRADESH	MAHARAJGANJ
AMROHA	GHAZIABAD	KANPUR	638. ARBIT AUTOMOBILES PVT LTD (EINA-EI-01), 120, VILL RAMPUR, TEHSIL SADAR, MAHARAJGANJ, UTTAR PRADESH.
596. AKANKSHA MBD (AONA-AO-01), GATA NO. 2993, MOHALLA SARAI KOHNA, BIJNOR ROAD, AMROHA - 244221	607. MOTORCRAFT SALES PVT LTD (59NB-59-S1) - 0	623. KTL PVT LTD (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILYWAY COLONY, KANPUR, UTTAR PRADESH. - 208017 PH :7408409312.	MAHOBA
BARIELLY	608. MSM (JJ IMPEX) (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 - 201003	KHURJA	639. VELOCITY CARS (RMNA-RM-01), 12/1, SHOP AT CHARKHARI, BYPASS ROAD, NEAR PARMANAND CHOWK, MAHOBA, UTTAR PRADESH
597. CORAL MOTORS PVT LTD (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BAREILLY, UP - 243001 PH :9359101010.	609. REGENT AUTOLINKS PVT LTD (59NC-59-01), A-10/32,33,34, MEERUT ROAD INDUSTRIAL AREA, GHAZIABAD - 201002	624. SKUNIVERSE AUTOMOBILES PVT LTD (SKPN-SKP-01), 206, V-TAINA GOSPUR, KHURJA JEWAR ROAD, KHURJA,	MAINPURI
BARHALGANJ	610. ROHAN MOTORS LTD (59NA-59-S1) - 0	LAKHIMPUR KHERI	640. KULDEEP MOTORS PVT LTD (SGNA-SG-01), KHASRA NO. 1457, NAGAR PALIKA CHATRA, MAINPURI, 205001
598. ARBIT AUTOMOBILES PVT LTD (72NB-SHK-02), AARAZI NO- 395 & 395 SINDHUAPUR TEHSIL GOLLA DIST GORAKHPUR	611. ROHAN MOTORS LTD (59NA-59-01), KHASRA NO 46 , DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101 PH :8178839830.		MATHURA
BIJNOR	612. TR SAWHNEY AUTOMOBILES PVT LTD (59ND-59-01), A-8 AMBEDKAR ROAD, GHAZIABAD UP - 201001		
	613. MOTORCRAFT SALES PVT LTD (59NB-T2-02), D-40, SITE IV, GREATER NOIDA (U.P.)		

641. UMA MOTORS PVT LTD (H8NA-H8-01), PLOT NO 222, MAHOLI, NEAR KIRAN HOSPITAL, MATHURA - 281004 PH -9997389999.	PRAYAGRAJ	667. ROHAN MOTORS LTD (57NA-57-S1) - 0	679. BEEKAY AUTO PVT LTD (F6NA-F6-01), NH-2 ,CHANDA MORE, POST KALI PAHADARI, JAMMURIA DISTRICT WEST BARDHAMAN - 713339 PH -9932049425.
MEERUT	656. SARASWATI (29ND-29-01), KHASRA NO. 638, ANDHAWA, TEHSIL PHOOLPUR, PRAYAGRAJ. RAEBARELI	668. SHAKUMBARI AUTOWHEELS PVT LTD (57ND-57-01), KHASRA NO.-15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN-248001 - 248001	BANKURA
642. RADHAGOVIND WHEELS INDIA PRIVATE LIMITED (48NC-48-S1) - 0	657. KTL AUTOMOBILE PVT LTD (HSNA-HS-01), 1481, NEAR KATHWARA BUS STAND, LUCKNOW RAIBARELI HIGHWAY, HARCHANDPUR, RAIBARELI - 229303 PH :7311190503.	669. SHAKUMBARI AUTOWHEELS PVT LTD (57ND-57-S1) - 0	680. BHANDARI AUTOMOBILES PVT LTD (G7NA-GQ-02), VILLAGE KAMRAR MATH , CINEMA ROAD , MOUZA BIKKA
643. TR SAWHNEY AUTOMOBILES PVT LTD (48NB-48-01), 1183/17 RITHANI, ZONE - A, SECTOR 4 NEAR PETROL PUMP, MEERUT, UTTAR PRADESH - 250103 PH :18002704142.	RAMPUR	670. TANYA AUTOMOBILES PVT LTD (57NF-57-01), MOHBEWALA CHOWK, SAHARANPUR ROAD, DEHRADUN PIN 248002 - 248002	COOCHBEHAR
644. TANYA AUTOMOBILES PVT LTD (48ND-48-01), KHASRA NO. 150, VILLAGE RALI CHAUHAN, MEERUT.	658. AKANKSHA AUTOMOBILES PVT LTD (6LNA-6L-01), PLOT NO 95 , ADJACENT HONDA BIKE SHOWROOM, VILLAGE- TASHKA, NEAR RAMPUR HOSPITAL, NAINITAL ROAD, RAMPUR, UTTAR PRADESH	671. PREM MOTORS (57NG-57-S1)	681. SEVOKI MOTORS PVT LTD (BWZN-BWZ-01), NEXA COOCH BEHAR CENTRAL VILL & P.O. - MAHISHBATHAN P.S. - KOTWALI, NH - 31 COOCHBEHAR,W.B. -734617 - 734617
MIRZAPUR	SAHARANPUR	HALDWANI	DARJEELING
645. VARANASI MOTORS PVT LTD (6KNA-6K-01), PURJAGIR, MIRZAPUR BHADOHI ROAD, MIRZAPUR	659. TANYA AUTOMOBILES PVT LTD (S2NA-S2-01), OPP. PHULWARI GARDEN, DELHI ROAD, SAHARANPUR PIN - 247001 - 247001	672. NAINITAL MOTORS PVT LTD (J6NA-J6-01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR UJALA PRINTING PRESS, HALDWANI, UTTARAKHAND - 263139	682. BEEKAY AUTO (6UNA-6U-01), BATASIA HILL CART ROAD, PO GHOOM, PS - JOREBUNGLOW, DARJEELING - 734102 WEST BENGAL - 734102
MODINAGAR	SAHIBABAD	RAJSAMOND	GANGTOK
646. SNV AUTOMOBILES PVT LTD (M7NA-M7-01), KHASRA ANO- 564 , SIKARI KALAN , MEERUT ROAD , MODINAGAR - 201204	660. MSM (JJ IMPEX) (M983-M9-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL AREA - 201010 PH -9711474930.	673. TECHNOY MOTORS INDIA PVT LTD (X2NA-X2-S1)	683. ENTEL AUTOS (B9NA-B9-S1)
MORADABAD	SHAHJAHANPUR	RISHIKESH	HOWRAH
647. AKANKSHA AUTOMOBILES PVT LTD (B4NA-B4-01), RTO ROAD, LAKRI FAZALPUR, NEAR RAJAN OVERSEAS, MORADABAD - 244001	661. SUMITRA DS MOTORS PVT LTD (W2NA-W2-01), SH25 , RETI ROAD SHAHJAHANPUR	674. SHAKUMBARI AUTOMOBILES (AASN-AAS-01), GURUDEV PLAZA, 279/1, HARIDWAR ROAD, OPPOSITE GOVERNMENT P.G. COLLEGE, RISHIKESH, DISTRICT DEHRADUN	684. MACHINO TECHNO SALES LTD (X7NA-X7-01), 109 , 1, UPPER FORESHORE RD, CHOURA BUSTEE, SHIBPUR, HOWRAH, WEST BENGAL 711102 - 711102 PH -9830081632.
648. AKANKSHA AUTOMOBILES PVT LTD (B4NA-B4-S1) - 0	SIKANDRABAD	ROORKEE	JALPAIGURI
NAUGARH	662. SKUNIVERSE AUTOMOBILE PVT LTD (CWQN-CWQ-01), 2328, OPP. AGRASEN INTER COLLEGE, DANKAJR ROAD, SIKANDRABAD, DIST.-BULANDSHAHR (UTTAR PRADESH). - 203205	675. SHAKUMBARI AUTOWHEELS PVT LTD (H2NA-H2-01), 5 KM MILESTONE ,NH-58 ROORKEE,DELHI ROAD ,NEAR HOTEL GODWARI,ROORKEE, UTTARAKHAND - 247667	685. PODDAR CAR WORLD PVT LTD (XYNA-XY-01), ASSAM MORE BUS STOP, SH12A, JALPAIGURI, WEST BENGAL 735102 - 735102 PH -8945533002.
649. SMARTWHEELS (QGNA-QG-01), GATA NO. 110, 111, 112 & 113, GRAM-PIPPA, POST- CHAURI MAHULANI, NEAR PAKDI CHAURAHA, TEHSIL-NAUGARH DIST. SIDDHARTHANAGAR, UTTAR PRADESH, 272153 - 272153	SITAPUR	RUDRAPUR	JHARGRAM
NOIDA	663. CONCEPT CARS LIMITED (6MNA-6M-01), PLOT NO 279 , CANTT STATION	676. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U4NB-U4-01), KASHIPUR ROAD, OPPOSITE GREEN PARK COLONY, VILLAGE DIBDIBA, TEHSIL BILASPUR, RAMPUR, UTTARAKHAND - 244901	686. BHANDARI AUTOMOBILES PVT LTD (BUGN-BUG-01), PLOT NO 200, KHAITAN NO 502 JL NO 370, MOUZA - JHAMDA PS JHARGRAM, DIST - JHARGRAM - WEST BENGAL
650. FAIR DEAL PREMIUM WHEELS PRIVATE LIMITED (A1ND-A1-01), A-107, SECTOR-5, NOIDA - 201301	SRINAGAR (UK)	VIKASNAGAR	KHARAGPUR
651. MOTORCRAFT SALES PVT LTD (59NB-59-01), C 42 SECTOR 57, NOIDA, UTTAR PRADESH - 201301	664. SHAKUMBARI AUTOWHEELS PVT LTD (ANAN-AN-01), KHATA NO 26/339 , KHET NO 221 , KATULASYUN , SRINAGAR, PAURI	677. ROHAN MOTORS LTD (RINA-RI-01), KHASRA NO 5587 ,C/O BHARAT NEGI, NEAR SVM INTER COLLEGE, BABU GHAR, VIKASNAGAR, DEHRADUN WARD NO 6, UTTARAKHAND	687. BHANDARI AUTOMOBILES PVT LTD (G7NA-G7-01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301 PH :7603076061.
652. VIPUL MOTORS PVT LTD (A1NB-A1-S1) - 0	VARANASI	UTTARAKHAND	KOLKATA
653. VIPUL MOTORS PVT LTD (A1NB-A1-01), C1 SECTOR 57, NOIDA - 201301 - 201301	665. AGR AUTOMOBILES PVT LTD (84NA-84-01), ARAZI NO - 285,286 LUCCHERPUR, PARGANA-ATHGAWA TEHSIL, HARHUA , VARANASI - 221105	RUDRAPRAYAG	688. JYOTE MOTORS (BENGAL) PVT LTD (06ND-06-01), MIRANIA ROAD, ARUPOTA ON BASANTI HIGHWAY, - 700105 PH :9074158220.
654. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (A1NE-A1-01), B-51, HOISERY COMPLEX, NOIDA (U.P.) - 110025	666. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (84NB-84-01), HARDATTAPUR, MOHANSARAI, VARANASI-ALLAHABAD ROAD, VARANASI - 221001	678. ROHAN MOTORS (IKNA-IK-01), KHASRA NO. 149, 150, 151, KHATA NO. 7, RAINTOLI PUNAR, NEAR BATALION 10 HOTEL, BADRINATH ROAD, RUDRAPRAYAG	689. MACHINO TECHNO SALES LTD (06NG-06-01), 98/A/2 BT ROAD,P.S - BARANAGAR, P.O. - ISI BT ROAD, KOLKATA, WEST BENGAL - 700090.
PRATAPGARH	UTTARAKHAND	WEST BENGAL	690. PREMIER CARWORLD PVT LTD (06NB-06-C1), PLOT NO 123,MICHEAL NAGAR, BESIDE NATIONAL MODEL HIGH SCHOOL, NEAR HP GYANI PETROL PUMP, KOLKATA , WEST BENGAL - 700133 - 700133
655. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (NKNA-NK-01), GATA NO 287,VILLAGE GOPALPUR, SADAR, PRATAPGARH ,UTTAR PRADESH.	DEHRADUN	ASANSOL	

Nexa Workshop (AS ON 31.01.2026)

691. DEWARS GARAGE LIMITED (06NH-6-01), 1696/A,
LASKARAHAT, NAZIRABAD, P.S. - SONARPUR,
KOLKATA - 700150 - 700150

692. ONE AUTO (06NI-06-01), LR DAG NO
273,274,275,276 JL NO 20, RS NO 36 LR
KHAITAN NO 217, PS THAKURPUKUR DIST -
SOUTH 24 PARGANAS PIN 700104 - 700104

KOLKATA (TARATALA)

693. BHANDARI AUTOMOBILES (06NA-06-01), 1/NEW,
TARATALA ROAD, KOLKATA, WEST BENGAL -
700088

RANAGHAT

694. STARBUST MOTORS PVT LTD (BBTN-BBW-02),
NH 34 RANAGHAT, NEAR BEGOPARA,
CATHOLIC CHURCH NADIA WEST BENGAL -
741232 - 741232

SILIGURI

695. SEVOKE MOTORS PVT LTD (43NA-43-01), WARD
NO 42, 3RD MILE, NEXA, SEVOKE RD, NEAR
SONA PETROL PUMP, CHAYAN PARA,
SALUGARA, SILIGURI, WEST BENGAL - 734008

SREERAMPORE

696. STARBUST MOTORS PVT LTD (BBTN-BBT-01),
NEAR ALLAHABAD BANK, MOLLARBER,
SERAMPORE.

ANDHRA PRADESH**CUDDAPPAP**

1. SIVAJI MOTORS (3275--), BESIDES PADMASHALI KALYANA MANDAPAM, MADRAS ROAD, KADAPA-516002, ANDHRA PRADESH - 516002
PH :9849113189.
2. S V AUTO MOBILES WORKS (1030--), SANKARA PURAM, CUDDAPAH (A.P.), - 516002
PH :9704209620.

GUNTAKAL

3. S. MAHABOOB AUTOMOBILES (4075--), ALUR ROAD, GUNTAKAL-515802, - 515802
PH :9440208312.

GUNTUR

4. S. S. MOTORS (4946--), OPP. JKC COLLEGE, JKC COLLEGE ROAD, GUNTUR-522006, ANDHRA PRADESH - 522006
PH :9848936363.

KAKINADA

5. SATISH AUTO CARE (5038--), BEHIND KALPANA THEATRE, BEACH ROAD KAKINADA, DISTRICT EAST GODAVARI, ANDHRA PRADESH - 533005
PH :9848313599.
6. SRI SHIRDI SAI TECHNOLOGISTS (1459--), FLAT NO 36/2, I.D.A, RAMANAYYAPETA, BESIDE MAHINDRA SHOW ROOM, OPP: BHAVANI CASTING ROAD, KAKINADA - 533005 - 533005
PH :9848633366.

KAVALI

7. KAMAL MOTORS (3842--), 10-15-43/J3A OPP LIC, TANK ROAD, KAVALI, - 524201
PH :9440828888.

KURNOOL

8. SRI SRINIVASA AUTO GARAGE (5170--), KALLUR ROAD, KURNOOL, DISTRICT - KURNOOL, ANDHRA PRADESH - 518002
PH :9440244660.

MACHILIPATNAM

9. SRI MARUTI MECHANICAL WORKS (4172--), D.NO 4-121, PLOT NO 26.27, .POTEPALLI INDUSTRIAL PARK, MACHILIPATNAM- 521002, - 521002
PH :9440538012.

MANDAPETA

10. MODERN MARUTI CARE (4866--), D.NO. 4-1-59/2, MAIN ROAD, MANDAPETA-533309, DISTRICT-EAST GODAVARI, ANDHRA PRADESH - 533309
PH :9133198494.

MATHURAWADA

11. ANY TIME SERVICE CENTRE (4860--), D. NO. 1-55 (NH-16), POTHINAMALLAYYA PALEM, MADHURAWADA, VISAKHAPATNAM - 530041, ANDHRA PRADESH - 530048
PH :8977799888.

NAGARI

12. PUJITHA SERVICE CENTER (5872--), TIRUPATI ROAD, NAGARI-517583, DISTRICT-CHITTOOR, ANDHRA PRADESH - 517583
PH :9966106128.

NANDYAL

13. MARUTI MOTORS (2635--), PLOT NO 428, NH-18, NEAR RAILWAY GATE, NANDYAL- 518501, - 518501
PH :9440554617.

NELLORE

14. MARUTI AUTO SERVICE STN. (2620--), 16/796 SANKARA AGRAHARAM, NELLORE-524 001 (A.P.), - 524001
PH :9885981905.
15. MARUTI MOTORS (176--), 16-3-995, MINI BYPASS ROAD, RAMALINGAPURAM, NELLORE-524 003 (A.P.), - 524003
PH :9440278243.

PATTIKONDA

16. ROYAL MOTORS (5776--), ADONI ARTS & SCIENCE, COLLEGE ROAD ADONI,PATTIKONDA-518302, DISTRICT-KURNOOL, ANDHRA PRADESH - 518302
PH :9866362847.

PRODDATTUR

17. SRI RAM MOTORS (3642--), 189 INDUSTRIAL AREA, NEAR SRI LAKSMI NAGAR, MYDUKUR ROAD, PRODDATUR (A.P.) - 516360
PH :9666890525.

RAJAHMUNDRY

18. MARUTHI MOTORS (1257--), D.NO 88-30-04, OPP I.T.C. GADALAMMA NAGAR, NH-16, RAJAMAHENDRAVARAM - 533107, - 533107
PH :9848253434.

SRIKALAHASTI

19. SUNDEEP CARS (5972--), 16/550, PANAGAL ROAD, OPP. NTR PARK, SRIKALAHASTI - 517644, TIRUPATI DISTRICT, ANDHRA PRADESH - 517644
PH :9848294869.

TENALI

20. RAHUL MOTORS (5157--), D. NO. - 19-15-26, BESIDE NUKALA RAMA KOTESWARA RAO KALYANA MANDAPAM (OLD THEATRE), BOSE ROAD, TENALI, ANDHRA PRADESH - 522201
PH :9490187453.

VISAKHAPATNAM

21. SIRI AUTOMOBILES (5232--), PLOT O 94/A IDA E BLOCK, AUTO NAGAR,GAJUWAKA, VISAKHAPATNAM, ANDHRA PRADESH - 530012
PH :9963296667.

22. SRINIVASA AUTO GARAGE (5440--), OPP. KANTI ROAD, NEAR RAYS PETROL PUMP - VISAKHAPATNAM, DISTRICT - VISAKHAPATNAM, ANDHRA PRADESH - 530031
PH :9912688943.

23. VIZAG AUTO SCANS (461--), 49-52-1/4/2, 80 FEET ROAD, OPP. HNR VIHAR APARTMENTS, SANTHIPURAM, SANKARAMATAM ROAD, VISAKHAPATNAM -530016 - 530016
PH :9246625885.

VIZIANAGARAM

24. VIKRAMA AUTOMOBILES (4621--), 17-13-4 TEMPLE STREET, VIZIANAGARAM - 531 202 (A.P.), - 535003
PH :9440192224.

ARUNACHAL PRADESH**ALONG**

25. BAANU MOTORS (1744--), SIYOM MARKET, ALONG, WEST SIANG DISTT., (ARUNACHAL PRADESH) - 791001

BOMDILA

26. GURU MOTORS (3921--), BIRPUR, RUJPA, ARUNACHAL PRADESH 790003, - 790003
PH :7640898278.

NIRJULI

27. SANGO SERVICE CENTRE (5742--), LEKHI VILLAGE, NH-415, NEAR MAHINDRA AUTOMOBILE, NAHARLAGUN, ARUNACHAL PRADESH - 791110 - 791110

TAWANG

28. TAWANG MARUTI SERVICING STATION (4255--), OLD BAZAR LINE, P.O. & P.S., TAWANG, ARUNACHAL PRADESH - 790104
PH :9402493456.

ZIRO

29. HILLS AUTO AGENCY (3922--), POLICE RESERVE & PETROL PUMP ROAD, HAPOLI BAZAR, P.O. ZIRO, DISTT. LOWER SUBANSIRI, ARUNACHAL PRADESH - 791 120 - 791120
PH :9436047232.

ASSAM**BADARPUR**

30. MARUTI CAR PLAZA (3635--), NEAR INDUSTRIAL AREA, S.T. ROAD, BADARPUR, DISTT. KARIMGANJ (ASSAM) PIN-788 806 - 788806
PH :9854970591.

BISHAWANATH CHARIALI

31. BINA AUTOMATION (3677--), . P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176 - 784176
PH :9957309744

32. DISHANG DONE (1058--), 52 N.H., BISHWANATH CHARIALI-784176, DISTT. SONITPUR, ASSAM - 784176
PH :9854004161.

33. BINA AUTOMATION (--), P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176 - 784176
PH :9957309744.

BOKAJAN

34. SHREE GANESH MOTORS (6040--), SUKHANJAN GF ROAD, P.O.BOKAJAN(C.F.), DISTRICT KARBI ANGLONG, ASSAM - 782480
PH :9435167138.

BOKAKHAT

35. GOENKA AUTOMOBILES (2878--), P.O. BOKAKHAT, DISTT. GOLAGHAT, ASSAM-785 612, - 785612
PH :9854048910.

DHALIGAON

36. ADHIKARY MOTOR WORKS (4049--), KUKURMARI, DHALIGAON, DIST. - CHIRANG, ASSAM - 783385 - 783385
PH :9435020938.

DHEMAJI

37. NARAH AUTOMOBILES (3852--), C/O BLUE HILL COUNTER, P.O. DHEMAJI, DISTT. DHEMAJI, PIN-787 057 (ASSAM) - 787057
PH :9954390916.

DHUBRI

38. BRAHMAPUTRA MOTOR SERVICING STATION (3127--), G.T.B ROAD, DHUBRI-783 301, (ASSAM), - 783324
PH :9101176148.

DIBRUGARH

39. GEE DEE AUTO SERVICE (953--), JHALUKPARA, DIBRUGARH-786 001, ASSAM, - 786001
PH :9435131119.

40. MEHBOOB AUTOMOBILES & TYRE SERVICES (1760--), CHOWKIDINGHEE, NEAR STATE TRANSPORT, DIBRUGARH-3, - 786005
PH :9854432207.

DIGBOI

41. GAURI AUTOMOBILES (3760--), MULIABARI, DIGBOI 786 171, - 786171
PH :9435137556.

DOOM DOOMA

42. S K AUTO CARE (3962--), UCHAMATI, NATIONAL HIGHWAY, DOOM DUMA, ASSAM 786151 - 786151
PH :9435135876.

Maruti Authorized Service Station (AS ON 31.01.2026)

GOALPARA	54. CHINAKI SERVICE STATION (8963--), (MARUTI AUTHORISED SERVICE STATION), NATUN NAGAR A.T. ROAD, MORANHAT-785 870, (ASSAM) - 785670 PH -9401512821.	64. AUTO MAKERS (934--), MAKUM ROAD, UDYOG NAGAR, TINSUKIA -786 146 (ASSAM), - 786146 PH -9435035341.	HAJIPUR
43. BHARAT ENGINEERING WORKS (969--), PO - BALDMARI, AGIA ROAD, GOALPARA (ASSAM) -783 102. - 783102 PH -9864767777.	MORIGAON	TITABAR	76. ALFA AUTO (5454--), PASWAN CHOWK, NH-13, HAJIPUR, DISTRICT - VAISHALI, BIHAR - 844101, - 844101
GOLAGHAT	55. PRAGATI MOTORS (5273--), MORIGAON TOWN, WARD NO.1, BHATBOR-, DOLON PATH, P.O.: MORIGAON, DISTRICT - MORIGAON, ASSAM - 782105 PH -9435064356.	65. SHANKAR AUTO WORKS (5174--), C/O:SHIV SHAKTI AUTO WORKS.BALAJI, MARKET TITABAR CHARIALI TITABAR, DISTRICT - JORHAT, ASSAM - 785630	77. HI-TECH AUTOMOBILES (3123--), GANDHI SETU PATH, N.H.-19, HAJIPUR, VAISHALI (BIHAR) - 844101 PH -9835044502.
44. KAKOTI MOTOR WORKS (1074--), NEW AMOLAPATTY, RANGPUR, P.O. GOLAGHAT-785 621, DIST. GOLAGHAT (ASSAM) - 785621 PH -9435053663.	NAGAON	UDALGURI	KAHALGAON
GOSSAIGAOIN	56. DAS MARUTI MOTOR WORKS (3734--), NAGAON -782001, ., (ASSAM) - 782002 PH -9435360246.	66. RENU MOTORS (4543--), WARD NO. 2, U.T. ROAD, UDALGURI TOWN, UDALGURI-784509, ASSAM - 784509 PH -9854348875.	78. MAHA GAURI ENTERPRISES (5822--), NTPC ROAD,GANGANAGAR ,CHOWRATHIYASTHAN, KAHALGAON-813203, DISTRICT-BHAGALPUR, BIHAR - 813203 PH -9431463558.
45. A.R. AUTOMOBILES (4544--), NH-31C, HABRUBIL, GOSSAIGAOIN, DIST KOKRAJHAR, ASSAM-783360 - 783360 PH -9435109765.	NALBARI	ARRAH	MADHEPURA
HAILAKANDI	57. B.R.K. AUTOMOBILES ENGINEERING WORKS (2838--), HAJO ROAD, NALBARI-781 335, (ASSAM), - 781335 PH -9954895264.	67. ANJALI ENTERPRISES (5533--), ARRAH - PATNA MAIN BYPASS ROAD, NH-30, AHIRPURWA, OPPOSITE SURYA MANDIR, ARRAH, BIHAR -802232 - 802232 PH -9304910843.	79. KRISHNA AUTOMOBILES (2639--), SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR) - 852213 PH -9430583338.
46. RONOK AUTOMOBILES (5978--), LALA ROAD,NEAR CIVIL HOSPITAL, HAILAKANDI-788151, DISTRICT-HAILAKANDI, ASSAM - 788151	NAMRUP	AURANGABAD (BIHAR)	MADHUBANI
HOJAI	58. RAJ ENTERPRISES (3849--), NAMRUP INDUSTRIAL ENTERPRISES, SONARI TINIALI, PARBATPUR, NAMRUP-786 623 (ASSAM) - 786623 PH -9854135646.	68. K R N AUTOMOBILE (2242--), NEW G.T. ROAD, (NH-2), AURANGABAD-824 101, (BIHAR) - 824101 PH -934930657.	80. VIDYAPATI AUTOMOBILE (4234--), BHAUARA, GANGASAGAR, MADHUBANI, BIHAR - 847212 - 847212
47. PRAMAN MOTORS (5730--), WARD NO. 12, HOLDING NO. 14, COLLEGE ROAD, HOJAI, ASSAM-782435, - 782435 PH -9954369700.	NORTH LAKHIMPUR	BEGUSARAI	MUNGER
JONAI	59. GREENLAND MARUTI WORKS (2974--), TOWN BANTOW, NH-15, WARD NO.-14, NORTH LAKHIMPUR, LAKHIMPUR, ASSAM - 787001 - 787031 PH -9435086197.	69. K.B. MOTORS (4768--), NH-31, SINGHAUL, POKHAR, BEGUSARAI-851134, BIHAR - 851134	81. SUNBEAM ENGINEERING WORKS (1533--), 150 BETWAN BAZAR, NEAR KHANKAH, P.O & DISTT. MUNGER, BIHAR - 811201 - 811201 PH -9931962944.
48. BOROAH MOTORS (4545--), NH-515, MURKONG SLEEK, DIST. DHEMAJI, JONAI-787060, ASSAM - 787060 PH -9864590237.	PATHSALA	70. NATIONAL AUTO WORKS (1536--), INDUSTRIAL AREA, BARAUNI, BEGUSARAI-851 122, - 851122 PH -9973381733.	MUZAFFARPUR
KARIMGANJ	60. USHA AUTOMOBILES (4240--), N.H 31,PATHSALA-781325, DISTRICT-BARPETA, ASSAM, - 781325 PH -9401310431.	BHAGALPUR	82. DYNAMIC MARUTI SERVICE CENTRE (1163--), HARI SHARAN MARG, AMGOLA, POST OFF RAMNA, MUZAFFARPUR-842 002, - 842002
49. S D AUTOMOBILE (4931--), SILCHAR ROAD, KARIMGANJ - 788710, ., - 788710	SILAPATHAR	71. RUPRA AUTOMOBILE (1577--), EAST OF AIRPORT, BHAGALPUR-813 210, P.O. BAHADURPUR, (BIHAR) - 813210 PH -9334385521.	83. PERFECT MOTORS (3485--), NEAR CHANDNI CHAUK, JHITKAIYA, POST: MIT PS: BRAHAMPURA, MUZAFFARPUR-842 003 (BIHAR) - 842003 PH -9835007407.
LUMDING	61. BORLUIT MOTOR (9035--), KHANAMUKH, P.O/P.S -SILAPATHAR, DIST-DHEMAJI, ASSAM PIN-787059 - 787059 PH -8638981308.	BIHAR SHARIF	PATNA
50. BEDI MOTORS (5827--), MAIN ROAD,NORTH LUMDING LUMDING-782447, DISTRICT - NAGAON, (ASSAM), - 782447 PH -9957333991.	SILCHAR	72. SARVODAY ENGG. & AUTO SERVICE (1549--), INDUSTRIAL ESTATE, RAMCHANDRAPUR, BIHARSHARIF,NALANDA, BIHAR - 803101 PH -9334672919.	84. CAR SCANNER (9039--), OPP. BATA, KANKAR BAGH COLONY, PATNA-800 020, - 800020 PH -9431016342.
MANGALDAI	62. CARDROME (1559--), 2ND LINK ROAD JUNCTION, SONAI ROAD (M H C ROAD), SILCHAR-788 006, (ASSAM) - 788006 PH -9435071212.	CHAPRA	85. GOOD WRENCH SERVICES (3364--), NH 30, BETWEEN BHARAT PETROLEUM & HP PETROL PUMPS, . 1 KM WEST OF 10 MILE, ASHOCHAK, NANDLAL CHAPRA, PATNA - 800007, - 800007 PH -9277772777.
51. PRIYAM AUTOMOBILES (2424--), NH 52 COLLEGE ROAD, MANGALDOI, ASSAM, PIN-784 125 - 784125	TEZPUR	DARBHANGA	86. MOHINI AUTOMOBILES (1049--), BEHIND RESERVE BANK OF INDIA, EXHIBITION ROAD, PATNA-800 001, - 800001
MARGHERITA	63. POOJA MOTOR WORKS (4373--), N.T. ROAD, MURATETLI, TEZPUR-784001, ASSAM - 784001 PH -9957907256.	73. PRASAD AUTOMOBILES (1974--), BHAGWAN BAZAR, CHAPRA-841 301, (BIHAR), - 841301	87. TRIPUATI AUTO (1956--), ASHIANA MORE, BAHAI ROAD OPPOSITE UNION BANK, RAJABAZAR, PATNA-14 - 800014
52. VIRDI MOTOR WORKS (955--), MISSION ROAD, P.O. MARGHERITA-786 181, DIST. TINSUKIA, (ASSAM) - 786181 PH -8011164932.	TINSUKIA	GAYA	PURNEA
MARIANI		75. AUTO CARE (3027--), DURGA BARI, HARIDAS CHATTERJEE LANE, NEAR SAINT PAUL SCHOOL, GAYA-823 001 (BIHAR) - 823001 PH -9102060955.	
53. VASKAR AUTOMOBILES (5237--), NEAR NST TINIALI P.O. -MARIANI, DISTRICT - JORHAT, ASSAM, - 785634 PH -9508486813.			
MORANHAT			

88. AUTO INDIA (3026--), SRI DHAM MANDIR, PURNEA CITY, PURNEA 854302 - 854301 PH :99470204501.
- SASARAM**
89. TRIPITY CAR SERVICE CENTRE (5535--), NEAR RELIANCE PETROL PUMP, G.T. ROAD,NH-2,SASARAM-821115, DISTRICT-SASARAM, BIHAR - 821115 PH :9934792421.
- SITAMARHI**
90. SITAMARHI AUTO CARE (6050--), INDUSTRIAL AREA,RAJOPATTI, PO.SITAMARHI-843302, DISTRICT-SITAMARHI, BIHAR - 843302 PH :9430012437.
- CHANDIGARH**
91. CAR CLINIC (179--), PLOT NO-81, INDUSTRIAL AREA, PHASE-2, CHANDIGARH, - 160002 PH :9417216782.
92. HI-TEK MOTORZ (4743--), PLOT NO. 695, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002 PH :9872567868.
93. RATTAN MOTORS (1155--), SECTOR 23-C, CHANDIGARH-160 023, - 160023 PH :9814008335.
- CHHATTISGARH**
- AMBIKAPUR**
94. MARUTI AUTO CARE (4839--), KHARSIA NAKA, AMBIKAPUR -497001, DISTRICT-SURGUJA, CHATTISGARH - 497001 PH :9425256087.
- JAGDALPUR**
95. VISHWAKARMA AUTOMOBILES (4467--), RAJMAHAL PARISHAR, CHAMBER OF COMMERCE ROAD, JAGDALPUR, CHATTISGARH, 494001 - 494001 PH :9753300033.
- KORBA**
96. AUTO SELF SERVICE (8940--), RAILWAY STATION CANAL ROAD, NEAR SUNALYA RAILWAY CROSSING , MURARKA GALLI, KORBA, CHATTISGARH -495678 - 495678 PH :9229495000.
- MANENDRAGARH**
97. SHARMA AUTO CENTRE (5354--), MAIN ROAD - MANENDRAGARH, DISTRICT - KOREA , PIN - 497442, CHHATTISGARH - 497442 PH :7771011802.
- RAIPUR**
98. SHIVAM CAR SERVICES (4774--), BILASPUR ROAD, KHAMATARI, RAIPUR-492006, CHATTISGARH - 492006 PH :9039090522.

AND NAGAR HAVELI AND DAMAN A DAMAN

99. CAR ZONE (4358--), SURVEY NO. 70/3, VARKUND, OPP VEERA DA DHABA, VAPI DAMAN ROAD, DAMAN-396210 - 396210 PH :9824184449.
100. TOP GEAR (5469--), DAMAN-KUNTA ROAD,KUNTA DAMAN-396210, DISTRICT - UNION TERRITORY , GUJARAT, - 396210 PH :9825631264.
- DELHI**
101. AAPKA KARKHANA (MOTORS) PVT. LTD. (869--), 62/1 POSANGIPUR MAIN MARKET, A-3 BLOCK JANAKPURI, NEW DELHI-58, - 110058 PH :9811034869.
102. ANAND MOTORS (4471--), B-27, G.T. KARNAL ROAD, INDUSTRIAL AREA, NEW DELHI-110033 - 110033 PH :9582379699.
103. A-ONE AUTOMOBILES (3362--), 487/35 NATIONAL MARKET, PEERAGARHI, DELHI-110 087, - 110087 PH :9810257472.
104. AUTO ENGRS.SERVICE STN. (8023--), OPP.MODEL TOWN, DERAWAL NAGAR, DELHI-9, - 110009 PH :9811137929.
105. AUTO POINT SERVICE (1267--), 70B RATTAN PARK, OPP. RAMESH NAGAR, NEW DELHI-110 015, - 110015 PH :9958062220.
106. AUTOTECH ENGINEERS (4551--), PLOT NO. 20-24, MATIYALA VILLAGE, SECTOR-3, NEAR DPS DWARKA, NEW DELHI-110075 - 110075 PH :9811608008.
107. BASANT MOTORS (8003--), 78 TOLSTOY LANE, BEHIND SCINDIA HOUSE, NEW DELHI-110 001, - 110001 PH :9811522266.
108. BHAGIRATHI MOTORS (4737--), PLOT NO. 153/543, POOTH KHURD, DELHI-110039, - 110039 PH :9810804556.
109. BHASIN SERVICE STATION (830--), DR.K.S.KRISHNAN ROAD, NEAR PUSA GATE, NEW DELHI-110 012, - 110012 PH :9971977992.
110. BRIGHT MOTORS (P) LTD. (885--), C-263 PEERAGARHI, OUTER RING ROAD, DELHI - 110 087, - 110087 PH :9810203018.
111. DRIVEWELL SERVICE STATION (866--), 1/486,G.C.S. COMPLEX,MAIN G.T. ROAD , DILSHAD GARDEN,NEW DELHI-110095 , DELHI - 110095 PH :9811020603.

112. ENGINEERS SERVICE STATION (834--), SHRI AUROBINDO MARG, (SAFDARJANG AIRPORT), NEW DELHI- 110 003, - 110003 PH :9654262892.
113. EXCEL AUTO MOBILES (3342--), PLOT NO.78, BAGDOLA VILLAGE, SECTOR-8, DWARKA, NEW DELHI - 110077 - 110077 PH :7011765194.
114. EXCLUSIVE AUTOMOBILES PVT. LTD. (3546--), 98 MANGOLPUR KALAN, SECTOR-2 NEAR JAIPUR GOLDEN HOSPITAL, ROHINI, DELHI-110 085 - 110085 PH :9910782127.
115. GLOBE SERVICE STATION (8961--), A-17, B1, EXTENSION MCIE, MATHURA ROAD, BADARPUR, DELHI-110 044, - 110044 PH :9540944009.
116. HUNDRED PERCENT (8967--), LSC, SECTOR-9, OPP. NHAJ, DWARKA, NEW DELHI-110075 - 110075 PH :8130301833.
117. IMAGE (2561--), IOC PUMP, NEAR SAMACHAR APT. OPP. KIRTI APT., MAYUR VIHAR PHASE-I EXT., DELHI-110 091 - 110091 PH :9312082213.
118. R S AUTOMOBILES (273--), 111/9 KISHANGARH, OPP. ONG PUMP NEAR SPMY INSTITUTE, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI - 110070 - 110070 PH :9540944009.
119. KUMAR AUTOMOBILES (855--), B-281 OKHLA INDUSTRIAL AREA, PHASE-I, NEW DELHI-110 020, - 110020 PH :9810001625.
120. NAVEEN AUTOMOBILES (4934--), 37, PATPARGANJ INDUSTRIAL AREA, NEW DELHI-110092, - 110092 PH :9911278537.
121. NORTHERN SERVICE STATION (337--), SARAI BASTI, ROAD NO.40, OPP. SHASTRI NAGAR, DELHI-35 - 110035 PH :9213710643.
122. P R G MOTORS (365--), A-99.103CH.TEKCHAND MARKET, GANESH NAGAR - TILAK NAGAR, DELHI-110 018, DELHI - 110018 PH :9811196811.
123. QUTAB SERVICE STATION (8078--), MEHRAULI ROAD, NEW DELHI-110 017, - 110017 PH :9811021862.
124. RAJINDRA SERVICES P.LTD. (826--), B-55 G.T.KARNAL ROAD, INDUSTRIAL AREA, DELHI-110 033, - 110033 PH :9899580820.
125. ROHAN SERVICES (5444--), PLOT NO:125,VILLAGE POCHANPUR, SECTOR - 23 DWARKA, DISTRICT - DELHI (WEST), DELHI - 110075 PH :9911180827.

126. SATYA SERVICE STATION PVT. LTD. (3625--), L-BLOCK HARI NAGAR, JAIL ROAD, NEW DELHI-64, - 110064 PH :9873461414.
127. SEVEN HILLS AUTOMOBILES PVT LTD. (848--), D-20/1 OKHLA INDUSTRIAL AREA, PHASE II, NEW DELHI-110 020., - 110020 PH :9811037954.
128. SHALIMAR AUTOMOBILES PVT. LTD (871--), C-91/9 WAZIRPUR INDUSTRIAL AREA, ASHOK VIHAR CROSSING, DELHI-110052, DELHI - 110052 PH :9811171489.
129. SRI BALAJI AUTOMOBILE (8038--), KHASRA NO.33, 13/2-12 MAIN BAWANA ROAD, SAMEYPUR (NEAR DELHI COLLEGE OF ENGG.), DELHI - 110085 PH :9811039601.
130. SRI SAI AUTO ENGINEERS (8074--), 487/59 PEERA GARHI, INDUSTRIAL AREA, DELHI, - 110087 PH :9650531612.
131. WIG AUTOMOBILES (8012--), D-3, S.M.A CO-OP. INDL. ESTATE, (OPP. JAHANGIR PURI CHOWK), G.T. KARNAL ROAD, DELHI-110 033 - 110033 PH :9811297607.
132. YASHWANT PLACE SER.STN. (8022--), AFRICA AVENUE, (OPP.CHANAKYA CINEMA), NEW DELHI-21, - 110021 PH :9868255788.

GOA

BICHOLIM

133. SHREEGURUKRUPA AUTOWORLD (1249--), PLOT NO.76, BICHOLIM INDUSTRIAL ESTATE, BICHOLIM, GOA - 403529 - 403529 PH :9637137129.

CURCHOREM

134. VIPUL AUTOMOBILES (5376--), PLOT NO.7,8,9,KAKODA INSUSTRIAL ESTATE, KAKODA CURCHOREM, DISTRICT - SOUTH GOA, GOA - 403706 PH :9422018746.

KUNDAIM

135. VIKAS ENGINEERING WORKS (4953--), BHOMA, KUNDAIM, GOA-403107, - 403107 PH :9823780335.

MAPUSA

136. SARDESAI AUTOMOBILES (2176--), 194, GAUNSAWADA , NEAR MILAGRES CHURCH, MAPUSA, GOA-403 507 - 403507 PH :9764448741.

PONDA

137. DHAVLIKAR AUTOMOBILES (2041--), NO.5 TIP TON MANSION IV, INDIRA NAGAR, DHAVALI, PONDA, GOA-403 401 - 403401 PH :9890669879.

Maruti Authorized Service Station (AS ON 31.01.2026)

VERNA	BARDOLI	159. VAKHARIA MOTORS (3970--), PLOT NO. 57-60, SURVEY NO. - 16/1, DEESA - PALANPUR HIGHWAY, DEESA, DISTT. - BANASKANTHA, GUJARAT - 385535 PH :9377728841.	169. LANDMARK AUTOMOBILES (1973--), PLOT NO-42, JAMNAGAR- KALVAD ROAD, MAHAFRABHUJI BETHAK ROAD, OPP SUBHASH BRIDGE, JAMNAGAR-361 006, (GUJARAT) - 361006 PH :7600000733.
138. LUBRICARE SERVICES (261--), 7-D GOULLOY, NH.17 NUVEM, SALTETE, GOA-403 601 - 403601 PH :9822124376.	149. POOJA MOTORS (361--), NEAR GIDC, SURAT ROAD, BARDOLI-394 601, (GUJARAT) - 394601 PH :9825762621.	DHARI	JETPUR
GUJARAT		160. GURUKRUPA MOTORS (5876--), NR. NARMADESHWAR MAHADEV TEMPLE, DHARI,AMRELI ROAD,DHARI-365640, DISTRICT-AMRELI, GUJARAT - 365640 PH :9825374658.	170. GIRIRAJ MOTORS (3971--), JUNAGADH HIGHWAY, NEAR JALARAM TEMPLE, JETPUR, - 360370 PH :9727154392.
AHMEDABAD	BHARUCH	DHORAJI	JUNAGADH
139. AUTOWAY (125--), MANGALYA COMPLEX, NEAR ANHALI CINEMA CROSS ROAD, BATTHA, AHMEDABAD - 380007 PH :9825016888.	150. NEW MARUTI MOTORS (5156--), 9/16 AKASH GANGA,B/H CNG PUMP, OLD NH -8,BHOLAV , DISTRICT - BHARUCH, GUJARAT - 392001 PH :9898611424.	161. UNIVERSE AUTO (5837--), SARDAR CHOWK,DHORAJI-360410, DISTRICT-RAJKOT, GUJARAT, - 360410 PH :9727714643.	171. MARUTI MOTORS (266--), G.I.D.C. - I, RAJKOT HIGHWAY, DOLATPARA, JUNAGADH(GUJARAT) - 362001 PH :9099849888.
140. DAHISON MOTORS (143--), NEAR MANAV MANDIR, DRIVE IN ROAD, AHMEDABAD-380 052, - 380052 PH :9898096242.	BHAVNAGAR	GANDHI NAGAR	KALOL
141. MEGHDOOT MOTORS (3437--), SURVEY NO. 478/3, NEAR SABARTAL CROSS ROAD, OPPOSITE BHIMJIPURA SWIMMING POOL, NAVA VAJAD, AHMEDABAD, GUJARAT - 380013 - 380013 PH :9825972345.	151. VIKRAM MOTOR GARAGE (127--), TAKHTESHWAR PLOT, NEAR CHANDRA BHUVAN, BHAVNAGAR - 364 002., - 364002 PH :9427145452.	162. LABH MOTORS (4527--), PLOT NO - B - 206+207 ,, GIDC, SECTOR -25, GANDHINAGAR GUJARAT, - 382024 PH :9825020030.	172. SUNRISE AUTO CENTRE (146--), BLOCK SURVEY NO. 1141, OPP JANPATH PETROLEUM, NEAR SINDBAD HOTEL, AHMEDABAD-MEHSANA HIGHWAY, KALOL, DISTRICT - GANDHINAGAR, GUJARAT - 382721 PH :9879542207.
142. POKAR AUTO REPAIRERS (2479--), NEAR UNION CO. BANK, SAJIPUR BOGHA, NARODA ROAD, AHMEDABAD-382 345 - 382345 PH :9428680515.	BHUJ	163. SHREE ARBUDA MOTORS PVT. LTD. (2151--), G.I.D.C. E-19/10/B, NEAR K-7, SECTOR 26, GANDHINAGAR, GUJARAT - 382026 - 382044 PH :9825041331.	KAMREJ
143. RAJAN MOTORS (8968--), 60, MADHUVAN PARK SOCIETY, B/H. TRAFFIC CHOWKDI, GHODASAR CHAR RASTA, GHODASAR, AHMEDABAD - 380050 - 380008 PH :9825972345.	152. ASHA MOTORS (3629--), NEAR JAY NAGAR BUS STOP, MIRZAPUR HIGHWAY, BHUJ KUTCH, GUJARAT - 370001. - 370001 PH :9825225088.	164. SHITAL MOTORS (134--), 304 G.I.D.C., SECTOR-28, GANDHINAGAR - 382 028 (GUJARAT), - 382028 PH :9924127065.	173. PATEL MOTOR GARAGE (2764--), PLOT NO 1.2.3, NAVAGAM, NR. MANISHA HOTEL, OPP. DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ,, DIST: SURAT-394185 - 394185 PH :9825127413.
144. SPEED AUTO CARE PVT. LTD (5524--), GIDC PLOT NO 12, ODHAV INDUSTRIAL ESTATE, NEAR BRTS GRID STATION, NEXT TORRENT POWER SUB STATION, ODHAV, AHMEDABAD - 380023 PH :9979992779.	BILIMORA	HALOL	KAPADVANJ
AMRELI	153. PATEL AUTOMOBILES (4030--), DANDEKAR COMPOUND, GANDEVI ROAD, BILIMORA, - 396321 PH :9824123875.	165. MAA MOTORS (4767--), GODHRA ROAD, NEAR TELEPHONE EXCHANGE, HALOL, GUJARAT - 389350 PH :9898610212.	174. DISHA MOTORS (5960--), MAHAMADPURA,KAPADVANJ-NADIAD ROAD, KAPADVANJ-387620, DISTRICT-KHEDA, GUJARAT - 387620 PH :9825641244.
145. CAR CARE CENTRE (2734--), PATEL GARAGE, CHAKRAGADH ROAD, AMRELI-365 601, (GUJARAT) - 365601 PH :9825422922.	BORSAD	HIMMATNAGAR	KESHOD
ANAND	154. SPEED AUTO (8953--), I B PETROL PUMP, VASAD-TARAPUR HIGHWAY ROAD, VILLAGE BORSAD, TALUKA BORSAD, DISTRICT ANAND, GUJARAT- 388540 - 388540 PH :9979992779.	166. MEHTA SERVICE STATION (135--), NEAR SHANTI GARDEN, RESTAURANT, DIWALI BAUG MOTIPURA, N.H.8, HIMMATNAGAR, GUJARAT-383 001 - 383001 PH :9428555664.	175. PRASAD MOTORS (3969--), VERAVAL HIGHWAY, KESHOD, - 362220 PH :9825024488.
146. PATEL TRACTOR COMPANY (2221--), (SERVICE DIVISION), BEHIND SUNIL CHAMBERS, STATION ROAD, ANAND-388 001 - 388001 PH :9925534494.	CHAND KHEDA	IDAR	LIMDI
147. SHAKTI MOTORS (2226--), OPP. J.K. PARK, NATIONAL HIGHWAY NO. 48, P.O. VAGHASHI-388 320, TA: ANAND DISTT. ANAND - 388320 PH :9825792999.	155. BALVINDER AUTOMOBILES (8948--), ZUNDAL CIRCLE, BEHINDDWARIKESH PARTY PLOT,NEAR SHAGUN 108,CHANDKHERA, VILLAGEZUNDAL, DISTRICTGANDHINAGAR, GUJARAT -382421 - 382424 PH :9924016000.	167. SUN MOTORS (5175--), IDAR-HIMMATNAGAR HIGHWAY ROAD, AT.KRUSHNAGAR,PO NETRAMLI, TA.IDER DISTRICT SABARKANTA, GUJARAT - 383430 PH :9228286768.	176. PARTH AUTOMOBILES (4171--), OPP.SWAMINARAYAN TEMPLE, NH NO-8A, LIMBDI DIST, SURENDRNAGAR , PIN-363421 - 363421 PH :9426714510.
ANJAR	CHIKHLI (GUJJ.)	JAMKHAMBHALIA	LUNAWADA
148. CAR AGE (5542--), PLOT NO.11, MAHATMA NAGAR-1,ANJAR- , GADHPADAR ROAD,NR.MAHAKALESHWAR, MAHADEV MANDIR,ANJAR , GUJARAT - 370110 PH :9427216886.	156. INAL MOTORS (3929--), POST MAJIGAM, CHIKLI BILIMORA ROAD, DISTT NAVSARI, - 396521 PH :9099033773.	168. SHRI HARI OM MOTORS (9023--), AT. JAMNAGAR DWARKA HIGHWAY ROAD, OPP. AIR FORCE GATE, JKV NAGAR-8, DHARAMPUR, JAM-KHAMBHALIA, DIST. DEVBHUMI DWARKA, GUJARAT, PIN - 361305. - 361305 PH :9426955344.	177. N.J. MOTORS (4370--), R SURVEY NO 358, MODASA HIGHWAY, MOTA SONELA, LUNAWADA, DIST. MAHISAGAR 389230 - 389230 PH :9924252700.
	DAHOD	JAMNAGAR	MEHSANA
	158. CAR SEVA (2438--), SAINT STEPHEN SCHOOL ROAD, GODHRA ROAD., DAHOD. PIN-389151, - 389151 PH :9426469122.		
	DEESA		

178. SANSKAR MOTORS (5468--), PALAVASANA -BECHARAJI ROAD. , NR.ONGC FIRE STATION MEHSANA-384002 , DISTRICT-MEHSANA, GUJARAT - 384002
PH :9825106359.
179. SHUBH AUTO SERVICES (3367--), NEAR AGRO PETROL PUMP, OLD RTO, RAMOSNA JAKAT NAKA, MEHSANA (GUJARAT) - 384001
PH :9825322460.
- MORBI**
180. ARUN MOTORS SERVICE (2071--), SANALA BYE PASS, NEAR G.P. GINING MILLS, MORBI -363641
PH :9825222825.
- NADIAD**
181. SHIVAM MOTORS (4430--), PLOT NO 35/1, QUALITY SEEDS COMPOUND, NEAR BHUTIA BUNGLOW, DABHAM, NADIAD, DISTRICT KHEDA, GUJARAT - 387320 - 387320
PH :98252021960.
- NAKHATRAMA**
182. ASHA MOTORS (4340--), NANA ANGLADESH, NAKHATRAMA HIGHWAY ROAD, NAKHATRAMA, KUTCH - 370615
PH :9727499383.
- PETLAD**
183. SIDDIH MOTORS (4166--), OPP. GEB, NEAR RAILWAY CROSSING, NADIAD-KHAMBHAT HIGHWAY, PETLAD, ANAND, PIN-388450 - 388450
PH :7359465067.
- RAJKOT**
184. KHODIYAR MOTORS (356--), DHEBAR ROAD (SOUTH), ATIKA INDUSTRIAL ESTATE, RAJKOT-360 001. - 360001
PH :9426202885.
185. UNIVERSE AUTO (5544--), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM, OCTROI POINT,AHMEDABAD HIGHWAY, RAJKOT-380002, DISTRICT - RAJKOT , GUJARAT - 380002
PH :9879616643.
- RAJPIPLA**
186. R. N. MOTORS (5255--), 22-GIDC NEAR PETROL PUMP , RAJPIPLA, DISTRICT - NARMADA , GUJARAT - 393145
PH :9925325300.
- SAVARKUNDLA**
187. SHYAM MOTORS (8925--), OPP. ESSAR PETROL PUMP, AMRELI ROAD,SAVARKUNDLA-364515, DISTRICT-AMRELI, GUJARAT - 364515
PH :9427742134.
- SIDDHPUR**

188. GOOD LUCK MOTORS (5341--), 2.UMIYA COMPLEX .NEAR GURUKUL , HIGH SCHOOL SIDDPUR , DISTRICT -PATAN, GUJARAT - 384151
PH :9898428989.
- SIHOR**
189. MOMAI MOTORS (6032--), NR. RAJ MOMAI PETROLIUM , BHAVNAGAR-RAJKOT HIGHWAY,SIHOR-364240, DISTRICT-BHAVNAGAR, GUJARAT - 364240
PH :9510201800.
- SURAT**
190. EMPEROR CAR TECH (1748--), F.PLOT NO.124 NEAR RELIANCE COMPLEX, BESIDE SHEETAL MARBLE, SURAT-DUMAS ROAD PLOD, SURAT-395 007 - 395007
PH :9825033396.
191. J.K.MOTORS (5158--), TP-16, FP-8, GAURAV PATH ROAD, PAL, SURAT - 394510, GUJARAT - 394510
PH :9909920902.
192. NILESH MOTORS (5347--), AMBER SHOPPING CENTRE.OPP.SADHNA CHAMBERS, VARACHHA ROAD , DISTRICT - SURAT , GUJARAT - 395004
PH :9377762660.
193. PATEL MOTORS (3060--), 64 BAJRANG NAGAR, NEAR OCTROI CHECK POST, NANA VARCHA, SURAT-395 006 - 395006
PH :9909149498.
194. J.K.MOTORS (-), TP-16, FP-8, GAURAV PATH ROAD, PAL, SURAT - 394510, GUJARAT - 394510
PH :9909920902.
- TALALA**
195. RUBY MOTORS (5942--), TALALA ROAD , RAMRECHI(GIR), DIST - GIR, SOMNATH - 362150. , - 362150
PH :9824061044.
- UMBERGAON**
196. KARAN AUTOMOBILES (2571--), OPP. DAMRUWADI, UMBERGAON SANJAN ROAD, UMBERGAON, DIST. - VALSAD, GUJARAT - 396170 - 396170
PH :9824336583.
- UNJHA**
197. AMBIKA MOTORS (3932--), SADGURU COMPLEX, AHMEDABAD PALAM PUR HIGHWAY ROAD, UNJHA, MEHSANA-384170 - 384170
PH :9824517382.
- VADALI**
198. VRAJ MOTORS (4560--), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT) - 383235
PH :9427364109.
- VADGAM**

199. CHAUDHARY & CHAUDHARY MOTORS (5651--), OPP.RELIANCE PETROL PUMP, PALAMPUR ROAD - VADGAM, DISTRICT - BANASKANTHA, GUJARAT - 385410
PH :9684590698.
- VADODARA**
200. CAR CARE (2229--), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016. - 390016
PH :9825044610.
201. CAR CLINIC (4640--), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT) - 390004
PH :9925003558.
202. DREAM MACHINES (2933--), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA-390 002 - 390005
PH :7575909840.
203. GENERAL MOTOR REPAIRING WORKS (2529--), NEAR LOK SATTA PRESS, NAGARWADA, VADODARA-390 001, - 390001
PH :9825026106.
204. HONEST AUTO STRUCTURE WORKS (279--), 9, VINODBAUG BEHIND HOTEL SANMAN, JETPUR ROAD, VADODARA, PIN : 390005. - 390002
PH :9824014046.
205. MAYUR SERVICE STATION (2224--), NEAR POLICE STATION, PRATAPNAGAR ROAD, BARODA-390 004. - 390001
PH :9879453031.
206. CAR CARE (-), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016. - 390016
PH :9825044610.
- VALIA**
207. HARI OM AUTO CARE (5750--), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJRAT - 393135
PH :9427336094.
- VALSAD**
208. HONEST AUTO GARAGE (2220--), SUGHAR FALIA, BEHIND MOTA GHANCHIWAD, VALSAD-396 001 (GUJARAT) - 396001
PH :9426110767.
- VANTHLI**
209. INFINITY MOTORS (5963--), RAVI RATAN VADLA FATAK , OPP.HP PETROL PUMP ,POST VADLA,TAL VANTHLI-362205, DISTRICT-JUNAGADH, GUJARAT - 362001
PH :9898990120.
- VIRAMGAM**
210. KRISHNA MOTOR GARAGE (4038--), OUTSIDE BHARWADI GATE, NEAR BHARAT PETROL PUMP, VIRAMGAM, - 382150
PH :9426415274.

VIYARA

211. PARTH MOTORS (8928--), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VIYARA, DISTRICT-SURAT, GUJARAT - 394650
PH :9898292020.
- HARYANA**
- AMBALA**
212. BASSAN MOTORS (4964--), 99 TH MALL, AMBALA CATT - 133001, HARYANA, - 133001
PH :9466000000.
213. GURU NANAK MOTORS (2036--), POLICE LINES CHOWK, AMBALA CITY, , - 134003
PH :8708357725.
214. HIRA MOTORS (2740--), AMBALA CHANDIGARH NATIONAL HIGHWAY, BALDEV NAGAR, AMBALA CITY - 134002
PH :9255285212.
215. RAVI MOTORS (8988--), 125 STAFF ROAD, HOTEL SAVOY, AMBALA CANTT-126 102. - 133001
PH :9315110209.
- BADHARA**
216. S.S MOTORS (5735--), 3 KM. SATNALI ROAD, BADHRA - 127308, DISTRICT - CHARKI DADRI, HARYANA - 127308
PH :9255141288.
- BAHADURGARH**
217. G L AUTOMOBILE (5263--), MAIN DELHI ROHTAK ROAD, NEAR LAST METRO PILLAR NO. 912, BAHADURGARH, DISTRICT- JHAJJAR, HARYANA - 124507 - 124507
PH :9416303473.
- BARARA**
218. LUXMI AUTOZONE (5334--), VPO BARARA , DISTRICT - AMBALA, HARYANA, - 133201
PH :8222024046.
- BARWALA (HARYANA)**
219. FAQIR CHAND QUALITY FUELS (5435--), KILLA NO.20L.H.S. NH-65 , CHANDIGARH ROAD - BARWALA, DISTRICT - HISAR, HARYANA - 125121
PH :9991000764.
- BHIWANI**
220. VEER MOTOR WORKSHOP (8958--), 22,23,24 AUTO MARKET, LOHARU ROAD, BHIWANI, HARYANA-127021 - 127021
PH :9416057857.
- BHUNA**
221. MITTAL AUTOMOBILES (5748--), NEAR BUS STAND ,JAKHAL ROAD - BHUNA, PIN-125111, DISTRICT-FATEHABAD, HARYANA - 125111
PH :9813207221.
- FARIDABAD**

Maruti Authorized Service Station (AS ON 31.01.2026)

222. BALAJI SERVICE STATION (4956--), SECTOR 23-24, MAIN ROAD, NEAR BALAJI DHARM KATA, FARIDABAD-121004, HARYANA - 121001	237. OUTAB AUTO PVT. LTD. (3668--), KHEWAT/ KHATA NO 714/909, VILLAGE JHARSA, UNITECH CYBER PARK ROAD, SECTOR 39, GURGAON, HARYANA 122001 - 122001 PH -9811687333.	249. VINAYAK MOTORS (9024--), OPP. MAHARAJA PALACE ,AMBALA HISSAR ROAD , ISMAILABAD-136129 , HARYANA - 136129 PH -9034820190.	260. SAINI MOTORS (2131--), G.T. ROAD, UMRI CHOWK, KURUKSHETRA, (HARYANA) - 136118 PH -9896183931.
223. INSUJH AUTO (377--), 13/3 MAIN MATHURA ROAD, NEAR NHPC CHOWK, FARIDABAD, HARYANA - 121003 - 121003	238. RAJASTHAN AUTO WORKS (4760--), LT. ATUL KARATIA MARG, NEAR PETROL PUMP, AKASHI FILLING STATION, AMAN PURA, SECTOR-5 ROAD, GURGAON-122001 (HARYANA) - 122001 PH -9910070220.	ISRANA	LOHARU
224. KHURANA AUTOMOBILES (2863--), 3C/60 B.P. (OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD, - 121001	239. S G MOTORS (6756--), PLOT NO 494, SECTOR 37., PACE CITY II, VUDYOG VIHAR VI - GURGAON, DISTRICT-GURGAON, HARYANA - 122001 PH -9711770092.	250. SHIV DARSHAN AUTOMOBILES (6051--), ISRANA PANIPAT ROAD, NR. NC COLLEGE, ISRANA-132103, DISTRICT-PANIPAT , HARYANA - 132107 PH -9911386230.	261. BAHAWNA MOTORS (6028--), BHIWANI ROAD, LOHARU-127201 , DISTRICT-BHIWANI , HARYANA - 127201 PH -8901276555.
225. PERFECT AUTOZONE (P). LTD. (5667--), PLOT NO 9, ADJACENT TO UNION BANK OF INDIA, ANKHIR, OPP SEC 21-D, MAIN BADHKAL ROAD, DISTT FARIDABAD, HARYANA - 121001 - 121001	240. M R MOTORS (8946--), VIJAY VIHAR, MAIN SILOKHRA ROAD, SEC-30, GURGAON- 122002 , HARYANA , - 122001 PH -9992111244.	JHAJJAR	MAHENDERGARH
226. SARASWATI AUTOMOBILES (4465--), 44 B.P. NEELAM BATA ROAD, N.I.T, FARIDABAD - 121001	241. SOMESH AUTOMOBILES (455--), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002 - 122002 PH -9650690000.	251. VASUNDHRA MOTORS (1467--), REWARI ROAD, JHAJJAR-124 103, (HARYANA), - 124103 PH -9812012180.	262. SHREE SHYAM MOTORS (8960--), NEAR I.O.C PETROL PUMP, MAHENDERGARH-123029, DISTRICT-MAHENDERGARH, (HARYANA) - 123028
FARRUKHNAGAR	242. TOP GEAR AUTOMOTIVE ENGINEERS (4464--), G-34, REZANG LA ROAD, ASHOK VIHAR PHASE 2, GURGAON 122006 - 122001	JIND	MANDI ADAMPUR
227. M R MOTORS (5946--), GURGAON-JHAJJAR ROAD, OPP. ANAAZ MANDI, FARRUKHNAGAR-123506, DISTRICT-GURGAON, HARYANA - 122506 PH -9810831200.	243. SOMESH AUTOMOBILES (+), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002 - 122002 PH -9650690000.	252. MOHIT MOTORS (1574--), SAFIDON GATE, JIND-126 102 , - 126102 PH -9355129844.	263. MITTAL AUTO AGENCIES (2966--), 113-15 AUTO MARKET, MANDI ADAMPUR, (HARYANA), - 125052 PH -9729173300.
FATEHABAD (HARYANA)	HANSI	KAITHAL	MANESAR
228. DHINGRA AUTOMOBILES (1856--), G.T. ROAD, FATEHABAD, (HARYANA), - 125050 PH -9896012906.	244. VIKAS AUTOMOBILES (4744--), SHANTI NIKETAN, OPP. JIND BYE PASS, G.T. ROAD, HANSI, DISTRICT-HISSAR (HARYANA) - 125033 PH -9466248037.	253. HIND AUTOMOBILES (1858--), AMBALA ROAD, KAITHAL, , - 136027 PH -7015806781.	NILOKHERI
229. MOTOR CRAFT (3064--), OPPOSITE M M COLLEGE, SIRSA ROAD, FATEHABAD, 125050 - 125050 PH -9254080200.	HISSAR	KANINA	264. MAITRI SERVICE STATION (2378--), N.H.8, DELHI-JAIPUR ROAD, MANESAR (GURGAON), - 122001 PH -9818001128.
GANAUR	245. SAI AUTOMOBILES (5267--), TOSHAM ROAD, NEAR AAKASH INSTITUTE, SECTOR-13, HISSAR, HARYANA, - 125001 PH -7988238034.	254. SHREE KRISHNA MOTORS (5953--), BHOOP SINGH MARKET NEAR PETROL PUMP, MAHINDERGARH ROAD, KANINA-123027, DISTRICT-MAHINDERGARH, HARYANA - 123027 PH -9467641678.	NILOKHERI
230. SITA AUTOMOBILES (4260--), 347, WARD NO. 10, BST ROAD, GANAUR, DISTT- SONEPAT - 131101 PH -9992022047.	246. SALASAR AUTO (4735--), OPP. VIDYUT NAGAR GATE NO. 2, DELHI ROAD, HISSAR-125001, HARYANA - 125001 PH -9355486716.	KARNAL	265. SAHIL MOTORS (8974--), NEW NEHSIL ROAD, NILOKHERI, DISTRICT KARNAL , NILOKHERI-132117, HARYANA - 132117 PH -9812510190.
GANGWA	HODAL	255. RUBY MOTORS (4734--), 28/3 HSIDC, NEAR NAMASTEY CHOWK INDUSTRIAL AREA, KARNAL -132001, HARYANA - 132001 PH -9896345633.	PALWAL
231. PANCHMUKHI AUTOMOBILES (5968--), HISSAR RAJGARH ROAD, GANGWA-125001, DISTRICT-HISSAR, HARYANA - 125001 PH -9728100029.	247. VED MOTORS (2247--), HIGHWAY ROAD, NEAR RAILWAY STATION CHOWK, HODAL-121 106, (FARIDABAD) - 121106 PH -7988978936.	KHARKHODA	266. D.K. & R.K. MOTORS (1159--), NEAR BUS STAND , NH-2 PALWAL, PALWAL, - 121102
GOHANA	INDRI	256. PRANAV MOTORS (5771--), SAMPLA ROAD, KHARKAUDA-131402, DISTRICT-SONEPAT, HARYANA, - 131402 PH -9896145161.	267. SHEELA MOTORS (5141--), OPP MUNICIPAL COUNCIL OFFICE, OLD G T ROAD, PALWAL, DISTRICT - FARIDABAD, HARYANA - 121102
232. KRISHNA MOTORS (4132--), ROHTAK ROAD, GOHANA, , - 131301 PH -9017062999.	248. ASHOKA MOTORS (6041--), OPP. PARTAP FILLING STATION LADWA ROAD., TEHSIL-INDRI, DISTRICT-KARNAL, HARYANA, - 132041 PH -8813000316.	KUNDLI	PANCHKULA
GURGAON	ISMAILABAD	257. SHIV SHAKTI AUTOMOBILES (4628--), SECTOR 53, HSIDC, JANTI ROAD, NEAR K.H.I COLD STORAGE, KUNDLI, SONEPAT, HARYANA - 131028 - 131001 PH -9811047480.	268. PANCHKULA AUTO SERVICES (1949--), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA-134 109, (HARYANA) - 134109 PH -9872441546.
233. A & A ENTERPRISES (4639--), 396, PHASE-IV, UDYOG VIHAR, GURGAON (HARYANA) - 122015 PH -8851819511.		KURUKSHETRA	PANIPAT
234. GANGA MOTORS (363--), SHIVPURI, GURGAON-122 001 - 122001		258. KARTAR MOTORS (1645--), RED ROAD, KURUKSHETRA-132 118, , - 136118 PH -9896245900.	269. PREM MOTORS (2266--), PLOT NO.134, SECTOR 25 INDUSTRIAL AREA, PANIPAT, - 132103 PH -9896306380.
235. KUMAR AUTOMOBILES (4848--), KILLA NO 12/2, NEAR BMW TRAINING CENTER, SPR ROAD, GURUGRAM, HARYANA - 122002		259. KARTAR MOTORS (5349--), PLOT O 65-66, SECTOR -2, HUDA INDUSTRIAL, AREA KURUKSHETRA - 136118 PH -9896245900.	PATAUDI
236. MANISH AUTOMOBILES (4777--), GHATA ROAD, WAZIRABAD, NEAR SECTOR-56, GURGAON-122001, HARYANA - 122001			270. SHUBHAM AUTOMOBILES (4641--), REWARI ROAD, PATAUDI, DISTT. GURGAON, - 122413 PEHOWA

272. SHRI SHIVAM AUTOMOBILES (5852--), S.K. ROAD,OPP. ESSAR PETROL PUMP, RADAUR-135133, DISTRICT-YAMUNANAGAR, HARYANA - 135133 PH :9034384003.	283. SHREE GANESH MOTORS (5747--), PLOT NO#29,UKLANA MANDI, DISTRICT-HISSAR, PIN-125113, HARYANA - 125713 PH :8166399836.	293. BHASKAR AUTO SPARE & SERVICE (1730--), 8-B ROURA, SECTOR 1, (NEAR DURGA MANDIR), BILASPUR-174 001 (H.P.), - 174001 PH :9816436001.	304. SPITI MOTORS (6033--), VILL. & PO,KAZA-172114, DISTRICT-LAHAUL & SPITI, HIMACHAL PRADESH. - 172114 PH :9418758974.
REWARI	HIMACHAL PRADESH	CHAMBA	KEYLONG
275. GAUTAM MOTORS (1837--), NARNAUL ROAD, REWARI -123401 (HARYANA), , - 123401 PH :9416064894.	284. SUBH AUTOMOBILES (5964--), SH-39,ALAMPUR-176110, DISTRICT-KANGRA, HIMACHAL PRADESH, - 176082 PH :9816675551.	294. AUTOZONE (5247--), PATHANKOT RAOD ,PAREL , SULTANPUR - CHAMBA , DISTRICT - CHAMBA , HIMACHAL PRADESH - 176310 PH :9418214848.	305. YOLAX MOTORS (3830--), KEYLONG, DISTT. LAHAUL & SPITI, , - 175133 PH :7651031580.
274. PULYANI MOTORS (8994--), OPPOSITE POLICE LINE, DELHI ROAD, REWARI - 123401 PH :9813433433.	AMB	295. KAILASH SERVICE STATION (3527--), MOHALLA TATWANI, NEAR NEW BUS STAND, CHAMBA, HIMACHAL PRADESH - 176310 PH :9896679445.	KULLU
275. SHIVAM SERVICES (1466--), OPPOSITE B.D.O. BLOCK OFFICE, GARHI BOLNI ROAD, REWARI, HARYANA - 123401 - 123401	285. SHUBHAM MOTORS (5933--), NEAR PINDI ASHRAM,HAMIRPUR ROAD, AMB-177203, DISTRICT-UNA, HIMACHAL PRADESH - 177203 PH :9418114176.	DARLAGHAT	306. PURI BROTHER'S (4242--), I.O.C DEALER, DHALPUR, KULLU, H.P. - 175101 PH :9418395358.
SADHAURA	ANNI	296. CHANDEL SERVICE STATION (5233--), DARLAGHAT , DISTRICT-SOLAN, HIMACHAL PRADESH, - 171102 PH :9816039865.	KUMARHATTI
276. SHREE GANESH MOTORS (5959--), NEAR INDIAN OIL PETROL PUMP, KALA AMB ROAD,SADHAURA-133204, DISTRICT-YAMUNANAGAR, HARYANA - 133204 PH :9813762620.	286. SARAJ AUTO WORLD (6044--), VERMA BUILDING,NR. NAGAN HARIPUR , TEHSIL,ANNI-172026 , DISTRICT-KULLU , HIMACHAL PRADESH - 172026	DHARAMSHALA	307. SOLAN AUTOMOBILES PVT. LTD. (6420--), DAGHOT(SOLAN), P.O.KUMAR HATTI-173 229 (H.P.), - 173229 PH :9816030330.
SHAHABAD	BADDI	297. HIM AUTO STATION (8964--), VPO DARI, DHARAMSHALA, (H.P.), - 176057 PH :9418029655.	KUMARSAIN
277. MAHALAXMI MOTORS (354--), LADWA ROAD, SHAHABAD MARKANDA-136 135, (HARYANA), - 136135 PH :9812036433.	287. LAJ MOTORS (5541--), 436.MALUJA SURAJ,MAJIRA LABANA, BADDI, DISTRICT - SOLAN, HIMACHAL PRADESH - 173205 PH :9816039189.	298. SHIV SHAKTI CAR CARE (1277--), NEAR RAINBOW SCHOOL, DARI ROAD, DHARAMSHALA-176 057, - 176057 PH :9318752074.	308. RED LINE (5965--), VILL. KEPU,PO KIRTI SAINZ, TEHSIL,KUMARSAIN-172030, DISTRICT-SHIMLA, HIMACHAL PRADESH - 172030 PH :9816027007.
SIWANI	BANGANA	GHUMARWIN	MANDI
278. GANESH AUTOMOBILES (5931--), NEAR RELIANCE PETROL PUMP,HISAR ROAD,SIWANI, DISTRICT-BHIWANI, HARYANA - 127046 - 127046 PH :8607113000.	288. TRISHLA AUTOMOBILES (5869--), VILLAGE BPO & TEHSIL BANGANA, BANGANA-174307, DISTRICT-UNA, HIMACHAL PRADESH - 174307 PH :9817645350.	299. BHASKAR AUTO SPARE & SERVICE (5147--), VILLAGE KULARU, GHUMARWIN, DISTRICT - BILASPUR, HIMACHAL PRADESH - 174021 PH :9816090504.	309. BHAGWATI AUTOMOBILES (269--), PLOT NO. 3, INDUSTRIAL AREA PHASE 3, SAULI KHAD, MANDI, HIMACHAL PRADESH - 175001 PH :9418461897.
SOHNA	BANOI	GUMMA	MARANDA
279. SHRI SHYAM MOTORS (8978--), OPP.RAGHUNANDAN PETROL PUMP, NEAR GD GOENKA INTERNATIONAL SCHOOL, SOHNA-122103, HARYANA - 122103 PH :9416455660.	289. BABA SERVICE STATION (4634--), VILL BANOI, TEH SHAHPUR P.O., BANOI, DIST KANGRA (HIMACHAL PRADESH) - 176209 PH :9418051290.	300. CHAUHAN ENTERPRISES (5660--), VILLAGE GUMMA,TEHSIL KOTKHAI, GUMMA, DISTRICT - SHIMLA, HIMACHAL PRADESH - 171202 PH :9218690917.	MUBARAKPUR
SONIPAT	BARMANA	JAWALA JI	311. SHIV SHAKTI AUTOMOBILES (1732--), HOSHIARPUR ROAD, MUBARKPUR, DISTT. UNA, (H.P.) - 177202 PH :9418328361.
280. NEW HIGHWAY MOTORS (8923--), MAIN DELHI ROAD, SONEPAT, HARYANA, - 131001 PH :9416672009.	290. AVER AUTO (9038--), VILLAGE LAGHAT,TEHSIL SADAR, PO BARMANA-174013, HIMACHAL PRADESH, - 174013 PH :9418064130.	301. SRI PARBHAT MOTORS (8965--), VPO & TEHSIL, JAWAL-(BHANEI), DISTRICT - KANGRA, (HIMACHAL PRADESH), - 176023 PH :9805511205.	NADAUN
TAURU	BHAMBLA	JAWALAMUKHI	312. CAR CARE ENGINEERS (4423--), HOSHIARPUR ROAD, MANPUL, NADAUN DISTT, HAMIRPUR, HP - 177033 PH :9857799080.
281. R M MOTORS (5842--), SOHNA ROAD, WARD NO. - 4, OPPOSITE UCO BANK, TAURU, DISTRICT - NUH, HARYANA - 122105 - 122105 PH :9812378663.	291. DHIMAN MOTORS (3837--), PLOT NO. 42., INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT MANDI - 175004 PH :9816227437.	302. LAKSHMI AUTO SPARE & SERVICE CENTRE (4630--), NEAR GANJU BAGH, DEHRA ROAD, JWALAMUKHI, TEH. DEHRA, DIST. KANGRA (HIMACHAL PRADESH) - 176031 PH :9418091048.	NAHAN
TOSHAM	BHUNTAR	KARSOG	313. AGGARWAL MOTORS (3334--), GUNNU GHAT, NEAR TELECOM COLONY, NAHAN-173 001, - 173001 PH :9418023558.
282. MOHINI AUTOMOBILES (6026--), OPP.NEW ANAJ MANDI , NEAR MINI BANK,TOSHAM-127040 , DISTRICT-BHIWANI, HARYANA - 127040	292. HANDA MOTORS (4262--), HANDA COMPLEX, NEAR AIRPORT ,BHUNTAR, KULLU (H.P) - 175125 PH :9816007003.	303. DEEPAK AUTOMOBILES (4057--), MR. DEEPAK SHARMA, C/O SHARMA GENERAL STORE, KARSOG, MAIN BAZAR, DIST MANDI, HIMACHAL PRADESH - 175011	NALAGARH
UKLANA	BILASPUR (H.P)	KAZA	314. KRISHNA MOTOR (5275--), PEERTHAN.PO NALAGARH, DISTRICT - SOLAN, HIMACHAL PRADESH, - 174101 PH :9418094064.

Maruti Authorized Service Station (AS ON 31.01.2026)

315. SANGRAI AUTO SERVICE (6430--), OPP. SITLA MATA MANDIR, PALAMPUR-176 061, DISTT. KANGRA (H.P.), - 176061 PH :9418085915.	326. THAKUR AUTOMOBILES (3838--), JALANDHAR MANALI NATIONAL HIGHWAY (NH70), NEAR DAV SCHOOL, VILLAGE SALASHI, DISTT HAMIRPUR - 177001 PH :9418490904.	CHADOORA 338. VEHICLE MASTERS (4661--), MAIN ROAD, CHADOORA-190001, DIST. BUDGAM, JAMMU & KASHMIR - 190001 PH :9419441217.	350. MILLENNIUM MOTORADES (2937--), ALPHA GATE, T.C.P., RAJOURI-185 132, (J&K) - 185132 PH :7006122022.
316. SANTOSHI AUTOMOBILES (4776--), VILLAGE & P.O. BHAWARNA, TEHSIL, PALAMPUR, DISTRICT- KANGRA (HIMACHAL PRADESH) - 176083 PH :9418184367.	SARKAGHAT 327. SHAKUNTLA MOTORS (5755--), MANDI ROAD-SARKAGHAT, DISTRICT-MANDI, PIN-175024, HIMACHAL PRADESH - 175024 PH :9817818822.	JAMMU 339. CARE POINT AUTOMOBILES (4652--), OPP. BSF CAMPUS ROAD, AKHNOOR ROAD, JAMMU-180002. - 180002 PH :9419283151.	REASI 351. U LIKE CAR CLINIC (4771--), GITA NAGAR, REASI JYOTIPURAM ROAD, REASI, DISTRICT-REASI (JAMMU & KASHMIR) - 182311 PH :7006083550.
PAONTA SAHIB 317. SUMEET MOTORS (1441--), SHAMSHERPUR, PAONTA SAHIB-173 025, (H.P.), - 173025 PH :9418018329.	SHIMLA 328. GURRAJ AUTO SERVICE (757--), NEAR CPRI ROAD, BEMLOI, SHIMLA-171 001, - 171001 PH :9816233030.	340. CHECK N CARE AUTOMOBILE CENTRE (1773--), OPP. GURUDWARA SRI SINGH SABHA, NARWAL BYE PASS ROAD, JAMMU, - 180001 PH :9419190796.	SAMBHA 352. DHANSAR CAR CLINIC (5146--), NATIONAL HIGHWAY, SUPWAL SAMBHA, DISTRICT - JAMMU, J&K - 184120 PH :9419393949.
PAPROLA 318. ABROL AUTOMOBILES (3470--), VPO PAPROLA, TEHSIL BAJNATH, DISTT KANGRA, HIMACHAL PRADESH -176115 - 176115 PH :9418066917.	329. MOTO WORLD (6433--), NAVBAHAR, SHIMLA-171 002, - 171002 PH :9459050769.	341. KWIK FIT (2343--), AMBPALLA, B.C. ROAD, JAMMU-180 001, - 180001 PH :9419104400.	SOPORE 353. HASSAN MOTORS (2434--), BPC DEALER, SOPORE, KASHMIR, - 193201 PH :9906506786.
PARWANOO 319. DIVYA SALES (6428--), DIVYA BHAWAN VILL. KAMLI, SECTOR-1, PARWANOO, - 173220 PH :9816032002.	SOLAN 330. SOLAN SERVICE CENTRE (764--), BYE PASS, NEAR PWD OFFICE, SOLAN-173 212, - 173212 PH :9816022640.	342. MAGNA GARAGES (441--), NARWAL CHOWK, TRANSPORT NAGAR, JAMMU-180 006 - 180006 PH :9796800000.	SRINAGAR 354. A.B. MOTORS (5072--), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR - 190009 PH :9419007966.
PATLI KUHAL 320. JAMDAGNI MOTORS (760--), VILLAGE PATLI KUHAL, P.O.KATRAIN, DISTT.KULLU (H.P.), - 175129 PH :9816040247.	SUBATHU 331. SHYAM AUTOMOBILES (4558--), NEAR SHANTI FILLING STATION, V.P.O RADYANA, SUBATHU, DIST SOLAN (HIMACHAL PRADESH) - 173206 PH :9418061757.	343. NATIONAL MOTORS (5074--), OPP APNA VIHAR.B.P. PETROL PUMP , NH-1A.KUNJWANI JAMMU, DISTRICT - JAMMU, JAMMU & KASHMIR - 180010 PH :9419322222.	355. ADAM'S AUTOAIDES (5766--), SIDCO INDUSTRIAL ESTATE,SHALTENG, SRINAGAR - 190015, DISTRICT-SRINAGAR, JAMMU & KASHMIR - 191202 PH :9906580089.
RAJGARH (H.P.) 321. RAJGARH AUTOMOBILES (5458--), PO RAJGARH,TEH RAJGARH, DISTRICT - SIRMOUR, HIMACHAL PRADESH, - 173101 PH :9418021344.	SUNDERNAGAR 332. V.M. SERVICE STATION (3777--), CHAMUKHA, P O HARABAGH, NH-21, SUNDER NAGAR-174 402 (H.P.) - 175019 PH :9418064130.	KATHUA 344. KATHUA MOTORS (3323--), HATLI MORE, KATHUA-184 102, (J&K), - 184102 PH :9419150694.	356. HASEEN MOTORS (5249--), BY-PASS BRIDGE ,BAGH MEHTAB, SRINAGAR , JAMMU & KASHMIR , - 190019 PH :9419006847.
RAMPUR BUSHAHR 322. HIGHWAY SERVICE STATION (2649--), CHUHA BAG, RAMPUR BUSHAHR, (H.P.) - 172001 - 172001 PH :9805831627.	THEOG 333. JOSHI MOTORS (2778--), SHALLI BAZAR, THEOG, DIST. SHIMLA, (H.P.) - 171201 PH :9459100051.	KATRA 345. VIDYA AUTOMOBILES (1165--), JAMMU ROAD, KATRA, (J&K) - 182320 PH :9596676576.	357. NEW NATIONAL AUTOMOBILES (5073--), RAM BAGH,AIRPORT ROAD,SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, - 180009 PH :9419013778.
323. KRISHNA AUTOMOBILE (4438--), VILL CHUHA BAG, RAMPUR BUSHAHR-172001, , - 172001 PH :9418036091.	UNA (H.P.) 334. RUDRA MOTORS (3925--), NEAR OLD HOSPITAL CHOWK, NH-22, UNA - 174303 (H.P.), - 174303 PH :8628803717.	KISHTWAR 346. MINTOO MOTORS (4133--), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K), - 182204 PH :9622055250.	SURNKOTE 358. A.S. AUTOMOBILES (5976--), IQBAL NAGAR,SURANKOTE, DISTRICT-PONCHH, JAMMU & KASHMIR , - 185121 PH :9469014765.
RECONG PEO 324. KRISH AUTO (4134--), RECONG PEO, TEHSIL KALPA, DISTT KINNAUR, HIMACHAL PRADESH - 172707 - 172107 PH :9816579999.	JAMMU AND KASHMIR 335. TRINITY AUTO FAST ENGINEERS (1755--), JALGRAN TABBA, NANGAL ROAD, UNA, HIMACHAL PRADESH - 174303 - 174303 PH :9816628020.	MATTAN 347. DANISH AUTOMOBILES (5478--), PAHAL GAM ROAD, STATE HIGHWAY - MATTAN, DISTRICT - ANANTNAG, JAMMU & KASHMIR - 192125 PH :9419041724.	VIJAYPUR 359. BANSI LAL MARUTI SERVICE STATION (4748--), SWANKHA MORH, NATIONAL HIGHWAY, VIJAYPUR-180001, DISTRICT-SAMBA (JAMMU & KASHMIR) - 180001 PH :9419106798.
ROHRU 325. KAMTA SERVICE STATION (2338--), ROHRU, DISTT. SHIMLA, (H.P.), - 171207 PH :9418040106.	AWANTIPORA 336. KESAR AUTOMOBILES (5938--), KHAR ,MORH,NATIONAL HIGHWAY 1A, AWANTIPORA-192122, DISTRICT-PULWAMA, JAMMU & KASHMIR - 192122 PH :7780873161.	PHINTER 348. BADYAL AUTOMOBILES (4149--), C/O BADYAL AUTOMOBILE, PHINTER, TEH BILLAWAR, DISTT KATHUA, PHINTER (J & K) - 184203 PH :9419691916.	JHARKHAND BOKARO 360. UUEA (4845--), S-21 CITY CENTRE, BOKARO STEEL CITY, BOKARO-827004, JHARKHAND - 827004 PH :9431127441.
SALASHI 337. MARUTI MASTERS (4369--), KANISPORA, BARAMULA, KASHMIR, - 193101 PH :9906864748.	BARAMULA	PULWAMA 349. KASHMIR AUTOMOBILES (8969--), NEAR FRUIT MANDI, PRICHOO PULWAMA, KASHMIR - 192301 PH :9622742291.	DEOGHAR

361. GARGEE AUTOMOBILES (2276--), OPP. D.C. RESIDENCE, CIRCULAR ROAD, BARMASIA, DEOGHAR-814 112 (JHARKHAND) - 814112 PH :9940580989.	372. BHARAT MOTORS (5970--), SHIV JEE CHOWK, HARMU ROAD, RANCHI-834001, DISTRICT-RANCHI, JHARKHAND - 834001 - 834001 PH -9608502258.	383. CHANDANA MOTORS (4872--), NO. 9 UNIVERSITY ROAD, GNANABHARTHI (POST), MARYAJAPANA PALYA, BANGALORE-560056 (KARNATAKA) - 560056 PH :9890659864.	396. SOLOTECH SERVICE CENTRE (5245--), 50 FEET MAIN ROAD AVALAHALLI, MUNESHWARA BLOCK , DISTRICT - BANGALORE, KARNATAKA - 560010 PH :984572634. 397. SPEED MOTORS (1750--), 17/1 SUBRAMANYAPURA MAIN ROAD, KADIRENAHALLI, PADMANABHA NAGAR, BANGALORE-560 070 PH :9845153102.
DHANBAD	373. MARUTI AUTOMOBILES (5127--), HOTEL AKASHWANI MANSION, RATU ROAD, RANCHI-834 001. - 834001 PH :9835156186.	384. GIRIMAJI ENTERPRISES (258--), NO.2 27TH CROSS, K R ROAD, B S K II STAGE, BANGALORE-560 070 PH :9844004403.	398. TEAM TECH AUTOMOBILES (5662--), 78/1,SULEKUNDE, NEAR MUTHANALLUR CROSS., SARJAPURA MAIN ROAD, BANGALORE -562125 -562125 PH :9538516111.
363. PRIYA AUTO (4868--), OPPOSITE MINNING SCHOOL, SINDRI ROAD, BHAGA, DHANBAD-828301, JHARKHAND - 828301 PH :9431124817.	374. MARUTI CLINIC (2548--), LAL KOTHI, OLD HAZARIBAGH ROAD, KANTA TOLI, RANCHI-1, JHARKHAND - 834001 PH :9431109214.	385. GREEN CARS PVT. LTD. (2154--), NO.12/6 80 FEET ROAD, 6TH BLOCK KORAMANGALA, BANGALORE-560 095, PH :9845020796.	399. TRINITY CAR CARE PVT. LTD (5851--), SURVEY NO 52/1, SRI GANDHADAKAVAI VILLAGE, NAGARBHAVI, BANGALORE-560091, DISTRICT-BANGALORE , KARNATAKA - 560091 PH :9880793980.
HAZARIBAGH	KARNATAKA	386. KESHKAMAL MOTORS (2075--), NO.943 21ST MAIN, BANASHANKARI 2ND STAGE, (NEAR KIMS MEDICAL COLLEGE), BANGALORE-560 070 PH :9448071067.	400. TRINITY MOTORS (4638--), NO. 36, 4TH STAGE, W.C. ROAD, BASAVESHWARANAGAR, BANGALORE-560079 - 560079 PH :9845539474.
364. ALOK MOTORS (379--), NEAR INDRAPURI CHAWK, HAZARIBAG-825 301, (JHARKHAND), - 825301 PH :9431140740.	ATHANI	387. LE MANS MOTORS (3460--), NEAR AYYAPPA TEMPLE, S.M. ROAD, T. DASARAHALLY, BANGALORE-560 057 PH :9845145001.	401. VISWAS CAR SERVICES PVT. LTD. (3238--), NO 2, (OUT NO OF SY:NO 100/2) OFF SERVICE ROAD , KALYANA NAGAR ROAD, CHELEKERE , BANASWADI POST BANGALORE -560043 - 560043 PH :9591313379.
365. SRI RAM MARUTI SERVICE STATION (3663--), DEVI DAYAL LANE, HAZARIBAG-825 301, (JHARKHAND), - 825301 PH :9431384877.	BAGALKOT	388. CANARA MOTORS (8987--), 9TH MAIN, NEAR PARLE G, TUMKUR ROAD, CHIKKABIDARAKALLU VILLAGE, BANGALORE-560073. - 560058 PH :9845842268.	BELGAUM
JAMSHEDPUR	376. NARA AUTOMOBILES (4357--), TP NO. 158 A/2, WARD NO. 10, SHABADI COMPOUND EXTN, BAGALKOT-587101 - 587101 PH :9880887595.	389. NEXUS (1153--), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE-560 064 PH :9844013436.	402. BHARAT AUTO SCAN (350--), 892/1 PB ROAD, BELGAUM-590 016. , PH :9448120495.
366. MAHESHWARI BROS. (5124--), NATIONAL HIGHWAY 33, BALIGUMA MANGO, P.O.-M.G.M. MEDICAL COLLEGE, JAMSHEDPUR-831 018 - 831018 PH :9031144444.	BAILHONGAL	390. NEXUS (2768--), #275/301, 80 FEET ROAD, OPP. M.S. RAMAIAH HOSPITAL (BEL ROAD), RMV 2ND STAGE, BANGALORE-560 094 PH :9844013436.	BIJAPUR
KHUNTI	377. MAHANTH MOTORS (5763--), RTO ROAD BAILHONGAL , TALUK-591102, DISTRICT-BELGAUM, KARNATAKA, - 591102 PH :9535653166.	391. PACE AUTOMOBILES (1057--), 6TH MAIN HMT LAYOUT, R.T. NAGAR, BANGALORE-560 032, PH :9845004710.	403. BAGALI MOTORS (5159--), SHIKARKHANA ROAD, BIJAPUR - 586104, DISTRICT - BIJAPUR, KARNATAKA - 586104 PH :9448100444.
367. MOD MOBILES (5579--), MAIN ROAD, RANCHI ROAD - KHUNTI, DISTRICT - KHUNTI, PIN - 835210 ,JHARKHAND - 835210 PH :9304468855.	BALEHONNUR	392. PUSHPAK MOTORS (4642--), 105/1 2ND MAIN NANJAPPA LAYOUT, VIDYARANYAPURA MAIN ROAD, (OPP KRUTHIKA HOSPITAL), BANGLAORE-560097 - 560097 PH :9845087842.	CHIKBALLAPUR
MAITHON	378. CREST MOTORS (5253--), MALLE GOWDA COMPLEX, 278, JAYAPURA-KOPPA MAIN ROAD, BALEHONNUR, CHIKKAMAGALURU DISTRICT-577112, KARNATAKA - 577204 PH :9448000131.	393. RAJ MOTORS (2829--), NO.10 MAGADI MAIN ROAD, OPP. UNANI MEDICINE INSTITUTE, KOTIGEPALYA, BANGALORE-560 091 PH :9663556777.	404. SUKOVE ENTERPRISES (3426--), B.B. ROAD N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA), PH :9880607034.
368. MAITHON SERVICING CENTRE (5838--), MAITHON ROAD, NEAR VMC COLONY, SANJAY CHOWK ,PO CHIRKUNDA-MAITHON, DISTRICT-DHANBAD, (JHARKHAND) - 828203 PH :7209423707.	BANGALORE	394. SMART CARS (3571--), 3RD CROSS NEAR J.B. TILES, KAGGADASA PURA MAIN ROAD, C.V. RAMAN NAGAR, BANGALORE-560 093 PH :9683324361.	CHIKMAGALUR
PAKUR	379. ADARSHA AUTOMOBILES (4553--), 108/9, HALASAHALLI ROAD, OPP HP GAS GODOWN, NEXT TO SK FLOOR MILL, VARTHUR, BANGALORE - 560087 - 560037 PH :9880195465.	395. SOLOTECH MOTORS (2760--), SURVEY NO.82/2, D'SOUZA NAGAR, HOSAKEREHALLI-BANGALURU, DISTRICT-BANGALURU 560085, KARNATAKA - 560085	405. AAMANTHRANA MOTORS (4346--), K.M. ROAD, CHIKMAGALUR, - 577101 PH :9945462658.
369. SPEED WHEEL SERVICE CENTRE-PAKUR (4976--), MAIN ROAD, PAKUR - 816107, , - 816107 PH :9434101917.	380. ANEKAR MOTORS (227--), 230 MAGADI ROAD, BANGALORE-560 023, (KARNATAKA),, PH :9845889911.		406. FORMULA MOTORS (338--), K.M. ROAD, CHIKMAGALUR-577 101, , PH :9448743284.
RAMGARH	381. ASHWA CARS (8982--), #14, 1ST MAIN, 6TH CROSS, SANJEEVINI NAGAR, MOODAPALYA, BANGALORE 560072, - 560072 PH :9611413516.		CHIKODI
370. RAHIL MOTORS (5054--), C/O NIYAMAT MISTRI, DUSHAD MOHLA, DISTRICT RAMGARH CANTT., - 829122 PH :9771577422.	382. BENAKA MOTORS (3237--), NO.158/2 VIBHUTIPURA, VIGNAN NAGAR BEHIND B.E.M.L., NEAR RENUKA SWIMMING POOL, BANGALORE-560 017 PH :9845212416.		407. OM MOTORS (9026--), 1751, ANKALI ROAD, NEAR B K COLLEGE, CHIKODI-591201, KARNATAKA - 591201 PH :8861555999.
371. SAINI MOTORS (5126--), NEAR VISWAKARMA MANDIR, MAIN ROAD, RAMGARH CANTT 829 122, DISTT. HAZARIBAG - 829122 PH :9835141302.	RANCHI		CHINTAMANI

Maruti Authorized Service Station (AS ON 31.01.2026)

408. TIPPU AUTO GARAGE (5770--), MG ROAD, NEAR BAGEPALLI CROSS, CHINTAMANI-563125, DISTRICT-KALOR, KARNATAKA - 563125 PH :9036895840.	419. SRI SAI MARUTHI SERVICE STATION (5725--), ULUKINAKALLU, NH 206, KADUR, , - 583201 PH -9916947196.	430. GOUTHAM MOTORS (4332--), PATEL CHANNAPPA EXTN, NELAMANGALA-562123, KARNATAKA, - 562123 PH -9880251546.	TUMKUR
CHITRADURGA	KARKALA	RABAKAVI BANAHATTI	442. APOORVA CAR CARE CENTRE (5327--), B.N.P. COMPOUND ,BEHIND KRISHNA THEATRE, M.G. ROAD - TUMKUR, DISTRICT - TUMKUR, KARNATAKA - 571440 PH :9901515516.
409. PRINCIPAL (255--), J.M.I.T, N.H.4, P.B. NO.73, CHITRADURGA-577 502 PH -9731330300.	420. KARKALA MOTORS (3549--), TELLAR ROAD, KARKALA-574 104, (KARNATAKA), PH -9845356244.	431. SANGAMA MOTORS (5726--), BESIDE CMC,RAMPUR MAIN ROAD, RABAKAVI-587314, DISTRICT-BAGALKOT, KARNATAKA - 587314 PH -9480035617.	UDUPI
DAVANGERE	KOLAR	RAICHUR	443. ST. JUDE AUTOMOBILE ENGG. WORKS (4521--), B.D.MARG, AMBALAPADI, UDIPI-576 103, PH :9844931241.
410. HEGDE AUTO CENTER (172--), NO 2007/37, NEAR BIET, SHAMANUR ROAD, DAVANGERE, KARNATAKA-577004 - 577004 PH :8494853646.	421. SHIVA SERVICE POINT (2472--), M.B. ROAD, KOLAR-563 101, (KARNATAKA), PH :9448228604.	432. HEERA MOTORS (3730--), OPP. MOTI MASJID, SHIVJI OIL MILL COMPOUND, TIPU SULTAN ROAD, RAICHUR-584 101 (KARNATAKA) PH -9845156322.	UPPINANGADI
411. SREE MALLIKARJUNA MOTOR (229--), NO 68, RMC ROAD, NEAR KSRTC BUS STAND, DAVANGERE, KARNATAKA - 577003 PH :9880701015.	KOLLEGAL	RANEBENNUR	444. RATHNA ENTERPRISES (5447--), 5/514, KUKKAJE, SUBRAMANYA ROAD, UPPINANGADY, DAKSHIN KANNADA - 574241, KARNATAKA - 587313 PH :9972995341.
DEVANAHALLI	422. FIX PLUS AUTO CARE CENTRE (4249--), C-8, IND. ESTATE, MAHADESHWARA COLLEGE ROAD, KOLLEGAL-571440, - 571440 PH -9448807237.	433. KIZEN MOTORS (4568--), P.B.ROAD, RANEBENNUR, KARNATAKA - 581115 - 581115 PH -9900922022.	KERALA
412. SAHARA AUTOMOBILES (8983--), OPP. A. RTO OFFICE, NH-7, B. B. ROAD, DEVANAHALLI-562110, KARNATAKA - 562110 PH -9611150788.	KOPPA	SAGAR (KARNATAKA)	ADIMALY
DHARWAD	423. AUTO TECH (3448--), MAIN ROAD, UPPERPET, KOPPA-577 126, (CHIKMAGALUR DIST.) PH :9448156950.	434. ADITYA AUTOMOBILES (2077--), JOG ROAD, SAGAR-577 401, (KARNATAKA), PH :9448024395.	445. PLATHOTTAM AUTOMOBILES (3864--), NH-49, OPPOSITE TO MINI INDUSTRIAL ESTATE, ADIMALI-685561, - 685561 PH :9447023073.
413. MYSORE GARAGE (2468--), BELGAUM ROAD, DHARWAD-580 001, (KARNATAKA), PH -9844133273.	KUMTA	435. MALLIKA AUTO CENTRE (2133--), NO. 459/1204, GANDHI NAGAR, BEHIND BHARAT PETROLEUM, NH 206, SAGARA - 577401, KARNATAKA PH -9848139605.	ADOOR
DODDABALLAPUR	424. SOLOTECH (4547--), NEAR MARUTI TEMPLE, HANDIGON, KUMTA- 581343, - 581362 PH :9448149607.	KUNDAPUR	446. AUTO CLUB (2132--), NEAR H.P. PUMP, VADAKKADATHUKAVU P.O, ADOOR, PATHNAMTHITTA DISTT - 691523 PH :9447440184.
414. PRESTIGE MOTORS (8996--), NEAR RAILWAY STATION KHASBHAG, DODDABALLAPUR, , - 560026 PH :9900274594.	KUNDAPUR	425. PRAKASH AUTO SERVICE (4522--), NH-66, NEAR K.E.B., VODERHOBLI, KUNDAPURA, KARNATAKA - 576201 PH :9341035642.	ALAPPUZA
GADAG	MANIPAL	SHIMOGA	447. ESSAR MOTORS (4959--), KALARKODE, NEAR CHINMAYA SCHOOL, NH-47, ALAPPUZA-688003, KERALA - 688003 PH :9249938474.
415. MODERN MOTORS (8939--), HUBLI ROAD, GADAG-582 103, (KARNATAKA), PH :9448746579.	426. MANIPAL MARUTI AUTO WORKS (4578--), BUILDING NO.1, FLAT NO.: 16 181 N7 & N8, SIDDESH COMPLEX, NEAR R.C.CHURCH, OPP. SIGMA BAR, MANIPAL, UDIPI DISTRICT, KARNATAKA - 591102 PH :9448108318.	436. NEPTUNE AUTO WORKS (5271--), PLOT -5 AUTO COMPLEX , SAGAR ROAD - SHIMOGA , DISTRICT - SHIMOGA , KARNATAKA - 577204 PH :9448319758.	ALUVA
GULBARGA	MUDHOL	437. SHIMOGA AUTO ENGINEERING WORKS (8955--), GARDEN AREA, 2ND CROSS, SHIMOGA KARNATAKA-577 201 PH :7899114872.	448. AUTO TEAM (2630--), A/189 A, PARUR JUNCTION, ALUVA, (KERALA) - 683108 PH :9947333760.
416. DELUX AUTO SERVICE (5840--), SURVEY NO 77/8,VILLAGE KUSNOOR,NEAR -, UNIVERSITY, SEDAM ROAD,GULBARGA-585104, DISTRICT-GULBARGA, (KARNATAKA) - 585104 PH :9242991292.	427. OM MOTORS (5857--), PLOT NO. 21 & 29, LOKAPUR ROAD, VISHWESHWAR NAGAR, MUDHOL - 587313, KARNATAKA - 587313 PH :9663830660.	SIDDAPUR	AMBALLUR
HOSPET	MUDIGERE	438. MARUTI AUTO WORKS (5335--), KARNATAKA - 581355 PH :9448525801.	449. LAKSHMI DEVI AUTO GARAGE (4137--), AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA - 680301 PH :9847903949.
417. SUPREME AUTO SERVICE (2569--), NEAR RTO OFFICE, HARIHAR ROAD, HOSPET-583 203, (KARNATAKA) PH :9845307361.	428. BADRIYA CAR SERVICE POINT (5364--), K.M. ROAD,MUDIGERE , DISTRICT- CHIKAMANGALORE , PIN - 577132 , (KARNATAKA) - 577132 PH :9448007094.	SIRSI	ANCHAL
HUBLI	MYSORE	439. ARUNDHATI MOTORS (1258--), HUBLI ROAD, SIRSI-581 402, (UTTAR KARNATAKA), PH :9845098822.	450. NAMI-TAJI (2534--), NEAR ST. GEORGE CENTRAL SCHOOL, R.O. JUNCTION, ANCHAL, KERALA -691 306. - 691306 PH :9447453745.
418. SRI BASAVA MOTORS (4968--), OPP SANA COLLEGE APMC PB ROAD, BHIRIDEVARKOPPA,HUBLI-580025, , - 580025 PH :9980025644.	429. CAR CLINIC (346--), 1959/A, BOGADI RING ROAD, NEAR GLN CONVENTION HALL, BOGADI, MYSORE, - 585106 PH :9342184831.	SRINGERI	ANJUMOORTHY
KADUR	NELAMANGALA	440. SHUBHASHREE MOTORS (5434--), AGUMBLE ROAD ,SRINGERI , DISTRICT - CHIKAMAGALUR , SRINGERI - 577139, KARNATAKA - 577139 PH :9448170400.	451. SAFA AUTO CARE (3847--), N H ROAD, MANGALAM PALAM, ANJUMOORTHY POST, VADAKKENCHERY, PALAKKAD DISTT, KERALA - 678682 PH :9447303347.

452. MAKKATTU AUTO CLINIC (5051--), AYOOR-ANCHAL ROAD.PANACHAILA, AYOOR - 691306, DISTRICT - KOLLAM, KERALA - 691306 PH :9847288624.	464. PRAKASH AUTO ENGINEERS (5548--), VADASSERIKONAM P.O. KALLAMBALAM, VARKALA,KALLAMBALAM-695143, DISTRICT-TRIVANDRUM, KERALA - 695143 PH :9847159618.	474. PERFECT MOTORS (8995--), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA) - 690507 PH :9447048338.	484. TOP CLEAN SERVICES (2834--), 13/450 MANNUTHI BYE PASS, P.O. OLLUKKARA, THRISSUR, (KERALA) - 680651 PH :9592947776.
CALICUT			MEENANGADI
453. MALABAR MOTORS (4655--), EAST NADAKKAVU, P.O. ERANIPALAM, CALICUT-673006, KERALA - 673006 PH :9846089190.	KALLUMUTTY	475. PERFECT MOTORS (--), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA) - 690507 PH :9447048338.	485. MOTOR TECH (2440--), EAST MEENANGADI, KRISHNAGIRI P.O. WAYANAD-673 591, (KERALA) - 673591 PH :9539195850.
454. MARUTI SCAN (1675--), BYE PASS JUNCTION, MEENCHANDA, CALICUT-673 018, - 673018 PH :9847130508.	465. MARUTI CARE (4179--), KALLUMUTTY, IRITTY P.O., KANNUR, KERALA - 670703 - 670703 PH :9946703070.	KONNI	MOOCHIKKAL
CHALAKUDY	KALPETTA	476. MUTTATH AUTOMOBILES (5525--), AROORPALAM,KONNI-689691, DISTRICT - PATHANANTHITTA, KERALA, - 689691 PH :9447431751.	486. CHELADANS MARUTI ENGINEERS (4659--), THANUR ROAD, MOOCHIKKAL-676307, MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA) - 676307 PH :98959443563.
455. STAR MARUTI GARAGE (5367--), NH47 BYE PASS, NEAR CRESCENT PUBLIC SCHOOL, .CHALAKKUDY, DISTRICT - THRISSUR - 680307 PH :9946009375.	466. VARCO MOTORS (4724--), 18/226-1, NEAR VELLARAMKUNNU, NH 212, KALPETTA - 673121, - 673121 PH :9961569898.	KOOTHATTUKULAM	MUNNAR
456. VIJAY AUTO SERVICE (1626--), POTTA, CHALAKUDY-680 307, - 680307 PH :9995074628.	KANJIRAPPALLY	477. EXTRA CARE SERVICES (3232--), 38A, RAMAPURAM JUNCTION, PALA ROAD, KOOTHATTUKULAM, ERNAKULAM DIST., KERALA - 686662 - 689121 PH :9544552080.	487. PLATHOTTAM AUTOMOBILES (4447--), COLONY ROAD, IKKA NAGAR, MUNNAR, IDUKKI, KERALA - 685612 - 685612 PH :3447023073.
CHANGANACHERRY	467. MACK ENTERPRISES (2729--), NH-183, NEAR AKJIM SCHOOL, KANJRAPALLY, KERALA - 686507 - 686507 PH :9447093739.	KOTHAMANGALAM	MUVATTUPUZHA
457. PALATHRA MOTORS & SERVICE CENTRE (1072--), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY-686 104, - 686104 PH :9447195154.	KANNUR	478. EXCEL MARUTI SERVICE (4342--), BYE-PASS ROAD, KOTHAMANGALAM, ERNAKULAM-686691, - 686691 PH :8848605865.	488. JAWAN AUTOMOBILES (2730--), MADAVOOR POST, MUVATTUPUZHA-686 669, - 686669 PH :8943345500.
458. SAAFAA AUTOMOBILES (1148--), PALATHARA CHIRA, BY PASS ROAD, CHANGANACHERRY, KOTTAYAM-686104, , - 686104 PH :9447042517.	469. PIONEER AUTO & ENGG.WORKS (4722--), KANNOTHUMCHAL ROAD, KANNUR - 2, (KERALA) - 670005 PH :9447798255.	479. JAWAN AUTOMOBILES (8985--), NEAR THANKALAM BYE-PASS ROAD, KOTHAMANGALAM-686 691, KERALA, - 686691 PH :9673102460.	NEYYATTINKARA
CHENGANNUR	KARIMANOOR	KUNDARA	489. XANON ENGINEERS (8951--), RAVELI TOLL JUNCTION, NEYATTINKARA, TRIVANDRUM-695121, - 695121 PH :9946357813.
459. NEW TECH AUTOMOBILES (1978--), INDUSTRIAL ESTATE, MUNDANCAVU, CHENGANNUR-689 121, KERALA - 689121 PH :9388915757.	470. JAWAN MARUTI SERVICE (8976--), XIV/359B, THODUPUZHA - UDUMBANNOOR ROAD, KARIMANOOR PO, KARIMANOOR, THODUPUZHA, KERALA - 685581 PH :9544545500.	480. SPARK SERVICE (5772--), ELAMPALLOOR,P.O. KUNDARA-691501, DISTRICT-KOLLAM, (KERALA) - 691501 PH :9809608020.	NILAMBUR
CHERTHALA	KATTAKADA	KUTHUPARAMBA	490. CONFIDENCE MOTORS (5140--), PALUNDA,CHUNGATHARA, NILAMBUR-679334, DISTRICT - MALLAPURAM, KERALA - 679334 PH :8075272281.
460. POZHICKAL CAR WORLD (3037--), NEAR BOYS HIGH SCHOOL, CHERTHALA, ALAPPUZHA DIST., KERALA-688 524 - 688524 PH :9947474752.	471. CITY ENGINEERS (4947--), MARUTI SERVICE CENTRE, NEYATTINKARA ROAD, KATTAKADA-695572, DISTRICT-TRIVANDRUM (KERALA) - 695572 PH :9447206257.	481. KRISHNA MOTORS (3435--), KUTTIKKUNNU, NEAR 66 KV SUB STATION, KUTHUPARAMBA-670 643, KANNUR DIST. (KERALA) - 670643 PH :9497296380.	NILAMEL
ETTUMANOOR	472. MADATHIL MOTORS (5456--), MADATHIL HOUSE,CHOONDUPALAKA , KATTAKADA P.O. - TRIVANDRUM , DISTRICT - TRIVANDRUM , (KERALA) - 695543 PH :9495192389.	MANJERI	491. LIBRA (8975--), M.C. ROAD, NILAMEL-691 535, KOLLAM DIST., (KERALA) - 691535 PH :9895629768.
461. ROHIT MOTORS (4636--), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA - 686630 PH :9447079010.	KATTAPPANA	482. MARUTI AUTO HOUSE (4726--), CHERANI, KARUVAMBARAM PO, MANJERI, KERALA PIN 676123 - 676123 PH :9447129289.	OCHIRA
462. ROHIT MOTORS (--), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA - 686630 PH :9447079010.	473. UNITED SERVICE CENTER (4433--), EDASSERT JUNCTION, KATTAPPANA-685508, KERALA, - 685508 PH :9961432941.	MANNAR	492. MANGALATH AUTOMOBILES (3836--), NH 47 VALIYAKULANGARA, OCHIRA P.O, KOLLAM DIST, KERALA-690526 - 690526 PH :9847258696.
KALANJOOR	KAYAMKULAM	483. MOHANS AUTOMOBILES (5457--), MOHANS AUTOMOBILES & ENGINEERS KUTTEMPEROOR P.O. MANNAR, DISTRICT - ALAPPUZHA , (KERALA) - 689622 PH :9447877377.	OLLUR
463. AGT MOTORS (5937--), KIP JUNCTION, KALANJOOR-689694, DISTRICT-PATHANAMTHITTA, KERALA - 689698 PH :9744409444.		MANNUTHY	493. TOPCLEAN SERVICES (4468--), 10/153, CHRISTOPHER NAGAR, P.O OLLUR, TRICHRUR (KERALA) - 680306 PH :9846037818.
KALLAMBALAM			PALAKKAD
			494. CAR CRAFT (2139--), 5/682 (1), MANALI, PALAKAD-678 001, (KERALA) - 678001 PH :9349607619.
			PANDALAM

Maruti Authorized Service Station (AS ON 31.01.2026)

495. AISHWARYA AUTOMOBILES (2067--), NEAR K.S.R.T.C. BUS STOP, PANDALAM-689 501, , - 689501 PH :9847049140.	505. NEW INDIAN (8970--), MYSORE ROAD, SULTAN BATHERY, WAYANAD DISTRICT, KERALA-673592 - 673592 PH :8281682822	516. PROFESSIONAL MOTORS (1256--), NEAR ELECTRICITY BOARD, PEROORKADA, TRIVANDRUM-695 005. - 695005 PH :9947175650	526. SPEED AUTOMOBILES (5280--), KHANDWA BARODA ROAD, NR. BALAJI TOLL KANTA BARUVANI-451552, DISTRICT-BARWANI, MADHYA PRADESH - 451552 PH :9926146073.
PARIPALLY	506. TEE PEE MOTORS (4773--), 9/668-B OOTY ROAD, NEAR BLOCK OFFICE, SULTAN BATHERY, WAYANAD (KERALA) - 673592 PH :8547201421.	517. SREEKARIYAM AUTOMOBILES (353--), SREEKARIYAM P.O., THIRUVANANTHAPURAM-695 017, , - 695017 PH :94470205313.	BETUL
496. ALLIANCE MARUTI SERVICES (3243--), NH-47, PARIPALLY-691 574, KOLLAM DIST. (KERALA), - 691574 PH :9349926440.	THALASSERY	VADANAPPALLY	527. ADITYA MOTORS (1263--), NAGPUR BHOPAL ROAD, SADAR, BETUL-461 001, MADHYA PRADESH - 460001 PH :9425381581.
PATHANAPURAM	507. SAFE HANDS AUTOMOBILES (3038--), ERANHOLI, CHUNGAM, THALASSERY -670 107, (KERALA) - 670107 PH :9744322317.	518. MONARCH MARUTI SERVICE CENTRE (4079--), NEAR NORTH JUMA MASJID, GANESHA MANGALAM, P O VADANAPPALLY, TRICHUR DIST (KERALA) - 680614 PH :9847792698.	BHIND
497. MANNIL AUTOMOBILES (4150--), NEAR PANCHAYAT OFFICE, PATHANAPURAM, KERALA-689695. - 689695 PH :9446913874.	THALAYOLAPARAMBU	VADAVATHOOR	528. MAA PITAMBARA MOTORS (5241--), OPP.RAJENDERA CONVENT SCHOOL , LAKSHAR ROAD - BHIND , MADHYA PRADESH, - 477001 PH :9826240582.
PATHANMTHITTA	508. MYALIPARAMPIL MOTORS (3233--), SILON JUNCTION, NEAR THALAYOLARAMBU, POOZHIKOL P O 686604, - 686604 PH :9447562050.	519. C CARS (5754--), VADAVATHOOR PO-KOTTAYAM, DISTRICT-KOTTAYAM, PIN-686503, KERALA - 685503 PH :9447208558.	BHOPAL
498. C.J. MARUTI CARE CENTRE (1255--), VARIYAPURAM, ELANTHOOR EAST P.O., PATHANAMTHITTA-689 643, (KERALA) - 689643 PH :9446913874.	THAMARASSERY	VARKALA	529. SHRI KRISHAN CAR CARE (1679--), POLYTECHNIC ROAD, NEAR PETROL PUMP, BHOPAL, (M.P.) - 462002 PH :9424454030.
PERAVOOR	509. MALABAR MOTORS (4645--), WARD NO. 12, BLDG NO. 121, WAYANAD ROAD, KARADY, THAMARASSERY, CALICUT - 673573 PH :9349114119.	520. S.S. MOTORS (2979--), NEAR POLICE STATION, VARKALA-695 141, TRIVANDRUM DISTT., - 695141 PH :9446104991.	530. SHUBHAM AUTOMOBILES (5052--), PLOT NO. 1 & 2, TIRANGA ROAD, SHAHPURA, BHOPAL, MADHYA PRADESH -462039 - 462039 PH :9425009869.
499. CAR CARE AUTOMOBILES (4422--), KODENCHAL, PERAVOOR, NIDUMPOYIL P.O., KANNUR- 670650. - 670650 PH :9946444691.	THIRUVALLA	VATAKARA	531. TAURUS AUTOMOBILES (3372--), ALAKNANDA COMPLEX, OPP.VIJAY STAMBH PRESS COMPLEX, M.P. NAGAR ZONE-I, BHOPAL (M.P.) - 462011 PH :9303131403.
PERUMBAAVOOR	510. MARUTI AUTO SPOT (1628--), AYROOKUZHILY HOLDINGS, OPPOSITE PUSHAGIRI MEDICITY, PERUMTHURUTHY, THIRUVALLA, KERALA - 689107 - 689107 PH :9447860777.	521. RANI CARS (8957--), BUILDING NO. 10/496A, NADAPURAM ROAD, MADAPPALLI COLLEGE POST, VATAKARA, DISTRICT KOZHIKODE, KERALA- 673102. - 673102 PH :9400513139.	BIAORA
500. MILLENNIUM MOTORS (4873--), OLD VALLAM ROAD, KADUVAL, PERUMBAAVOOR-683542, DISTRICT-ERNAKULAM (KERALA) - 683542 PH :9446661111.	THODUPUZHA	LADAKH	532. GURUKRIPA MOTORS (5670--), OPP PRABHAT BREAD INDUSTRY, AB ROAD - BIAORA, DISTRICT - BIAORA, MADHYA PRADESH - 465674 PH :9425038727.
QUILANDY	511. UNIVERSAL MARUTI (2563--), VENGALLOOR P.O., THODUPUZHA, (KERALA) , - 685585 PH :9447023024.	LAKSHADWEEP	BURHANPUR
501. HITECH MARUTI (3025--), MAIN ROAD, KOYILANDY, PIN-673 305, CALICUT DISTT. - 673305 PH :9447457996.	TRIVANDRUM	522. ZOZILA ENGG. WORKS (374--), KARGIL, LADAKH-194 105 - 194105 PH :9419176212.	533. SVADESHI MOTORS (4229--), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR, MADHYA PRADESH - 450331
RANNY	512. EMINENT MARUTI SERVICE (2360--), T.C. 610 M.C. ROAD, MANNANTHALA, TRIVANDRUM-695 015. - 695015 PH :9447713639.	LAKSHADWEEP	DABRA
502. DEEPA AUTOMOBILES (5177--), DEEPA AUTOMOBILES.PAZHAVANGADI, P.O. RANNY -689673, DISTRICT-PATHANAMTHITTA, KERALA - 689673 PH :9447216725.	513. HITECH INDUSTRIES (1951--), NEAR ULLOOR BRIDGE, PATTOM P.O., THIRUVANANTHAPURAM-695 004, (KERALA) - 695004 PH :9447732057.	523. POPULAR REPAIR & SERVICE CENTRE (2944--), SECRETARIAT ROAD, KAVARATTI, LAKSHADWEEP-682 555. - 682555 PH :9448463737.	534. MODI MOTORS (3857--), BALLA KA DERA, JHANSI ROAD, DABRA, GWALIOR - 475110 PH :8770360194.
SASTHA MANGALAM	514. KICHU MOTORS (5453--), TC.49/962 ,SREEMOOLAM NAGAR CHIRAMUKKU , MANACAUR (PO) TRIVANDRUM, DISTRICT - TRIVANDRUM, KERALA - 695572 PH :9847023025.	MADHYA PRADESH	DAMOH
503. MARSHAL AUTOMOBILES (4035--), SWATHI NAGAR, TC 22/1565, PIPPINMOOD, SASTHAMANGALAM - PEROORKADA ROAD, PEROORKADA PO, THIRUVANANTHAPURAM - 695005, KERALA - 695005 PH :9447461101.	515. MUKUNDANS (3434--), POONTHI ROAD, KUMARAPURAM, MEDICAL COLLEGE P.O., THIRUVANANTHAPURAM, KERALA - 695011 - 695011 PH :9349882788.	BALAGHAT	535. MARUTI PRIME (1156--), BUS STAND, STATION ROAD, DAMOH-470 661, PH :8319706998.
SULTAN BATHERY		524. SAURAV MOTORS (4069--), DEENHI ROAD, GARRA INDUSTRIAL AREA, BALAGHAT, MADHYA PRADESH - 481001 PH :9300963731.	DATIA
504. AUTOMEK (4725--), BEENCHI P.O., SULTAN BATTERY -673 592, , - 673592 PH :9249999515.		525. GULAB AUTOMOBILES (1553--), VARDHMAN NAGAR, NEAR SHUBHARAMB LAWN, GONDIYA ROAD, KOSMI, BALAGHAT, MP - 481001 - 481001 PH :9425402926.	536. HIND MOTORS (4470--), NH-75, JHANSI BYPASS ROAD, NEAR S.R.I COLLEGE, KALAMPURAM TIRHA, DATIA, MADHYA PRADESH - 475661 - 475661 PH :9406969206.
		BARWANI	

DEWAS	548. KATNI MOTORS (4949--), C/O MAHURANIPUR UNION, TRANSPORT CORPORATION, NH-7, PANNA MORTH, KATNI-483501 (MADHYA PRADESH) - 483501 PH :9425162660.	559. HIGHWAY MOTORS (2262--), NEAR MOTEL CENTER POINT, SEONI-JABALPUR HIGHWAY, SEONI, (M.P.) - 480882 PH :9424928978.	AHMEDNAGAR
537. AZAD MOTORS (4534--), 10, JAWAHAR NAGAR COMPLEX AB ROAD DEWAS(MP)404051 - 455001 PH :9827533591.	KHANDWA	560. PACE CRAFTERS (2145--), NEAR VIRAT TEMPLE, BANGANGA TIRAHA, REWA ROAD, SHAHDOL, (M.P.) - 484001 PH :9424701495.	570. AMIT SERVICE STATION (4158--), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMADNAGAR, MAHARASHTRA - 411111
GWALIOR	549. M.K.AUTOMOBILES (5326--), SANTOSH NAGAR, OPP. JHEELODHYAN, INDORE ROAD, KHANDWA - 450 001 - 450001 PH :9425085666.	SHAJAPUR	AKLUJ
538. MARUTI ENTERPRISES (3021--), KHERAPATI ROAD, GWALIOR-474 002, (M.P.) - 474002 PH :9425116468.	KUKSHI	561. SHRIYA MOTORS (2568--), 174 A.B. ROAD, SHAHJAPUR-456 001, (M.P.), MADHYA PRADESH PH :9826783993.	571. SONAJ AUTOMOTIVES PVT. LTD. (2665--), SHANKARRAO MOHITE PATIL, CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.Q. BOX NO.-11, AKLUJ -413 101 (MAHARASHTRA) - 413101 PH :9657713360.
539. CLASSIC MOTORS & SERVICE STATION (5242--), CHAUHAN PIAO.M.G. ROAD, THATIPUR ,MORAR, GWALIOR , MADHYA PRADESH - 474011 PH :9329603001.	MANDSAUR	SHEOUPUR	AKOLA
HARDA	551. DEV MOTORS (4562--), SITAMAU FATAK, MANDSAUR-458001, MADHYA PRADESH, - 458001 PH :9826751534.	562. GOYAL AUTO (5446--), NEAR NABBAN MARKET, BARODA ROAD, SHEOUPUR, DISTRICT - SHEOUPUR, MADHYA PRADESH - 476337 PH :9826240944.	572. AUTOLAND (5936--), RAM NAGAR, TOSHNIWAL LAYOUT, AKOLA-444005, DISTRICT-AKOLA, MAHARASHTRA - 444005 PH :9422164050.
540. MANOJ UDYOG & SERVICE CENTER (4145--), 87-88, INDUSTRIAL AREA, CHHIPANER ROAD, HARDA, M.P. - 461331 PH :9826227245.	552. JANGID MOTORS (2735--), NAYAPURA ROAD, NEAR R.K. HOSPITAL, MANDSAUR-458 001, (M.P.) - 458001 PH :9827266583.	SHIVPURI	AKOLE
INDORE	MHOW	563. KURIN MOTORS (4273--), NEAR ARUN DHARAMKANTA, GUNA NAKA, A.B. ROAD, SHIVPURI - 473551 PH :9425728285.	573. SAMARTH CAR CARE (5555--), MAHALAXMI COLONY,K.G. ROAD-AKOLE, DISTRICT - AHMEDNAGAR, PIN-422601, MAHARASHTRA - 422601 PH :9881759099.
541. BOMBAY MOTORS (1655--), 10 Y.N. ROAD, INDORE-452 003, (M.P.), - 452003 PH :7314222786.	553. HIGHWAY MOTORS (8979--), A.B. ROAD, DONGRAGAON, MHOW-453441, INDORE M.P - 453441 PH :9826035653.	SIDHI	AMALNER
542. JYOTI RAGHUNATH MOTORS (5149--), 3/3 RAMBAGH, BEHIND PETROL PUMP , INDORE -452001, MADHYA PRADESH - 452001 PH :9425353568.	NAGDA	564. KHARE MOTORS (4068--), NH-75, SINGRAULI ROAD, SIDHI, MADHYA PRADESH - 486661 PH :9425177518.	574. LUCKY AUTO CARES (5853--), R.K. COMPLEX,R.K. NAGAR, DHULE ROAD, AMALNER-425401, DISTRICT-JALGAON, MAHARASHTRA - 425401 PH :9422789764.
ITARSI	554. MARUTI NANDAN (3939--), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA, DISTT UJJAIN - 456335 PH :9910074658.	TIKAMGARH	AMBERNATH
543. PITAMBARA MOTORS (5041--), NH-69,BETUL ROAD,NEAR PLYBOARD, FACTORY ITARSI , DISTRICT - ITARSI, MADHYA PRADESH - 461111 PH :9406525060.	SAGAR (M.P)	565. ASHENDRA AUTOMOBILES (2636--), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA, KUNDESHWAR, TIKAMGARH-472 001, MADHYA PRADESH - 472001 PH :9009123909.	575. J.S. AUTOMOBILES (4567--), B-31/3, MIDC, KALYAN AMBERNATH ROAD, AMBERNATH-421501, MAHARASHTRA - 421501 PH :9370116436.
544. UNITY ENTERPRISES (3270--), PLOT NO.97, INDUSTRIAL AREA, KHEDA, ITARSI-461 111 (M.P.) PH :8120025666.	JABALPUR	UJJAIN	AURANGABAD
JABALPUR	545. SUPER MARUTI SERVICE (4952--), 375-A PREM NAGAR, OPP. GURUDWARA, JABALPUR-482001, MADHYA PRADESH - 482001 PH :7999993375.	566. SUGANDHI BROTHERS (324--), DEWAS ROAD, UJJAIN (M.P.) , MADHYA PRADESH - 456010 PH :9406822255.	576. CAR CARE (5173--), #85.SERVICE INDUSTRIAL SECTOR, TOWN CENTRE,CIDCO, DISTRICT-AURANGABAD, MAHARASHTRA - 431006 PH :9158000029.
546. YASH VEHICLES CARE (2169--), 1664, WRIGHT TOWN ,OPP. TELEGRAPH GATE NO. 2 JABALPUR (M.P.) - 482002 PH :9893237505.	SARNI	567. ZALANI AUTO SERVICE (1554--), A 15/9, MAHAKAL VANIYUJA KENDRA, NANAKHEDA, UJJAIN 456010 , - 456010 PH :9713884177.	577. MARUTI AUTOMOBILES (3441--), SHREYANAGAR, KALDA CORNER, SAMBHAJI NAGAR (AURANGABAD) - 431101 PH :9767301999.
JAWAD	556. JHANJI SERVICE STATION (3738--), MAIN ROAD, BAGDONA, SARNI-460 449, DISTT. BETUL (M.P.) - 460449 PH :9589650034.	VIDISHA	BADLAPUR
547. SHARMA MOTORS (5764--), IN FRONT OF PAWAN MILL, STATION ROAD,JAWAD-458330, DISTRICT-NEEMUCH, MADHYA PRADESH - 458330 PH :9425441270.	SATNA	568. SAMAY MOTORS (5179--), NEAR SC/ST SHED , PITALMIL CHOURAHA, SAGAR ROAD NH-86, VIDISHA, MP-464002 - 464002 PH :9425392521.	578. OMKAR AUTO SERVICES (3376--), PLOT NO-A/54/1, KARJAT - BADLAPUR ROAD, MIDC BADLAPUR, MAHARASHTRA 421503 - 421503 PH :9326080457.
KATNI	557. KAPOOR SERVICING CENTRE (1162--), 90 PREM NAGAR, SATNA-485 001, (M.P.), - 470661 PH :9827095182.	WAIDHAN	BARSHI
	558. KAPOOR SERVICING CENTRE (--), 90 PREM NAGAR, SATNA-485 001, (M.P.), - 470661 PH :9827095182.	569. ANANT MOTORS (5732--), NEAR ESSAR TOWNSHIP, BILAUJJI WAIDHAN, DISTRICT-SINGRAULI, PIN-486886, MADHYA PRADESH - 486886 PH :8319050124.	579. OM SERVICING CENTRE (5359--), KURWEDI ROAD - BARS, DISTRICT - SOLAPUR , PIN - 413401, (MAHARASHTRA) - 413401 PH :9850437003.
	SEONI		

Maruti Authorized Service Station (AS ON 31.01.2026)

BEED	590. VIJAY MOTORS (5134--), PETH ISLAMPUR ROAD , NEAR PETH NAKA -ISLAMPUR, DISTRICT - SANGLI, MAHARASHTRA - 415409 PH :9860446084.	600. APPOLO MOTOR REPAIRING WORKS (2543--), MUMBAI-PUNE ROAD, LONAVALA, MAHARASHTRA-410 401, - 415409 PH :9370721905.	612. CHHAGAN MITHA (8945--), CORNER OF WARDEN ROAD & PEDDAR ROAD, POST BOX NO. 6521, MUMBAI -400026, MAHARASHTRA - 400026 PH :9820861441.
580. NEW AGWAN SERVICES (2235--), 850 SHYOG NAGAR, JALNA ROAD, BEED-431 122. - 431122 PH :9822217321.	JALGAON	MAHAD	613. HIND AUTOMOBILES (550--), 29 SEWREE WADALA ROAD, KING'S CIRCLE, MUMBAI - 400 019 (MHR'S) , - 400019 PH :9833876440.
BOISAR	591. SHREE MOTORS (3040--), 362 SHIVAJI NAGAR, JALGAON-425 001, , - 425001 PH :9823150704.	601. SHREE AUTO (2572--), NAGALWADI PHATA BOMBAY-GOA HIGHWAY, AT & TALUKA -MAHAD, DISTT. RAIGAD, MAHARASHTRA-402 301 - 402301 PH :94222495799.	614. LAXMI AUTO WORKS (2542--), PLOT NO.1041, SAYANI ROAD, PRABHADEVI, MUMBAI-400 025 - 400025 PH :9820303646.
CHANDRAPUR (MAHARASHTRA)	KALWA	602. MALEGAON AUTO CENTRE (3721--), NEAR MOTI BAUG NAKA, MALEGAON-423 203, , - 423203 PH :9371376911.	615. ORIX AUTO INFRASTRUCTURE SERVICES LTD (1971--), 94 MAROL INDUSTRIAL ESTATE, ANDHERI KURLA ROAD, ANDHERI (EAST), MUMBAI-400 059 - 400059 PH :9820409079.
582. SHEIKH AUTOMOBILES (5379--), APPPOSITE GOVT. ITI,CIVIL LINES , CHANDRAPUR, DISTRICT - CHANDRAPUR, MAHARASHTRA - 442401 PH :9422171896.	KALWAN	603. KRUPA SERVICES (574--), KRUPA SERVICES, AT : NANORE, POST : MANGAON, DISTT-RAIGAD-402 104 - 402104 PH :9422375444.	616. POWAI AUTO WORKS (1660--), OPP. PANCH KUTIR BUS STOP, 19 ADI SANKARACHARYA MARG, POWAI, MUMBAI-400 076 - 400076 PH :9820635317.
CHIPLUN	593. KRISHNA AUTOMOTIVE (4037--), GANESH NAGAR, AT POST & TALUKA, KALWAN, DIST NASHIK-423501 - 423501 PH :8087988735.	MANGAON	617. POWAI AUTO WORKS (4966--), GALA NO 14/15/16, BUILDING NO1, C WING, KAILAS INDUSTRIAL COMPLEX, PARKSITE VIDHROLI (W) , - 400079 PH :9820635317.
583. MANORKAR AUTOMOBILES (270--), NEAR RAILWAY STATION, BOMBAY-GOA HIGHWAY, WALOPE CHIPLUN-415 605, DISTT. RATNAGIRI - 415605 PH :9421239999.	KANKAVLI	604. ASHOK AUTOMOBILES (5672--), C.S. NO.70-C,CHH - SHIVAJI ROAD, MIRAJ, DISTRICT - SANGLI, MAHARASHTRA - 416410	618. PRINCE SERVICE CENTRE LLP (8931--), 34 GAMDEVI ROAD, SANGHANI ESTATE, GHATKOPAR (WEST), MUMBAI-400 086 - 400086 PH :9869034445.
584. MAYUR MOTORS (168--), SITA APARTMENTS, NEAR BAHADUR SHEIKH NAKA, CHIPLUN DISTT. RATNAGIRI, MAHARASHTRA - 415605 PH :9422431112.	KATOL	MUMBAI	619. RAVI AUTOMOBILE SERVICES (553--), GHATKOPAR-MAHUL ROAD, TILAK NAGAR, CHAMBUR, MUMBAI-400 089 , - 400089 PH :8657442190.
DAPOLI	595. BALAJI SERVICE STATION (5962--), PLOT NO. XI,MIDC,SAWARGAON ROAD,DONGARGAON-, KATOL,NAGPUR-441302, DISTRICT-NAGPUR, MAHARASHTRA - 441302 PH :9763867144.	605. ALLIED AUTO AGENCIES (2666--), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052, - 400052 PH :9768257450.	620. SHAH CAR CARE (5436--), SADANWADI LAKE ROAD OFF LBS MARG, NEAR KRISHNA TALKIES, DISTRICT - MUMBAI (MAHARASHTRA) - 400078 PH :9820068380.
585. ROYAL AUTO SERVICE STATION (3444--), DAPOLI-MANDANGAD ROAD, MAUJE-DAPOLI, TAL- DAPOLI, DIST. RATNAGIRI-415 712 (MAHARASHTRA) - 415712 PH :8888101776.	KHAMGAON	606. ASHA AUTO SERVICE (570--), I.O.C DEALER, L.B.SHASTRI MARG, KURLA, MUMBAI-400 070 - 400070 PH :9833728833.	621. SHAMAL MOTORS (1154--), VAITY WADI, BHANDUP-SONAPUR ROAD, BHANDUP (WEST), MUMBAI-400 078 - 400078 PH :9773911111.
DEOPUR	596. JAIDEEP MOTORS (4779--), NEAR RELIANCE PETROL PUMP, NANDURA ROAD, KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA) - 444303 PH :9850352826.	607. AUTO CRAFT (4759--), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG, VIHKROLI (W), MUMBAI-400083 - 400083 PH :9820022227.	622. ST. FRANCIS AUTOMOBILE (5154--), MOUNT POINSUR BORIVALI (WEST), MUMBAI - 400103, DISTRICT - MUMBAI, MAHARASHTRA - 400103 PH :9828904552.
586. AGRO ENGINEERING SERVICES (2244--), DIVERSION ROAD, DEOPUR, DHULE-424 005, - 424005 PH :9823059471.	KHED	608. AMAR AUTOMOBILES (526--), KING'S CIRCLE, MATUNGA, MUMBAI-400 019 (MHR'S) , - 400019 PH :9869473310.	623. SUPER AUTO SERVICES PVT. LTD. (2430--), DESAI WADI JAYWANT SAWANT ROAD, NEAR HAPPY HOME SOCIETY, DAHISAR (W), MUMBAI-400 068 - 400068 PH :9867253000.
DOMBIVLI	597. BHARAT AGENCIES (4548--), NEAR KAMAKSHI PETROL PUMP, AT POST KALBANI, TALUKA KHED, DISTRICT RATNAGIRI, 415621 - 415621 PH :9049024781.	609. CARAKRAFT AUTOMOBILES AND INFRASTRUCTURE PVT. LTD. (4654--), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR SAI DHAM MANDHIR, MULUND (W), MUMBAI - 400080 PH :9820296924.	624. SURAJ SANGHI SERVICE STATION (438--), DR. ANNIE BESANT ROAD, WORLI, MUMBAI-400 018, - 400018 PH :9821115492.
GADACHIROLI	KOLHAPUR	610. CHAMUNDA MOTORS (P) LTD (520--), RAMBAUG NEAR SUNDAR DHAM, OFF S.V.ROAD, BORIVILI (W), MUMBAI-400 092 - 400092 PH :9820063626.	MURBAD
588. VENUS AUTOMOTIVE (4170--), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY, GADACHIROLI, MAHARASHTRA-442605 - 442605 PH :9689228222.	KOPARGAON	611. SHREEMOTORS (2526--), 31/A ANAND NAGAR, OFF SION TROMBAY ROAD, SINDHI SOCIETY CHEMBUR, MUMBAI-400 071 - 400071 PH :9820475704.	
ICHALKARANJ	599. SAI MOTORS (4449--), NAGAR MANMAD HIGHWAY, NEAR HOTEL ASHOKA, KOPARGAON, DIST. AHMEDNAGAR (MAHARASHTRA) - 423601 PH :9850684384.		
589. SAI AUTO LEADS (3821--), 6/1108, SANGLI VES, ICHALKARANJ - 416115, DIST. KOLHAPUR, MAHARASHTRA - 416115 PH :9822009788.	LONAVALA		
ISLAMPUR			

625.	JAYDEEP AUTOMOBILES (5676--), MURBAD KALYAN HIGHWAY(NH-222),NEAR NAVDURGA HOTEL, AT-PO-TAL,MURBAD-421401, DISTRICT-THANE, MAHARASHTRA - 415621 PH :9423370219.	NAVI MUMBAI	649.	SAGAR MOTORS (5979--), MALIBABHULGAON, NAGAR ROAD PATHARDI, MAHARASHTRA 414102 - 414102 PH :9822197969.	661.	RUCHI MOTORS (2631--), MARUTI AUTHORISED SERVICE STATION, RAVER-425 508, DISTT. JALGAON, (MAHARASHTRA) - 425508 PH :8805373406.			
NAGPUR			PEN			ROHA			
626.	BALAJI MOTORS (3078--), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20 - 440020 PH :9960634068.	639.	C G MOTORS (4138--), PLOT NO R-966, NEAR MK ENGINEERING, RABALE MIDC, RABALE, NAVI MUMBAI, PINCODE 400701 - 400701 PH :9920205756.	650.	NAVNATH AUTO (5677--), OPPOSITE RAMWADI,S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA - 402107 PH :9834792228.	662.	AMIT MOTORS (4972--), NANA SHANKAR SHETH ROAD , NEAR GOVT REST HOUSE, DISTRICT - RAIGAD , ROHA - 402109, MAHARASHTRA - 402109 PH :9028376141.		
627.	HASAN GARAGE (2021--), MOHAN NAGAR, NAGPUR - 440 001 (MHRS) , - 440001	640.	CHETAN MOTORS (3143--), PLOT NO.-45, SECTOR-19A, OPP. DANA BAZAR EXIT GATE NO.3, BEHIND SHAMRAO VITHAL CO-OP BANK, VASHI, NAVI MUMBAI - 400705 - 400705 PH :9892067288.	PHALTAN			SAKURI		
628.	M S SERVICES (5339--), 14 HILL ROAD , GANDHI NAGAR - NAGPUR , DISTRICT - NAGPUR , MAHARASHTRA - 440010 PH :9373422822.	NIGDI			651.	VORA AUTOMOTIVE (2436--), SHINGNAPUR ROAD, KOLKI, PHALTAN-415523, - 415523 PH :7709436262.	663.	SHREE SAI SERVICE CENTRE (5344--), NAGAR-MANMAD ROAD ,GODAVARI, HOTEL JEWEL ,PO.SAKURI, TAL-RAHATA, DISTRICT - AHMEDNAGAR , MAHARASHTRA - 423107 PH :9970741777.	
629.	R K MOTORS (8977--), 69 A V A LAYOUT, LAKADGANJ, NAGPUR-440 008, - 440008 PH :9890424190.	NIPHAD			SANGAMNER				
630.	SAGAR AUTOMOBILES (2667--), MARUTI AUTHORISED SERVICE STATION, PLOT NO.3 NEAR PETROL PUMP, WARDHA ROAD UJJWAL NAGAR, NAGPUR-440 025 - 440025 PH :9960695823.	642.	SHRI SAI SERVICE STATION (4452--), NIPHAD AURANGABAD ROAD, NIPHAD, NASIK, MAHARASHTRA - 422303 PH :9823679999.	PUNE			664.	SAI MOTORS (2840--), NEAR GULEWADI PHATA, PUNE NASIK ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS) - 422608 PH :9860027513.	
631.	SAGAR AUTOMOBILES (4971--), WARDHA ROAD, CHINCHBHAVAN, NAGPUR - 441108, - 441108 PH :9422145365.	PACHORA			653.	APPU AUTOMOBILES (5029--), SR. NO. 165, PLOT NO. 801, TALAWADE ROAD, PUNE - 412114, MAHARASHTRA - 411062 PH :9371017595.	SANGLI		
632.	SHREEJEE SERVICES (2027--), CHANDAK KOTHI, SUBASH ROAD, NAGPUR-440 018, - 440018 PH :9766699321.	643.	POOJA MARUTI AUTHORISED SERVICE CENTER (5564--), PLOT NO 75,PREM NAGAR ,KRISHNA PURI SHEVAR, PACHORA, DISTRICT - JALGAON , MAHARASHTRA - 424201 PH :9890320803.	654.	APPU SERVICE STATION (8966--), T BLOCK, S-32, NEAR PAWANA COMPLEX, MIDC, PUNE-411026 (MAHARASHTRA) - 411026 PH :9763538871.	665.	ASHOK AUTOMOBILES (3723--), 595/B, M.G.ROAD, SANGLI-416 416, - 416416	666.	AWATI MOTORS (4772--), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHARASHTRA - 416415 PH :9422407284.
NANDED			PALGHAR			SATANA			
633.	MARUTI CARES AND COLOURS (5778--), LABH NAGAR,BACK SIDE OF SURABH HOTEL, NANDED-431605, DISTRICT-NANDED, MAHARASHTRA - 431605 PH :9225751444.	644.	SIDDHI MOTORS (5553--), THEMBHEDE ROAD,GANESH KUND, PALGHAR,DISTRICT - THANE, MAHARASHTRA, - 401404 PH :9890609107.	655.	ATHARVA CAR SERVICES (5161--), 5, BHUSARI COLONY, PAUD ROAD, KOTHRUD,PUNE-411038 , MAHARASHTRA - 411038 PH :9685024803.	667.	BALAJI AUTO SERVICE (1564--), PLOT NO.43,GOLDEN PARK , BYPASS ROAD,SANGLI-416416, DISTRICT-SANGLI , MAHARASHTRA - 416416 PH :9822106126.	SATANA	
NANDURBAR			PANVEL			SATARA			
634.	MAULEE MOTORS (4736--), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD, NANDURBAR-425412, MAHARASHTRA - 425412 PH :9822377931.	645.	GANGAL MOTORS (2934--), PLOT NO.:132,133 &117, SECTOR 1-S, ROAD NO-5, BEHIND CIDCO GODOWN, NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA) - 410206 PH :9320226072	656.	MANAS AUTOMOTIVE (5443--), SURVEY NO 9/20A, ANAND THORAT ROAD, NEAR APJ ABDUL KALAM E LEARNING SCHOOL, KARVE NAGAR, PUNE - 411052, - 411052 PH :9822043007.	668.	PATHAK MOTORS (5037--), YASHWANT NAGAR,TAHARABAD ROAD, , SATANA - 423301, DISTRICT - NASIK, (MAHARASHTRA) - 423301 PH :9890216257.	SATARA	
NASHIK			PARBHANI			SAWANTWADI			
635.	HI TECH AUTO SERVICES (4451--), SURVEY NO 89/2, PLOT 1 & 2, OPP MOTIWALA MEDICAL COLLEGE, GANGAPUR-SATPUR LINK ROAD, NASHIK - 422012, MAHARASHTRA - 422007 PH :9225142471.	646.	IDEAL AUTOMOBILES (2279--), IDEAL HOUSE,PLOT NO-83, PANVEL INDUSTRIAL CO OP ESTATE LTD., PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA) - 410206 PH :9969602650.	657.	MARUTI CARE POINT (3337--), S. NO 273/5,BANER ROAD,OPP. VARSHA PARK, BANER,PUNE-411045, MAHARASHTRA, - 411045 PH :9689901475.	669.	SIDDHI AUTOMOBILES (5464--), 294/A,DEGAON PATA - SATARA, RAHAMTPUR ROAD.MIDC SATARA, DISTRICT - SATARA , (MAHARASHTRA) - 415002 PH :9422403178.	SAWANTWADI	
636.	RACCA SERVICES (3720--), RACCA ESTATE, OLD GANGAPUR NAKA, HANUMAN WADI LINK ROAD, PANCHVATI, NASHIK - 422003 - 422003 PH :9096846468.	PASHAN			658.	SAINATH AUTOMOBILES INDUSTRIES (1569--), SURVEY NO.36 PLOT NO.1, VADGAON KHURD SINHAGAD ROAD, NEAR GREEN FIELD HOTEL, PUNE-411 041 - 411041 PH :9822214282.	SAWANTWADI		
637.	SAI AUTOMOBILES (3722--), SAPAT COMPLEX, OPP. PRESS HOSPITAL, NASIK ROAD-422 101, - 422101 PH :9822027931.	647.	SAI SERVICING CENTRE (5252--), P7/5 MIDC, PARBHANI-431 401, MAHARASHTRA, - 431401 PH :94045504111.	659.	SANTOOR CAR CARE (2053--), ASHOK PLAZA, 32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE-411 014 - 411014	SHAHADA			
			PATHARDI			SHAHADA			
			RAHURI			SHAHADA			
			RAVER			SHAHADA			
						671. MATOSHREE AUTOMOBILES (2870--), NO.558 SHAHADA DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA) - 425409 PH :9421726230.			

Maruti Authorized Service Station (AS ON 31.01.2026)

SHIRDI	VADA	693. KOMUO MARUTI WORKS (4644--), NH-2, MAO TAPHOU, SENAPATI HQ, SENAPATI DISTRICT, MANIPUR - 795106 - 795106 PH :8794109474.	703. INDO JAPAN SERVICE (4936--), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PO- PATRAPADA, BHUBANESHWAR-752019, ORISSA - 752019 PH :9861095444.
672. SHREE GANESH AUTO CARE (4268--), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107. - 423107	683. SAI MOTORS & SERVICE CENTRE (5675--), VARALA, OPP. LAKE CITY, MANOR ROAD, WADA, - 421303 PH :9226338578.		
SHRIRAMPUR	VITA		CUTTACK
673. G.K. MOTORS (2871--), K.V. ROAD, SHRIRAMPUR, DISTT. AHMEDNAGAR, PIN-413 709. - 413709 PH :9822094098.	684. SONA AUTOMOTIVE (5671--), MAYANI ROAD, NEAR PRUTHIVIRAJ HOTEL, OPP. LAKADE PETROL PUMP, DISTT VITA- 415311, - 415311 PH :9890223938.	MIZORAM	704. AUTO MATES (426--), 3B/1325, SECTOR-11, CDA, CUTTACK, ODISHA - 753014 - 753008 PH :9437020646.
SOLAPUR	WAI	CHAMPAI	705. DURGA SERVICE CENTRE (8984--), NEAR PALAMANDAP, BADAMBADI, PO - ARUNODAY MARKET, DISTT - CUTTACK, PIN-753012 - 753012 PH :9937035762.
674. BALAJI MOTORS (1930--), 8536 B/1 MURARJI PETH, OPP. OLD PUNE NAKA OFFICE, SOLAPUR-413 002. - 413008 PH :9765111110.	685. ADITYA AUTO SERVICE (4271--), WAI SATARA ROAD, WAI-412803, SATARA DIST., - 412803 PH :9423862119.	LUNGLEI	DHENKANAL
THANE	WANI	695. LAWMA ENGINEERING WORKS (3125--), , A O C SQUARE, LUNGLEI, MIZORAM-796 701 - 796701 PH :9436147141.	706. SHREE AUTO (8997--), GOUDUNIBEDIA, DHENKANAL - 759013, ODISHA - 759001 PH :9437414972.
675. PATRICIA AUTOMOBILES (529--), ALIGHT CHAMBER, ADJACENT GOLDEN DYES, OLD AGRA ROAD, HARDAS NAGAR, GOKUL NAGAR, THANE, WEST - 400601 - 400601 PH :9987175866.	686. SHEIKH AUTOMOBILES (8950--), PLOT NO 101, WANI GHUGUS ROAD, OM NAGRI, LAL GUDA TALAO, WANI, DIST. YAVATMAL, MAHARASHTRA 445304 - 445304 PH :9422171896.	NAGALAND	JHARSUGUDA
676. SEAN MOTORS (5377--), DONTOLAV - VATAR, VIRAR (W), VIRAR SATPALA ROAD, TAL VASAI, DISTRICT - PALGHAR, MAHARASHTRA - 401301 PH :9324003123.	WARDHA	696. ERJO MOTORS (4871--), EAST BLOCK, BURMA CAMP, NEAR BIBLE HOUSE, DIMAPUR, NAGALAND - 797112. - 797112 PH :9436004350.	707. AUTO MECHANIKA (2638--), S.H-10 BEHERMANI, JHARSUGUDA-768 203, ORISSA, - 768203 PH :9040380001.
677. STERLING MOTOR GARAGE (555--), B1/B2, KOTHARI COMPOUND NO.3, 27 ACRES, NEXT TO D'MART, OFF GHODBUNDER ROAD, MANPADA, THANE (WEST), MAHARASHTRA - 400610 - 400601 PH :9820252926.	WARORA	ODISHA	PURI
678. THANAWALA MOTOR AGENCY PVT. LTD. (3724 -), DHIRAJ BAUG, L.B.S. MARG, NAUPAD, NEAR HARINIWAS CIRCLE, THANE-400 602 - 400602 PH :9820106904.	688. ROHIT AUTOMOTIVE (5873--), NAGPUR,CHANDRAPUR ROAD,VINAYAK, LAYOUT,TILAK WARD,WARORA-442907, DISTRICT-CHANDRAPUR, MAHARASHTRA - 442907 PH :9172060099.	697. ZEET AUTOMOBILES (1573--), NALCO NAGAR, KANDASAR, ANGLU - 759 145, ORISSA - 759145 PH :9437021285.	708. URMILA MOTORS (5040--), HERA GOHRI SAHI CHOWK ,PURI -1, DISTRICT - PURI, (ORISSA), - 752001 PH :7008651960.
679. CARKRAFT SERVICES PRIVATE LIMITED (8973--), SAINATH NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W) - 400615 PH :9833795855.	YAVATMAL	BALANGIR	SAMBALPUR
ULHASNAGAR	689. M.S. MOTORS (460--), AMRAVATI ROAD HIGHWAY, LOHARA, YAVATMAL-445 001. - 445001 PH :9822222579.	698. ASHIRWAD AUTOMOBILE WORKS (3177--), DAMJI GARAGE, THIKADARPARA, . . . BALANGIR-767 001 - 767001 PH :9437223452.	709. ANITA AUTO CARE (4834--), SALIA BAGICHA, LIONS CLUB ROAD, KUMBHARPARA, SAMBALPUR-768001 (ORISSA) - 768001 PH :9861248403.
680. CHIMAN AUTOMOBILES (3845--), NEAR KAJAL PETROL PUMP, BALANI COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR 421003 - 421003 PH :9850223422.	690. RAMESH MOTORS (2024--), GARDEN ROAD, YAVATMAL, MAHARASHTRA-445 001. - 445001 PH :9422865222.	BALASORE	SEMILIGUDA
681. MODERN CAR CARE (3260--), SHED NO 1/2/3, OPPOSITE SUPPER POINT HOTEL, SECTION 17, ULHASNAGAR - 421003, MAHARASHTRA - 421003 PH :9819774588.	YEOLA	699. AUTO CARE (432--), AT-BAMPADA, PO-CHHANPUR, CITY - BALESHWAR (BALASORE), ODISHA - 756056 - 756056 PH :9437051944.	710. ASHUTOSH MOTORS (5035--), MAIN ROAD, NH-43, SEMILIGUDA, DISTRICT-KORAPUT, (ORISSA) - 764036 PH :9437405417.
URAN	MANIPUR	700. TEKNO INDIA (3666--), D-2/9 INDUSTRIAL AREA, O.T. ROAD, BALASORE-756 003, (ORISSA) - 756001 PH :9861034990.	PONDICHERRY
682. SAI AUTOMOBILES (5665--), STATE HIGHWAY NO.56,NEAR JASAI NAKA, JASAI VILLAGE,URAN-410206, DISTRICT - RAIGAD, MAHARASHTRA - 410206 PH :9821806806.	691. BIJASANI AUTOMOTIVE (3041--), PLOT NO 46, SURVEY NO 35/3, VINCHUR ROAD, YEOLA, DIST. NASIK, MAHARASHTRA - 423401 PH :9423185025.	BARBIL	KARAIKAL
	IMPHAL	701. INDU MOTORS (3241--), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA) - 758035 PH :9437718008.	711. MARUTI TECH (2669--), NO.1,AKKARIVATTAM,NAGAORA MAIN ROAD , OPP TO ONGC,KARAIKAL-609604, DISTRICT-KARAIKAL, PONDICHERRY - 609604 PH :7373788705.
	SENAPATI	702. INDU MOTORS (--), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA) - 758035 PH :9437718008.	PUDUCHERRY
		BHUBANESHWAR	712. S D K MOTORS (471--), PLOT NO.12, 100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004 - 605004 PH :9843045689.

714. MARUTI MISSION (5067--), 60 RAGAVENDIRA NAGAR,KAMARAJ SALAI, THATTANCHAVADY PONDICHERRY, TINDIVANAM ROAD PONDICHERRY-9, PONDICHERRY - 605009 PH :9786589000.

PUNJAB

AHMEDGARH

715. GAHIR AUTOMOBILES (2877--), LUDHIANA MALEK KOTLA ROAD, VILL. GOPALPUR CITY, AHMEDGARH, (PUNJAB) - 148021 PH :9817553627.

AJNALI

716. VISHWAKARMA MOTORS (5666--), NEAR VIMAL DHARAMKANTA - AJNALI, DISTRICT - FATEHGARH SAHIB, PUNJAB, - 147301 PH :9814528084.

AMLOH

717. BINDRA MOTORS (5844--), NEAR DESH BHAGAT COLLEGE SONTI, AMLOH, DISTRICT-FATEH GARH SAHIB, PUNJAB - 147203

AMRITSAR

718. HANSON AUTOMOBILES (1722--), MAQBOOL PURA, G.T. ROAD, AMRITSAR, - 143001 PH :9815167669.

719. JACKSON LUBRICANTS (364--), 16 COURT ROAD, NEAR RAVI GAS AGENCY, AMRITSAR-143 001, - 143001 PH :9814299944.

720. KAPOOR'S KAR KARE PVT. LTD. (737--), I/S MAHA LAKSHMI, CALICO PRINTING MILLS, OLD JAIL ROAD, AMRITSAR(PUNJAB), - 143001 PH :9814213113.

721. SAGGU SERVICE CENTRE (733--), HIDE MARKET, AMRITSAR-143 001 (PUNJAB), , - 143001 PH :8968497779.

BANUR

722. AMRIK SERVICE STATION (2433--), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), - 140601 PH :9815591325.

BARNALA

723. GAURAV MOTORS (4962--), DHANAULA ROAD, BARNALA - 148101, DISTRICT SANGRUR, PUNJAB - 148101 PH :9317512916.

724. PUNJAB MOTOR GARAGE (6222--), DHANAULA ROAD, BARNALA (PUNJAB), - 148101 PH :9317512360.

BHADSON

725. FRIENDS MOTORS (2233--), NABHA ROAD, BHADSON-147 202, DISTT. PATIALA, (PUNJAB) - 147202 PH :9815700778.

BHATINDA

726. KRISHNA AUTOS (4571--), 40FT ROAD NAMDEV MARG NEAR INDRANI HOSPITAL ,BATHINDA (PUNJAB) 151001 - 151001 PH :9888671810.

727. MODERN MOTORS (6234--), OPP. T.V. TOWER, MANSA ROAD, BHATINDA, - 151001 PH :9814177075.

728. SUPER AUTOMOBILES (6232--), TINKONI, GONIANA ROAD, BHATINDA, - 151001 PH :9814036163.

BUDHLADHA

729. JINDAL AUTOMOBILES (2147--), NEAR P.S.E.B., BHIKHI ROAD, BUDHLADA-151 502, DISTT. MANSA - 151502 PH :9815516964.

DERABASSI

730. BINDAL AUTOMOBILES (1248--), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, - 140507 PH :9914449711.

DHURI

731. SHIV MOTORS (1962--), NEAR SDM OFFICE, SANGRUR ROAD, DHURI-148 024, - 148024 PH :9872851068.

DINANAGAR

732. D. S. MARUTI SERVICE STATION (3333--), G.T. ROAD, DINA NAGAR, DIST. GURDASPUR-143 531, (PUNJAB) - 143531 PH :9814873101.

DIRBA

733. PENTAGON MECHANICAL WORKS (2564--), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB) - 148035 PH :9876543400.

DORAHA

734. FATEH MOTORS (2048--), G.T. ROAD, DORAHA, (LUDHIANA), - 141421 PH :9814031784.

FAZILKA

735. BAHL MOTORS (6229--), ABOHAR ROAD, FAZILKA-152 123, , - 152123 PH :9815700550.

FIROZPUR

736. SUTLEJ AUTOMOBILES (3568--), G.T. ROAD, FERROZPUR CANTT., PIN-152 001 (PUNJAB), - 152001 PH :9417009985.

GIDDERBAHA

737. JIWAN CAR CENTRE (9021--),BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA-152 101, DIST. MUKETSAR (PUNJAB) - 152101 PH :9779600086.

GOINDWAL SAHIB

738. DASS MOTORS (8941--), NEAR KALAYAN JEWELLERS MINI SHOWROOM, KHADOOR SAHIB CHOWK, GOINDWAL SAHIB, TARN TARAN, PUNJAB - 143422. - 143429 PH :9914699121.

GURDASPUR

739. VIJAY SERVICE STATION (749--), NEAR RAILWAY CROSSING, PATHANKOT ROAD, GURDASPUR, (PUNJAB) - 143521 PH :9814437637.

HOSHIARPUR

740. JOGINDER MOTORS (2268--), BYE PASS TANDA ROAD, HOSHIARPUR-146 001, - 146001 PH :9803227000.

JAGRAON

741. DHALIVAL AUTOMOBILES (2035--), NEAR AJANTA PETROL PUMP, G.T. ROAD, JAGRAON DISTT. LUDHIANA, (PUNJAB) - 142026 PH :9814318600.

JALANDHAR

742. CITY POINT SERVICE STATION (4528--),AVTAR NAGAR ROAD, BEHIND T.V. CENTRE, OPP HOTEL REGENT PARK, JALANDHAR - 144003 PH :9779613576.

743. KAAR KARES (725--), G.T.ROAD, JALANDHAR, 144 001 (PUNJAB), - 144001 PH :9569295585.

744. KAPOOR MOTOR GARAGE (1649--), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY, - 144623 PH :9815040411.

745. PUNJAB MOTOR GARAGE (8959--), HMV CHOWK, NEW GRAIN MARKET ROAD, JALANDHAR CITY-144 008 - 144008 PH :9814675433.

KAPURTHALA

746. T. S. WALIA MOTORS (267--), MANSOORWAL, JALLANDHAR ROAD, KAPURTHALA, - 144601 PH :9357211525.

KHARAR

747. AUTOXON (9027--), SCF 2, CHANDIGARH ROAD, KHARAR, SAS NAGAR,140301 - 180055 PH :9781815959.

KURALI

748. V K MOTORS (8943--), CHANDIGARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNJAB -140103 - 140103 PH :9814273873.

LALRU

749. HITECH MOTORS (2777--), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB - 140501 PH :9888191444.

LUDHIANA

750. PUNJAB AUTO CENTRE (6221--), OPP TELEPHONE EXCHANGE, BHARAT NAGAR CHOWK, LUDHIANA-141 001, - 141001 PH :9855117003.

751. REEHAL AUTOMOBILE SERVICES (1176--), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA-141 010, - 141015 PH :9357110000.

752. SATNAM MOTOR WORKSHOP (4533--), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA, - 141003 PH :9855228591.

753. STAR AUTOS (4650--), JALANDHAR BY PASS, G.T. ROAD, LUDHIANA, - 141012 PH :9216844220.

754. VISHAL AUTOMOBILES (1262--), G.T. ROAD, DHOLEWAL, LUDHIANA-141 003, - 141003 PH :9815206060.

MANDI GOBINDGARH

755. NATIONAL MOTORS (1070--), G.T. ROAD, NEAR P & S BANK, MANDI GOBINDGARH-147 301, - 147301 PH :9317862000.

MANSA (PUNJAB)

756. LOVEKESH ENTERPRISES (2162--), NEAR N.M. COLLEGE, MANSA-151 505, (PUNJAB), - 151505 PH :9216524143.

MOGA

757. GURU NANAK MOTOR REPAIRING WORKS (732--), G.T.ROAD, MOGA-142 001 (PUNJAB), , - 142001 PH :9914121387.

MOHALI

758. BENZ AUTO SCAN (5734--), E-153, PHASE 7, INDUSTRIAL AREA -MOHALI, DISTRICT-MOHALI, PUNJAB - 160055 PH :9876101806.

759. SETHI MOTORS (4742--), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PUNJAB - 160055 PH :9814307002.

760. UNIPONT (5043--), PLOT NO.593., INDUSTRIAL AREA PHASE-IX,MOHALI., DISTRICT - MOHALI, (PUNJAB) - 160062 PH :7814402838.

MORINDA

761. SONY MOTOR PALACE (1077--), SIRHIND ROAD, MORINDA-140 101, , - 140101 PH :9815612477.

MUKERIAN

Maruti Authorized Service Station (AS ON 31.01.2026)

762.	MARSHAL SALES CORPORATION (5251--), NEAR RADHA SOAMI SATSANG, PATHANKOT ROAD, UKHERIAN - 144211, DISTRICT HOSHIARPUR,PUNJAB - 144211 PH :8283835926.	773.	BALAJI AUTOMOBILES (4443--), OPPOSITE FCI GODOWN, RAMPURA PHUL - 151103 - 151103 PH :9417172671.	785.	POOJA MOTORS (5439--), POOJA MOTORS,NEAR AMARNATH PETROL PUMP DELHI ROAD, MUNGSKA - ALWAR , DISTRICT - ALWAR , RAJASTHAN - 301001	CHOMU	798.	SHREE LAXMI MOTORS (3072--), MORIJA ROAD, CHOMU, JAIPUR-303702, (RAJASTHAN) - 303702 PH :9828160281.
763.	NEW MODERN AUTOMOBILES (4437--), G.T. ROAD, UKHERIAN, PUNJAB, - 144211 PH :9463292013.	774.	VIRO MOTOR GARAGE (3046--), BARNALA ROAD, RAMPURAPHUL-151 103, DISTT. BATHINDA, (PUNJAB) - 151103 PH :9872874175.	786.	VERTEX AUTOMOBILES PVT. LTD. (1944--), CHANDUKA BHAWAN, SWARG ROAD, ALWAR-301 001, - 301001	CHURU	799.	ABS MOTORS (2978--), JAIPUR ROAD, CHURU-331 001, (RAJASTHAN) - 331001
764.	MALWA MARUTI CENTRE (4764--), OPP GOVT COLLEGE KOTKAPURA ROAD, MUKTSAR, PUNJAB, - 152026 PH :9814622081.	775.	SAANGRUR RAKESH MARUTI SERVICE (6325--), JIND - DELHI ROAD, NEAR E.S.I. DISPENSARY, SAANGRUR-148 001, - 148001 PH :9815103944.	787.	VIEW SERVICE (1238--), S-181 & 182, RIICO, BARMER-344 001, (RAJASTHAN) - 344001	DAUSA	800.	BALAJI MOTORS (4564--), NEW MANDI ROAD, NEAR TRANSFORMER, DAUSA-303303, - 303303
765.	MEHTA MOTORS (3531--), KHADDAR BHANDAR ROAD, NAKODAR-144040 - 144040 PH :9815600082.	776.	SAANGRUR MARUTI CENTRE (1632--), PATIALA ROAD, OPP. MILITARY CAMPUS, SAANGRUR-148 001, (PUNJAB) - 148001 PH :9417510111.	788.	VARDHANI MOTORS (5358--), NEAR NALAYA BASSI, DISTRICT - JAIPUR , RAJASTHAN, - 303301 PH :9950107203.	DHAULPUR	801.	NARAYAN MOTORS (3345--), G.T. ROAD, DHOLPUR, (RAJASTHAN) - 328001 PH :9116013413.
766.	PARAS MOTORS (4778--), PLOT NO. 25-A, NEAR HOTEL FLYOVER FACTORY AREA, PATIALA-147001, PUNJAB - 147001 PH :9814089861.	777.	SIRHIND BADRI DHAM CAR SERVICE (1062--), G.T. ROAD, SIRHIND-140 406, - 140406	789.	K.L. INTERNATIONAL AUTOMOBILES (1763--), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARDOOPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN) - 301701	DIDWANA	802.	NARSING SERVICE CENTRE (3074--), NEAR JAGDISH TALKIES, BARI ROAD, DHOLPUR-328 001, (RAJASTHAN) - 328001 PH :9414026820.
767.	RAJINDRA MOTORS (8924--), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB - 147003 PH :9316200335.	778.	SULTANPUR LODHI HANDA MOTORS (2776--), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB) - 144626 PH :9815623392.	790.	CLASSIC MOTORS (2348--), DEEG ROAD, KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN) - 321001 PH :9414026545.	DUDU	804.	NEETA AUTOMOBILES (4855--), C/O NEW JAIN GUEST HOUSE, NH-8, JAIPUR AJMER ROAD, DUDU, RAJASTHAN - 303008 PH :9667031098.
768.	ANU AUTOMOBILE (2747--), AMRITSAR ROAD, NEAR RADHA SWAMI SATSANG, PATTI DISTT. AMRITSAR, (PUNJAB) - 143416 PH :8575210003.	779.	SUNAM SUNAM AUTOMOBILES (3924--), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SAANGRUR - 148028 PH :9417076315.	791.	NATIONAL SERVICE CENTER (4761--), SANGANER COLONY, KOTA ROAD, BHILWARA-311001, RAJASTHAN - 311001 PH :9829120285.	JAIPUR	805.	J.K. AUTOMOBILES (2058--), 38 SUSHILPURA, AJMER ROAD, JAIPUR-302 007, - 302007
769.	SWAMI MOTORS (3774--), (PAMMI W/SHOP), OPP. B.N. DUGGAL PETROL PUMP, G.T. ROAD, PHAGWARA DIST. KAPURTHALA - 144401 PH :9815107989.	780.	TANDA MALWA AUTO CARE CENTRE (2073--), G.T. ROAD BY-PASS, TANDA, DISTT. HOSHIARPUR, (PUNJAB) - 144204 PH :9814392103.	792.	QUICK SERVICES (3473--), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311 001, - 311001	806.	JAI SHRI RAM AUTO SERVICE CENTRE (1140--), OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR, RAJASTHAN - 302019	
770.	HI-TECH AUTOMOBILES (4945--), NEAR VILLAGE NATHPURA, BATALA ROAD, QADIAN, DISTT. - GURDASPUR, PIN - 143516, PUNJAB - 143516 PH :9877510294.	781.	ZIRA NEW AUTOMOBILES (5477--), NEAR BYE PASS, FEROZPUR ROAD, ZIRA, TEHSIL ZIRA, DIST. FEROZPUR, PUNJAB - 142047, - 142047 PH :9463240231.	793.	QUICK SERVICES (3473--), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311 001, - 311001	807.	KATARIA MOTORS (2577--), 9-A NEMINAGAR VISTAR , AMRAPALI MARG, VAISHALI NAGAR, JAIPUR -302021 - 302021	
771.	RANA SUPREME MOTOR GARAGE (3732--), NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB) - 141109 PH :9814265791.	782.	RAJASTHAN	794.	BHINIMAL GURJARA MOTORS (5567--), RAMSIN ROAD,OPP PRADEEP PETROL PUMP, BHINIMAL, DISTRICT - JALOR, RAJASTHAN - 343029 PH :9414374962.	808.	KRISHNA AUTOMOBILES (5363--), B-27 SUNDAR NAGAR, MANSAROVAR , JAIPUR, DISTRICT - JAIPUR, RAJASTHAN - 302020 PH :9829968075.	
772.	NOOR MOTORS (3045--), PATIALA ROAD, RAJUPURA-140 401, (PUNJAB), - 140401 PH :9814507867.	783.	ABU ROAD UNIQUE MOTORS (4923--), MOUNT ROAD, AKRABHATTA, ABU ROAD-307 510, (RAJASTHAN) - 307510 PH :9929177781.	795.	BHIWADI WHEEL-O-CITY (4246--), E-7D (A) PHASE-1, NEAR RIICO CHOWK, BHIWADI, RAJASTHAN - 301910	809.	LAXMI MOTORS (2576--), OPP METRO PILLAR NO 34, GANGA JAMUNA CROSSING, NIRMAN NAGAR, JAIPUR, RAJASTHAN - 302019 - 302019 PH :9351551181.	
773.	RAMPURAPHUL	784.	AJMER ASHOK AUTOMOBILES (1121--), BYEPASS ROAD, PARVATPURA, IND.AREA, AJMER (RAJASTHAN) - 305002	796.	BIKANER GENERAL AUTOMOBILES (1123--), RANI BAZAR, RAIWAY CROSSING, BIKANER (RAJASTHAN), - 334001	810.	M. R. MOTORS (8933--), PLOT NO. 120-121 & 125-126, VANE VIHAR, 200FT BYE PASS, JHOTWARA, JAIPUR (RAJASTHAN) - 302012	
				797.	BUNDI SHRI JI MOTORS (2174--), OPP. KUMBHA STADIUM, KHOJA GATE, BUNDI, (RAJASTHAN) - 323001 PH :9990270676.	811.	A-1 MOTORS (4856--), D-28 MALVIYA NAGAR., INDUSTRIAL AREA JAIPUR, DISTRICT - JAIPUR , RAJASTHAN - 302017 PH :9414047628.	

812.	AMGI AUTOMOBILES (8993--), DIGGI MALPURA ROAD, SANGANER, JAIPUR - 302029, RAJASTHAN - 302029 PH :9828012009	KOTA	826.	FRIENDS AUTOMOBILES (--), KOTA BUNDI ROAD, NH 12, OPP. HOTEL MENAL RESIDENCY, KOTA - 323021 PH :9829529479.	837.	APNA MARUTI GARAGE (5940--), OPP. RAM TEKRI MANDIR, PRATAP MARKET, MAIN ROAD, RAWATBHATA-323305, DISTRICT-CHITTORGARH, RAJASTHAN - 323305	848.	HARI AGENCIES (468--), #27, ANNA SALAI, ARCOT , TAMIL NADU -632503, - 632503		
813.	AUTONITY JAIPUR (4852--), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, RAJASTHAN - 302019 PH :9784377503.	KOTPUTLI	827.	VIKAS MARUTI SERVICE CENTRE (4970--), NH-8, NEAR MEENA GAS AGENCY GODOWN, KOTPUTLI - 303108, RAJASTHAN - 303108 PH :9929383045.	SIKAR	838.	RAJ AUTOMOBILES (8949--), NEAR RTO ROAD, JAIPUR JHUNJHUNU BYEPASS, SIKAR, DISTRICT - SIKAR, RAJASTHAN - 332001	849.	GANESA MOTORS (4538--), 1/1D, ARANGABALA NAGAR, SALEM CUDDALORE MAIN ROAD, NARASINGAPURAM, ATTUR (TK), SALEM, TAMIL NADU, PIN - 636108 - 636108 PH :9443273866.	
814.	AUTONITY KIA (8927--), PLOT NO.6, GIRDHAR COLONY, SIKAR ROAD, JAIPUR-302 013 - 302039	KUCHAMAN	828.	DALUKA AUTO SALES (4565--), NEARBY SHARDA PALACE HOTEL,, KUCHAMAN BYE PASS,, KUCHAMAN CITY, 341508, - 341508 PH :9414433240.	SRI MADHOPUR	839.	BHARAT MOTORS (5757--), WARD NO 4, BYE PASS ROAD, SRI MADHOPUR-332715, DISTRICT- NEEMKATHANA, (RAJASTHAN) - 332715 PH :9251377020.	850.	K.P.K AUTOMOTIVE (5547--), SF NO.460/2, TIRUPPUR MAIN ROAD, AVINASHILINGAMALAYAM, AVINASHI-641654, DISTRICT-COIMBATORE, TAMILNADU - 641654 PH :9443301732.	
815.	RIGHTWAYS CO. (1131--), KISHANPOLE BAZAR, JAIPUR, - 302002	MAKRANA	829.	GEHLOT MOTORS (454--), OPPOSITE TO G.S.S, MANGLANA ROAD, MAKRANA, RAJASTHAN - 341505 PH :9829024687.	SRIGANGANAGAR	840.	ROHIT UDYOG (1132--), 75 K-BLOCK, SRIGANGANAGAR, , - 335001	BHAVANI	851.	CAR ZONE AUTO SERVICE (5332--), METTUR MAIN ROAD - NATARAJAPURAM BHAVANI, DISTRICT - ERODE , TAMILNADU - 638301 PH :9842085670.
816.	SAISHA MOTORS (1764--), MAIN SHIPRA PATH, OPP. SECTOR 93, AGARWAL FARM, MANSAROVAR, JAIPUR-302 020 - 302020	MERTA	830.	DELUX CAR SERVICE CENTRE (3856--), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUR, - 341510 PH :9414004543.	SUJANGARH	841.	SHRI CHARBHUJA MARUTI (4924--), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN - 331507 PH :9828118827.	CHENGLEPUR	852.	MARUTI PRO CARE (2941--), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU-603 002, (T.N.), - 603002
817.	SERVICE CENTRE (1139--), OPP. TOURIST HOTEL, M.I. ROAD, JAIPUR-1, - 302001 PH :9351551181.	NAGAUR	831.	CLASSIC AUTOMOBILES (1179--), DIDWANA ROAD, (DELHI GATE), NAGAUR-341 001, (RAJASTHAN) - 341001 PH :9672501234.	TIJARA	842.	ROHIN SERVICE STATION (2646--), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN) - 335804	CHENNAI	853.	NSK MARUTI (4975--), 2/547, EAST COAST ROAD, NEELANKARAI, CHENNAI, TAMIL NADU - 600115 PH :9841047232.
818.	SHARP MOTORS (2032--), J-3 HIMMAT NAGAR, MAIN TONK ROAD, GOPAL PURA CIRCLE, JAIPUR-302 004 - 302004 PH :9694420002.	NEWAI	832.	HEENA MOTORS (5568--), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT - TONK, RAJASTHAN - 304021 PH :9414228066.	TONK	843.	M D MOTORS (5875--), ALWAR ROAD, NEAR BOLLYWOOD FARM, TIJARA-, DISTRICT-ALWAR, RAJASTHAN - 301411 PH :9351607080.	854.	P.A. SERVICE STATION (2346--), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR, NEAR 100 FEET ROAD, AGRAHARAM, KORATTUR, CHENNAI-600 076 - 600076 PH :9840378025.	
819.	SUPREME MOTORS (8952--), A-25 ASSAM MANSION, TRANSPORT NAGAR, JAIPUR-302 003, - 302003 PH :7732793332.	PILANI	833.	MARUTI CARE CENTRE (3073--), CHIRAWA ROAD, DHANI POPSINGH, PILANI- 333031, RAJASTHAN - 333031	UDAIPUR (RAJASTHAN)	844.	SUMIT MARUTI (4566--), G 1 - 103, RIICO INDUSTRIAL AREA, JAIPUR ROAD, TONK-304001, RAJASTHAN, - 304001 PH :9214494900.	855.	SWAMY AUTOMOBILES (456--), NO. 5, TANK BUND ROAD, NUNGAMBAKKAM, CHENNAI, TAMIL NADU - 600034 - 600008 PH :9840891916.	
820.	TOSHNIWAL AUTOMOBILES (3475--), 131 SHRI GOPAL NGAR, GOPALPURA BYEPASS, JAIPUR, (RAJASTHAN) - 302015 PH :9887553836.	PINDWARA	834.	MARUTI CARE CENTRE (--), CHIRAWA ROAD, DHANI POPSINGH, PILANI- 333031, RAJASTHAN - 333031	845.	ALOK AUTOMOBILES (8999--), PLOT NO. 1, ZHAMAR KOTRA ROAD, OPPOSITE SAHKARI UPBHOKTA MARKET, SECTOR-6, UDAIPUR-313001 - 313001 PH :9414166305.	856.	UNIQUE CAR CARE (5868--), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLAVOYAL, CHENNAI, TAMILNADU - 600062 - 600062		
JHUNJHUNU		RAJAMAND	835.	RUNEJA MOTORS (5758--), NH-14, OPP PATHIK MIDWAY , PINDWARA-307022, DISTRICT-SIROHI, RAJASTHAN - 307022 PH :9610451492.	846.	SHREE SAI CAR CARE (2376--), PUNJAWATI, PULLA, UDAIPUR-313 001, - 313001 PH :9414167605.	857.	VAISHALI MOTORS (4529--), 4/577 RAJIV STREET, OLD MAHABALIPURAM ROAD, KOTTIVAKAM, CHENNAI-600041 - 600041 PH :9840138888.		
821.	DADHIMATI MOTORS (1648--), OPPOSITE RSEB OFFICE, BAGAR ROAD, JHUNJHUNU, (RAJASTHAN) - 333001 PH :9587007122.	RAWATBHATA	836.	VIPUL AUTOMOBILES (2170--), NH -8, BHAGWANDA , BEHIND GOVT. PRIMARY SCHOOL, , RAJSAMAND, RAJASTHAN, - 313333	ARAVAKURICHI	847.	GOVRI MARUTI (5570--), OPPOSITE IOCL PETROL PUMP, NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU - 639201 PH :9994818043.	858.	WHEELS AUTO (469--), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI-600 020 - 600020 PH :9840138888.	
822.	VISHWAKARMA AUTOMOBILES (3071--), HPC DEALER, RANI SATHI ROAD, JHUNJHUNU-333 001, (RAJASTHAN) - 333001 PH :9461058939.				TAMIL NADU	848.	ARAVAKURICHI	859.	ABIRAMI MOTORS (5131--), 6 ANNA NEDUMATHAI, CHOOLABEDU, CHENNAI-600094, TAMILNADU - 600094 PH :9840017558.	
JODHPUR					ARCOT	849.	AUTO TECH (3445--), NO.6, 1ST STREET, KAMATCHI COLONY, CHENNAI, KANCHIPURAM, TAMIL NADU - 600047 - 600047 PH :9941019455.			
823.	DEORA MOTORS (5353--), UPPER UNDER BRIDGE 'PAOTA 'C' ROAD, JODHPUR, DISTRICT - JODHPUR, RAJASTHAN - 342006 PH :9829026069.									
824.	P.D. MOTORS (3340--), NATIONAL HIGHWAY NO. 62, NEW PALI ROAD, NEAR JHALAMAND CIRLCE, JODHPUR, RAJASTHAN - 342005 - 342005									
KISHANGARH										
825.	RADHA SWAMI AUTOMOBILES (440--), NEAR AJMER ROAD - BUS STAND, , KISHANGARH,, DISTRICT AJMER, RAJASTHAN , - 305801 PH :9252059798.									

Maruti Authorized Service Station (AS ON 31.01.2026)

861. EASVARI MOTORS PRIVATE LIMITED (1431--), W-110 ANNA NAGAR, CHENNAI-600 040, - 600010 PH :9840855665.	872. SRI KRISHNA AUTOMOBILE ENTERPRISES (2320--), 184, CAUVERY ROAD, ERODE - 638003, TAMIL NADU - 639003 PH :9842721805	KARUMATHAMPATTY	893. SREE GANAPATHY MOTORS (1629--), NO.12 JAWAHAR STREET, R.V. PURAM, NAGERCOIL-629 001, - 629001 PH :9845322333.
862. KARS KARE SERVICE CENTRE (2579--), 648 T.H. ROAD, TONDIARPET, CHENNAI-600 081, - 600081 PH :9841097259.	873. SRI SAKTHI CARE (8937--), 13, NGGO COLONY MAIN STREET, ERODE, TAMILNADU, 638009 - 638009 PH :9597726311.	KARUR	NAMAKKAL
863. MARUTI NEEDS (2531--), NO.2 PARK ROAD, PADI, CHENNAI-600 050, - 600050 PH :9940099500.	GADALUR	884. SRI SAKTHI AUTO CARE (2532--), NO. 3/244, BHARATHIYAR STREET, COVAI ROAD, VADIVEL NAGAR, L.N.S. POST, KARUR - 639002, TAMILNADU - 638009 PH :9842426585.	894. ARUNA MOTORS (1461--), MARUTI SERVICE CENTRE, OPP. N.S.R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001 - 637001 PH :984275761.
CHIDAMBARAM	874. GREENWAY MARUTI SERVICE CENTER (5471--), KALAMPUZHA,D.O. NO 12/59-3, GUDALUR, DISTRICT - NILGIRLS, TAMILNADU - 643212 PH :9443603815.	KOVILPATTI	PALLADAM
864. HI-TECH MARUTI (3231--), NO.45,SITHIVEL NAGAR,SALIYANTHOPPU , BYE PASS ROAD,CHIDAMBARAM-608001 , DISTRICT-CUDDALORE , TAMILNADU - 608001 PH :9585538671.	GOBICHETTIPALAYAM	885. CLASSIC AUTOMOBILES (6037--), 3/531 - B, TIRUNELVELI TO MADURAI BYPASS ROAD, NH-7, INAM MANIYACHI, KOVILPATTI, TAMIL NADU - 628502, - 628502 PH :9442552000.	895. CHENDU MOTORS (4333--), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST - 641662 PH :9842225058.
COIMBATORE	HOSUR	KRISHNAGIRI	PALLAVARAM
865. SOUTH INDIA MOTORS (MARUTI) (4752--), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE-641014 (TAMIL NADU) - 641014 PH :9843027601.	876. SRI VINAYAKA MOTORS (3849--), 5/2C/1 (OPP TAMIL NADU HOTEL), BYE PASS ROAD, HOSUR, - 635109 PH :9443245096.	886. THIRUTHENIGAI MOTORS (2427--), SALEM-CHENNAI BYE PASS ROAD, KRISHNAGIRI-635 001, (TAMILNADU), - 635001 PH :9842129890.	896. VBK MOTORS (4463--), NO. 91, G.S.T ROAD, ALVITONE ESTATE, PALLAVARAM, CHENNAI - 600043, - 600043 PH :9841425030.
866. GURU AUTO GARAGE (4965--), 2/98, IRUGUR ROAD, NEAR BSNL OFFICE, CHINNAMPALAYAM, COIMBATORE, TAMIL NADU - 641062 PH :9843256247.	877. AUTO SCAN (2070--), DOOR NO. OLD NO.-77, NEW NO. 58 -D2, BANGALORE ROAD, NEW VIVEK GARDEN, HOSUR TALUK, KRISHNAGIRI DISTRICT, TAMILNADU - 635109, - 635109 PH :8122904091.	KUMBakonAM	PARAMAKUDI
867. LOTUS AUTOMOBILES (4758--), 1647-A AVINASHI ROAD, HOPE COLLEGE, PEELAMEDU, COIMBATORE-641004 (TAMILNADU) - 641004 PH :9842265133.	878. BALAJI MOTORS (5136--), PLOT NO. 11 & 18, MARUTHI NAGAR, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 - 635109 PH :9842755402.	887. SRI SAKTHI MOTORS (4330--), #7/228, PULIYAMPETTAI, MAYILADUTHURAI MAIN ROAD, KUMBakonAM, TAMILNADU -612103 - 612103 PH :98443131513.	897. SIVA AUTOMOBILES (4542--), NEAR SRIKUMARA SUBRAMANIA SWAMY TEMPLE, OPP FIVE STATION, MADURAI RAMESWARAM ROAD, PARAMAKUDI-623707 RAMNAD DIST - 623707 PH :9388405305.
COONOOR	KALPAKKAM	MADURAI	PARAMATHIVELUR
868. SHANTHI AUTO CARE (6054--), FIGURE OF 8 ROAD, COONOOR-643101, NILGRIS, (TAMIL NADU) - 643101 PH :9443273888.	879. MARUTI MOTORS (4253--), NO. 374, HAJIYAR NAGAR, ECR ROAD, PUDUPATTINAM VILLAGE, THIRUKALUKUNDRAM TALUKA, CHENGALPATTU DISTRICT, KALPAKKAM-603102, TAMIL NADU - 603102 PH :9443366535.	888. SHALOM MOTORS (4629--), THENI MAIN ROAD, ACHAMPATHU, NEAR BHARAT PETROLEUM, MADURAI-625019 - 625019 PH :8754033244.	898. RADHA CAR CARE (5828--), NO 96/1,BYE PASS ROAD,VETTUKATTU PUDAR, PIRIVUR ROAD,PARAMATHIVELUR-638182, DISTRICT-NAMAKKAL, TAMILNADU - 638182 PH :8608090140.
CUDDALORE	KANCHEEPURAM	MADURANTHAKAM	PERUNDURAI
869. SUNTAR AUTOS (2134--), KTR BUILDINGS, CHIDAMBARAM ROAD, CUDDALORE-607 002, - 607002 PH :9842345690.	880. SVS MARUTI SERVICE CENTRE (5466--), NO1 MILITARY ROAD, SEVILIMEDU, OPP BRINDAVANAM NAGAR, KANCHIPURAM, TAMILNADU 631501 - 631501	889. FRIENDLY MOTORS (3141--), 32 PALAM STATION ROAD, NEAR LIC BUS STOP, SELLUR, MADURAI-625 002 - 625002 PH :9842714047.	899. PRIYAM AUTOMOBILES (3036--), 28/4, JJ NAGAR, KOVAI MAIN ROAD, PERUNDURAI, ERODE DISTRICT, TAMIL NADU - 638052 - 638052
CUMBUM	KANGAYAM	MAYILADUTHURAI	POLACHI
870. SRI BALAJI MOTOR WORKS (3139--), 221-A 1/3 THENI ROAD, NEAR REGULATED MARKET, UTHAMPURAM, CUMBUM-625 516 - 625516 PH :9994169309.	881. SRI KANGAYAM MARUTI (3949--), COIMBATORE ROAD, NEAR IBP PETROL BUNK, KANGAYAM - 638701, - 638701 PH :9443329526.	890. MARUTHI MOTORS (6036--), NO.33,G.S.T. ROAD,KARUNGUZHI, MADURANTHAKAM-603303, DISTRICT-KANCHIPURAM, TAMILNADU - 603303 PH :9443354073.	900. J D & COMPANY (6055--), 160 COIMBATORE ROAD, POLLACHI - 642002, TAMIL NADU - 642002 PH :9443565785.
DINDIGUL	KARAIKUDI	MAYILADUTHURAI	RAJAPALYAM
871. MAGNUM MOTORS (1241--), MEENAKSHI NAICKAN PATTY, NH-83 BYE PASS ROAD, DINDIGUL - 624002, TAMIL NADU - 624002 PH :9842231340.	882. SURABI MOTORS (2340--), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630 001 - 630106 PH :9443351484.	891. R.M.S. MARUTI AUTO (2237--), 53/54 MAHADHANA STREET, MAYILADUTHURAI-609 001, (TAMIL NADU), - 609001 PH :9842922685.	901. RAJA MOTORS (4128--), 52/A, SRI JANAKIRAM MILLS ROAD, SRIVILLIPUTTUR MAIN ROAD, RAJAPALAYAM, VIRUDHUNAGAR- 620117, - 626117 PH :7094597178.
ERODE		NAGAPATTINAM	RASIPURAM
		892. MARUTI-TECH (1671--), PUTHUR ROUNDANA E C R ROAD, NAGAPATTINAM, - 611001 PH :9842653718.	902. ROYAL AUTO CARS (4052--), 5/120 NH-7, SALEM MAIN ROAD, NEAR TSTC DEPOT, MUTHUKALPATTI POST, RASIPURAM TALUK, NAMAKKAL DISTRICT-637408 - 637401 PH :9443230339.
		NAGERCOIL	SALEM

903. MEENATCHI AUTO (2940--), 57 KALARAMPATTY MAIN ROAD, (NEAR DEVI THEATRE), SALEM-6360 015, (T.N.) - 636015
904. NATSUN MOTORS (8998--), 18/1 & 18/2, BANGALORE BYE PASS ROAD, KANDHAMPATTY, SALEM, TAMIL NADU - 636005
PH -9788497788.
- SANKAGIRI**
905. TECH ZONE AUTO SERVICE (2640--), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303 - 637303
- SANKARANKOIL**
906. RAJA MOTORS (4555--), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL-627756, - 627756
PH :9994409363.
- TENKASI**
907. CARE ZONE (3766--), 5/165, MADURAI ROAD, KUTHUKAL VALASAI, TENKASI, TAMILNADU - 627803 - 627811
PH -9842133134.
- THANJAVUR**
908. R K P MOTORS (5238--), 121/7, THANJAVUR KUMBAKONAM, HIGHWAY PALLIAGRAHARAM, THANJAVUR, TAMILNADU - 613003
- THENI**
909. SATHURAGIRI MOTOR WORKS (1650--), DOOR NO. 21/5, RAVENTHIRA OIL MILL COMPOUND, CUMBUM ROAD, THENI - 625531, TAMIL NADU - 625531
PH -9047033678.
- TIRUNELVELI**
910. FRIENDS INDIA AUTO CLINIC (5030--), 16D, NORTH BYE PASS ROAD, VANNARPETTAI, TIRUNELVELI - 627003, TAMIL NADU - 627003
PH -9786060111.
- TIRUPUR**
911. LAKSHMI MOTORZ (2461--), 263/3E, PALLADAM ROAD, CHINNAKARAI, TIRUPUR - 641604, TAMIL NADU - 641604
PH -9842377959.
- TRICHY**
912. VYTHES MOBILE PARK (443--), 8/6 TANJORE ROAD, THIRUCHIRAPPALLI-620 008, - 620008
PH :6383353727.
- UDAMALAPET**
913. S.R.K. MOTORS (1456--), 123, PALANI ROAD, MUNEER RICE MILL COMPLEX, UDUMAPLET, TIRUPPUR, TAMIL NADU - 642126, - 642126
PH -9843011520.
- VELLORE**

914. MARUTI AUTO SERVICE (2844--), 106 (OLD NO.: 78), KATPADI ROAD, GANDHI NAGAR, VELLORE-632 906 (T.N.) - 632006
PH -9843093422.
- VILLUPURAM**
915. RAGAVENDRA MOTORS (2361--), 2/3 MADRAS TRUNK ROAD, VILLUPURAM-605 602, (TAMIL NADU), - 605602
PH -9244555860.
- VRIDDHACHALAM**
916. VISHWA MARUTI CARE CENTER (8934--), NO 11, NEAR FIRE SERVICE STATION, NAVANEETHAM STREET, PERIYAR NAGAR NORTH, VRIDDHACHALAM, CUDDALORE DISTRICT, TAMIL NADU - 606001 - 606001
PH -9842246092.

TELANGANA

- ADILABAD**
917. MAHA LAXMI AUTOMOTIVES (2240--), NH# 7 OPP. H.P. PETROL BUNK, TIRUPALLY, ADILABAD-504 001, (A.P.)
PH :9000345313.
- BHADRACHALAM**
918. SRI VENKATARAMANA AUTO CARE (2831--), MARUTI SERVICE STATION, OPP. COLLEGE GROUNDS, GOLLGATTA ROAD, BHADRACHALAM-507 111 (A.P.) - 507111
PH -9290792269.
- GAJWEL**
919. VIJAY MOTORS (4864--), HYDERAAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIMNAGAR, PREGHAPUR - GAJWL, TELANGANA - 502278
PH -9849883665.
- HYDERABAD**
920. ARYAN MOTORS (3264--), D.NO.17-1-382/K/5 & 6, CHAMPAPET SAIDABAD, SAGAR ROAD, HYDERABAD - 500059
PH -9246155464.
921. COSMO AUTO CLINIC PVT. LTD. (1045--), PLOT NO 1, RD NO 5, CHANDRAPURI COLONY , LB NAGAR, HYDERABAD - 500074, - 500074
922. PISTONS & SPANNERS (2766--), 2-3-37 MAHARANA PRATAP FUNCTION HALL, AMBERPET, HYDERABAD-500 013,
PH -990649504.
923. SERWELL AUTOMOBILES GARAGE (5234--), PLOT NO 202&203, ADITYA NAGAR, OPP. JNTU, KUKATPALLY, HYDERABAD, TELANGANA - 500072
PH :9490105147.
- JAGTIAL**

924. KRK MOTORS (3851--), OPPOSITE 132 KV SUBSTATION, DHAROOR CAMP, KARIMNAGAR ROAD, DISTRICT - JAGTIAL, TELANGANA - 505327 - 505455
PH -9912664659.
- KARIMNAGAR**
925. MYTRI MOTORS (5152--), 8-6 188.KOTHI RAMPUR, KARIMNAGAR, DISTRICT - KARIMNAGAR , TELANGANA - 505001
PH :9441475357.
926. PUSHPAK MOTORS (1032--), SY-772, KOTHIRAMPUR, NEAR MGB MOTORS - JCB SHOWROOM, BEHIND LAKSHMI NIVAS INDUSTRIES, KARIMNAGAR, TELANGANA - 505001, - 505001
PH -9849489431.
- KHAMMAM**
927. EXCEL AUTO CARE (1043--), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM - 507001, , - 507001
PH -9848156363.
- KODAD**
928. SAI KAKATIYA SERVICE STATION (4664--), SURYAPETA ROAD, OPPOSITE LORRY ASSOCIATION BUILDING, KODAD-508206, DISTRICT-NALGONDA (TELANGANA) - 508206
PH -9848057813.
- MAHABUB NAGAR**
929. SRI AYYAPPA MARUTI CLINIC (3941--), OPP HOSPITAL, HYDERABAD ROAD, YEMUGONDA, MAHABUB NAGAR (TELANGANA) - 509002
PH -9440569259.
- MANCHERIAL**
930. PARVATHI MOTORS (4129--), 4-53 BPL ROAD, MANCHERIAL, DISTRICT ADILABAD, TELANGANA. - 504208
PH -988554888.
- MIRYALGUDA**
931. GAMESH MOTORS (4536--), D.NO. 6-366, P.V. COMPLEX, NALGONDA ROAD, MIRYALGUDA, NALGONDA DISTT (TELANGANA) - 508207
PH :9393900666.
- NALGONDA**
932. SRIRAM AUTHORISED SERVICE STATION (4627--), HYDERABAD ROAD, OPP. SUB STATION, NALGONDA, TELANGANA - 508001
PH -9848378133.
- NIZAMABAD**
933. PRIYA SERVICING (1771--), C/O TRIMALA CHITRA MANDIR, HOUSE NO.1-9-833, PHULANG ROAD, NIZAMABAD-503 003 (A.P.)
PH :9948034523.
- RAMAGUNDAM**

934. ALI AUTOMOBILES (2849--), NEAR TV RELAY STATION, NTPC JYOTHINAGAR, RAMAGUNDAM-505 215, DISTT. KARIMNAGAR (TELANGANA) - 505208
PH -9848219102.
- SIRSILLA**
935. SATHVIKA MOTORS (5649--), KARIMNAGAR ROAD,OPP HP PETROL PUMP, SIRSILLA-505301, DISTRICT - KARIMNAGAR , TELANGANA - 505301
PH :9490284726.
- SURYAPET**
936. SAI GLOBAL AUTO SERVICES (4550--), OPP. AYYAPPA SWAMY TEMPLE, BY PASS ROAD, NH-9, SURYAPET-508213, TELANGANA - 508213
PH -9848076108.
- WANAPARTHY**
937. SMC MOTORS (5658--), K.K.T. ROAD BASAVANNA GADDA, WANAPARTHY, DISTRICT -MAHABUBNAGAR, TELANGANA - 509103
PH -9440142927.
- WARANGAL**
938. VAISHNAVI AUTOMOBILES (470--), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL-506 001
PH -9849002528.

TRIPURA

- AMBASSA**
939. CHAKRABORTY MECHANICAL WORKSHOP (5351--), NH-44, NEAR ZILLA PARISWAD OFFICE , AMBASSA, DISTRICT - DHALAI, TRIPURA - 799289
PH -9436136054.
- DHARMANAGAR**
940. RAJ AUTOMOBILES (2868--), STATION ROAD, RAJABARI, DHARMANAGAR, TRIPURA (NORTH) -799 253 - 799253
PH :9436477578.
- UDAIPUR**
941. SUR UDYOG (3963--), TOWN FULKUMARI NO. 1, BRAMHABARI, P O UDAIPUR COURT, UDAIPUR, TRIPURA SOUTH - 799120
PH :9862276650.

UTTAR PRADESH

- AGRA**
942. GAYATRI MOTORS (4730--), IN FRONT OF NEEL FLORENCE APARTMENT, GOVINDPURI COLONY, VILLAGE BABARPUR, POST SIKENDRA, AGRA, UTTAR PRADESH-282007 - 282007
PH :8077786331.
- ALIGARH**

Maruti Authorized Service Station (AS ON 31.01.2026)

943. KAPIL AUTOMOBILES (1344--), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), - 202002 PH -9837007836.	BAREILLY 956. S P MOTORS (5746--), 383.SURKHA CHAWNI,NAINITAL ROAD, BAREILLY-243001, DISTRICT-BAREILLY, UTTAR PRADESH - 243001 PH -9568033111.	966. S K MOTORS (4672--), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96, FAIZABAD-224001, UTTAR PRADESH - 224001 PH -9307088750.	978. AMAN MOTORS (3858--), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH - 271001 PH -9415120101.
944. KAR SCAN CENTRE (449--), RAMGHAT ROAD, KWARSI, ALIGARH-202 002, - 202002 PH -8937000111.	BIJNOR 957. SARDAR MOTORS (4671--), DELHI HIGHWAY ROAD, 4TH KM MILE STONE , BIJNOR - 246701, UTTAR PRADESH - 246701 PH -9837265076.	FARUKHABAD 967. APOORVA MOTORS (4675--), SATANPUR MANDI ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH - 209625 PH -9044498958.	979. PANKAJ AUTOMOBILES (1370--), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, GONDA, - 271801 PH -9415664930.
ALLAHABAD 945. ANSHUNAM AUTOMOBILES (4933--), 6D, DAUD NAGAR, OPPOSITE BAIDYANATH COMPANY, MIRZAPUR ROAD, NAINI, ALLAHABAD, UTTAR PRADESH - 211008 - 211008 PH -9335138119.	BULANDSHAHR 958. DELHI AUTO ENGRS (1351--), PLOT NO-106, NEAR TAFE TRACTOR AGENCY, NEAR CHANDPUR VILLAGE, DELHI ALIGARH BYPASS ROAD, BULANDSHAHR (UP) 203001. - 203001	FATEHPUR SIKRI 969. LAXMI MOTORS (5943--), FATEHPUR SIKRI ROAD,KHEDA KORAI , FATEHPUR SIKRI-283110, DISTRICT-AGRA, UTTAR PRADESH - 283110 PH -9837749949.	980. AMAN MOTORS (--), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH - 271001 PH -9415120101.
946. KAY CEE AUTOMOBILES (2155--), 72/60 L.B. SHASTRI MARG, ALLAHABAD, . - 211001 PH -9415317225.	CHANDPUR 959. BHARTI AUTOMOBILES (1777--), DHANORA ROAD, CHANDPUR, DISTT. BIJNOR, (U.P.) - 246725 PH -9837380551.	FIROZABAD 970. AMAN MOTORS (4366--), USAYANI CHAURAHA, RAJKA KA TAAL, BEE PASS ROAD, FEROZABAD, UTTAR PRADESH - 283103 PH -9837500220.	GREATER NOIDA 981. JAISWAL MOTORS (5078--), PLOT NO. 31, SECTOR MUP-II, GREATER NOIDA , DISTRICT - GAUTAM BUDDH NAGAR, UTTAR PRADESH - 201308
947. TRIBENI MOTORS (2539--), 23 KANPUR ROAD, ALLAHABAD-211 001, (U.P.), -211001 PH -9415324244.	CHITRAKOOT 960. SHYAM MOTORS (4367--), BUS STAND, KARWI, CHITRAKOOT-210205, - 210205 PH -9415143900.	971. GOVIND AUTOMOBILES (1739--), NH-2, INFRONT OF SUB POWER STATION, MODHA, ASFABAD CHAURAHA, FIROZABAD, UTTAR PRADESH, 283203- 283203 PH -9837169332.	982. KUMAR MOTORS (8926--), M-8, SITE-5, UPSIDC, KASNA INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDDH NAGAR, UTTAR PRADESH - 201312
AMROHA 948. SUNNY MOTORS (2165--), BIJNORE ROAD, J.P. NAGAR, AMROHA-244 221, (U.P.) - 244221 PH -9412248884.	DADRI 961. NATIONAL MOTOR AGENCY (5143--), NOIDA ROAD , DADRI -203207, DISTRICT - GAUTAMBUDH NAGAR , UTTAR PRADESH - 203207	GANGOH 972. SHRI KRISHNA MOTORS (6939--), BYE PASS ROAD RAM GARH,GANGOH-247341, DISTRICT-SAHARANPUR, UTTAR PRADESH, - 247341 PH -9997102785.	HAPUR 983. SRASHTI MOTORS (3076--), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101 - 245101
AURAIYA 949. SINGH AUTOMOBILES (8989--), KANPUR ROAD,AURAIYA , DISTRICT - AURAIYA , PIN - 206122, UTTAR PRADSH - 206122 PH -9808403258.	DANKAUR 962. MARUTI CARS CARE (5934--), SIKANDRABAD ROAD,NEAR KISAN INTER COLLEGE, DANKAUR-203201, DISTRICT- GAUTAM BUDDH NAGAR, UTTAR PRADESH - 203201 PH -7599195174.	GHAZIABAD 973. CHAWLA AUTOMOBILES (2643--), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA, GHAZIABAD, - 201001 PH -9811720929.	HARDOI 984. M. MOTORS & SERVICE CENTRE (3371--), CHAND BEHTA, LUCKNOW ROAD, HARDOI-241 001, (U.P.) - 241001 PH -9415175610.
BABUGARH 950. GURUNANAK AUTOMOBILES (5977--), NH- 9, VILL SIMROLI ,BABUGARH CANIT , DISTRICT- HAPUR, UTTAR PRADESH - 245102	DEOBAND 963. PRACHI MOTORS (3361--), ADJACENT TO CIVIL COURTS, G.T. ROAD, DEOBAND, DISTT. SAHARANPUR (U.P.) - 247554 PH -7017803402.	HATHRAS 974. D.N. AUTOLAND (272--), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD. - 201003	985. TAYAL AUTOMOTIVES (4265--), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, - 241001 PH -9415149951.
BAGHPAT 951. KAUSHIK MOTORS (4473--), PLOT NO 525, DELHI SAHARANPUR ROAD,PALI, BAGHPAT, UTTAR PRADESH 250609 - 250609 PH -9837800582.	DEORIA 964. CLASSIC MOTORS (2971--), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.) - 274001 PH -9415313939.	JAGDISHPUR 975. KRISHNA AUTOMOBILES (5356--), 101.LAL KUAN ,SHIV MANDIR , BULANDSHAHAR ROAD , DISTRICT - GHAZIABAD, UTTAR PRADESH - 201009	986. RADHEY RADHEY AUTOMOBILES (4344--), NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, - 204101 PH -9897069159.
BALRAMPUR 952. D M AUTOMOBILES (3933--), NEAR S.P.AWAS, GONDA ROAD, BAHADURAPUR, DISTT: BALRAMPUR, UTTAR PRADESH - 271201 - 271201 PH -9415071840.	DHAMPUR 965. AUTAR AUTOMOBILES (4846--), NOORPUR ROAD, DHAMPUR-246761, DISTRICT-BIJNOR, UTTAR PRADESH - 246761 PH -7017211986.	JHANSI 976. S P MOTORS (4973--), HAPUR BYPASS ROAD, MEHRAULLI, GHAZIABAD, - 201001	987. SUPER AUTOMOBILES (3564--), JAFARGANJ P.O., INDUSTRIAL AREA, JAGDISHPUR, DISTT. SULTANPUR-227 817 (U.P.) - 227817 PH -941577882.
BANDA 953. CHAUDHARY TRACTORS (2249--), STATION ROAD, BANDA-210 001, (U.P.), - 210001 PH -9415143033.	FAIZABAD 966. SHIVA MOTORS (--), 17TH KM STONE, 118-119 SHIVPURI, SECTOR-9 VIJAY NAGAR BYEPASS NH-24, GHAZIABAD-201 009 (U.P.) - 201009 PH -9873000571.	KANNauj 978. AMAN MOTORS (3858--), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH - 271001 PH -9415120101.	988. SADGURU MOTORS (5071--), FAIZBAGH (NEAR TDM OFFICE), UMARPUR,JAUNPUR, JAUNPUR-222142, UTTAR PRADESH - 222142 PH -8318984440.
BARAUT 954. HIGH TECH ENGINEERS (4821--), 216/5 SAHARANPUR ROAD, BARAUT, . - 250611 PH :7302352660.			989. A.B. MOTORS (8938--), EDULIEE BOYCEE COMPOUND, NEAR ALLAHABAD BANK CROSSING, CIVIL LINES, JHANSI - 284001, UTTAR PRADESH - 284001 PH -9415059820.
955. SIGNET AUTOMOBILES (4441--), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P.) - 250611 PH -8218779429.			

990. SARALA AUTO CARE (5854--), G.T. ROAD,KANNAUJ, DISTRICT-KANNAUJ, UTTAR PRADESH. - 209725 PH :9918692324.	1002. SAMBHAV AUTOMOBILES (5168--), 31.RURAL INDUSTRIAL ESTATE , ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH - 201102	MAHOBA 1016. ROYAL SERVICE STATION (2238--), HAMIRPUR CHUNGHI, KANPUR ROAD, MAHOBA, (U.P.) - 210427 PH :9450269053.	1027. GURU TEG BAHADUR AUTO ENTERPRISES (4072--), 4 SENANI VIHAR, RAI BAREILLY ROAD, MOHANLAL GANJ, LUCKNOW U P - 226027 PH :9415229172.
KANPUR	LUCKNOW	MAINPURI	MORADABAD
991. AJAY SALES (3134--), 117/N/81 KAKADEVO, KANPUR. , -208025 PH :9919828000.	1003. B.K. MOTORS (2537--), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015 - 226015 PH :9335908130.	1017. JATIN MOTORS (5540--), GANESH MILL COLONY,RADHA RAMAN ROAD, MAINPURI-205001, DISTRICT-MAINPURI, UTTAR PRADESH - 205001 PH :8193825000.	1028. ASHISH AUTOMOBILES (1477--), KANTH ROAD, MORADABAD-244 001, , - 244001 PH :9837055258.
992. AUTO GARAGE (4266--), P-22-A, PRATAP GANJ, FACTORY AREA, OPP GANDA NALA, KANPUR-208012 - 208012 PH :9415126189.	1004. BALAJI MOTORS (1336--), 1 NEWAL KISHORE ROAD, LUCKNOW-226 001.(U.P.), - 226001 PH :9336253838.	MARIAHU	NAJIBABAD
993. CHANDRA MOTORS (4458--), 621/3 W-2 JUHI, BEHIND SACHAN GUEST HOUSE, KANPUR. - 208027 PH :9839928280.	1005. GALAXY MOTORS (5274--), KASHANA SITAPUR ROAD,NEAR SHIA, P G COLLGEG - LUCKNOW , DISTRICT - LUCKNOW, UTTAR PRADESH - 226021 PH :9305567878.	1018. BABU MOTORS (5740--), MACHALISHAHAR ROAD,NEAR POST OFFICE, MARIAHU-222161, DISTRICT - JAUNPUR, UTTAR PRADESH - 222161 PH :9919263663.	1029. SETHI MOTORS (4557--), C/O SETHI BOARD INDUSTRIES LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT. BUNOR (UTTAR PRADESH) - 246732 PH :9837590800.
994. EXCELLENT MOTORS (9022--), 123/793 FAZALGANJ, KANPUR-208 012, , - 208012 PH :9336119874.	1006. GUD'S CAR CARE (2538--), MAIN ROAD, NISHATGANJ, LUCKNOW-226 006. - 226006 PH :9415024495.	MATHURA	NOIDA
995. SUJIPA MOTORS (4337--), 127/465, U-BLOCK, NIRALA NAGAR, KANPUR - 208014 PH :941050146.	1007. KALYAN MOTORS (1161--), GOVT. POLYTECHNIC CROSSING, FAIZABAD ROAD, GOMTI NAGAR, LUCKNOW - 226010 PH :9936942527.	1019. GIRIRAJ CAR CARE (5624--), BIMAL ENGG COMPLEX, BAD, MATHURA-281 006. - 281006 PH :9837071321.	1030. RAHUL MOTORS (4662--), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH - 201305
KHALILABAD	1008. KAPOOR MOTORS (1751--), PLOT NO.380, NEAR GUNGA BAHARA SCHOOL, TILAK NAGAR , UTTAR PRADESH - 206122 PH :9795457050.	1020. NAND SERVICE STATION (3578--), GOPAL PURA VILLAGE, REFINDRY TOWNSHIP, NH-2, MATHURA - 281001 PH :9997982628.	1031. RAJESH & ANIL MOTOR CO (5330--), B-110, SECTOR 2, NOIDA, DISTRICT - GAUTAM BUDDH NAGAR , UTTAR PRADESH. - 201301
996. RATAN MOTORS (5645--), NEAR VAISHNO MATA MANDIR, CHOTI SARAU LI, NH- 27, KHALILABAD, UTTAR PRADESH - 272175 PH :9621294899.	1009. KAPOOR MOTORS (5044--), 555/GA/50,BARA BIRWA, KANPUR ROAD., ALAMBAGH LUCKNOW., DISTRICT - LUCKNOW. (UTTAR PRADESH) - 226005 PH :9795457050.	1021. SHREE GOPAL AUTOMOBILES (5664--), DELHI BYE PASS ROAD,NEAR GOKUL RESTAURANT, MATHURA - 281001, DISTRICT - MATHURA, UTTAR PRADESH - 281001 PH :9412726760.	1032. SKUNIVERSE AUTOMOBILE PRIVATE LIMITED (8922--), C-2 SECTOR 63, NOIDA - 201301. - 201301
KHATAULI	1010. KRISHNA MOTORS (5026--), BALAGANJ HARDOI ROAD, CHOWK LUCKNOW, DISTRICT LUCKNOW, UTTAR PRADESH - 226020 PH :9839177777.	1022. SIYA RAM MOTORS (1666--), JAYSINGHPURA, NEAR BIRLA MANDIR, MATHURA-281 003, (U.P.) - 281003 PH :9897053962.	1033. RAHUL MOTORS (--), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH - 201305
997. EAGLE MOTORS (5142--), OPPOSITE EW ROADWAYS , G.T. ROAD. NH -58.KHATAULI, DISTRICT - MUZAFFARNAGAR, UTTAR PRADESH - 251201 PH :9997039786.	1011. MVV MOTORS (5531--), A1/14,VIJAY GHAND,GOMTI NAGAR, LUCKNOW-226010, DISTRICT - LUCKNOW, UTTAR PRADESH - 226010 PH :9792877779.	MEERUT	OBRA
KHEKRA	1012. RELIANCE MOTORS CARE (1236--), 7-B/1 PRIME PALACE, FAIZABAD ROAD, INDIRA NAGAR, LUCKNOW-226 016 - 226016 PH :9918100051.	1023. EXPERT CAR SCANNER (1174--), 83 HILL STREET (KATH-KA-PUL), BEHIND ABU LANE, MEERUT CANTT., (U.P.) - 250001 PH :9412201195.	1034. APPRECIATE SERVICES (4678--), BILLI RAILWAY STATION ROAD, OBRA, SONEBHADRA, UTTAR PRADESH - 231219 - 231219 PH :8765833557.
998. KAILASH MOTORS (5767--), OPP TEHSIL ,DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH - 250101 PH :9760027001.	1013. S.K. MOTORS (2449--), 8/881 VIKAS NAGAR, PICNIC SPOT ROAD, KHURAM NAGAR, LUCKNOW-226 013 - 226013 PH :9415005564.	1024. KRISHNA AUTOMOBILES (5573--), PLOT NO D-10,SHRADHA PURI., KANKARKHERA - MEERUT, DISTRICT - MEERUT, UTTAR PRADESH - 250001 PH :9927241738.	PILIBHIT
KOSIKALAN	1014. THE GARAGE (5479--), BEHIND NEW HANUMAN MANDIR,MADIR PARK , MAHANAGAR - LUCKNOW , DISTRICT -LUCKNOW, UTTAR PRADESH - 226006 PH :9236711634.	1025. SARAN AUTOMOBILES LTD. (1078--), DELHI ROAD, RITHANI, MEERUT, - 250001 PH :93584506555.	1035. UNIVERSAL MARUTI SERVICE STATION (4365--), BYE PASS ROAD, PILIBHIT, UTTAR PRADESH. - 243006 PH :9412313499.
999. ADITYA MOTORS (1940--), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.) - 281403 PH :9837050778.	LAKHIMPUR KHERI	MIRZAPUR	PILKHUWA
1000. AJMANI TRACTORS (4143--), NIGHASAN ROAD, LAKHIMPUR KHERI, UTTAR PRADESH. - 262701 PH :9918802167.	1015. V.S. MOTORS (4745--), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH - 226020 PH :9984749000.	1026. PRABHAT MOTORS (4131--), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, U P - 231309 PH :9838940382.	1036. SHREE BANKAY BIHARI MOTORS (6025--), NH-24,DELHI-GARH ROAD,PILKHUWA-245307, DISTRICT-GHAZIABAD, UTTAR PRADESH. - 245304 PH :9045548101.
LAMBHUA BAZAR		MOHANLAL GANJ	PRATAPGARH (U.P)
1001. VIKRAM MOTORS (3729--), LAMBHUA BAZAR, SULTANPUR (DIST.), UTTAR PRADESH-222 302, - 222302 PH :9450215996.			1037. SHREE MOTORS (4146--), 10, CHIBILA RANJEETPUR, PRAYAGRAJ AYODHYA HIGHWAY, NH-330, PRATAPGARH, UTTAR PRADESH, PIN-230001 - 230001 PH :9415229257.
LONI			RAI-BARELI

Maruti Authorized Service Station (AS ON 31.01.2026)

1038. STANDARD GARAGE (4429--), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE, RAE BAREILLY - 229206 PH :9415197073.	SHAHJAHANPUR	1060. TARAI AUTOMOBILE ENGG WORKS (4459--), GURJUTEG BAHADUR ROAD, U.S. NAGAR, BAZPUR-262401, UTTARAKHAND - 263401 PH :9837596765.	KICHHA
RAMPUR		BHAGESWAR	
1039. FIZZA MOTORS (2241--), NEAR AMBEDKAR PARK, CIVIL LINES, RAMPUR (U.P.), PIN-244 901 - 244901 PH :9897879711.	SHAMLI	1061. SHREE ISHT DEV AUTOMOBILES (4570--), GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTARAKHAND - 262642 PH :9997895347.	1072. SHRI SHYAMJI AUTO SERVICE CENTER (5648--), BAREILLY ROAD, KICHHA, PIN-263148, DISTRICT-UDHAM SINGH NAGAR, UTTARAKHAND - 263148 PH :9837033377.
RATH		DEHRADUN	KOTDWAR
1040. MARUTI POINT (4228--), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P.) - 210431 PH :9415331735.	SHIKOHABAD	1062. ASHIRWAD MOTORS (5144--), CANAL ROAD, NEAR BALLUPUR CHOWK, DEHRADUN-248001, UTTARAKHAND - 248001 PH :9219594748.	1073. BHATT MOTORS (1775--), NAJBABAD ROAD, KOTDWARA, (GARHWAL), UTTARAKHAND - 246149 PH :9917005404.
RENUKUT		1063. HANS LAKHERA MOTORS (5032--), JOGI WALA RING ROAD, NATHAPUR APPARTMNT., NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN - 248001 PH :9897456677.	LAKSAR
1041. AMBIKA MOTORS (1050--), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.) - 231217 PH :9415251724.	SIDDHARTH NAGAR	1064. KRIPALAI SHWARI MOTORS (8947--), HARIDWAR ROAD, NEAR LIC BUILDING, DEHRADUN-248001, UTTARAKHAND - 248001 PH :9412963384.	1074. SHIV AUTOMOBILES (5560--), 110/1/3 BALAWALI ROAD - LAKSAR, DISTRICT - HARIDWAR, PIN - 247663, UTTARAKHAND - 247663 PH :9690111444.
ROBERTSGANJ		HALDWANI	NEW TEHRI
1042. KAMAKHYA AUTOMOBILES (4163--), PIPRI ROAD, ROBERTSGANJ, SONEBHADRA (U.P.) - 231216 PH :9918301052.	SIKANDRABAD	1065. ANJNI SERVICE CENTRE (8980--), NEAR BLOCK OFFICE, KALADHUNGI ROAD, LOHRIASAL MALLA, CITY - HALDWANI, UTTARAKHAND - 263139 - 263139 PH :9837098699.	1075. BHAGWATI SERVICE CENTER (4472--), SECTOR-8E/537, NEAR STADIUM, BARURI, NEW TEHRI, GARWAL (UTTARAKHAND) - 249001 PH :7895219517.
SADABAD		1066. EXCEL MOTORS & ENGG. WORKS (3827--), RAMPUR ROAD, NEAR STM FOREST HOSPITAL, HALDWANI, NAINITAL - 263139 PH :9837191688.	PAURI
1043. ASHU SERVICE CENTRE (8972--), AGRA BYE PASS ROAD, SADABAD-281306, DISTRICT-HATHRAS, UTTAR PRADESH - 281306 PH :9058832658.	SIRSAGANJ	1067. HARYAL SERVICE CENTRE (5340--), BAREILLY ROAD, GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND - 263139 PH :9997200227.	1076. KRISHNA MOTORS (5957--), SHRINAGAR ROAD, NEAR KARGIL SHAHEED PETROL, PUMP, PAURI-246001, DISTRICT-PAURI GARHWAL, UTTARAKHAND - 246001 PH :9719723484.
SAHARANPUR		HARIDWAR	PITHORAGARH
1044. GANESH CAR SERVICES (1871--), OPP. REMOUNT DEPOT GATE, DEHRADUN ROAD, SAHARANPUR-247 001, - 247001 PH :9358306804.	SONEBHADRA	1068. PREET MOTORS (5561--), SHRI NATH NAGAR, RAILWAY ROAD, JAWALPUR - HARDWAR, DISTRICT - HARDWAR, UTTARAKHAND - 249408 PH :9412010497.	1077. CAR CARE CENTER (4371--), CANTT ROAD, PITHORAGARH, UTTARAKHAND, - 262501 PH :9756284676.
SAHIBABAD		KANKHAL	1078. MAA MAHAKALI MOTORS (4142--), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTARAKHAND - 262501 PH :9634713124.
1045. HINDON MOTORS (3576--), S-69, SITE 2, INDUSTRIAL AREA, MOHAN NAGAR, NEAR HINDON AIRFORCE ROUND ABOUT, SAHIBABAD, UTTAR PRADESH - 201007	SULTANPUR	1069. HIGHWAY MOTORS (4261--), NEAR SINGH DWAR CHOWK, ROORKEE-HARDWAR BY PASS ROAD, POST OFFICE, GURUKUL KANGRI, KANKHAL, DISTT HARDWAR - 249408 PH :9412072889.	RANIKHET
1046. MOTOR MAGIC AUTO ZONE (4462--), 4/29-A SITE-IV, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD - 201005	VARANASI	KASHIPUR	1079. LATIF MOTOR WORKS (3269--), SADAR BAZAR, GANDHI CHOWK, RANIKHET, (UTTARAKHAND) - 263645 PH :9761250801.
1047. PANDIT AUTOMOBILES (4647--), 3/1/1, SITE-IV, INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH - 201010	ALMORA	1070. OM MOTORS (4329--), OPPOSITE SWAGAT MANDAP, BAZPUR ROAD, KASHIPUR DIST., U.S. NAGAR (UTTARAKHAND) - 244713 PH :9927500007.	RISHIKESH
1048. POOJA MOTORS (3562--), TEELA MORE, SHAHBAJPUR, LONI, DISTT. GHAZIABAD (U.P.) - 201102	ALMORA, (UTTARAKHAND) - 263601 PH :9412093410.	1071. KRISHNA AUTOMOBILES (4824--), MORADABAD ROAD, KASHIPUR, - 244713 PH :9870998368.	1080. GARHWAL GASOLINE STATION (3639--), . H.P. PETROL PUMP, LAXMAN JHULA ROAD, RISHIKESH-249 201 - 249137 PH :9837377767.
SANDILA	UTTARAKHAND		1081. RAKESH AUTOMOBILE ENGINEERS (1464--), OPP. BHARAT MANDIR INTER COLLEGE, HARDWAR ROAD, RISHIKESH-249 201, - 249137 PH :9412051655.
1049. SHUBHAM SERVICE CENTRE (4042--), NEAR NEHAR KOTHI ROAD, SANDILA, HARDOI, UTTAR PRADESH - 241204 - 241204 PH :9506181818.	BAZPUR		ROORKEE
			1082. DUM DUM ENGG. WORKS (1343--), GROUND FLOOR, A TO Z TOWER, NEAR SOLANI BRIDGE, HARIDWAR ROAD, ROORKEE - 247664 PH :8449155002.

1083. ROORKEE AUTO SCANNERS (2675--), 786 WEST AMBER TALAB, RAM NAGAR CHOWK, ROORKEE-247 667, - 247664 PH :9837032367.

RUDRAPRAYAG

1084. RAJESHWARI AUTOMOBILES (5669--), BADRINATH ROAD,GHOLTIR, RUDRAPRAYAG, DISTRICT - RUDRAPRAYAG, UTTRAKHAND - 246171 PH :9997217788.

RUDRAPUR

1085. BALAJI SERVICE CENTRE (1335--), HALDWANI ROAD, RUDRAPUR(NAINITAL), (UTTRAKHAND), - 263153 PH :9897057385.

1086. CORUS MOTORS (5059--), D1 D2.20/1.NAINITAL ROAD, DISTRICT - U.S. NAGAR , UTTRAKHAND, - 263153 PH :9927500077.

SIMLI

1087. PINDER AUTOMOBILES (5527--), PLOT # C6-C9, INDUSTRIAL AREA , NEAR KARNAPRAYAG - SIMLI, UTTRAKHAND - 246449 PH :9627687196.

SITARGANJ

1088. SHRI RAM MOTORS (5833--), AGARWAL BHAWAN,BYE PASS ROAD, SITARGANJ-242605, DISTRICT-UDHAM SINGH NAGAR, UTTRAKHAND - 262405 PH :8859485786.

VIKASNAGAR

1089. SHREE RAM AUTOMOBILES (5066--), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN, UTTRAKHAND - 248198 PH :9897731200.

1090. SOUMYA MOTORS (4272--), CHAKRATA ROAD, BEHIND STATE BANK OF INDIA, VIKASNAGAR, DISTT. DEHRADUN (U.A) - 248198 PH :9412382490.

UTTRAKHAND

RAMNAGAR

1091. MAHI AUTOMOBILES (5532--), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTRAKHAND, - 244715 PH :9837920845.

WEST BENGAL

ALIPURDUAR

1092. PRADYOUT AUTOMOBILE WORKS (653--), PURAN BAZAR, P.O.ALIPURDUAR, JALPAIGURI, WEST BENGAL - 736121 PH :9832487473.

ASANSOL

1093. AGARWALLA AUTO SERVICE (3122--), 181 BURNPUR ROAD, P.O. BURNPUR, DT. BURDWAN-713 325, (WEST BENGAL) - 713325 PH :9832179346.

1094. WEST END MOTORS (1665--), KALYANPUR SATELITE TOWNSHIP PROJECT, KANYAPUR LINK ROAD, PALASHDIAH MORE, PO-KANYAPUR, PIN-713341, ASANSOL, WESTBENGAL - 713341 PH :8798107541.

BAHRAMPUR

1095. MARUTI CARE (3674--), NH-34 UTTARPARA MORE, P.O. RADHARGHAT, BERTHAMPORE, MURSHIDABAD -742 187 (WEST BENGAL) - 742187 PH :9434394040.

1096. NARAYAN BUS SERVICE (656--), NH-34, CHOYANPUR, PO - CHALTIA, PS - BERTHAMPORE, MURSHIDABAD, WEST BENGAL, PIN - 742165 - 742101 PH :9732628065.

BALURGHAT

1097. GHOSH AUTOMOBILES (2644--), NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, - 733101 PH :9434963493.

BANDEL

1098. CAR HOSPITAL (3675--), 2 NO. NETAJI PARK, G.T. ROAD, (OPP. MILITARY COLONY), BANDEL (WEST BENGAL) - 712102 PH :9838021085.

BARRACKPORE

1099. SAMANTA AUTOMOBILES PVT LTD (268--), CHIRIMORE, BARRACKPORE-743 101, NORTH -24 PARGANAS, WEST BENGAL - 743101 PH :9831054432.

BIRPARA

1100. PARTAP ENGINEERING WORKS (8942--), VILLAGE DEMDIMIA, PO-BIRPARA, DISTRICT ALIPURDUAR, WEST BENGAL, PIN -735204 - 735204 PH :9832429319.

BOLPUR

1101. BASUNDHARA AUTOMOBILES (4241--), GOAL PARA, BOLPUR SURI ROAD, BOLPUR, - 731235 PH :9832132851.

CHINSURAH

1102. UNIVERSAL AUTO REMEDY (648--), C/O MR.BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE, PO CHINSURAH, HOOGHLY-712102 - 712102 PH :9830056592.

COOCH BEHAR

1103. PROVA AUTOMOBILES (8936--), NH-17 (FORMERLY NH-31), CHAKCHAKA CHECK POST, P.O. - NILKUTHI BABURHAT, DIST. - COOCH BEHAR, PIN-736156, WEST BENGAL - 736101 PH :9434174309.

DINHATA

1104. DINHATA AUTOMOBILES (5739--), NEAR J K DHABA, NEAR CHECK POST, DINHATA COOCH BEHAR MAIN ROAD, PO: PUTIMARI, DINHATA, WEST BENGAL-736135 - 736135 PH :9434256518.

DURGAPUR

1105. THE QUICKEST (2879--), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR-713 212 - 713212 PH :9832165126.

FARAKKA

1106. SPEED WHEEL SERVICE CENTRE (1056--), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.) - 742236 PH :9434101917.

HALDIA

1107. S.D. REPAIRING CENTRE (2168--), I.O.C. GATE NO. 1, P.O. HALDIA OIL REFINERY, HALDIA-721 606, DISTT. MIDNAPORE (W.B.) - 721606 PH :9434021405.

HOWRAH

1108. GREWAL AUTO SERVICE (1570--), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH-711 102. - 711102 PH :9831017806.

JAIGAON

1109. SHAKTI TRADING CO. (770--), M.G. ROAD, JAIGAON-736 182, , - 736182 PH :7760808990.

JALPAIGURI

1110. AUTOSTEL (646--), SAKOAJHORA, P.O. GAIRKATA-735 212, DIST.JALPAIGURI, (W.B.) - 735212 PH :9934111868.

1111. S.S. AUTOMOBILES (3664--), ASSAM MORE, JALPAIGURI, WEST BENGAL-735 101, - 735101 PH :9434340252.

KALYANI

1112. GOPAL AUTO SERVICE CENTRE (3373--), B.K. EXPRESSWAY, BUDHHA PARK, KALYANI-741 235, NADIA (WEST BENGAL) - 741235 PH :9831319161.

1113. KRISHNA ENGINEERING WORKS (5270--), PLOT NO.199,KANTABELE.O.N.G.C ROAD, KALYANI EXPRESS ROAD,PO.GHORAGACHHA, PS - KALYANI, WEST BENGAL - 741245 PH :7439007218.

KOLKATA

1114. ADAMS MOTOR WORKS (465--), 61 A SHAKESPEARE SARANI, CALCUTTA-700 017, , - 700017 PH :9830703287.

1115. AUTO SCAN (2272--), 100/1, B.T.ROAD, BARANAGAR, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700090 - 700090 PH :9231622309.

1116. AUTOKRAFT (620--), F 1/G-3, RIC IND.ESTATE UPEN BANERJEE ROAD, PARNASREE, CALCUTTA - 700060 (W.B.) - 700060 PH :9830553331.

1117. BHAWANIPUR AUTO CENTRE (628--), 49 S/P MUKHERJEE ROAD, CALCUTTA - 700 026 (W.B.) , - 700026 PH :9831783130.

1118. CAMAC (621--), 2/E CAMAC STREET, CALCUTTA-70016(W.B.) , - 700016 PH :9831493716.

1119. CLASSIC ENGINEERING WORKS (3171--), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO.G-1, KOLKATA-700 034 - 700034 PH :9903390559.

1120. DELUXE SERVICE STATION (672--), P-256 257 CIT ROAD, CALCUTTA-700 010, , - 700010 PH :9836490083.

1121. DIAL AUTOMOBILES PVT.LTD. (643--), 162A, PEARY MOHAN ROY ROAD, P.S.: CHETLA, KOLKATA - 700027 - 700027 PH :9830552191.

1122. FORTUNE AUTO CARE (3167--), 16 G/6 KHANPUR ROAD, KOLKATA-700 047, (W.B.) , - 700047 PH :9831754527.

1123. SONA AUTO UDYOG (3144--), 1404 PURBACHAL MAIN ROAD, OPP. KALIKAPUR MARKET, KOLKATA-700 099, - 700099 PH :9804608684.

1124. TECHNO AUTO WORKS (4669--), 619, RAJA RAM MOHAN ROY ROAD, BIREN ROY ROAD EAST, BEHALA, KOLKATA-700008 - 700008 PH :9830111258.

1125. ULTRA CRAFT (4643--), 103/1B, RAJA DINENDRA STREET, KOLKATA-700006, WEST BENGAL - 700006 PH :9831313321.

1126. YOUNG AUTOMOBILES (637--), 50/2 HAZARA ROAD, CALCUTTA-700 019,(W.B.) , - 700019 PH :9830778611.

1127. ZENITH AUTO (5529--), BHOLA NATH SARANI,CHINAR PARK, RAJARHAT , KOLKATA-700157, DISTRICT - KOLKATA, WEST BENGAL - 700157 PH :9830643781.

Maruti Authorized Service Station (AS ON 31.01.2026)

1128. ZOVAN AUTOMOBILES PVT. LTD (5578--), 42A/1B, RAJA SANTOSH ROAD, KOLKATA, DISTRICT - KOLKATA, WEST BENGAL - 700027 PH :9831082193.	1142. ABHISEK AUTO CENTRE (1976--), N.H.34, NEAR ST. XAVIER SCHOOL, P.O. MOKDUMPUR, DISTT. MALDA-732 101 (W.B.) - 732101 PH :9434065360.	ULUBERIA 1153. APSARA SERVICE STATION (3374--), NEAR BANITABLA CHECKPOST, ON NH-6, ULUBERIA-711 316, (W.B.) - 711316 PH :7797484735.
1129. INTERNATIONAL AUTO WORKS (2648--), 48-C SOUTH TANGRA ROAD, KOLKATA-700 046, - 700046 PH :9163703015.	MIDNAPORE 1143. CHATTERJEE AUTOMOBILE (4960--), INDUSTRIAL GROWTH AREA, KHASJANGAL (NEAR KERANICHOTI), MIDNAPORE-721101, DISTRICT-PACHIM MIDNAPORE - 721101 PH :9434043558.	
1130. MARUTI LINK (1633--), CK-12 SECTOR 2, SALT LAKE, CALCUTTA-700 091, - 700091 PH :9831180421.	NARENDRAPUR 1144. A.M. AUTOMOBILES (3175--), KAMALGAZI, NARENDURPUR, KOLKATA-700 103, (WEST BENGAL) - 700103 PH :8335860051.	
1131. MOTORKRAFT (635--), P-149 REMOUNT ROAD, CALCUTTA-700 027.(W.B.) , - 700027	PURULIA 1145. BANERJEE AUTO SERVICE (640--), ANABILA VILLA, RANCHI ROAD, PURULIA.(W.B.) - 723101 PH :9434656942.	
1132. NORTH POINT MOTORS PVT. LTD. (344--), DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA-700 037, - 700037 PH :9830220069.	RAGHUNATHGANJ 1146. AUTO WHEEL (4427--), NH 34, UMARPUR, PO GHORSALA, DO MURSHIDABAD, WEST BENGAL, PIN 742235 - 742235 PH :9434101917.	
1133. PRINCE MOTOR WORKSHOP (9031--), RAIGACHI (AZADNAGAR), P.S. RAJARHAT, RAJARHAT ROAD, NORTH 24 PARGANAS, KOLKATA - 700135 - 700059 PH :9875625595.	RUPNARAYANPUR 1147. L K MOTORS (3477--), NH 2 BYPASS, POINT (CHOWRANGI), RUPNARAYANPUR (CHALBALPUR), BURDWAN-713 343 - 713343 PH :9091392314.	
1134. R.S. SERVICE CENTRE (1948--), 1/2 MAHENDRE ROY LANE, CALCUTTA-700 046, - 700046 PH :9831170273.	SILIGURI 1148. BHAWANI MOTOR GARAGE (4844--), BIDYASAGAR PALLY, NEAR RISHI BHAWAN, BURDWAN ROAD, SILIGURI-734405, WEST BENGAL - 734405 PH :9641162127.	
1135. RAJ AUTO SERVICE (5338--), 35.CANAL EAST ROAD, KOLKATA, PIN - 700011, WEST BENGAL - 700011 PH :9831103901.	1149. MUM AUTO WORKS (4835--), NEAR DELHI PUBLIC SCHOOL, PANCHANAI (DAGAPUR), SILIGURI, WEST BENGAL-734003 - 734003 PH :9832068537.	
1136. ROYAL CALCUTTA AUTOMOBILES (4651--), 68 BROAD STREET, KOLKATA-700019, , - 700019 PH :8777762005.	SODEPUR 1150. CAR CARE (8986--), B.T. ROAD, SODEPUR, P.O. : SUKCHAR, 24 PARGANAS (NORTH) - 700115 PH :9674907411.	
1137. RUSSA ROAD SERVICE STATION (622--), 30 SP MUKERJEE RROAD, CALCUTTA - 700025 (W.B.) , - 700025 PH :9748757842.	SRIRAMPUR 1151. MARUTI AUTO CENTRE (2167--), 85/18 G.T. ROAD (WEST), PO : MULLIKPARA, SRIRAMPUR, HOOGLY-712 203 (W.B.) - 712203 PH :8777417901.	
KRISHNANAGAR 1138. TARA MA AUTOMOBILES (1947--), AUROBINDRA SARANI (NEAR KRISHNANAGAR WOMEN'S COLLEGE), KRISHNANAGAR,NADIA, , WEST BENGAL 741011, - 741101 PH :8001100930.	SURI 1152. PANCHANATH AUTOMOBILES (4456--), BROJARGRAM BARABAGAN, BAKRESWAR PATHARCHAPURI HIGHWAY MORE, SURI, WEST BENGAL-731101 - 731101 PH :9732026250.	
1139. HIGHWAY SERVICE CENTRE (4455--), ASHA DEEP, N.H.34, KRISHNANAGAR, NADIA-741101, WEST BENGAL - 741101 PH :9434165494.		
MADHYAMGRAM 1140. J G BEHAL AUTO (4653--), DOLTALA, GANGANAGAR, MADHYAMGRAM, KOLKATA-700129 (WEST BENGAL) - 700129 PH :9831094430.		
1141. PAUL AUTOMOBILE (671--), JESSORE ROAD, MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH - 700132 PH :9830239001.		
MALDA		

DELHI

DELHI

1. MSM (0883-08-01), F-39,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020

TAMIL NADU

CHENNAI

2. MSM (1485-14-01), # 9, (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032

ARUNACHAL PRADESH

ITANAGAR

1. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111

ASSAM

BARPETA

2. ROY AUTO ENGINEERING WORKS (7281-72-01), POST OFFICE, BARPETA ROAD, MAIN ROAD , WARD NO.-4, ASSAM - 781315

DULIAJAN

3. B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN - 786602

BIHAR

PATNA

4. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013

DELHI

DELHI

5. GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, - 110018
6. A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, LAWRENCE ROAD, DELHI - 110035

HARYANA

BALLABHGARH

7. ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004

MURTHAL

8. MURTHAL AUTO PVT. LTD. (Bv81-BV-01), 44 HSIIDC, MURTHAL - 131027

PANCHKULA

9. CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113

PANIPAT

10. VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103

SAHA

11. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-AMBALA - 133104

YAMUNANAGAR

12. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001

HIMACHAL PRADESH

JASSUR

13. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201

JAMMU AND KASHMIR

SRINAGAR

14. RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR - 241384

JHARKHAND

RANCHI

15. PODDAR CAR WORLD PVT LTD (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA, RANCHI, - 834001

KERALA

PATHANAMTHITTA

16. AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA - 689640

MADHYA PRADESH

NEEMUCH

17. AUTO SCAN (3T81-3T-01), MHOW ROAD, NEEMUCH, MADHYAPRADESH, - 454775

MAHARASHTRA

PUNE

18. MARUTI CARE POINT (1983-19-01), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017

THANE

19. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI, WAGLE ESTATE MAIN ROAD, WAGLE ESTATE, THANE - 400007

ODISHA

KEONJHAR

20. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001

PUNJAB

BATALA

21. CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505

MOGA

22. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001

RAJASTHAN

JAIPUR

23. KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A ; NARAYANPURI, KATARIA KRISHI FARM, SIRSI ROAD, JAIPUR - 302034

TELANGANA

HYDERABAD

24. RETOUCH (1082-10-01), H.NO. 3-67/A. B. C. D. NEW NAGOLE COLONY, NAGOLE VILLAGE, HYDERABAD, NAGOLE, HYDERABAD - 500068

UTTAR PRADESH

ALIGARH

25. VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001

GHAZIABAD

26. KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR, HAPUR ROAD, GHAZIABAD
27. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD - 201102

LUCKNOW

28. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW - 226003

MEERUT

29. UNIQUE CAR SCANNERS (4882-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, - 250001

NOIDA

30. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8 & 9, SECTOR-8, NOIDA
31. MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125, SECTOR-63, NOIDA,
32. JKM MOTORS (A184-A1-01), A-25, SECTOR 9, DISTT. GAUTAM BUDHI NAGAR, NOIDA - 201301
33. FAST TRACK AUTOCARE (INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301

SAHIBABAD

34. FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.) - 201010

UNNAO

35. VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYPASS, UNNAO, UTTAR PRADESH, - 209801

VARANASI







36. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002

WEST BENGAL

KOLKATA

37. MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027

BATTERY LABEL SYMBOL MEANINGS

	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

Prepared by
MARUTI SUZUKI INDIA LIMITED
 Service Division
 March, 2026
 Part No. 99011M69R14 -74W
 Printed in India

**For round-the-clock on-road assistance,
 call Maruti On-road Service at 1800 102 1800[#] / 1800 1800 180[#]**

No STD code to be prefixed.

 **MARUTI SUZUKI**
GENUINE ACCESSORIES

 **MARUTI SUZUKI**
GENUINE PARTS

 **MARUTI SUZUKI**
COST PROTECT

 **MARUTI SUZUKI**
HELPLINE

 **MARUTI SUZUKI**
ROAD SERVICE

SERVICE DIVISION

MARUTI SUZUKI INDIA LIMITED

Palam-Gurgaon Road, Gurgaon – 122 015 (Haryana), India

Visit us at: www.marutisuzuki.com



99011M69R14-74W